



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

NYPL RESEARCH LIBRARIES



3 3433 06642815 6

VGM
Bell



BY THE SAME AUTHOR


POWER DISTRIBUTION FOR ELECTRIC RAILWAYS

*SECOND EDITION. EXTENSIVELY REVISED
AND ENLARGED*

303 Pages. 148 Illustrations. Price, \$2.50

IN PRESS

ART OF ILLUMINATION

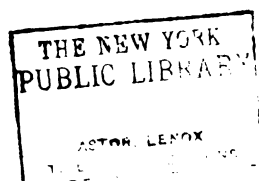



'PLATE I.

ELECTRIC POWER TRANSMISSION

*A PRACTICAL TREATISE FOR
PRACTICAL MEN*


BY

LOUIS BELL, PH. D.

MEM. AM. INST. ELEC. ENG.

*THIRD EDITION
REVISED AND ENLARGED*

NEW YORK
ELECTRICAL WORLD AND ENGINEER
(INCORPORATED)
[1901]

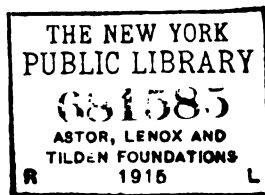

COPYRIGHT, 1901, BY
ELECTRICAL WORLD AND ENGINEER
(INCORPORATED)

NOV 21 1915
LIBRARY

PREFACE TO FIRST EDITION

THIS volume is designed to set forth in the simplest possible manner the fundamental facts concerning present practice in electrical power transmission.

Busy men have little time to spend in discussing theories of which the practical results are known, or in following the derivation of formulæ which no one disputes. The author has therefore endeavored, in introducing such theoretical considerations as are necessary, to explain them in the most direct way practicable; using proximate methods of proof when precise and general ones would lead to mathematical complications without altering the conclusion for the purpose in hand, and stating only the results of investigation when the processes are undesirably complicated.

In writing of a many-sided and rapidly changing art, it is impossible in a finite compass to cover all the phases of the subject or to prophesy the modifications that time will bring forth; hence the epoch of this work is the present and the point of view chosen is that of the man, engineer or not, who desires to know what can be accomplished by electrical power transmission, and by what processes the work is planned and carried out. This treatment is not without value to the student who wishes to couple his investigations of electrical theory with its application in the hands of engineers, and puts the facts regarding a very great and important development of applied electricity in the possession of the general reader.

Such apparatus as is described is intended to be typical of the methods used, rather than representative of any particular scheme of manufacture or fashion in design. These last change almost from month to month, while the general conditions remain fairly stable, and the underlying principles are of permanent value.

January, 1897.

PREFACE TO SECOND EDITION.

SINCE the first edition of this work was published the changes in the art of electrical power transmission have been neither great nor startling. There has been steady and rapid growth all along the line, experiments have passed into quite commonplace practice, and hopes have been fulfilled by events. The most important advance has been in the matter of power transmission at very high voltage and to long distances. Two years ago the highest voltage in commercial use was 14,000, to-day it is 40,000. Then the longest transmission line was 35 miles, now it is 80 miles. This seems like a long forward stride, but there was no serious doubt two years ago about the practicability of either the voltage or distance aforesaid, and the way had already been mapped out by experiments. Similarly, apparatus is on a larger scale and in some respects better, but there have been no material changes. Such change in practice as seems worthy of particular notice has been recorded in Chap. XIV., and where experiment has advanced to certainty or new light has been thrown upon the art, the fact has been noted in the text. The only considerable addition to our knowledge of the theoretical side of the subject has been in the beautiful researches on high-voltage phenomena described in Chap. XIV. These are not only of great practical value, but bring out with wonderful clearness the importance of the electrical phenomena which take place outside of the conducting wire. These have been in full view ever since the classical paper of Poynting fifteen years ago, but have never before been brought before the eye of the practical electrician with such vividness of delineation.

September, 1899.

PREFACE TO THIRD EDITION.

IT is now more than four years since the first edition of this work emerged from the press, and in that period power transmission plants have multiplied, and methods, while affected by no profound changes, have been in so far modified that ordinary revision is almost incapable of keeping the volume within hailing distance of current practice. It has therefore become necessary almost to rewrite some of the chapters, adding considerable amounts of new matter and many illustrations of recent plants and apparatus. A brief chapter on commercial electrical measurements has been added, and a final chapter on the present state of high voltage transmission has been utilized to bring the latest developments of the art before the reader. The greatest changes of the last two years have been in the direction of the more certain and efficient management of very high voltages, enabling the engineer to deal under commercial conditions with distances far greater than had been previously attempted. Electrical energy is now transmitted successfully over distances closely approximating two hundred miles, and at pressures of fifty thousand to sixty thousand volts, although both these extreme conditions are not reached as yet in the regular daily service of any single plant. Each upward step in working voltage has lessened the uncertainty that veils the upper limit of commercial practice, and to-day the engineer who confines himself to merely ten thousand volts in a transmission of fifteen or twenty miles may fairly be regarded as ultra-conservative. There has been great improvement in subsidiary apparatus and methods of regulation, and there has grown up a far fuller comprehension of alternating current methods than had before been current. The development of a highly successful and practical alternating arc light system is perhaps the greatest minor improvement in the art, relieving the engineer of one of his most troublesome problems. Theory and practice are both in a state that betokens striking changes in the near future.

December, 1901.

•

CONTENTS.

CHAPTER	PAGE
I. ELEMENTARY PRINCIPLES,	I
II. GENERAL CONDITIONS OF POWER TRANSMISSION,	22
III. POWER TRANSMISSION BY CONTINUOUS CURRENTS,	75
IV. SOME PROPERTIES OF ALTERNATING CIRCUITS,	122
V. POWER TRANSMISSION BY ALTERNATING CURRENTS,	154
VI. SYNCHRONOUS AND INDUCTION MOTORS,	208
VII. CURRENT REORGANIZERS,	266
VIII. ENGINES AND BOILERS,	290
IX. WATER WHEELS,	324
X. HYDRAULIC DEVELOPMENT,	361
XI. THE ORGANIZATION OF A POWER STATION,	388
XII. THE LINE,	417
XIII. LINE CONSTRUCTION,	467
XIV. CENTRES OF DISTRIBUTION,	499
XV. THE COMMERCIAL PROBLEM,	557
XVI. THE MEASUREMENT OF ELECTRICAL ENERGY,	574
XVII. THE PRESENT STATE OF HIGH VOLTAGE TRANSMISSION,	593

LIST OF TABLES.

	PAGE
EFFICIENCY OF WIRE ROPE DRIVES,	37
WIRE ROPES AND PULLEYS THEREFOR,	41
LOSS OF HEAD IN HYDRAULIC PIPES,	46
LOSS OF AIR PRESSURE IN PIPES,	51
EFFICIENCIES OF ELECTRIC MOTORS,	61
EFFICIENCIES OF ELECTRIC AND OTHER TRANSMISSIONS,	72
PERFORMANCE OF SMALL POLYPHASE MOTORS,	258
STEAM CONSUMPTION OF ENGINES,	299
EVAPORATIVE POWER OF FUELS,	308
EVAPORATIVE TESTS OF BOILERS,	309
COAL CONSUMPTION OF ENGINES,	311
TABLE FOR WEIRS,	365
PROPERTIES OF STEEL HYDRAULIC PIPE,	380
SIZE, RESISTANCE AND WEIGHTS OF COPPER WIRES,	420
PROPERTIES OF COPPER AND OTHER WIRES,	431
IMPEDANCE FACTORS OF COPPER WIRES,	448
CAPACITY AND INDUCTANCE OF LINES,	455
SIZE, WEIGHT AND TENSILE STRENGTH OF LINE WIRES,	470
SIZES AND WEIGHTS OF WOODEN POLES,	477
PROPERTIES OF DIRECT AND ALTERNATING CURRENT ARCS,	510
COST OF COAL WITH VARIOUS ENGINES,	558
COST OF POWER WITH VARIOUS ENGINES,	560
COST OF ELECTRIC MOTORS,	562
LIST OF AMERICAN TRANSMISSIONS AT OR ABOVE 10,000 VOLTS, {	622
	623
	624

ELECTRIC TRANSMISSION OF POWER.

CHAPTER I.

ELEMENTARY PRINCIPLES.

IT has long been the fashion to speak of what we are pleased to call electricity as a mysterious "force," and to attribute to everything connected with it occult characteristics better suited to mediæval wizardry than to modern science. This unhappy condition of affairs has, in the main, come about through the indistinctness of some of our fundamental ideas and inexactitude in expressing them.

To speak specifically, there has been, even in the minds and writings of some who ought to know better, a tendency toward confusing the extremely hazy individuality of "electricity" with the sharply defined properties of electrical energy. We have been so overrun by theories of electricity, two-fluid, one-fluid, and non-fluid,—by electrically "charged" atoms and duplex ethers, that we have well-nigh forgotten the very great uncertainty as to the concrete existence of electricity itself. Even admitting it to be an entity, it most assuredly is not a force, mysterious or otherwise. Electrical force there is, and electrical energy there is, and with them we can freely experiment, but for most practical purposes "electricity" is merely the factor connecting the two. It is related to electrical energy just as that other hypothetical fluid "caloric" was supposed to be related to heat energy. The analogy is not absolutely exact, but it nevertheless summarizes the real facts in the case.

The day has passed wherein we were at liberty to think of "electricity" as flowing through a material tube or as plastered upon bodies like a coat of paint. The things with which

we have now to deal are the various factors of electrical energy.

It is the purpose of this chapter to treat of that form of energy which we denominate electrical, to discuss its relation to other forms of energy and some of the transformations which they may reciprocally undergo.

Speaking broadly, *energy* is power of doing work. The energy of a body at any moment represents its inherent capacity for doing work of some sort on other bodies. This, however, must not be understood as implying that the aforesaid energy is limited by our power of utilizing it. We may or may not be able to employ it to advantage or under possible conditions. As an example take the massive weight of a pile driver. Raised to its full height it possesses a certain amount of gravitational energy—a possibility of doing useful work. This energy is temporarily unemployed and appears only as a stress on the supporting rope and frame-work. Under these circumstances, wherein the energy exists in static form, it is generally known as *potential* energy.

Now let the weight fall and with swiftly gathering velocity it strikes the pile and does work upon it, settling it deep into the mud. The energy due to the blow of the *moving weight*, energy of motion in other words, is called *kinetic*. But at the bottom of its fall the weight still has potential energy with reference to points below it, and we realize this as the pile settles lower and each successive blow becomes more forceful. At some point we are unable further to utilize the fall, and have then reached the limit of the *available* energy in this particular case.

We must not forget, however, that each time the weight was lifted, work had to be done against gravitation to give the weight its point of vantage with respect to available energy. This work was probably done by utilizing the energy of expanding steam—in other words, the energy of the steam was transformed through doing work on the piston into kinetic energy of the latter, which, through doing work against gravitation, has been enabled again to reappear as the energy of a falling body, and to do work on the driven pile. And back of the steam energy is the heat energy, by which work is done on the water in the boiler, and yet back of this the

chemical energy of the coal, transformed into heat energy and doing work on the minute particles of iron in the boiler, for we know that heat is a species of kinetic energy.

Even the work done on our pile is not permitted to go untransformed into energy. Part is transformed into heat energy through friction and compression of the pile, part through friction of the water, and part raises ripples that may lift against gravity chips and pebbles on a neighboring shore. Other fractions go into the vibrational energy of sound; into heating the weight so that it gives out warmth—radiant energy—to the hand when held near it and to the surrounding air; and into electrical work done on the weight and neighboring objects, for the weight unquestionably receives a minute amount of electrical energy at each blow. Thus a comparatively simple mechanical process involves a long series of transformations of energy.

No energy is ever created or destroyed, it merely is changed in form to reappear elsewhere, and work done is the link between one form of energy and another. And we may lay down another law of almost as serious import: No form of energy is ever transformed completely into any other.

On the contrary the general rule is that with each transformation several kinds of energy appear in varying amounts, and among them we may always reckon heat. The object of any transformation is usually a single form of energy, hence practically no such thing as perfectly efficient transformation can be obtained. The energy by-products for the most part cannot be utilized and are frittered away in useless work or in storing up kinds of potential energy that cannot be employed.

The greatest loss is in heat, which is dissipated in various ways and cannot be recovered. The presence of unutilized heat always denotes waste of energy.

From what has gone before we can readily appreciate that when we do work with the object of rendering available a particular kind of energy, the method must be intelligently selected, else there will result useless by-products of energy which will seriously lower the efficiency of the operation.

Whenever possible we utilize potential energy already existing in securing a transformation. Thus if heat is wanted, the easiest way of getting it is to burn coal, and to allow its energy to become kinetic as heat. If we want mechanical work done,

we set heat energy to work in the most efficient way practicable. If electrical energy is desired we set the energy of steam to revolving the armature of a dynamo. If the right method of transformation is not chosen, much of the energy will turn up in forms that we do not want or cannot utilize. Burning coal is a very bad way of getting sound, just as playing a cornet is but a poor means of getting heat, although a fire does produce a trifling amount of sound, and a cornet by continual vibration must be warmed to a minute degree.

These seem, and perhaps are, extreme instances, but when we realize that, somewhat to the discredit of human ingenuity, less than one-twentieth of the electrical energy supplied to an incandescent lamp appears in the form of light, the comparison becomes grimly suggestive.

Understanding now that in order to obtain energy in any given form (such as electrical) particular methods of transformation must be used in order to secure anything like efficiency, we may look a little more closely at various types of energy to discover the characteristics that may indicate efficient methods of transformation, particularly as regards electrical energy.

Speaking broadly, one may divide energy into three classes:

1st. Those forms of energy which have to do with movements of, or strains in, masses of matter. In this class may be included the ordinary forms of kinetic energy of moving bodies and the like.

2d. Those which are concerned with movements of, or strains in, the molecules and atoms of which material bodies are composed. In this class we may reckon heat, latent and specific heats, energy of gases and perhaps chemical energy.

3d. All forms of energy which have to do with strains which can exist outside of ordinary matter, *i. e.*, every kind of radiant energy and presumably electrical energy.

These classes are not absolutely distinct; for example, we do not know the relation of chemical energy to the third class, nor of gravitational energy to any class, but such a division serves to keep clearly in our minds the kind of actions to which our attention is to be directed.

It is only within the past few years that we have been able with any certainty to classify electrical energy, and even now much remains to be learned. For a very long while it has

been known that light, *i. e.*, luminous energy, must be propagated through a medium quite distinct from ordinary matter and possessing certain remarkable properties. It was well known that luminous energy is transferred through this medium by vibratory or wave motion. Even the period of the vibrations and the lengths of the waves were accurately measured, and from these and similar measurements it has been possible to classify the mechanical properties of this medium, universally called "the ether," until we really know more about them than about the properties of many kinds of ordinary matter—a number of the rare metals for example.

The next important step was the discovery, verified in the most thorough manner, that what had been known as radiant heat, such as we get from the sun or any very hot body, is really energy of the same kind as light. That is, it was found to be energy of wave motion of precisely the same character and in the same medium, differing only in frequency and wave length. It also has turned out in similar fashion that what had been called "actinic" rays, that are active in attacking a photographic plate and producing some other kinds of chemical action, are only light rays of shorter wave length than usual, and so ordinarily invisible to the eye.

So much having been ascertained it became clear that instead of three kinds of energy—"heat, light and actinism," we were really dealing with only one—radiant energy, vibrating energy in the ether, varying in effect as it varies in frequency. Speaking in an approximate way, such wave energy has a frequency of *six hundred thousand billion* vibrations per second and a velocity of propagation of about a hundred and eighty-five thousand miles per second, so that each wave is not far from one fifty-thousandth of an inch long. These dimensions are true of light waves; chemical action can be produced by waves of half the length, while so called heat rays may be composed of waves two or three times as long as those of light. Such figures are startling, but they can be verified with an accuracy greater than that of ordinary mechanical measurements.

We see that this radiant energy is capable of producing various disturbances perceptible to our senses, such as chemical action, light and heat, and that these different effects

simply corresponds to waves of energy having different frequencies and wave lengths. This being so, it is not unnatural to suppose that at still different frequencies their effects might be noted. It is this question further probably, from the experimental fact that waves of very different frequencies traverse the ether with precisely the same velocity, showing no signs of slowing down or speeding up, so that there seems to be no natural limit to their length.

During the past half century years it has been clearly shown that radiant energy is capable of producing profound electrical disturbances, such as the production of electrical energy in conducting bodies, and that these effects exist whatever the frequency of the ether waves concerned. This very important fact was clearly foreseen by Maxwell more than twenty years ago, regarding light, and his prediction has been thoroughly verified through the persistent researches of the late Professor Hertz and others.

This discovery is often expressed by saying that radiant energy is an electro-magnetic disturbance, or that light is one kind of electrical action. It is more strictly accurate to say that radiant energy, just as it produces chemical disturbances on the photographic plate, affects the eye as light, and material bodies as heat, is also capable of producing electrical effects when transferred to the proper medium. Most of our experiments on its electrical effects have been performed with waves many thousand times longer than those of light, but their general character has proved to be exactly the same.

A given substance may be differently related to waves of radiant energy of different lengths, but the phenomena are still essentially the same. For instance, a plate of hard rubber is thoroughly opaque to waves of a length corresponding to light, but is quite transparent to those of considerably greater length, such as can produce thermal or electrical effects. A plate of alum will let through light waves and very long waves, but will stop most of those which are efficient in producing heat. A thick sheet of metal is quite opaque to all known waves of radiant energy. Hence the fact noted long ago by Maxwell, that all good conductors are opaque to light, although the converse is not true.

The sub-

stantially the same sort of disturb-

ance in the ether which produces light is also competent to set up electrical actions in material bodies, and conversely, such actions may and do produce corresponding disturbances in the ether, which are thus transferred to other bodies. Such a transference corresponds to all that we know concerning the velocity with which electrical and electro-magnetic disturbances pass from body to body. It is equally certain that this velocity totally transcends anything we could hope to obtain from bodies having the dynamical properties of ordinary matter, while it does fit exactly the dynamical properties of the ether.

We are thus forced to the conclusion that when an electrical current, as we say, "passes along" a wire, whatever a "current" may be, it is not simply transferred from molecule to molecule in the wire as sound or heat would be, but that there is an immensely rapid transfer of energy in the neighboring ether that reaches all points of the wire almost simultaneously. It takes a measurable time for the electrical energy to reach and utilize the centre of the wire, although its progress along the surface, thanks to the free ether outside, is enormously rapid.

Thus takes place what is generally called a "flow of electricity" along the wire. Looking at the process more closely, the nearest approach to flow is the transfer of energy along the wire by means of stresses in the ether which in turn set up strains in the matter along their course.

Whenever we cause in matter the particular stress which we call electromotive force for lack of a more exact name, the resulting strain is electrification, and if the stress be applied at one point of a conducting body, the strain is immediately transferred to other points by the stresses and strains in the surrounding ether. Wherever this transference of strain exists we have an electrical current, although this name is generally reserved for those cases in which there exists a perceptible transference of energy by the means aforesaid. If the conditions are such that energy must be steadily supplied to keep up the electromotive stress we have such a state of things as we find in a closed circuit containing a battery.

To cause such a flow of energy we must first find means of setting up electromotive stress capable of being propagated through the ether. Now atoms and molecules are the only

handles by which we can get hold of the ether. Only in so far as we can work through them can we do work on the ether.

As a matter of fact we cannot do work of any kind on the molecules of a body without setting up electrical stresses of some sort. In most cases of mechanical work, which in the main produces stress on the molecules only by strains in the mass, the energy appears mainly as heat, and is only incidentally electrical, as for instance the energy wasted in a heated journal.

When, however, by any device we do work more directly on the molecules of a body, or on the atoms which compose the molecules, we are more than likely to transform much of this work into electrical energy. As a rough example of the two kinds of action just mentioned, pounding a body heats it without causing any considerable electrification, while on the other hand rubbing it rather gently, sets up a considerable electrification without heating it noticeably.

In fact, for many centuries, friction was the only known method of causing electrification. Later, as is well known, it was discovered that certain sorts of chemical action, which has to do directly with interchanges of energy between molecules, were very potent in electrical effects. With this discovery came the ability to deal with steady transfers of electrical energy in considerable amount (electric currents), instead of the relatively slight and transitory effects previously known, (electrification, "frictional" electricity).

To clear up the real nature of this difference it is well to consider what we mean by saying that a body is electrified, or has an electrical charge. In other words, what is electrification? Not very many years ago this question would have been answered by saying that a quantity of a substance, positive electricity (or negative as the case might be), had been communicated to the body in question; that this remarkable substance could reside only at the surface of the body and was able to produce in surrounding bodies exactly an equal quantity of negative electricity; that this "charge" of electricity would repel another "charge" of the same substance placed near it, or attract a charge of its opposite, the other substance called negative electricity; and much more to the same effect. All this was a very convenient hypothesis—it

explained, after a fashion, the common facts and enabled investigators to discover many important electrical relations and laws. But it expressed much more than there was any reason to know. From the standpoint of our modern doctrines of energy electrification is a very different thing.

Let an electromotive stress (from whatever source) be applied to a body, a metallic sphere for example, long enough to transfer to it a finite amount of energy. This energy appears as stresses and strains in the ether everywhere about the body under consideration and thence extends to the molecules and atoms of neighboring bodies, causing "induced charges." It is as if one were to fill a box with jelly, and then pull or push or twist a rod embedded in its centre. The result would be strains in the rod, the jelly and the box, and in a general way the total stress on the box would equal that on the rod. By proper means we could detect the strain all through the substance of the jelly, but most easily by its variations from place to place.

We do not know exactly what sort of a strain in our ether jelly is produced by electromotive stress, but we do know that it possesses the quality of *endedness*, so that the strains in the matter concerned, *i. e.*, in the ball and surrounding bodies, are equal and opposite.

In fact the two "charges" are merely the two ends of the same strain in the ether. They appear to us to be real attributes of the two opposed surfaces, because at these surfaces the dynamical constants, such as density, elasticity, etc., of the medium through which the strain is propagated, change in value, and differences in state of strain there become plainly manifest.

In electric currents we have a very different state of things. The energy supplied by the electromotive stress, instead of becoming potential as electrostatic strain, and producing "charge," does work and is transformed into other kinds of energy, thermal or chemical, mechanical or luminous.

When a stress of whatever kind is applied to a body, only a limited amount of energy can be transferred by it so long as the energy remains potential. Thus in our box of jelly before referred to, a twist of given intensity applied to the stick, as for instance by a string wound around it and pulled by a given

weight, can only transfer energy until the stresses produced in the jelly come to an equilibrium with it. On the other hand if the box were filled with water and the stick were the axle of a sort of paddle wheel, the very same intensity of twist could go on communicating energy to the water as long as one chose to apply the necessary work.

This roughly expresses the difference between electric charge and electric current, viewed from the standpoint of energy. An electromotive stress applied to a wire *charges* it and then the transfer of energy ceases. If the same stress be applied under conditions that allow work to be done by it, energy will be transferred so long as the stress is kept up. In an open electric circuit we have a charge as the result of electromotive stress. When the circuit is closed, *i. e.*, when a continuous medium is furnished on which work can be done, we have an electric current. The amount of this work and the flow of electrical energy that produces it depends on the nature of the circuit. Certain substances, especially the metals, and of metals notably copper and silver, permit a ready continuous transfer of energy in and about them. Such substances are called good conductors. The real transfer of energy takes place ultimately *via* the ether, but its amount is limited by the amount and character of the matter through which work can be done.

Whenever the strains in the ether, such as we recognize in connection with electrical charge, shift through space as when a current is flowing, other strains bearing a certain relation to the direction of flow are made manifest. Where there is a rapid and intense flow of energy these strains are very great and important compared with any electrostatic strains that exist *outside the conducting circuit*. In other cases they may be quite insignificant. These strains are electro-magnetic, and with them we have to do almost exclusively in practical electrical engineering. They appear wherever there is a moving electrical strain, whether produced by moving a charged body or causing the charge upon a body to move.

Both kinds of strains exist in radiant energy, as in other cases of flowing energy. The stresses in electro-magnetic energy are at right angles both to the electrostatic stresses and to the direction of their motion or flow. If for example

we have a flow of electrical energy in a straight wire (Fig. 1), the electro-magnetic stresses are in circles about it.

If A be a wire in which the flow of energy is straight down into the paper the electro-magnetic stresses are in circles in the direction shown by the arrow heads. If the wire be bent into a ring (Fig. 2), with the current flowing in the direction of the arrows, then the electro-magnetic stresses will be (following Fig. 1) in such direction as to pass downward through the paper inside the ring.

These electro-magnetic stresses constitute what we call a *magnetic field* outside the wire. The intensity of this field can be increased by increasing the flow of energy in the desired

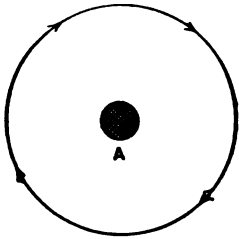


FIG. 1.

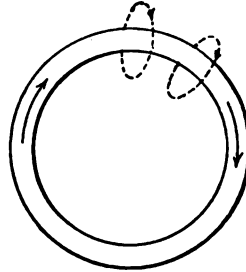


FIG. 2.

region in the systematic way suggested by Fig. 2. If, for example, we join a number of rings like Fig. 2 into a spiral coil shown in section in Fig. 3, in which the current flows downward into the paper in the lower edge of the spiral, there will be produced a magnetic field in which the stresses have the direction shown by the arrows. Such a spiral constitutes a genuine magnet, and if suspended so as to be free to move would take up a north and south position with its right-hand end toward the north. In and about the spiral there exists a magnetic "field of force," which is merely another way of saying that the ether there is under electro-magnetic stress. Its condition of strain is closely analogous to that about an electrified body, and, as in that case, there is no work done on the ether after the strains are once established, since the energy then becomes potential. While this is being accomplished work is done just as when a body is charged.

If now setting up such an electro-magnetic field requires energy to be spent by causing a current to flow in the spiral, we should naturally expect that if the same field could be set up by extraneous means, energy would momentarily be spent on the spiral in producing stresses and strains similar to those

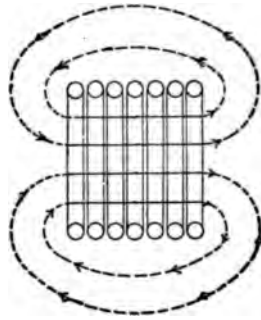


FIG. 3.

that set up the original field. This is found to be so, the process working backward as well as forward.

If, for example, we have two rings (Fig. 4), and by sending a current around one, transfer energy to the medium outside it, this energy will set up an electromotive stress in the other

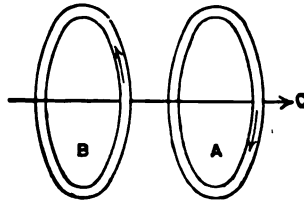


FIG. 4.

ring. The direction of this stress is not at once obvious, but we can get a very clear idea of it by considering the work done. If current is started in *A* (Fig. 4), in the direction shown, electro-magnetic stresses are produced in the direction of the arrow *C*. If these are to do work on *B*, the electromotive stress in the latter cannot have such a direction as to set up on its own account a magnetic field that would *assist*

that of A , otherwise we could increase the field indefinitely without added expenditure of energy. Therefore the electromotive stress in B , and hence the current, must be in a direction opposing the original current in A , as shown in the figure.

In like manner if the current in A be stopped and the field due to it therefore changes, there are changes in the electromagnetic stresses about B , that again set up an electromotive stress in it. If, however, this change of stress is to do work, the electromotive stress in B must be of such direction as to oppose by its field the change in the field of A —i. e., it must change its direction and will now give us a current in the same direction as the original one in A . All this follows the general law, that if work is to be done by any stress it must be against some other stress. There can be no work without resistance.

In Fig. 4 we have the fundamental facts of current induction on which depend most of our modern methods of generating and working with electrical energy. Summed up they amount to saying that whenever there is a change in the electromagnetic stresses about a conductor, work is done upon it, depending in direction and magnitude on the direction and magnitude of the change in the stresses.

This is equally true whether the stresses change in absolute value or whether the conductor changes its relation to them. Thus in Fig. 4, if A carries an electrical current the result on B is the same whether the field of A changes through cessation of the current, or whether the same change in the stresses about B is produced by suddenly pulling B away from A . The rate at which work is done depends on the rate at which the stresses are caused to change, as might be expected. So long as the stresses are constant with reference to the conductor in which current is to be induced, no work can be done upon it.

These principles form the foundation of the dynamo, motor, alternating current transformer and many other sorts of electrical apparatus. Their details may differ very widely, but we can get all the fundamental ideas from a consideration of Figs. 3 and 4. To define somewhat the specific idea of the dynamo, consider what happens when a conducting wire is thrust into a magnetic field such as is produced by a coil, as in Fig. 5. As in Fig. 3, let the current in the coil be flowing down-

ward into the paper in the lower half of the figure. A is a wire perpendicular to the plane of the paper in front of the coil, its ends being united at any distant point that is convenient. Knowing that moving the wire into the field will set up electromotive stresses in it, we can as before determine

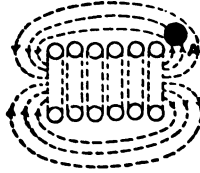


FIG. 5.

their direction by remembering that work must be done. That is (see Fig. 1), the induced current will flow through A downward into the paper. In passing out of the field the current would be upward.

We have so far neglected the rest of the circuit. To be exact we should consider it as in Fig. 6. Following the same line of reasoning as in Fig. 5, we see that while the ring A is entering the magnetic field the current induced in it must be opposite to that in the inducing coil (see Fig. 4). When the

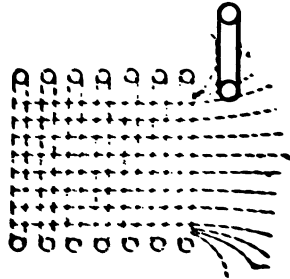


FIG. 6.

coil is leaving the field, however, this direction will be reversed. Considering the coil A as a whole, we see that so long as the total field tending to set up stresses in it is *increasing*, a current will be induced opposed to that in the inducing coil. While the total field is *diminishing*, the induced current will be in the other direction. The work that is spent in

moving the coil *A* will for the most part reappear as electrical energy in that coil. Arrange the parts of Fig. 6, so that the motion of *A* can be accomplished uniformly and continuously and we should have a true, though rudimentary, dynamo. Such a structure could be made by fixing *A* to the end of an arm pivoted at the other end and then revolving the arm so that at each revolution the coil *A* would sweep through the field of the magnetizing coil (see Fig. 7). The result of this, as we have seen, would be on entering the field a current in one direction, and on leaving, a current in the other. There

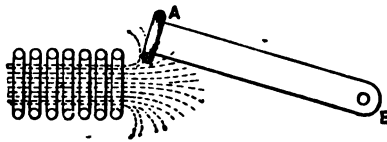


FIG. 7.

would thus be an alternating current developed in the ring *A*. If it were cut at some point and wires led down the arm and to two metal rings on the axis *B* we could obtain, by pressing brushes on these rings, an alternating current in any outside circuit. To make more of the revolution of the arm useful we could arrange inducing coils in a circle about *B*. There would then be an alternation as *A* passed each coil.

All these devices, however, would produce comparatively weak effects, because it is difficult to produce powerful magnetic stresses in so simple a way. There are very few materials in which magnetic stresses are easily set up or propagated. Chief among these is iron, which bears somewhat the same relation to magnetic actions that copper does to electrical ones. By giving to the coil in Fig. 7 a core of soft iron the electromagnetic effects obtained from it would be greatly enhanced. They are comparatively feeble in air and the more iron we put in their path the better. Developing this idea we have in Fig. 8 a much better device for setting up electric currents. Here the coil of Fig. 7 is wound around an iron core the ends of which are brought near together. The arm of Fig. 7 is also of iron with enlarged ends and the ring *A* is replaced by a coil of several turns.

The magnetic stresses brought to bear on the coil *A* are thus made comparatively powerful. Following out on Fig. 8 the reasoning applied to Fig. 7, we see that considerable electromotive stresses would be set up by the revolution of *A*, alternating in direction at each half revolution. In fact *A* is the armature of a simple alternating dynamo, having two poles *N* and *S*, so called from their magnetic relations (see Fig. 3).

We have not thus far considered the source of the electromagnetic field involved. It may be obtained as shown by utilizing the electro-magnetic stresses set up by a wire convey-

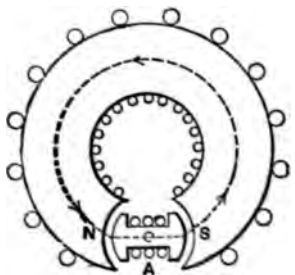


FIG. 8.

ing electrical energy or on a small scale from permanent magnets. The essential fact, however, is that by forcing a wire through a region of electro-magnetic stress, electromotive stresses are set up in that wire, the action in every case being in such direction as to compel us to do work on the wire. This work appears as electrical energy in the circuit including the moving wire.

Now return to Fig. 5 and consider the effect if the wire *A* is carrying a steady flow of electrical energy. It will set up electro-magnetic stresses about it as already described. If the current be downward into the paper in *A* these stresses will be opposed to the stresses in the field. Inasmuch as we have seen that in setting up such a current work had to be done in forcing the wire into the field, it follows that given such a current, there must be between its field and that of the coil a repulsive force which had to be overcome by doing the work aforesaid. In other words, there must have been a tendency to throw *A* out of the field of the coil. Just as

work had to be spent to produce electrical energy in A , so electrical energy will be spent in keeping up the stresses around A that tend to drive it out of the magnetic field. If the current in A were in the other direction the stresses in its field and that of the coil would be concurrent instead of opposed and their resultant would tend to draw wire and coil together, *i. e.*, work would have to be spent to keep them apart. This is the broad principle of the electric motor. It is sometimes referred to as simply a reversal of the dynamo, but it really makes no difference whether the structure in which the action just described takes place is well fitted to generate current or not. Given a magnetic field and a wire carrying electrical energy, and there will be a force between them depending in direction on the directions of the electromagnetic stresses belonging to the two. If either element is arranged so as to move and still keep up a similar relation of these stresses we have an electric motor. Whether so arranged as to fulfill this condition with alternating currents, or in such manner as to require currents in one direction only, the principle is the same.

So far as unidirectional or "continuous" currents are concerned they are usually obtained from dynamo electric machines similar in principle to Fig. 8. This machine, if the ends of the winding on the armature be connected to two metal rings insulated from each other, serves as a source of alternating currents which can be taken off the two rings by brushes pressed against them. If it is necessary to obtain currents in one direction only, this can be readily done by reversing the connection of the outside circuit to the windings at the same moment that the current reverses in them. The simplest way of doing this is by a "two part commutator," such as is shown in diagram in Fig. 9. Here A is the shaft surrounded by an insulating bushing. On this are fitted two half rings C and C' , of metal (the commutator segments). On these bear brushes B and B' . If the ends of the winding are connected to C and C' and the brushes are so placed that they pass from one segment to the other at the moment when the current in the winding changes its direction, the direction of the current with respect to the brushes and the outside circuit with which they are connected obviously remains constant.

In the actual practice of dynamo building very many refinements have to be introduced to serve various purposes, but the underlying principle remains the same, *i. e.*, to set up in a conductor electromotive stresses by dragging it into and out of the strained region of ether under an electro-magnetic stress.

According as the dynamo is intended for producing continuous or alternating currents its structure is somewhat modified with its particular use in view. These modifications extend not only to the general arrangement but to the details of the winding. Alternating dynamos usually have a more com-

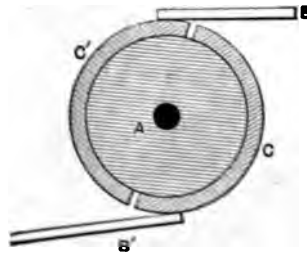


FIG. 9.

plicated magnetic structure than continuous current machines, and are almost invariably separately excited, *i. e.*, have their magnetizing current supplied from a generator specialized for producing continuous current. The magnetic complication is really only apparent, as it consists merely of an increased number of magnet poles, due to the desirability of obtaining tolerably rapid alternations of current.

Dynamos designed for producing continuous current are modified with the armature as a starting point. The winding is very generally much more complicated than that of an alternator and the commutator that serves to reverse the relation of the windings to the brushes at the proper moment is correspondingly elaborate. The magnetic structure is usually comparatively simple. The whole design is necessarily subordinated to securing proper commutation. Continuous current dynamos are almost universally self-excited, that is the current which magnetizes the field is derived from the brushes of the machine itself. Whatever the character of the machine the electromotive force generated in it increases with the inten-

sity of the magnetic field (that is, with the magnitude of the electro-magnetic strains which affect the armature conductors), with the speed (that is, with the rate of change of electro-magnetic stress about these moving conductors) and with the number of turns of wire of which the electromotive forces are added. The capacity of the machine for furnishing electrical energy varies directly with the electromotive force and with the capacity of the armature conductors for transmitting the energy without becoming overheated. Practically all the energy lost in a dynamo appears in the form of heat, which must be limited to an amount which will not cause an undue rise of temperature.

It is not the purpose of this chapter to deal with the practical details of dynamo design and construction. For these, the reader should consult special treatises on the subject, which consider it with a fullness which would here be quite out of place. Special machines, however, will be briefly discussed in their proper places and in relation to the work they have to do.

Having now considered the principles which underlie the transformation of mechanical into electrical energy, we may profitably take up the fundamental facts in regard to the measurement of that form of energy and the units in which it and its most important factors are reckoned.

All electrical quantities are measured directly or indirectly in terms of the dynamical units founded upon the units of length, mass and time. These derived dynamical units can serve alike for the measurement of all forms of energy so that all have a common ground on which to stand. As the electrical units are derived directly from the same units that serve to measure ordinary mechanical effects, electrical and mechanical energies are mutually related in a perfectly definite way.

A natural starting point in the derivation of a working system of electrical units may be found in electro-magnetic stress, such as is developed about an electrical circuit or a permanent magnet. To begin with, the mechanical units that may serve to measure any form of energy are derived from those of length, mass and time. These latter are almost universally taken as the centimetre, gramme and second, the "C. G. S."

system. Starting from these the unit of force is that which acting for one second on a mass of one gramme can change its velocity by one centimetre per second. This unit is called the *dyne* and as a magnetic stress it is equivalent to a push of about $\frac{1}{445,000}$ of a pound's weight on a similar "unit pole"

one centimetre distant. This unit is inconveniently small for practical use and before long some multiple of it is likely to be given a special name and used for practical reference. In fact, one *megadyne* (i. e., 1,000,000 dynes) is very nearly equivalent to the weight of a kilogramme. Magnetic measurements may thus be made by direct reference to the dyne and centimetre, since the unit pole is that which repels a similar pole 1 cm. distant, with a force of 1 dyne.

Referring now to what has been said about the causes which vary the electromotive force produced in a dynamo, we fall at once into the definition of the unit electromotive force, which is that produced when field, velocity, and length of wire under induction are all of unit value. The unit electromotive force is, then, that which is generated in one centimetre of wire moving one centimetre per second, perpendicular to its own length, straight across unit field, which is that existing one centimetre from unit pole as indicated above. This unit, too, is inconveniently small, so that one hundred million times this quantity is taken for the practical unit of electromotive force and called the *volt*.

The unit electrical current is that which flowing through one centimetre length of wire will create unit field at any point equidistant from all parts of the wire (as when the wire is bent to a curve of 1 cm. radius). One-tenth of this current is taken as the working unit and called the *ampère*.

The unit electrical resistance (one *ohm*) is that through which an electromotive force of one volt will force a current of one ampère.

The C. G. S. unit of work is that due to unit force acting through unit distance; that is, one dyne acting through one centimetre. As this is too small to be generally convenient, ten million times this amount is taken as the working unit (called the *erg*). This is a little less than three-quarters of a foot-pound (exactly .7373). The unit *unit* of doing work is

one *joule* per second. This unit rate is called the *watt* and translating this into English measure, one *watt* equals $\frac{1}{746}$ *horse-power*.

Although the watt is often spoken of as an electrical unit, it belongs no more to electrical than to any other form of energy. It only remains to show the relation of the *watt* to the more strictly electrical units just mentioned. Recurring to our definition of the volt, let us suppose that the resistance of the circuit of which the moving wire is a part is such that unit electromotive force produces unit current in it. The stress between the field of the moving wire and the other unit field in which it moves is then one dyne at unit distance. In maintaining this for one second at the given rate of moving (1 cm. per second) the work done is, as above, one C. G. S. unit. At this rate if the E. M. F. were 1 *volt* and the current 1 *ampère*, the work would be one *joule* and the rate of doing work one *watt*. If either E. M. F. or current were changed, the work would be proportionally changed. So, the number of volts multiplied by the number of ampères is numerically equal to the *watts*, *i. e.*, we have obtained the dynamical equivalent of the two factors that make up electrical energy as ordinarily reckoned. So the output of any dynamo in watts is determined by the volt-ampères produced, and we see the reason of the ordinary statement that 746 *volt-ampères* make one horse power. This is always true whether the output is steady or variable, so long as we give to the product of volts and ampères their true concurrent values.

What few other electrical units appear in practical work will be referred to in their proper places.

It has been the purpose of this chapter, not so much to set forth the ordinary elements of electrical study, as to present these elements as viewed from the standpoint of energy. The author has purposely avoided the conception of electricity as a material something, in favor of the idea of stresses in the ether, producing strains which are propagated through the ether, thus effecting the transmission of electrical energy. Hereafter we shall have to do with the extension of this transmission to practical magnitudes, and its utilization in the development of human industry.

CHAPTER II.

GENERAL CONDITIONS OF POWER TRANSMISSION.

THE growth of human industry depends on nothing more than upon the possession of cheap and convenient power. Labor is by far the largest factor in the cost of many manufactured articles, and in so far as motive power is cheap and easy of application it tends to displace the strength of human hands in all manufacturing processes and so to reduce the labor cost and to set free that labor for other and less purely machine-like purposes.

Therefore industrial operations have steadily gravitated toward regions where power is easily procured, often at the sacrifice of certain other advantages. This is in no wise better shown than by the growth of cities around easily available water powers even in regions where both raw material and finished product became subject to considerable cost of transportation. With the introduction of the steam engine came a corresponding tendency to gather factories about regions of cheap fuel. These localities, like those in which water power is plentiful, seldom coincide with centres of cheap material and transportation, so that it has generally been desirable to strike an average condition of maximum economy by transporting the necessary power, stored in the form of fuel, to some advantageous point.

Experience has shown however that, while the hauling of coal is a simple and comparatively cheap expedient, fuel utilized for running heat engines is in very many cases so much more expensive than hydraulic power as to be quite out of competition in cases where the latter can be transmitted with a reasonable degree of economy to places that are favorable for its utilization. And in general it is found that there is a wide field for the transmission of power obtained from a given source in competition with power from some other source utilized *in situ*.

The sources of energy on which we may draw for mechanical

power to be employed on the spot or transmitted elsewhere are very diversified, although few of them are to-day utilized in any considerable amount. Taking them in the order of their present importance we arrive at something like the following classification:

- I. Fuel.
- II. Water power.
- III. Wind.
- IV. Solar radiation.
- V. Tidal and wave energy.
- VI. Internal energy of the earth.

Of these only the first two play any important part in our industrial economy. The third is employed in a very small and spasmodic way, the fourth and fifth although enormous in amount are almost untouched, while the last is not at present used at all, owing to inherent difficulties.

I. The world's supply of fuel is almost too great for intelligible description. Aside from a widely distributed and steadily renewed supply of wood, the extent and capacity of available coalfields give promise that for a very long time to come fuel will be the chief source of energy. Coal is found in nearly every country and in most quite plentifully, while exploration both in old fields and in new, is constantly bringing to light fresh supplies. Many computations concerning the probable duration of the coal supply have been made, but they are generally unreliable owing to the great probability that only a very small proportion of the available coal is as yet known to mankind. Certain it is that there is unlikely to be a marked scarcity of fuel for several centuries to come, even at the present rate of increase in its consumption. Still it is altogether probable that it may become considerably dearer than at present within perhaps the present century, owing to the increased difficulty of working the older mines and the comparative inaccessibility of new ones.

Besides coal we have petroleum and natural gas in unknown but surely very great quantities, since the distribution of both is far wider than has generally been supposed. At present the cost of these as fuels does not differ widely from that of coal, but appearances indicate that they are likely to be sooner exhausted.

Every improvement that is made in the generation of power by steam and its subsequent distribution helps to economize the fuel supply and stave off the already distant day when fuel shall be scarce. The work of the past half century has by direct improvement in steam practice nearly if not quite doubled the energy available per ton of fuel. Beyond this much has been done along collateral lines. Particularly, explosive vapor engines have been developed to a point at which they are for small powers decidedly more economical than steam engines. Gas engines of moderate size, 5 to 25 HP, are readily obtained of such excellence as to give a brake-horse-power hour on an expenditure of little, if any, more than 25 cu. ft. of ordinary gas, reducing the cost per HPH to below that of power from a steam engine of similar size. Engines using an explosive mixture of air and petroleum vapor are at least equally economical, in fact more so unless the comparison be made with very cheap gas.

These explosive engines have nearly double the net efficiency of steam engines as converters of thermal energy into mechanical power, and are capable of giving under favorable circumstances 1 HPH on the thermal equivalent of about 1 pound of coal.

II. Water power derived from streams is not distributed with the same lavish impartiality as fuel, but nevertheless exists in many regions in sufficient amount to be of the greatest importance in industrial operations. Available streams exist around almost every mountain range and are capable of furnishing an amount of power that is seldom realized. In the United States the total horse power of the improved water power is approximately 1,500,000. New England is especially rich in this respect, as is, too, the entire region bordering on the Appalachian range. The Rocky Mountains are less favored, the available water being rather small in amount on account of the smaller rainfall and the severe cold of the winters.

The Pacific slope is rather better off and the high price of coal operates to hasten the development of every practicable power. All over the country are scattered small water powers, and one of the interesting results of the growth of electrical power transmission has been to bring to light half forgotten falls even in familiar streams. Abroad, Switzerland is rich in powers of

moderate size, as is the entire Alpine region, while a few years of experience in electrical transmission will probably cause the discovery or utilization of many water powers that have hardly been considered, even in highly developed countries. Of the world's total water power supply we know little more than of its coal supply, but it is quite certain, now that transmission of power over very considerable distances is practicable, that the employment of the one will every year lessen the relative inroads upon the other. And this is in spite of the fact that water is by no means always cheaper than steam as a motive agent.

III. Wind as a prime mover has been employed on a rather small scale from the very earliest times. Were it not for the extreme irregularity of the power supplied by it in most places, the windmill would be to-day a very important factor in the problem of cheap power. Unhappily winds in the same place vary most erratically from the merest breeze to a hurricane sweeping along at the rate of 50 to 75 miles an hour. As all strengths of wind within very wide limits must be utilized by the same apparatus running at all sorts of speeds, it is no easy matter to employ it for most sorts of work. It seems specially unfitted for electrical work, and yet several small private plants have obtained good results from windmills used in connection with storage batteries.

In ordinary winds the great size of the wheel necessary for a moderate power militates against any very extensive use. For example, with a good breeze of 10 miles per hour a wheel about twenty-five feet in diameter is needed to produce steadily a single effective horse power, and the rate of rotation, about 30 revolutions per minute, is so low as to be inconvenient for many purposes. Hence windmills are generally used for very small work which can be done at variable speed, such as pumping, grinding and the like, for which they are unexcelled in cheapness and convenience. For large work we can hardly count much on wind power, in spite of ingenious speculations to the contrary, and as a source of power for general distribution it is out of the question, for such as it is we have it already distributed. It must rather be regarded as a local competitor of distributed power, and even so only in a small and limited field.

IV. Aside from being in a general way the ultimate source

of nearly all terrestrial energy, the sun steadily furnishes an amount of radiant energy which if converted into mechanical power would more than supply all possible human needs. Its full value is the equivalent of no less than ten thousand horse power per acre of surface exposed to the perpendicular rays of the sun.

This prodigious amount is reduced by perhaps one-third through atmospheric absorption before it reaches the sea level, and in cloudy weather by a very much larger amount. Nevertheless with clear sunlight the amount of energy practically available, after making all allowances for increased absorption when the sun is low, and for the hours of darkness in any given place, is very great. If we suppose the radiant energy to be received on concave mirrors kept turned toward the sun and arranged so as to utilize the heat in the boiler of a steam or vapor engine, the average result after making all allowances for losses would be one mechanical horse power for each 100 square feet of mirror-aperture, available about ten hours per day. This efficiency has been substantially realized in practice, for such a solar engine constructed by M. Mouchot actually gave nearly a horse power with a mirror surface of about 100 square feet.

Such an engine would not be available at all times owing to clouds, but might very well prove useful in some climates for irrigation work. During the dry season it could be operated almost every day, and with the advantage over windmills of giving quite steady power and at any convenient speed. Although not of general applicability, such apparatus might be very valuable in portions of the desert country west of the Rocky Mountains, in Mexico, western South America, northern Africa and elsewhere. So if mankind ever is in dire need of power, the sun stands ready to furnish it.

V. *Otidal energy* but little use has yet been made. Here and there both here and abroad are small tide-mills, feebly suggesting the enormous store of tidal power as yet untapped. The intermittent character of tidal currents and the small extent of the rise and fall generally available make the practical part of the problem somewhat difficult. The easiest way of harnessing the tides is to let the rising water store itself in artificial reservoirs or natural basins, slowly increased and then during

the ebb to use it with water-wheels. But usually the head is so small that for any considerable power stored the area of reservoir must be very large and the wheels must be of great size in order to make the stored water do its work before the rising tide checks further operations. The average tide is seldom more than 10 to 12 feet along our coast, and of this hardly more than half could be utilized to give even a few hours of daily service. At 6 feet available head about 100 cubic feet of water must be stored for each horse-power-minute, even with the best modern turbines. Hence for say 1,000 HP available for 5 hours there must be impounded 30,000,000 cubic feet of water, making a pond 6 feet deep and almost 120 acres in extent.

Tidal operations are therefore likely to be restricted to a few favored localities where through natural configuration of the ground natural reservoirs can be found and where the rise of the tide is several times the figure named. In rare cases by the use of more than one reservoir and outlet work may be made nearly or quite continuous. Still with all these difficulties the possibilities of tidal power are enormous in special cases. Take for example the Bay of Fundy with its 40 feet of normal tidal rise. If half this head can be used in practice 30 cubic feet will be required per horse-power-minute, and a single square mile of reservoir capacity gained by damming an estuary or cutting into a favorable location on shore will yield 62,000 horse power ten hours per day in two five-hour intervals. Generally speaking, economic conditions are not favorable for such an employment of the tides, but in some localities a peculiarly fortunate contour of the shore coupled with high local cost of fuel may render it easy and profitable to press the tides into service. The author has had occasion to investigate a few cases of this kind in which the commercial outlook was good. The main difficulties in utilizing the tides are two: first, the very variable head; and, second, the short daily periods in which the outflow can be advantageously used. Moreover, these periods shift just as the times of high tide shift, by a little less than an hour per day, so that if the power were used directly it would often be available only at very inconvenient times.

To work the tides on a really commercial scale, therefore, some system of storing power is absolutely necessary. And

since one would have to deal with very large amounts of power, much of the time the entire output of the plant, the storage must be fairly cheap and efficient. For work on the scale contemplated it is probable that the storage battery is the most available method. Used in very large units in a colossal plant, most of the serious objections to the storage battery are in great measure obviated, since attendance and repairs can be part of the duties of a regular maintenance department, inspecting, testing and repairing damaged cells, casting and filling new plates, and keeping the plant in first-class working condition all the time.

The cost of battery would be of course a serious matter, but not prohibitive, and its efficiency could probably be kept as high as 80 per cent. The best idea of the economic side of the case can be gained by investigating a hypothetical case of tidal storage, based, for convenience, on the square mile of reservoir just mentioned. To simplify the case we will assume use of the power locally, so as not to complicate the situation by the details of a long-distance transmission. We will take the generators, which can be worked at steady full load, at 94 per cent. efficiency. Then the efficiency to the distributing lines would be

$$.94 \times .80 = .756.$$

At this rate the 62,000 HP available would give substantially 35,000 KW; *i. e.*, 350,000 KW-hours daily. Storage capacity would have to be provided for this whole amount in a gigantic battery, weighing about 18,000 tons and costing in the neighborhood of three million dollars. To this, of course, the cost of the electrical and hydraulic machinery must be added, and beyond this must be reckoned the really very uncertain cost of the reservoir and hydraulic work. In spite of all this, an assured market for the output would lead to economic success under conditions quite possible to be realized. If extensive transmission had to accompany the enterprise there would be still further loss of efficiency, so that the final figure would not exceed 60 per cent., which would reduce the salable power to about 27,900 KW. Evidently this would have to command a very good price, to carry the burden of the heavy investment, which would probably rise to between \$10,000,000 and \$15,000,000. The cost of

such an enterprise is so formidable that it is practically out of the question, unless it can reach a market for power in which a very high price is admissible. When fuel begins to get scarce it will be profitable to utilize the tides on a large scale; until then, their use will be confined to isolated cases in which local causes lead to high cost of other power and tidal storage is unusually cheap.

All these considerations apply with similar force to wave motors, which have been often suggested, and now and then used, as sources of power. The energy of the waves is very great, as the havoc wrought by storms bears witness; but it is most irregular in amount, and requires very large apparatus for its utilization. What is worse, the power is intermittent, so that to be of any natural advantage it must be reduced to a steady output by means of storage of energy in some form. The periodicity of wave motion is so low, roughly about 6 to 10 crests per minute, that flywheels and the like are of little use, and storage is practically reduced to a question of compressing air or pumping water. Even if some such wasteful intermediary were not necessary, and one could work directly by means of floats or their equivalent, a float would have to have a displacement of at least one ton per horse-power, even if working in a pretty heavy sea, and under ordinary circumstances several times that amount of displacement. At best, wave motors are cumbersome, and give small promise of economic development while other sources of energy are available.

VI. Of the earth's internal heat energy there is little to be said. It is quite unused save as an occasional source of hot water, and except in a very few cases could not be employed at all, much less to any advantage. Immense as is its aggregate amount, it is save at isolated points, so far separated from the earth's surface as to be very difficult to get at. Hot springs, very deep artesian wells, and some volcanic regions furnish the only feasible sources of terrestrial heat energy, so that the whole matter is only of theoretical interest.

We see that at present only two sources of energy, viz., fuel and water power, are worthy of serious consideration in connection with the general problem of the transmission and distribution of power. The other sources enumerated are either

very irregular, uncertain in amount, or so difficult of utilization as to remove them at once from the sphere of practical work.

Granted then that fuel and water power are and are likely long to remain the dominant sources of energy, let us look more closely into their possibilities. From each energy can be readily transmitted and distributed by any suitable means; each in fact can be transferred bodily to a distant scene of action without any transformation from its own proper form. In fact for certain purposes and under certain conditions such is the very best method. Fuel for ordinary heating and water for such uses as hydraulic mining can be taken as cases in point. In a more general way both fuel and water for the development of mechanical power may often profitably be transferred from place to place.

The conditions of economy in the transmission of fuel as such are comparatively easy to examine and define. Coal may be produced at the mine for a certain quite definite cost per ton. It can be transported over railroads and waterways for an easily ascertainable price. Such a transmission may be said to have a definite efficiency, as for example 90 per cent. when the total transportation charges against a ton of coal amount to 10 per cent. of its final value. From this standpoint it is quite possible to transmit power at this very high efficiency even to the distance of hundreds of miles. If the final object be the distribution of power on a large scale, as from a great central station, this transmission by transportation of fuel is often at once the most reliable and the cheapest method.

Transformation of the fuel energy at its source into some other form for the purpose of transmission is generally only justifiable, first, when by so doing fuel not available for transportation at a high efficiency can be rendered valuable by transformation of its energy, or second, when it is to be utilized at some distant point in a manner which compels a loss of efficiency greater than that encountered in transmission. As an example of the first condition fully one-third of the coal as ordinarily mined is unfitted, through its finely divided condition or poor quality, for transportation over considerable distances. Its commercial value is so small per ton that it could not be carried far without incurring charges for carriage amounting to

a large part of its value. Hence every coal mine accumulates a mountainous culm pile that is at present not only valueless but cumbers the ground. This waste product could sometimes be very profitably employed in generating power which could be transmitted at a relatively very high efficiency and sold at a good price.

A specimen of the second kind may be found in the somewhat rare case of power which must be used in small units scattered over a considerable territory, so that they could be replaced with a great gain in efficiency by a single large generating station. Such a state of affairs might be found in certain mining regions where coal and iron mines are interspersed. This must not be confounded with the very ordinary case of distributing energy from a central station to various scattered points, for we are here considering only the original source of the fuel.

When an extensive distribution of energy from a power station is contemplated, electrical or similar transmission of power to that station is generally economical only on the condition above expressed, of using fuel otherwise valueless, since the facilities for transportation to points at which power distribution on a large scale would be profitable, are generally good and fairly cheap. All this applies to piping gas or petroleum as well as to hauling coal, with the difference that neither gas nor petroleum has any waste corresponding to culm, and hence the transportation of each of them becomes a process entirely comparable with the transmission of energy and directly competing therewith. It has even been proposed to pipe coal dust by pneumatic power for fuel purposes.

Water power is by no means always cheaper than fuel, but as a general rule it is, and by such an amount that it can be transformed into electrical energy and transmitted to at least a moderate distance without losing its economic advantage. It therefore is usually the cheapest source from which to derive power for general distribution on a large scale.

It is very difficult to give a clear idea of the relative cost of steam and water power, for while the one can be predicted for any given place with fair accuracy, the other is subject to immense variations. Once established, a water power plant can be operated very cheaply, but the cost of developing the

water power may be almost anything, and each case must be figured by itself. It is easy to obtain estimates of the cost of developing a given stream and to form a close estimate of both the interest charges to be incurred and the additional expense of repairs and of operation. The cost of steam power for the same conditions can be accurately estimated. The details of such estimates we will discuss later. In general one can only safely say that the costs of steam and water power, averaged, as it were, so that while the more easily developed water powers are cheaper sources of energy than fuel at any and every price, there are many cases in which the great cost of development of a efficient water power prohibits competition with steam except where fuel is very dear. Much depends on the topography of the country, the amount and regularity of the available head of water, the price at which water rights can be obtained, and various other local conditions. That the cost of obtaining power in a stream is generally much less than when it is taken from a high water as the tide flows, the latter conditions working power of the stream after making great allowances for the storage capacity and works of storage and regulation, etc.

In addition we have to consider two distinct phases of the problem of cost—first the cost of steam and water as prime movers for a given amount of work to be performed, and second, the relative delivery costs of the two kinds of steam power at the points where the electricity takes issue.

It is a curious thing, among others, just exactly in the character of the work to be done that the situation that is to be considered is so different from the ordinary situation that the steam power is not always the best. In many cases it is not only the cost of the water but the cost of the machinery and the cost of the transmission of the power that are the determining factors. In many cases the cost of the water is the determining factor, and in many cases the cost of the machinery and the cost of the transmission of the power are the determining factors. In many cases the cost of the water is the determining factor, and in many cases the cost of the machinery and the cost of the transmission of the power are the determining factors.

It is a curious thing, among others, just exactly in the character of the work to be done that the situation that is to be considered is so different from the ordinary situation that the steam power is not always the best. In many cases it is not only the cost of the water but the cost of the machinery and the cost of the transmission of the power that are the determining factors. In many cases the cost of the water is the determining factor, and in many cases the cost of the machinery and the cost of the transmission of the power are the determining factors.

Those besides electric transmission which have come into considerable use are the following:

- I. Wire Rope Transmission.
- II. Hydraulic Transmission.
- III. Compressed Air Transmission.
- IV. Gas Transmission.

It will be well to look into the distinguishing characteristics of these and their relation to electrical transmission with the purpose of finding the advantages and limitations of each, so that the proper economic sphere of each may be determined, before taking up the electrical work which forms the main subject of this volume. Each method will be found to have its own legitimate place.

I. The transmission of power by wire ropes is merely a very useful extension of the ordinary process of belting. Belts are made of material which will not stand exposure to the weather, and which being of low tensile strength is heavy and bulky in proportion to the power transmitted. The advantage of wire rope over belting lies in its high tensile strength and freedom from deterioration when used out of doors. To gain the fullest benefit from these properties it is necessary to use light ropes driven at high speed.

It should be borne in mind that the power transmitted by anything of the nature of belting depends directly on the speed and the amount of pull exercised. If the force of the pull is 100 pounds weight and the speed of belt or rope is 4,000 feet per minute the amount of power transmitted is 400,000 foot-pounds per minute or (since 1 horse power is 33,000 foot-pounds per minute) about 12 HP. The greater the speed the more power transmitted with the same pull, or the less the pull for the same power. Wire rope can be safely run at a considerably higher speed than belting and is much stronger in proportion to its size and weight. It does not often replace belting for ordinary work for the reason that owing to its small size it does not grip ordinary pulleys anywhere nearly in proportion to its strength. Hence to best take advantage of its ability to transmit large powers the rope speed must be high and the pulleys unusually large in diameter to give sufficient surface of contact. Such large wheels are inconvenient in most situations, and as the alternative is a

number of ropes which are troublesome to care for, rope driving save for outdoor work is rather uncommon.

A typical rope transmission is shown diagrammatically in Fig. 10. Here *A* and *B* are two wheels, usually of cast iron, generally from 5 to 15 feet in diameter and with deeply grooved rims. They are connected by a wire rope perhaps from $\frac{1}{2}$ inch to $1\frac{1}{2}$ inch in diameter, which serves to transmit the power as the

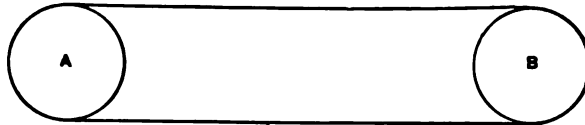


FIG. 10.

wheels revolve. The rope speed is usually from 3,000 to 5,000 feet per minute, sometimes as high as 6,000. The distance between the centres of *A* and *B* may be anything required by the conditions up to four or even five hundred feet. Greater distances are seldom attempted in a single span, as if the rope is not to be overstrained by its own weight it must be allowed to sag considerably, compelling the pulleys to be raised to keep it clear of the ground, and subjecting it to danger from swaying seriously by reason of wind pressure or other accidental causes.

The rope employed is of special character. The material is the best charcoal iron or low steel, and the strands are usually

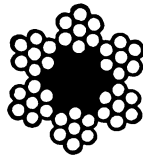


FIG. 11.

laid around a hemp core to give added flexibility. The rope generally employed in this country is of six strands with seven wires per strand, and is shown in cross section in Fig. 11. Even with the hemp core there is still in an iron rope sufficient resistance to bending to make the use of pulleys of large diameter necessary. Sometimes each separate strand is made with a hemp core or is composed of nineteen small wires

instead of seven larger ones, to increase the flexibility and to make it possible to use smaller sheaves and drums, as in hoisting machinery.

Steel rope is slightly more costly than iron, but gives greater durability. The wheels on which these ropes run are furnished with a deep groove around the circumference, provided with a relatively soft packing at the bottom on which the rope rests, and which serves to increase the grip of the rope and to decrease the wear upon it. Fig. 12 shows a section

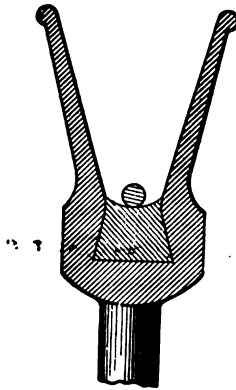


FIG. 12.

of the rim of such a wheel. The bushing at the bottom of the groove, upon which the rope directly bears, has been made of various materials, but at present leather and specially prepared rubber are in most general use. The small pieces of which the bushing is composed are cut to shape and driven into the dovetailed recess at the bottom of the groove. The bushings have to be replaced at frequent intervals, and the cables themselves have an average life of not much over a year.

When a straightaway transmission of a few hundred feet is necessary, when the power concerned is not great and the size of the pulleys is not a serious inconvenience, this transmission by wire rope is both very cheap and enormously efficient. No other known method can compete with it within these somewhat narrow limitations. For a span of ordinary length and the usual rope speeds the efficiency has been shown by experiment to be between 96 and 97 per cent. At a dis-

tance of four to five hundred feet the weight and sag of the rope becomes a very serious inconvenience and the arrangement has to be modified. Perhaps the most obvious plan is to introduce a sheave to support the slack of the cable, as shown in Fig. 13.

On longer spans several sheaves become necessary and both the slack and the tight portions of the cable need such support.




FIG. 13.

In cable railway work, the most familiar instance of power transmission by wire ropes, numerous sheaves have to be employed to keep the cable in its working position in the somewhat contracted conduit. These reduce the efficiency of the system considerably, so that the power taken to run the cable light is often greater than the net power transmitted. In aerial cable lines multiple sheaves are seldom used, and the more usual procedure is to subdivide the transmission into several independent spans, thus lessening swaying and sagging as well as the length of rope that must be discarded in case of a serious break. This device is shown in Fig. 14. It employs intermediate pulley stations at which are installed double




FIG. 14.

grooved pulleys to accommodate the separate cables that form the individual spans. Such a pulley is shown in section in Fig. 15. The spans may be three or four hundred feet long; as soon as the length gets troublesome another pulley station is employed. There is necessarily a certain small loss of energy at each such station. This is approximately proportional to the number of times the rope passes over a pulley. From the best experimental data available the

efficiency of a rope transmission extended by separate spans is nearly as follows:

Number of spans, . . .	1	2	3	4	5	6	7	8	9	10
Per cent. efficiency, . .	.96	.94	.93	.91	.89	.87	.86	.85	.84	.82

These figures are taken to the nearest per cent. and are for full load only. At half load the loss in each case would be

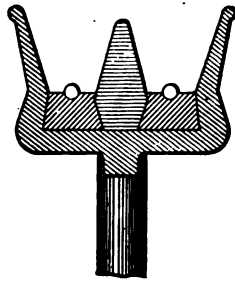


FIG. 15.

doubled. For instance a 10-span transmission at half load would give but 64 per cent. efficiency. The pulley stations consist of the double-grooved wheel before mentioned mounted on a substantial and rather high pedestal or frame-work.

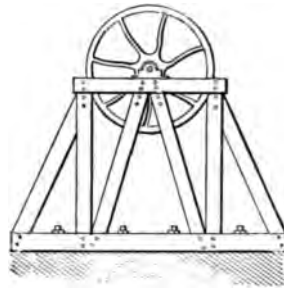


FIG. 16.

In this country a timber frame is generally used; abroad a masonry pier is more common. A convenient form of frame-work is shown in Fig. 16. An idea of its dimensions may be gained from the fact that the wheel is likely to be 6 to 10 feet in diameter.

It is interesting to note that the efficiency just given for a 10-span transmission at full load is quite nearly the same as would be obtained from an electrical power transmission at moderate voltage over the same distance, assuming a unit of say 50 HP or upward. The first cost of the latter would be considerably higher than that of the rope transmission, but the repairs would almost certainly be less than the replacements of cable, bringing the cost per HP at full load to about the same figure by the two methods.

From actual tests of electrical apparatus we have the following efficiency for a transmission of 50 HP 5,000 feet,

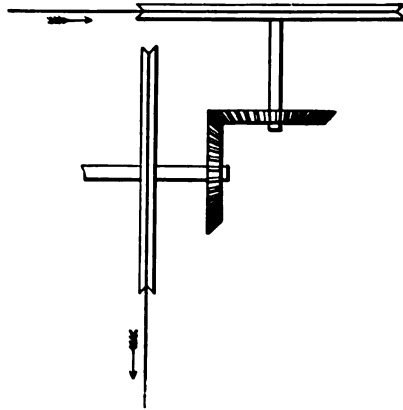


FIG. 17.

assuming 2,000 volts and 2 per cent. line loss, which would require a wire less than one-fourth of an inch in diameter. Efficiency at full load 81 per cent., at half load 72. Except at full load the electrical transmission has a very material advantage. This advantage would be greatly increased if the transmission were in anything but a straight line. An electric line can be carried around any number of corners without loss of efficiency, while a rope transmission cannot. If it becomes needful to change the direction of a rope drive it is done at a station provided with a pair of rope wheels connected by bevel gears set at any required angle. Fig. 17 shows such a station in diagram. The loss of energy in such a pair of bevel gears amounts to from 7 to 10 per

cent., more often the latter. The bevel gears may be avoided by a sheave revolving in a horizontal plane and carrying the turn in the cable, but while this arrangement is tolerably efficient it greatly decreases the life of the rope.

From what has been said it will be seen that while cable transmission is for short distances in a straight line both cheap and very efficient, at 4,000 to 5,000 feet it is equalled and surpassed in efficiency by electric transmission, with lesser maintenance although greater first cost. The steel rope for a 50 HP transmission of 5,000 feet would cost about \$400, and replacement brings a considerable charge against each HP delivered. If the transmission is not straight away or if branches have to be taken off *en route* the efficiency of the system is considerably reduced by gear stations, while even aside from these the efficiency is high only at or near full load. But the general simplicity and cheapness of cable transmission has made it a favorite method, and there have been many such installations, some of them of a quite elaborate character. Most of them are small, since the amount of power that can be transmitted by a single rope is limited to 250 or 300 HP. Ropes suited to a larger power are too heavy and inflexible; $1\frac{1}{4}$ inch is about the greatest practicable diameter of cable, and even this requires pulleys between 15 and 20 feet in diameter for its proper operation.

One of the oldest and most considerable rope transmissions is that at Schaffhausen, where power derived from the falls of the Rhine is utilized for distribution to a number of factories in the vicinity. As a typical case it is worth more than a passing mention.

The turbine house contains three vertical shaft turbines aggregating 760 HP, working under about 15 feet head and geared to a common horizontal shaft. Any turbine can be put out of gear at will. The main shaft makes 80 revolutions per minute and carries loose upon it the main driving pulleys, each of which is 14' 9" in diameter. These are connected by bevel gears which mesh into a pair carried on studs driven by the shaft. Thus if there is any difference in the tension of the two main cables the pulley carrying the lesser load is accelerated and the rope tensions are brought to equality. From the turbine house the main line crosses to the left bank

of the Rhine and is turned at right angles by a bevel gear station. Then follow three spans along the river bank and then a second oblique gear station. The driven span of this terminates the main transmission, of which the total length is about 2,000 feet. From each pulley station power is taken off laterally by shafts or ropes for driving various factories, and beyond the main cables are smaller ones to continue the distribution. In all more than a score of customers are served and the nominal HP supplied is over 600. The charge for power is from \$24 to \$30 per HP per year. With various renewals, extensions and modifications the system has been steadily at work for more than a quarter of a century. The principal troubles have been loss of efficiency in bad weather and a tendency to oscillations of the rope and irregularity of speed at full load. One spinning mill abandoned the transmitted power on account of the severe changes of speed. Financially the Schaffhausen plant has been a success, from the Continental standard of profit at least, but it is even now the only similar plant where a general scheme of distribution is thoroughly worked out. It is found very difficult to measure equitably the power delivered to customers.

Let us now inquire into the efficiency of this transmission. There are on the average at least five spans of cable between the turbines and the vicinity of each factory. At full load this would under the most favorable circumstances give an efficiency of about .90. This load certainly exists only in the main driving spans. The power delivered is in most cases transferred to the working main shafts by subsidiary rope drives or by shafting. If the average working efficiency of this is above .90 under normal conditions of load our experience with similar devices elsewhere counts for little. Then there are two bevel gear stations to be considered, each of which can hardly exceed .92 in efficiency. The total probable efficiency from the main shaft in the turbine house to the main shafts of the factories at substantially full load is at best only $.90 \times .90 \times .92 \times .92 = .68$, and at $\frac{3}{4}$ load, which represents a much more likely state of affairs, about .52. Even the higher figure compares sadly enough with that just given for a single small electrical transmission over a greater distance,—.81 at full load. With the most ordinary electrical transmission

over the same distance the net efficiency from generator shaft to motor shaft would be at least .75 at full load. It is worthy of note that in an extension of the Schaffhausen works made within the last few years, the cable system was abandoned and electrical apparatus installed for the additional plant.

Although for a single straight transmission the cable system is up to nearly a mile more efficient than any other yet devised, it is sufficiently evident that when distribution is to be done involving changes of direction and many small rope drives or shafts, the advantage in efficiency very rapidly disappears, and at anything but full load the system is very far from efficient.

Under all circumstances the need of replacing the cables every year or so causes a high rate of maintenance. The following table, giving the sizes of iron wire cables and pulleys necessary for transmitting various amounts of power, will help to give a clearer idea of the conditions of cable transmission and aid in defining its limited but useful sphere. Speed is given in revolutions per minute and pulley diameter is the smallest permissible. These figures are, as will readily be seen, for rope

Diam. of Rope.	Speed.	Diam. of Pulley.	HP.
$\frac{3}{8}$ "	150	6'	25
$\frac{7}{8}$ "	140	7'	35
$\frac{1}{2}$ "	140	8'	45
$\frac{11}{16}$ "	100	10'	85
$\frac{3}{4}$ "	80	12'	100
$\frac{1}{2}$ "	80	14'	140
$1\frac{1}{8}$ "	80	14'	150

speeds of not far from 3,000 feet per minute. This can frequently be safely raised to 5,000 with somewhat larger pulleys than those given and increased revolutions, while for steady loads the tension can be slightly augmented without danger. So while the figures given are those suitable for ordinary running with a good margin of capacity, the HP given can be nearly doubled when all conditions are favorable.

II. Noting then that cable transmission does excellent work in its proper place, but is unsuited for the distribution of power or for transmissions more than 3,000 to 4,000 feet in length, we

may pass to the hydraulic method of transmitting and distributing power. This in its crude form of small water motors attached to ordinary city mains is very familiar, but nothing more extensive has been attempted in this country. Abroad there are a number of hydraulic power plants specially intended for the distribution of power for general use, and the method is one which has been fairly successful. There are two distinct types of hydraulic plant, one utilizing such pressure as is available naturally or by pumping to reservoirs, the other employing very high artificial pressures, up to 750 pounds per square inch, and used only for special purposes.

There are somewhat extensive works of the former kind at Zurich, Geneva, and Genoa, the effective head of water being in each case not far from 500 feet. In each case the power business has been an outgrowth of the municipal water supply system. At Zurich and Geneva elevated reservoirs are supplied by pumping stations driven by water power. At Genoa the head is a natural one, 20 miles from the city, and much of the fall is utilized 18 miles from Genoa in driving the fine constant current electric plant described elsewhere in this volume.

At Zurich there is in addition to the ordinary low pressure water system a special high service reservoir supplying power to a large electric station and to small consumers. Water is pumped 6,000 feet into this reservoir through an 18-inch main and the total power service from both systems is something like 500 HP, reckoned on a ten-hour basis. The price charged is from \$37 to \$80 per HP per year.

The Geneva plant is on a much larger scale, the total turbine capacity being about 4,500 HP. Here, as at Zurich, there are two sets of mains, one at nearly 200 feet head, the other at about 450. Both supply water for both power and general purposes. The high pressure service reservoir is about $2\frac{1}{2}$ miles from the city and the working pressure is supplied indifferently from this or from the pumps direct. There is an electric light plant with 600 HP in turbines driven by the pressure water and a large number of smaller consumers. Water is supplied to the electric light company for as low as \$15 per HP per year.

Both these installations are extensions of the city water service, and have done excellent work. Operated in this way

the economic conditions are somewhat different from those to be found in a hydraulic plant established by private enterprise for power only. An inquiry into the efficiency of such a system may be fairly based on the facts given. At Zurich, for example, the efficiency from turbine shaft to reservoir cannot well exceed .75. The distributing mains must involve a loss of not less than 10 per cent., while the motors cannot be counted on for an efficiency of over .75. The total efficiency from turbine shaft to motor shaft is then about $.75 \times .75 \times .90 = 50.6$ per cent. The character of the motors has an impor-

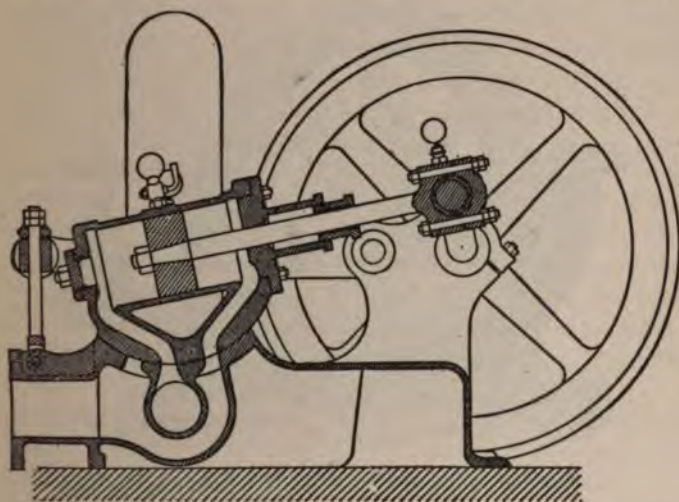


FIG. 18.

tant influence on the economy of the system, particularly at low loads. The motors most used particularly for small powers are oscillating water engines of the type shown in Fig. 18. The form shown is made by Schmid of Zurich. It possesses in common with all others of similar construction the undesirable property of taking a uniform amount of water at uniform speed, quite irrespective of load. The mechanical efficiency falls off like that of a steam engine, friction being nearly constant. Better average results are secured with impulse turbines (see Chapter IX.) of which the efficiency varies but little as the load falls off, or for high rotative speeds with impulse wheels like the

Pelton, shown in Fig 19, as adapted for motors of moderate power. At half load, *i. e.*, half flow, the losses in distributing mains would be reduced to about one-third, while the efficiency of the engine motors would certainly not be lowered by less than 5 per cent. The total half load efficiency would then be $.75 \times .97 \times .70 = 50.9$ per cent., actually a trifle higher than at full load. This rather remarkable property is shared by electric transmissions wherein the line loss is fairly large, and is occasionally of value.

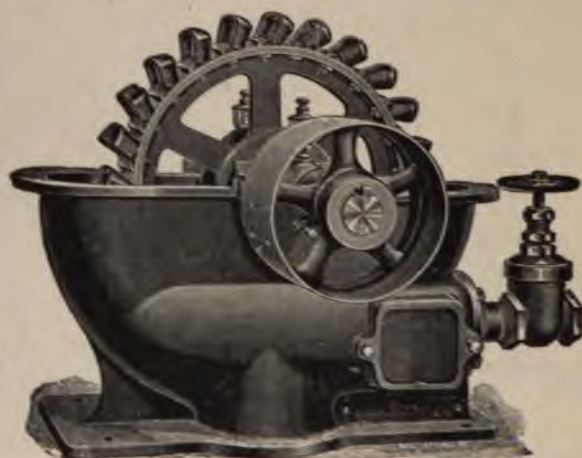


FIG. 19.

The second type of hydraulic distribution of power is that at very high pressures and employing a purely artificial head. The pressures involved are usually 700 to 800 pounds per square inch, and a small amount of storage capacity is gained by employing what are known as hydraulic accumulators, fed by the pressure pumps. These accumulators are merely long vertical cylinders adapted to withstand the working pressure, which is kept up by a closely fitting and enormously heavy piston. The distribution of power is by iron pipes leading to the various water motors. This high pressure water system is a device almost peculiar to England, and has been slow in making headway elsewhere. Its peculiar advantage is in connection with an exceedingly intermittent load, such as is

obtained from cranes, hoists, and the like. This is for the reason that with a low average output a comparatively small engine and pump working continuously at nearly uniform load can keep the accumulators charged, while the rate of output of the accumulators is enormous in case of a brief demand for very great power.

Power plants on this hydraulic accumulator system are in operation in the cities of London, Liverpool, Hull, and Birmingham, England, and at Marseilles, France. The London plant is the most important of those mentioned, consisting of three pumping and accumulator stations and about 60 miles of mains. The total number of motors operated was in 1892 about 1,700. The charges are by meter, and are based on intermittent work, being quite prohibitive for continuous service—from \$200 to \$500 per effective HP per year of 3,000 hours. The largest accumulators have pistons 20 inches in diameter and 23 feet stroke, giving a storage capacity of only 24 horse-power-hours each. While very convenient for the supply of power for intermittent service only, this system, like hydraulic supply at low pressure, is rather inefficient, the more so as it has been found advisable to employ hydraulic motors of the piston type, although special Pelton motors have been used in some cases.

Any hydraulic system suffers severely from the inefficiency of pump and motors and from loss of head in the pipes. The amount of power that can be transmitted in the mains is quite limited, since the permissible velocity is not large. About 3 feet per second is customary—more than this involves excessive friction and danger from hydraulic shock. At this speed a pipe about 2 feet in diameter is necessary to transmit 500 HP under 500 feet head.* The power delivered increases directly with the head, but as the pressure increases the largest practicable size of pipe decreases, and on the high pressure systems nothing larger than 12 inches has been attempted, and even this requires the use of solid drawn steel.

Whatever the size of pipe the loss in head is quite nearly inversely as the diameter and directly as the square of the velocity. Even for high pressure systems this loss is by no means negligible, since the pipes used are rather small.

* Cost per mile laid in average unpaved ground about \$15,000.

The following table gives the loss of head in feet per 100 feet of pipe and at a uniform velocity of 3 feet per second. This applies to pipe in good average condition. When the pipe is new and quite clean the losses may be slightly less. If the pipe is old and incrustated the above losses may be nearly doubled. Bends and branches still further reduce the working pressure.

Diameter.....	1"	2"	3"	4"	5"	6"	7"	8"	10"	12"
Loss of Head.....	4.84	2.44	1.62	1.22	.98	.81	.70	.61	.49	.41

Diameter.....	14"	16"	18"	20"	22"	24"	26"	28"	40"	36"
Loss of Head.....	.35	.32	.27	.25	.22	.20	.17	.16	.13	.13

We may now look into the efficiency of these high pressure hydraulic systems. Of the mechanical horse-power applied to the pump we cannot hope reasonably to get more than 75 per cent. as energy stored in the accumulators. Tests on the Marseilles plant have shown 70 to 80 per cent. efficiency between the indicated steam power and the accumulators, the former figure at the speeds corresponding to full working capacity. As the pumps were direct acting the difference between brake and indicated HP was presumably very small. The motors can be counted on for about .75 efficiency, and the losses of head in the pipes for any ordinary distribution cannot safely be taken at less than 5 per cent. Hence the full load efficiency is about $.75 \times .75 \times .95 = .53$. The efficiency at full load is thus not far from that of the low pressure system, but at half load it suffers from the use of piston motors, generally necessary on account of the too high speed of rotary motors at high pressure. At even 500 pounds per square inch pressure the normal speed of a Pelton wheel of say 20 HP would be over 4,000 r. p. m., and could not be greatly reduced without seriously cutting down the efficiency. At half load the piston motors could not be relied on for over .65 efficiency, reducing the total efficiency, even allowing for greatly lessened pipe loss, to about 45 per cent. On the whole the hydraulic accumulator system must be regarded as a very ingenious and occasionally useful freak, unlikely to find any permanent use in power transmission.

The strongest point of hydraulic transmission is its ready adaptability in connection with water supply systems for general purposes. Skillfully installed, as for instance at Geneva, it furnishes convenient, reliable, and fairly cheap motive power. As a distinct power enterprise the high first cost is against it, and the efficiency is never really good. All this applies with even greater force to the special high pressure systems, which suffer from inability to cope with continuous work, thus seriously limiting the possible market. Even for intermittent service the charges are enormously high.

The methods of power transmission already mentioned are then somewhat limited in their usefulness by rather well defined conditions, which make their employment advisable in some cases and definitely inadvisable in general.

Transmission by wire ropes is very weak in the matter of distribution to numerous small units, and hydraulic transmission, while escaping this difficulty, is, save in exceptional cases, both inefficient and costly.

III. We may now pass to the pneumatic method of transmitting power, which is far more general in its convenient applicability than either of the others, and which is the only system other than electric which has been extensively applied in practice to the distribution of power in small units, although only short distances have been involved in any of the plants hitherto operated, and the possible performance at long distances is more a subject of speculation than of reasonable certainty. Transmission of power by compressed air involves essentially three elements: An air compressor delivering the air under a tension of from 50 to 100 or more pounds per square inch into a pipe system, which conveys the compressed air to the various motors. These motors are substantially steam engines in mechanical arrangements, and indeed almost any steam engine can be readily adapted for use with compressed air. The compressor itself is not unlike an ordinary steam pump in general arrangement. Its appearance in the smaller sizes is well shown in diagram in Fig. 20. The system was originally introduced about fifty years ago for mining purposes, and owed its early importance to its use in working the drills in the construction of the Hoosac, Mont Cenis and St. Gothard tunnels. Since then it has come to be used on a

very extensive scale for drilling operations and more recently has been applied for the distribution of power for general purposes, particularly in Paris, where the only really extensive system of this kind is in operation. Its best field has been and still is in mining operations where the escaping air is a welcome addition to the means of ventilation and where, as a rule, the distances are not great.

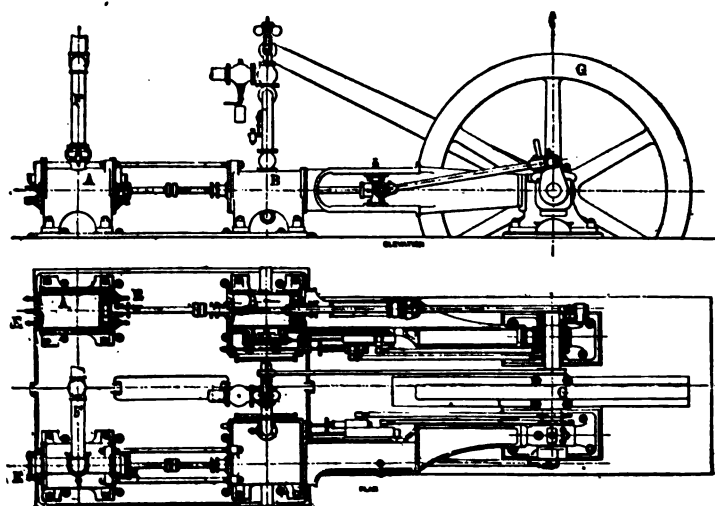


FIG. 20.

Transmission of power by piping compressed air has even for general distribution certain very well marked advantages. The subdivision of the power can be carried on to almost any extent and the motors are fairly efficient, simple and relatively cheap. In addition, the power furnished to consumers can very easily be metered. The loss of energy can be kept within moderate limits and the mains themselves are not liable to serious breakdowns, although losses from leakage are frequent and may be large. Finally, the system is exceptionally safe. On the other hand, the efficiency of the system, reckoned to the motor pulleys, is unpleasantly low. The mains for a transmission of any con-

siderable length are very costly, and the compressed air has no considerable use aside from motive power, instead of being applicable, like electric or even hydraulic transmission of power, to divers profitable employments quite apart from the furnishing of mechanical energy. To obtain a clearer idea of the nature of these advantages and disadvantages, let us follow the process of pneumatic transmission from the compressor to the motor, looking into each stage of the operation with reference to its efficiency and economic value.

The compressor is the starting point of the operation. Fig. 20 shows in section a typical direct acting steam compressor, one of the best of its class. It consists essentially of the air cylinder *A* and a steam cylinder *B*, arranged in line and having a common piston rod. The steam end of the machine is simply an ordinary engine fitted with an excellent high speed valve gear worked by two eccentrics on the crank shaft of the fly wheels *G*, which serve merely to steady the action of the mechanism. The air cylinder *A* is provided with a simple piston driven by an extension of the steam piston rod.

At each end of the air cylinder are automatic poppet valves *E E*, which serve to admit the air and to retain it during the process of compression. *F* is the discharge pipe for the compressed air leaving the cylinder. In the compressor shown there are two steam and two air cylinders connected with the cranks 90° apart, thus giving steady rotation in spite of the character of the work. In some machines the pistons and piston rods are hollow and provided with means for maintaining water circulation through them, to assist in cooling the air. Round the air cylinder is a water jacket shown in the cut just outside the cylinder wall. The purpose of this is to keep the air, so far as possible, cool during compression and thus to avoid putting upon the machine the work of compressing air at a pressure enhanced by the heat that always is produced when air is compressed. And just here is the first weak point of the compressed air system. However efficient is the mechanism of the compressor, all heat given to the air during compression represents a loss of energy, since the air loses this heat energy before it reaches the point of consumption. The higher the final pressure which is to be reached the

more useless heating of the air and the lower efficiency. Hence the water jacket, which, by abstracting part of the heat of compression, aids in averting needless work on the air during compression. Even the most thorough jacketing leaves much to be desired, generally leaving the air discharged at from 200° to 300° F., more often the latter. A cold water spray is often used in the compressing cylinder. This is somewhat more thorough than the jacket, but is still rather ineffective. Both serve only to mitigate the evil, since they cool the air by absorbing energy from it and at best cool it very imperfectly. A careful series of investigations by Riedler, perhaps the best authority on the subject, gives for the efficiency of the process of compression from .49 to .72. These figures, derived from seven compressors of various sizes and types, include only those losses which are due to heat, valve leakage, clearance and the like, taking no account of frictional losses in the mechanism. These are ordinarily about the same as in a steam engine, say 10 per cent., so that the total efficiency of a simple compressor may be taken as .44 to .65, the latter only in large machines under very favorable conditions. The most considerable recent improvement in compressors is the division of the compression into two or more stages, as the expansion is divided in compound and triple expansion engines. This limits the range of heating that can take place in any given cylinder and greatly facilitates effective cooling of the air. Riedler has obtained from two-stage machines of his own design a compressor efficiency of nearly .9. Allowing for the somewhat greater friction in the mechanism the total efficiency was found to be about .76. In general then we may take the total efficiency of the single stage compressors usually employed in this country as .5 to .6, very rarely higher, while the best two-stage compressors may give an efficiency slightly in excess of .75. For steady working, .75 would be an excellent result.

We may next look into the action of the compressed air in the mains. As in the case of water, the frictional resistance and consequent loss of pressure varies directly with the square of the velocity of the air and inversely with the diameter of the pipe. By reducing the one and increasing the other the efficiency of the line may be increased at the cost of a con-

siderable increase in original outlay. Any attempt to force the output of the main rapidly increases the losses. At a working gauge pressure of 60 pounds per square inch, which is in very frequent use, the per cent. of pressure lost per 1,000 feet of pipe of various diameters is given in the following table—the velocity being taken at 30 feet per second:

Diameter.....	1"	2"	3"	4"	5"	6"	12"	18"	24"	36"	48"
Per cent. loss.....	21.8	10.9	7.8	5.45	4.37	3.66	1.0	0.66	0.5	.33	.25

The friction in the pipes is proportionally greater in small pipes than in large, and this table is taken as correct for the medium sizes. No allowance is made for increase in velocity through a long main, for leakage, nor for draining traps, elbows, curves and other extra resistances, so that as in practice the larger and longer mains suffer the more from these various causes, the table will not be found widely in error for ordinary cases. Very large straight away mains will give somewhat better results, and the five last columns of the table are computed from Riedler's experiments on the Paris air mains, 11 $\frac{3}{4}$ inches in diameter and 10 miles long. All losses are included. Losses in the air mains can therefore be kept within a reasonable amount in most cases. With large pipes and low velocities power can be transmitted with no more loss than is customary in the conductors of an electrical system. Small distributing pipes, however, entail a serious loss if they are of any considerable length.

The motor is the last element of pneumatic transmission to be considered. Generally it is almost identical with an ordinary steam engine; in fact steam engines have been often utilized for air, and common rock drills may be used indifferently for steam or air with sometimes slight changes in the packing of the pistons and piston rods. Some special air motors are in use with slight modifications from the usual steam engine type. In most of these the air is used expansively and at a fairly good efficiency. Tests by Riedler on the Paris system show for the smaller air motors an efficiency of as high as 85 per cent. so far as the utilization of the available energy in the air is concerned, or taking into account the

TABLE OF POWER

On the occasion of the test
in 1904, when the air
expanded very rapidly the
test of air at an
atmospheric pressure
these figures are :

1. The air is free
compressed air, an
It is quite
artificially a c
must at the or
be cooled by
is very freq
freezing
the comp
The air is
to the
The ener
trans
the rel
1
more
with
of
mer
and
the

for large two-stage compressors and large motors; while with ordinary apparatus it would be about $.70 \times .90 \times .75 = .47$. At half load these figures would be reduced to about .45 and .35 respectively. In operating drills, which are motors in which the air is used non-expansively and to which the air is carried considerable distances through small pipes, the total efficiency is almost always below rather than above .30. The efficiency of .54 given above cannot well be realized without recourse to artificial heating to enable the air to be used expansively without trouble from freezing.

Compressed air has been mainly used for mining operations, where its entire safety and its ventilating effect are strong points in its favor. More rarely it is employed for general power purposes. Of such use the Popp compressed air system in Paris is by far the best example.

This great work started from a system of regulating clocks by compressed air established a quarter-century ago. Nearly a decade later the use of the compressed air for motors began, and after several extensions of the old plant the present station was built. It contains four 2,000 HP compound compressors, of which three are regularly used and the fourth held in reserve. The steam cylinders are triple expansion, worked with a steam pressure of 180 pounds. The air pressure is 7 atmospheres and the new mains are 20 inches in diameter, of wrought iron. There are in all more than 30 miles of distributing main, most of it of 12 inches and under in diameter. A very large number of motors of sizes from a fan motor to more than 100 HP are in use. Their total amount runs up to several thousand HP, even though the majority of them are less than a single horse-power. Except in very small motors reheaters are used, raising the temperature of the air generally to between 200° and 300° F. The efficiency of the whole system from Professor Kennedy's investigations is about 50 per cent. under very favorable conditions. The prices charged for power have not been generally known but are understood to be somewhat in excess of \$100 per horse-power per working year. An interesting addition to the apparatus of pneumatic transmission has recently appeared. It is a modification of the ancient "trompe," or water blast, used for centuries to feed the forges of Catalonia, very simple

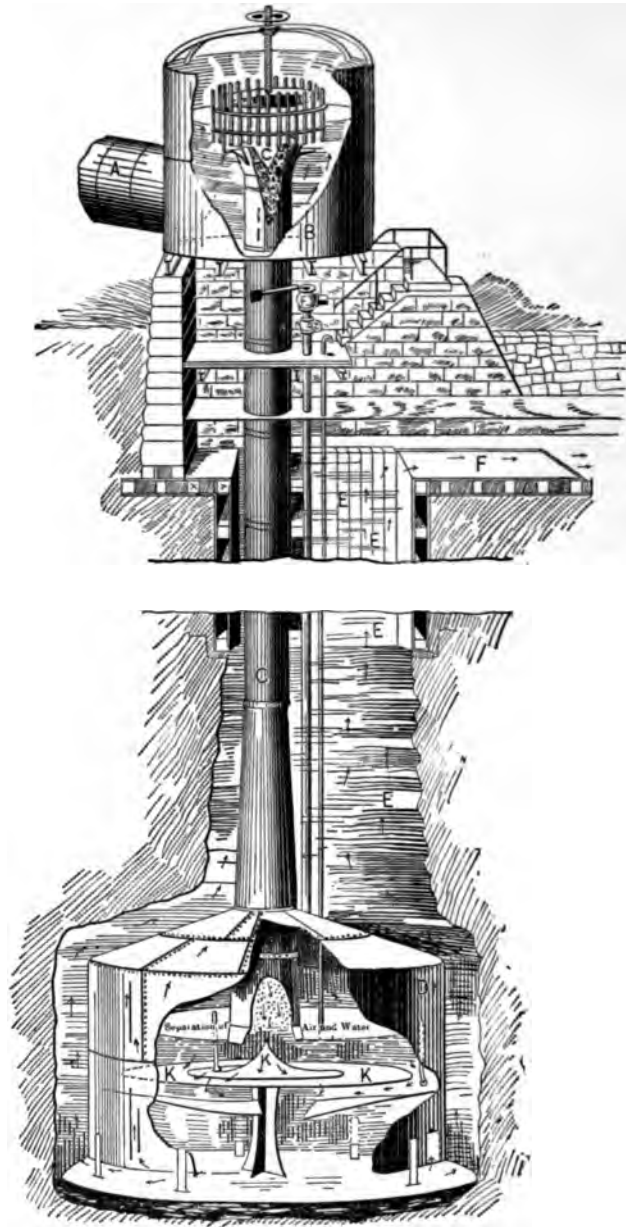


FIG. 21.

in operation and cheap to build. In its present improved form it is known as the Taylor Hydraulic Air Compressor, and an initial plant of very respectable size has been in highly successful operation for nearly two years past at Magog, P. Q., from which the data here given have been obtained.

The compressing apparatus which is shown in Fig. 21 is in principle an inverted siphon having near its upper end a series of intake tubes for air, and at the bend a chamber to collect the air which, entrained in the form of fine bubbles, is carried down with the water column, which flowing up the short arm of the siphon escapes into the tail race. In Fig. 21, *A* is the penstock delivering water to the supply tank *B*. In this tank is the mouth of the down tube *C*, contracted by the inverted cone *C* so as to lower the hydraulic pressure and allow ready access of air from the surrounding apertures. The air bubbles trapped in the water sweep down *C*, which expands at the lower end and finally enters the air tank *D*. Here the water column encounters the cone *K*, which flattens into a plate at the base. Thus spread out and escaping from the air chamber by the circuitous route shown by the arrows, the air bubbles from the water accumulate in the top of the air tank, while the water itself rises up the shaft *E*, and flows into the tail race *F*. The air in *D* is evidently under a pressure due to the height of the water column up to *F*, and quite independent of the fall itself, which consequently may vary greatly without affecting the pressure of the stored air, a very valuable property in some cases, as in utilizing tidal falls. From *D* the compressed air is led up through a pipe, *P*, for distribution to the motors. To get more pressure it is only necessary to burrow deeper with the air tank, not a difficult task where easy digging can be found. The fall and rate of flow determine the rate at which the air is compressed, and contrary to what might be supposed the process of compression is quite efficient. It is quite sensitive to variations in the amount of flow, the efficiency changing rapidly with the conditions of inlet, and since there certainly is a limit to the amount of air that can be entrained in a given volume of water, the process is likely to work most efficiently at moderate heads and with large volumes of water. In the Magog compressor about 4 cubic feet of water are required to entrain

1 cubic foot of air at atmospheric pressure, and it is open to question as to how far this ratio could be improved. This ratio, too, would be changed for the worse rapidly in attempting high compression, so that the Magog results probably represent, save for details, very good working conditions. The dimensions of the Magog apparatus are given in the accompanying table, which is followed by the details of one of the tests made by a very competent body of engineers.

The general dimensions of the compressor plant are:

Supply penstock.....	60 inches diameter
Supply tank at top.....	8 feet diam. by 10 feet high
Air inlets (feeding numerous small tubes).....	34 2-inch pipes
Down tube.....	44 inches diameter
Down tube at lower end.....	60 inches diameter
Length of taper in down tube, changing from 44-inch to 60-inch diameter.....	20 feet
Air chamber in lower end of shaft.....	16 feet diameter
Total depth of shaft below normal level of head water.....	about 150 feet
Normal head and fall.....	about 22 feet
Air discharge pipe.....	7 inches diameter
Flow of water, cubic feet, minute.....	4292.
Head and fall in feet.....	19.509
Gross water HP.....	158.1
Cubic feet compressed air per minute, reduced to atmospheric pressure.....	1148.
Pressure of compressed air, lbs.....	53.3
Pressure of atmosphere, lbs.....	14.41
Effective work done in compressing air, HP.....	111.7
Efficiency of the compressor, per cent.....	70.7
Temperature of external air, Fahr.....	65.2
Temperature of water and compressed air, Fahr.....	66.5
Moisture in air entering compressor, per cent. of saturation.....	68.
Moisture in air after compression, per cent. of saturation.....	35.

The efficiency given is certainly most satisfactory, being quite as high as could be attained by a compound compressor of the best construction driven by a turbine, and for the head in question at a very much lower cost. It is probable that the test given does not represent the best that can be done by this method, and the indications are that within a certain, probably somewhat limited, range of heads the hydraulic compressor will give as compressed air a larger proportion of the energy of the water than any other known apparatus. Just

what its limitations are remains to be discovered, but several plants are now under construction which will throw considerable light upon the subject.

In certain cases the power of getting compressed air direct from hydraulic power by means of a simple and, under favorable conditions, cheap form of apparatus, is very valuable, and while it is unlikely to change radically the status of pneumatic transmission, it is an important addition to available engineering methods. For dealing with moderate, and particularly with very variable, heads, such compression may prove to be an important intermediary.

As in most pneumatic plants, the Magog installation is worked in connection with reheaters.

IV. In point of convenience and efficiency compressed air is nearer to electricity for the distribution of power over large areas than any other method. The only other system that approaches them is the transmission of gaseous fuel for use in explosive gas engines. At equal pressures one can send through a given pipe twenty times as much energy stored in gas as in air. A good air motor requires about 450 cubic feet of air at atmospheric pressure per indicated HP hour, while a gas engine will give the same power on a little over 20 cubic feet of gas. But the cases wherein the distribution of gas would be desirable in connection with a transmission over a long line of pipe are comparatively few. Particularly this system has no place in the development of water powers, the most important economic function of electrical transmission. Nevertheless it must be admitted that for simple distribution of power a well designed fuel gas system is a formidable competitor of any other method yet devised, particularly in the moderate powers—say from 5 to 25 HP.

We are now in a position to review the divers sorts of power transmission that have been discussed, and to compare them with power transmission by electricity.

Without going deeply into details, which will be taken up in due course, we may say that electrical machinery possesses one advantage to an unique extent—high efficiency at moderate loads. Machinery in which the principal losses are frictional is subject to these in amount nearly independent of the load; hence the efficiency drops rapidly at low loads. In dynamos,

motors, and transformers, however, the principal losses decrease rapidly with the load, so that within a wide range of load the efficiency is fairly uniform. Fig. 22 gives the efficiency curves for a modern dynamo, motor, and transformer. The generator curve is from a large 500-volt direct-current machine, the motor curve from a smaller machine of the same type, and the transformer curve from a standard type of about 30 kilowatts capacity. In the generator curve the variation of efficiency from half load to full load is less than 2 per cent., in the motor only $2\frac{1}{2}$ per cent., and in the transformer just $1\frac{1}{2}$ per cent. In addition, the efficiency of all three at full load is very high. Hence, not only is an electrical power transmission of great efficiency if the loss in the line be moderate, but this efficiency persists for a wide range of load. As in hydraulic and pneumatic transmission, the efficiency of the line depends on its dimensions; so that by increasing

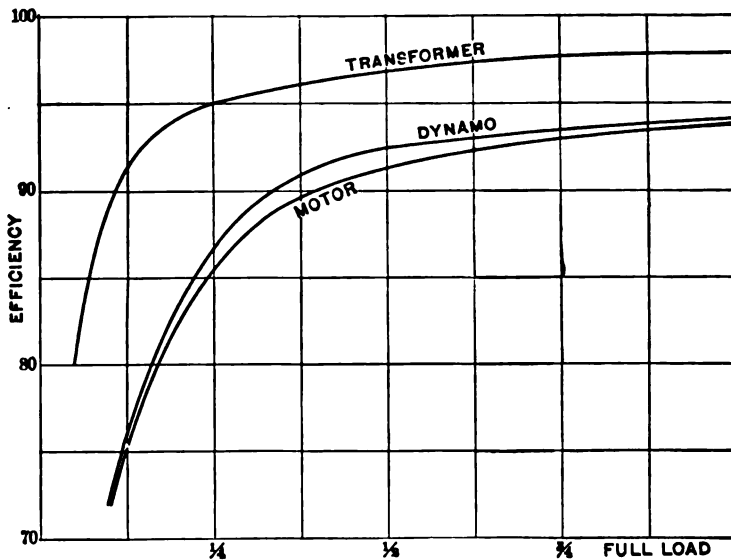


FIG. 22.

the weight of copper in the line, the loss of energy may be decreased indefinitely. And since the loss of energy in the line diminishes as the square of the current, the per-

centage of loss at constant voltage diminishes directly with the load.

Hence the total efficiency may be constant or even increase from half load to full load, even with a quite moderate loss in the line. In pneumatic and hydraulic transmission this condition may occur, but only with large loss in the mains, since the efficiency of the generator and motor parts of these systems decreases too rapidly to be compensated by the gain in the main, unless its efficiency is low at full load. Hence, for ordinary cases of distribution in which the average load is considerably less than full load, often only $\frac{1}{3}$ to $\frac{1}{2}$ of full load, electric transmission has a very material advantage over all other methods. To appreciate this we need only to run over the details of electrical power transmission and compare the results with those which we have obtained for the other methods described.

There are to be considered in electrical power transmission, as in transmission of every sort, two somewhat distinct problems:

First, the transmission of energy over a considerable distance and its utilization in one or a few large units.

Second, the distribution of power to a large number of small units at moderate distances from the centre of distribution. This latter case may sometimes also involve the transmission of power to a real or fictitious centre of distribution. This second problem is the commoner and, while not so sensational as the transmission of power at high voltage over distances of many miles, is of no less commercial importance.

We have all along been considering, in treating of transmission of power by ropes and by hydraulic and pneumatic engines, the case first mentioned, excepting in so far as some special distributions have been referred to. We have already the data for figuring the efficiency of an electric power transmission with large units. In cases of this kind the distance between the generator and motor is likely to be much greater than in the case of distribution to small motors from some central point, and the loss in the line, the only uncertain figure in the transmission, would generally range from 5 to 10 per cent. In case of distributing plants intended to furnish from a single point small units of power over a moderate distance, it is

generally found that losses in the line of from 2 to 5 per cent. do not involve excessive cost of copper. In cases where a distribution is coupled with the transmission of power to the central point, the loss from the distant generator to the motors is in most cases from 10 to 15 per cent.

Taking up first the transmission of power from one or more large generators to one or more large motors, we may take safely the commercial efficiency of the generator as that given by the curve, Fig. 22, and that of the motors as at least as good as that given for a motor in the same figure. The efficiency of the line for moderate distances may be taken as 95 per cent. It should be noted that the efficiencies of large alternating generators and motors do not differ materially from those shown; in fact, are quite as likely to be above them as below them. We thus have for the efficiency in a transmission of this kind: $94 \times 95 \times 93 = 84$ per cent. This is largely in excess of that which could be obtained at distances of say a couple of miles by any other method of transmission.

Even more extraordinary is the efficiency at half load in this case, which is $92 \times 97.5 \times 91 = 81.6$ per cent. It should be borne in mind that these efficiencies are taken from experiments with standard machines, and the efficiencies are those which can be realized in practice. These results show the great advantage to be derived from electrical transmission when, as in most practical cases, full load is seldom reached. It is most important for economical operation to employ a system which will give high efficiency at low loads, and it would be worth while so to do even if the efficiency at full load were not particularly good. With electrical machinery, however, there is no such disadvantage. Even at one-fourth load the efficiency of the electrical system still remains good. It is nearly 73 per cent. on the assumed data. The efficiencies thus given are from the shaft of the generator to the pulley of the motor inclusive.

In the case of distributed motors supplied from a central point not very distant from any of them, the efficiencies of generator and line remain about as before, but the motor efficiencies for the sizes most often employed are below that just given. The average motor efficiency is largely dependent on the skill with which the units are distributed. It has often

been proposed to drive separate machines by individual motors, while in other cases comparatively long lines of shafting are employed, grouping many machines into a dynamical unit operated by a motor. To secure economy it is desirable on the one hand to use fairly large motors well loaded, on the other hand the losses in shafting and belting must be kept down.

The larger the motors, the better their efficiency at all loads and the less the average cost per HP, but with small motors the cost and inefficiency of shafts and belts may be in large measure avoided. The most economical arrangement depends entirely upon the nature of the load. Much may be said in favor of individual motors for each machine, but so far as total economy is concerned, this practice is best limited to a few cases—machines demanding several HP (say 5 or more) to operate them, machines so situated as to necessitate much loss in transmitting power to them, and certain classes of portable machines. In applying electric power to workshops already in operation the group system will usually give the best results, individual motors being used only for such machines as might otherwise cause serious loss of power. The following table gives the average full load efficiencies that may safely be expected from motors of various sizes, irrespective of the particular type employed.

HP of motor.....	1	3	5	7½	10	15	20	25	40	50	75
Per cent. efficiency	72	78	81	83	85	86	87	88	90	90	91

These are commercial efficiencies reckoned from the electrical input to the mechanical output at the pulleys. Below 5 HP the efficiencies fall off rapidly. At partial loads the efficiencies are somewhat uncertain, inasmuch as some motors are designed so as to give their maximum efficiency at some point below full load, while others work with greater and greater efficiency as the load increases until heating or sparking limits the output. The former sort are most desirable for ordinary workshop use, while the latter are well suited to intermittent work at very heavy loads, as in hoisting. The difference in the two types of machine is very material. It is easily possible to procure motors that will not vary more than 5 per cent. in

efficiency from full load to half load, and this even in machines as small as 2 or 3 HP. We may now calculate the efficiency of an electric distribution with motors of moderate size—such a case as might come from the electrical equipment of large factories. The generator efficiency may be taken as before at .94 and that of the line at .95, while the motors must be taken close account of in order to estimate their collective efficiency. Assuming the sizes of motors in close accordance with those in several existing installations of similar character, we may sum them up about as follows:

5.....	3 HP
5.....	5 HP
10.....	10 HP
10.....	20 HP
5....	25 HP
2.....	50 HP

In all 37 motors aggregating 565 HP. The mean full load efficiency of this group is very nearly .87. The efficiency of the system is then

$$.94 \times .95 \times .87 = 77.6.$$

This result requires full load throughout the plant, a somewhat unusual condition with any kind of distribution. From the data already given the half load efficiency should be about

$$.92 \times .975 \times .82 = .735.$$

Between the limits just computed should lie the commercial efficiency of any well-designed motor distribution reckoned from the dynamo pulley. In the case of steam-driven plants it is often desirable to consider the indicated HP of the engine as the starting point, and the question immediately arises as to the commercial efficiency of the combination of dynamo and engine. In cases where high efficiency is the desideratum direct coupling is usually employed, saving thereby the loss of power, perhaps 5 per cent., produced by belting. The losses in such direct-coupled units vary considerably with the size and type of both machines. Fig. 23 shows the efficiency of two such combinations at various loads. Curve *A* is from an actual test of the combination; curve *B* from tests of an engine and dynamo separately. Each unit was of several hundred HP. The high result from curve *A* is mainly due to very low friction.

These curves give handy data for computing the total efficiency of a motor plant from the motor pulleys to the indicated horse-power of the driving engine. Taking the combined engine and dynamo efficiency from *A* and assuming the same figures as before on motors and line we have at full load

$$.88 \times .95 \times .87 = .727.$$

And from the same data at half load

$$.78 \times .975 \times .82 = .651.$$

For certain computations, as in case of figuring out a complete installation, the above efficiencies are convenient. They show that in very many instances the distribution of power by electric motors is very much more economical of energy than any other method employed. In ordinary manufacturing operations power is generally transmitted to the working machines through the medium of lines of shafting of greater or less length. These are very rarely belted direct to the

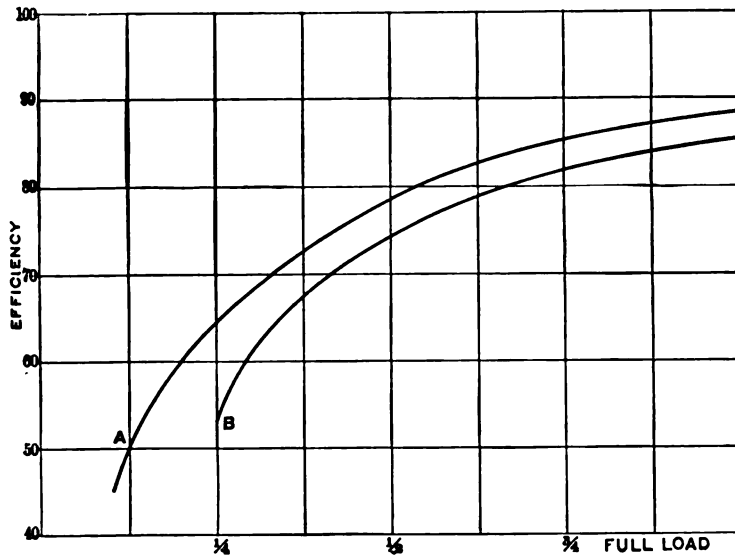


FIG. 25.

machines, but transfer power to them through one or more countershafts. Often the direction of shafts is changed by gearing or quarter turn belts, and even when the power is distributed through only a single large building there will be

found more often than not intervening between the driving engine and the driven machine three belts and two lines of shafting of considerable length, and not infrequently still other belts and shafts. It very often happens, too, that to keep in operation one small machine in a distant part of the shop it is necessary to drive a long shaft the friction of which consumes half a dozen times as much power as is actually needed at the machine. The constant care required to keep long lines of shafting in operative condition is an irritating and costly concomitant. The necessary result is a considerable loss of power, which being nearly constant in amount is very severe at partial loads.

Allowing 5 per cent. loss of energy for each transference of power by belting, a figure in accordance with facts, and 10 per cent. loss for each long line shaft driven, it is sufficiently evident that from 20 to 25 per cent. of the brake-horse-power delivered by the engine must be consumed even under very favorable circumstances by the belting and shafting at full load. This means an efficiency at half load of from 50 to 60 per cent. only, and at lesser loads a very low efficiency indeed.

The large number of careful experiments carried out on shafting in different kinds of workshops, and under various conditions, shows that only under very exceptional circumstances is the loss of power by shafting between the engine and the driven machines as low as 25 per cent. Far more often it is from 30 to 50 per cent., and sometimes as high as 75 or 80 per cent. The figures, which have been well established, regarding the efficiency of the transmission of power by motors, show that at full load it is comparatively easy to surpass 75 per cent. efficiency; thus more than equaling the very best results that can be obtained with shafting. At half load and below, the advantage of the electric transmission becomes enormous, even supposing shafting to be at its very best.

Compared with ordinary transmission by shafting, the motor system is incomparably superior at all loads, so that it may easily happen that a given amount of work can be accomplished through the medium of a motor plant with one-half the steam power required for the delivery of the same power through shafts and belts. Such results as this have actually been obtained in practice. It is therefore safe to conclude that the

distribution of power by motors is, under any ordinary commercial conditions, at least as efficient as the very best distribution of power by shafting at full load and much more efficient at low loads. Under working conditions in almost all sorts of manufacturing establishments, light loads are the rule and full loads the rare exception; consequently the results of displacing shafting by motor service have, as a rule, been exceedingly satisfactory in point of efficiency, and the lessened operating expense more than offsets the extra cost of installation.

In one large three-phase plant, that of Escher, Wyss & Co. at Winterthur, Switzerland, 300 HP in 32 motors worked from a 12-mile transmission line displaced far greater capacity in steam engines, and similar results on a smaller scale are not uncommon.

To add force to this comparison between the efficiency of shafting and of motors, the following results from electrical distribution plants already installed may be pertinent. One of the best known of all such transmissions is that at the fire-arms factory at Herstal, Belgium. There are there installed 17 motors of an aggregate capacity of 305 HP, driven by a 300-KW generator direct coupled to a 500 HP compound condensing engine. The efficiency guaranteed from the shaft of dynamo to the pulleys of the motors is 77 per cent. Since its first installation, the plant has been increased by the addition of a second direct-coupled dynamo and the total horsepower of motors is 428. A second notable installation of motors in the same vicinity is at the metallurgical works of La Société de la Vielle-Montagne, consisting of a 375 KW 500-volt dynamo direct driven at a speed of 80 revolutions per minute by a 600 HP compound condensing engine. The plant consists of 37 motors with an aggregate HP of 329. The full load efficiency of the plant from dynamo shaft to motor pulley is 76 per cent. The loss in the lines, both in this case and in the preceding, is very small, only 2 per cent. They are both typical cases of transmission to motors driving groups of machines, and in spite of rather low dynamo efficiencies at full load, these being in each case 90 per cent., the results obtained are in close accordance with those already stated as appropriate to similar cases. As an example of

work under somewhat more favorable conditions, the three-phase power plant at Columbia, S. C., may be instanced.

The problem here undertaken was to drive a very large cotton mill, utilizing for the purpose a water power about 800 feet distant. Two 500-KW dynamos direct coupled at a speed of 108 turns per minute deliver current at 550 volts to an underground line connecting the power station with the mills. The motors are suspended from the ceiling and each drives several short countershafts. The motors are wound for the generator voltage without transformers, and are of a uniform size, 65 HP each. The commercial efficiency of this plant, taken as a whole from the shaft of the dynamo to the pulleys of the motors, is not less than 82 per cent. at full load. This good result is due to the use of large motors, and to the small line loss of 2 per cent. as in the preceding foreign examples. These results are thoroughly typical, and can regularly be repeated in practice. Even smaller plants can be counted on to give nearly or quite as good results, since the difference in efficiency, supposing motors of the same size to be used, between a dynamo of 100 KW and one of 400 or 500 KW is hardly more than 1 per cent. at full load, supposing machines of the same general design to be employed, nor is there any substantial difference in efficiency between plants employing direct current and those using polyphase apparatus, as may be judged from the figures just given.

We are now in position intelligently to compare the transmission and distribution of power by electric means with the other methods which have sometimes been employed.

All comparisons between methods of transmitting power have to be based in a measure on their relative efficiency. Now in every such method there are three essential factors: 1st, the generating mechanism, which receives power direct from the prime mover and in conjunction with which it is considered; 2d, the transmitting mechanism, which may be an electric line, a pipe line, ropes, or belts, and 3d, the motor part of the transmission, which receives power from the transmitting mechanism and delivers it for use. For a given capacity of the generating and receiving mechanisms, the efficiency of each at all loads is determined within fairly close

limits. The transmitting mechanism, however, is not so closely determined, save in the case of the rope drive.

Electric, pneumatic and hydraulic transmission lines are all subject to the general principle that the loss in transmission can be made indefinitely small by an indefinitely large expenditure of capital, enormous cross-section in the one case or huge pipe lines in the others. The efficiency of these methods is therefore a fluctuating quantity depending on that loss in the transmitting mechanism which may be desirable from an engineering or economical standpoint. In making comparisons between these methods, there is a wide opportunity for error unless some common basis of comparison is predetermined. In the next case any such comparison must differ widely in its results according to the character of the power distribution which is to be attempted. We have already seen that with the rope drive distribution is very difficult, while with electric and pneumatic systems it is comparatively easy.

A general valuation of the commercial possibilities of these divers matters is therefore hard to make except in a general way. We can, however, by assuming a given transmission of given magnitude and character, and further assuming such loss in the transmitting mechanism as might reasonably be expected in practice, arrive at a reasonably accurate conclusion for the case considered. As a very simple example of power transmission, let us take the delivery of power over a distance of two miles, the delivery being in one unit or at most two units. We will assume the same indicated HP furnished at the generating end of the line in each case, of which as much as possible is to be delivered at the receiving station, the losses in transmission being taken as 10 per cent. of the power delivered to the line; this is to cover all losses of energy by resistance and leakage on the electrical line or loss of pressure and resulting expenditure of energy, leakage, friction and all other sources of loss in the other cases.

As the same indicated power is generated in each case, we will suppose a modern plant with compound condensing engines costing complete with buildings \$50 per HP. We will further assume that each indicated horse-power per working year of 3,000 hours will cost \$18; this covering all expenses except those chargeable to interest and depreciation. For

this simple case we have the following costs of initial plant and of operation per mechanical horse-power delivered from the motor, full load only being considered. The four methods considered are rope driving, pneumatic, pneumatic with reheating apparatus at the motors, and electrical. The prices are from close estimates of the cost in each case. The dynamos are supposed to be direct coupled. The compressors to be direct acting, two-stage compressors. The steam cylinders Corliss compound condensing type. The air pressure assumed is 60 lbs. above atmospheric pressure. The electric voltage 3,000. The rope speed about one mile per minute. Interest and depreciation are taken at 10 per cent. of the total cost of the plant, save in the case of the rope drive, where an additional charge for renewal of cable is made on the supposition that the cable will last somewhere from 18 months to 2 years, which is fully as favorable a result as can fairly be expected. The following are the comparative estimates:

ROPE, EFFICIENCY 67 PER CENT.

COST.	
Steam plant,	\$50,000
Pulley stations,	25,000
Cables, steel,	17,000
Total cost,	<u>\$92,000</u>

OPERATING EXPENSE.

1,000 I.H.P at \$18,	\$18,000
Interest and depreciation on plant, at 10 per cent.,	7,500
Depreciation of cable,	8,000
	<u>\$33,500</u>
Net HP produced, 672.	
Cost per HP-year, \$49.	

PNEUMATIC, EFFICIENCY 54 PER CENT.

COST.	
Steam plant excluding engines,	\$35,000
Compressors,	17,000
Air mains laid, 12 inches,	18,000
Air motors,	12,000
Total cost,	<u>\$82,000</u>

OPERATING EXPENSE.

1,000 I. HP at \$18,	\$18,000
Interest and depreciation, at 10 per cent.,	8,200
	<hr/>
Net HP delivered, 540.	\$26,200
Cost per HP-year, \$48.	

AIR REHEATED, APPARENT EFFICIENCY 65 PER CENT.

COST.

Steam plant, excluding engines,	\$35,000
Compressors,	17,000
Air mains laid,	18,000
Air motors and reheaters with chimney, etc.,	14,000
	<hr/>
Total cost,	\$84,000

OPERATING EXPENSE.

1,000 I. HP at \$18,	\$18,000
Interest and depreciation, at 10 per cent,	8,400
Coal and labor for reheating,	1,500
	<hr/>
Net HP delivered, 650.	\$27,900
Cost per HP year, \$43.	

ELECTRIC, EFFICIENCY 73 PER CENT.

COST.

Steam plant,	\$50,000
Dynamos,	18,000
Line,	3,000
Motors,	13,000
	<hr/>
Total cost,	\$84,000

OPERATING EXPENSE.

1,000 I. HP at \$18,	\$18,000
Interest and depreciation, at 10 per cent,	8,400
Electrician,	1,500
	<hr/>
Net HP, 730.	\$27,900
Cost per HP-year, \$38.	

It appears at once that the rope drive is beyond the range of its efficient use. Its first cost is greater than that of either of the other methods and the expense is carried to a very high figure by the item of depreciation on the cables, which cannot

be avoided, hence in spite of a high efficiency the cost per HP year delivered rises to \$49. We may next consider the schedule of cost for the pneumatic system. In this case the most formidable item is the cost of the air mains, which should be at least 12 inches in diameter. Nevertheless the total initial cost is the lowest of the four. The operating expense is also the lowest, but the very low efficiency of the pneumatic system without reheating raises the cost per HP delivered to a very considerable amount; almost as much as in the case of the rope drive. Reheating would almost always be used in connection with a plant of this size, and with reheating the result is much more favorable. The initial expenditure is somewhat increased by the addition of the reheaters, piping and chimney. The operating expense is also slightly increased by the coal necessary for reheating, taken at $\frac{1}{4}$ of a pound per HP per hour and the small amount of additional labor involved in caring for the reheaters, disposing of the ashes and looking after the reheating plant generally. The apparent efficiency in this case is very excellent, 65 per cent. being reasonably attainable, and the cost per HP year falls to \$43, showing conclusively enough the advantage of reheating; at least where the units are so large that the presence of a reheater is not a practical nuisance.

Finally, we come to the electric power transmission. In this case the most striking feature is the low cost of the line, supposed here to be overhead. It may be noted, however, that an underground line, consisting of cable laid in conduit, still leaves the cost per HP year lower than that of any of the other methods. Operating expense is fairly increased by the addition of an electrician to the cost of the indicated horse power, interest and depreciation. The total first cost is practically the same as that of air with reheater, as is also the operating expense. The added efficiency, however, brings the cost per HP year to \$38; decidedly the lowest of the four cases considered. It may be thought that difference of loss in transmission might possibly alter the relation of the electric plant to the air plant with reheaters, but an added efficiency of line would in either case be accompanied by added expenditure of not very different amounts in the two cases, and the efficiency of the electric plant would

always be enough higher than that of the air plant to give it the advantage in net cost per HP, however the two plants might be arranged. We thus find that at a distance of two miles the electric transmission has a material advantage, air with reheaters, air without reheaters, and rope drive following it in the order named. As previously mentioned at a distance of one mile the efficiency of the rope drive is so far increased as to bring the cost per HP delivered down nearly to that of the electric transmission. The pneumatic method would at the distance of one mile, as may readily be computed, take about the same relative position as before, since the efficiency of the two maintains approximately the same relation to the others.

The pneumatic plant gains in first cost at this lesser distance, not enough, however, to alter the final result. At half a mile distance, the rope drive will be found to be the cheapest in first cost and also, through its enormous efficiency, to be the cheapest per HP delivered, in spite of the large depreciation in the cables, while the electric and pneumatic systems would be very close together, the electric, however, still retaining a slight advantage due to its great efficiency. Neither can in point of absolute cost of power delivered compete with the rope drive at this distance for this large and simple transmission. Figures that have heretofore been given on the relative cost and efficiency of such transmissions have as a rule been in error in two very essential particulars: first, the efficiencies of the electrical system have been greatly underestimated owing to the poor machines with which the first experiments were made; second, the commercial advantage of reheating in the pneumatic transmission has not generally been given its proper weight. It is, as has been already stated, not a method of increasing the efficiency but of increasing the power delivered by addition of energy at the receiving end of the line under very favorable conditions. The figures just given are believed to be as nearly exact as present conditions permit. The hydraulic system has not been here considered inasmuch as it is not of general applicability.

At less than full load and hence under variable loads the electric system enjoys the unique advantage of having the losses of energy in every part of the system decrease as the load

decreases, while in rope driving all the losses are practically constant, and in the hydraulic and pneumatic systems all are nearly constant save that in the pipe line.

Hence under low and varying loads electric transmission has a great additional advantage. Since in distributions of power employing a considerable number of motors light load on the motors is the invariable rule, as soon as we depart from the very simple case discussed the electrical system gains in relative economy at every departure. These more general cases have already been described, and gathering the results we may construct the following table, showing the efficiency of each system under full and half loads:

SYSTEM.	FULL LOAD.	HALF LOAD.
Wire rope.....	78	46
Hydraulic high pressure.....	53	45
Hydraulic low pressure.....	50	50
Pneumatic.....	50	40
Pneumatic reheated (virtual efficiency).....	65	50
Electric.....	73	65

The efficiencies in the electric system as here given are lower than would be reached practically in large plants. The present practice of using generators and motors wound for pressures up to 10,000 or 12,000 volts makes a most material difference in the matter of efficiency. For a straight away transmission of a few miles in units of say 500 KW and upwards, one may fairly expect to get at full load as much as 94 per cent. from generator and motor, and perhaps 98 per cent. from the line, giving a total efficiency of transmission of

$$.94 \times .94 \times .98 = .906$$

at full load and of nearly 88 at half load. This means far higher efficiency than can be obtained by any other method at any but the smallest distances.

All the figures must be taken as approximate. They are under conditions of no current and except in case of the low pressure hydraulic system, in which the large proportion of loss due to imperfect insulation is taken up the half load efficiency to an additional degree. With the ordinary proportion

of small motors this half load efficiency would be nearer 40 than 50 per cent. The electric system is easily the most efficient at any and all loads. Of the others, wire rope transmission, if the distributed units are fairly large, holds the second place for short distances, and the pneumatic system with energy added at the motors by reheating, at moderate and long distances. Without reheating it occupies the last place in order of efficiency, although even so, it is, next to electricity, the most convenient method of distributing power.

In fact, electricity and compressed air are the only two systems available for the general distribution of energy, and also the most used. The Popp air system in Paris is, save for some electric central stations, the largest power distributing plant in the world. The Edison system in New York city has, however, above 10,000 HP in motors operated from its mains, and other similar stations have loads of several thousand HP. Of course the very largest power stations are those belonging to electric railway systems in the largest American cities. Several of these exceed 25,000 HP in generator capacity and frequently in actual output, notably the systems in Boston, Brooklyn and Philadelphia. Recent advances in electrical engineering, particularly the effective utilization of alternating currents, have greatly cheapened the distribution of electrical energy and other systems are now seldom installed for ordinary purposes. A few pneumatic and hydraulic plants will continue to be used owing to the large capital already invested in them, but new work is, and in the nature of things must be, almost exclusively electrical. As the transmission of power from great distances becomes more common and the radii of distribution themselves increase, the electrical methods gain more and more in relative value, and all others become more inefficient and impracticable.

We have now discussed in some detail the sources of natural energy which are available for human use, and the most prominent of the systems employed for their utilization. We have found that for practical purposes steam power and water power must at present be used to the virtual exclusion of all others, the former perhaps less than the latter save for distribution of power over short distances.

Of the methods of distribution we have found all save compressed air and electricity limited in their application, the hydraulic systems to special classes of work under favorable topographical conditions, and rope transmission limited to short distances and small numbers of power units delivered. Both are noticeably inefficient. The pneumatic system is very general in its applicability, but of very low intrinsic efficiency. When used in connection with reheating apparatus it requires additional care, and the motors like steam engines are heavy and inconvenient. The electric system on the other hand employs motors which are compact and far more efficient than any other type of machine for delivering mechanical power, run practically without attention, and can be placed in any situation or position that is convenient. Furthermore in average working efficiency the electric system is 10 to 15 per cent. higher than any other yet devised, so that it is more economical in use at nearly all distances and under nearly all conditions. Finally it unites with power distribution the ability to furnish light and heat, thus gaining an immense commercial advantage. This advantage is shared only by gas transmission, which up to the present time remains of doubtful value on account of the cost of the motors, their rapid depreciation and their inefficiency at moderate loads. Having now overlooked its advantages in general, it is proper to pass to the details of the methods employed for its utilization and thence to the general problem of its economical generation, transmission and distribution.

CHAPTER III.

POWER TRANSMISSION BY CONTINUOUS CURRENTS.

UP to the present time by far the largest part of electrical power transmission has been done by continuous currents. All the earlier plants were of this type, and even now, when transmission by alternating currents, polyphase and other, is pushing rapidly to the front, the older type of apparatus is still being installed on an extensive scale, and on account of the large number of plants now in operation, even if for no other reason, will probably remain in use for a long time to come. New power transmission plants, both here and abroad, are more and more frequently installed for alternating currents, and in many cases this practice is almost absolutely necessary, but there still remain many cases wherein the conditions are as well or better met in the old-fashioned way.

Chief among these may be mentioned electric railway work, which in America alone probably requires more than a full million horse power in generators and motors. Certain difficult work at variable speed and load, and many simple transmissions over short distances, are at present best handled by continuous current machinery. As alternating practice advances many, perhaps all, of these special cases will be eliminated, but we are dealing with the art of power transmission as it exists to-day, and hence continuous current working deserves very careful consideration.

The broad principle of the continuous current generator has already been explained, but its modifications in actual work are important and worthy of special investigation. In a general way, continuous currents are almost always obtained by commuting the current obtained from a machine which would naturally deliver alternating currents. This process is, however, by no means as simple as Fig. 9 would suggest. With a two-part commutator the resulting current, although unidirectional, would necessarily be very irregular owing to the fact

that the total current drops to zero at the moment of commutation. Such a current is ill fitted for many purposes, and the commutator would be rapidly destroyed by sparking if the machine were of any practical size.

To avoid these difficulties, the number of coils on the armature is increased, and they are so interconnected that, while each coil has its connection to the outside current reversed as before, when its electromotive force is zero, the other coils in which the E. M. F. still remains in the right direction continue in circuit unchanged. In this way the E. M. F. at the brush is the sum of the E. M. Fs. of a number of coils, each of which is reversed at the proper moment. The number of commutator segments is increased proportionally to the number of coils,



FIG. 24.

and the commutator thus becomes a comparatively complicated structure. The result, however, is that the total E. M. F. of the armature cannot vary by more than the variation due to a single coil. The nature of this modification is shown in Fig. 24, which shows a four-part commutator connected to a four-coil drum armature.

An eight-part winding of modern type is shown in Fig. 25. Tracing out the currents in this will give a clear idea both of a typical winding and of the process of commutation.

In commercial machines the number of individual coils and of commutator segments often exceeds 100, but the principle of the winding is the same. Nearly all the early dynamos had several turns of wire per coil, as in Fig. 24, but at present, in most large machines, one turn constitutes a complete coil. This extreme subdivision is to avoid sparking at the commu-

tator, which becomes destructive if the current be large and the E. M. F. per commutator segment great.

If each coil generates a considerable voltage, there is even under the best conditions of commutation a strong tendency for sparks to follow the brush across the insulation between segments, or even to jump across this insulation elsewhere. As this goes from bad to worse and rapidly ruins the commutator, every precaution has to be taken against such a contingency. The E. M. F. generated by each coil is kept low by subdividing the winding, and in large machines it is the

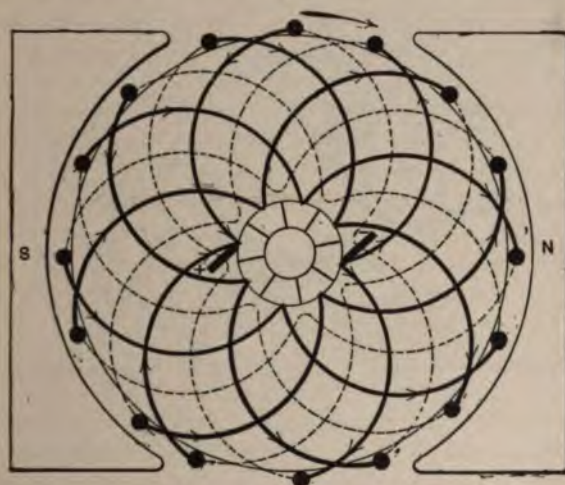


FIG. 25.

rule that the E. M. F. of a single loop is quite all that can safely be allotted to a single commutator segment.

Present good practice indicates that for generators for lighting up to 100 or 150 volts the voltage between brushes should be subdivided so that it shall not exceed 3 or 4 volts for each segment between the brushes. For 500 or 600 volt machines it should not ordinarily exceed about 10 volts, while for dynamos of moderate output and even higher voltage it may rise to 20 volts or more.

The reason for these different figures is that the destructiveness of the spark depends on the amount of current which is

liable to be involved. On a low voltage commutator intended for heavy currents, even very moderate sparking may gnaw the segments seriously, while the spark of an arc machine in spite of its venomous appearance may do very little harm, as the maximum current in the whole bar will not exceed 8 or 10 amperes. Consequently the voltage per bar in such cases is sometimes 50 or more, while in very large incandescent machines and in those designed for electrolytic purposes the E. M. F. per bar is often less than 2 volts or even below 1 volt.

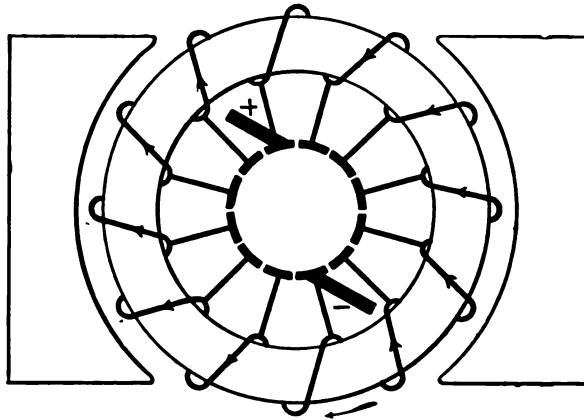


FIG. 26.

Windings like those of Figs. 24 and 25 are of the so-called *drum* type, in which each convolution extends around the whole body of the armature, either diametrically or nearly so. Another sort of armature winding frequently used, although less now than formerly, is the *Gramme*, so called from its inventor. Here the iron body of the armature is, instead of being cylindrical, in the form of a massive ring of rectangular cross section. The windings are looped through and around this ring, fitting it firmly and closely. Fig. 26, which shows in diagram a winding in ten sections, furnishes a good example of the Gramme construction. There may be one or several turns per coil, as in drum windings. These two general types of windings are used with various modifications in nearly all continuous current dynamos. Each has its good

and bad features. The Gramme winding makes it very easy to keep down the voltage per segment, inasmuch as for each external armature wire there is a commutator bar, while in the drum form there is but one bar for two wires. It is also mechanically solid even when wound with small wire, and no two adjacent wires can have a considerable voltage between them, thus making it easy to build an armature for high E. M. F. On the other hand, the drum winding gives a very compact armature of easy construction, and the magnetism induced in it is less likely to disturb that of the field.

In the small machines once usual the Gramme type was preferred for high voltages on account of the ease with which it could be repaired, while the drum was liked for its simplicity of mechanical construction as a whole and excellent efficiency as an inductor. In modern practice the differences between these types have become much less marked. With large units, particularly of the multipolar form now usual, the drum winding is as easily insulated as the Gramme, for with the winding now used in such cases there need be no considerable voltage between adjacent wires, and repairs are of very infrequent occurrence. In fact, the drum winding can be made quite as accessible as the other, and is on the whole cheaper and simpler. Almost the sole advantage of the Gramme (*or ring*) winding is that of low voltage per commutator bar. Mechanically, too, there is less difference than formerly, for the coils are in both types frequently bedded in slots in the iron of the armature core.

It must be noted that the armature of the modern dynamo, unless of small size or unusually high voltage, is seldom wound with wire in the ordinary sense of the word. Instead, the conductors are bars of copper, usually of sections rectangular rather than round, and generally lacking any permanently attached insulation. Whatever the winding, the conductors on the armature face are inclosed in close fitting tubes of mica and specially treated paper or the like, and then put in place on the armature core or in more or less completely closed channels cut in it. If on the core surface, the bars are often not insulated on the exterior surface at all. If the armature core be slotted, the insulating material is preferably put in position first and the bar put in afterward. As to the rest

of the winding it is completed by connectors of copper strip or rod soldered to the face conductors and insulated in a substantial manner. Thus each convolution, whether of ring or drum winding, is composed of from two to four pieces.

A typical modern ring winding is shown in Fig. 27. It well exemplifies the construction above mentioned, and in this case the uninsulated faces of the exterior conductors form the commutator of the machine. Such a construction of course excludes iron clad armatures and is best fitted for a machine having a field magnet inside the ring armature. A similar

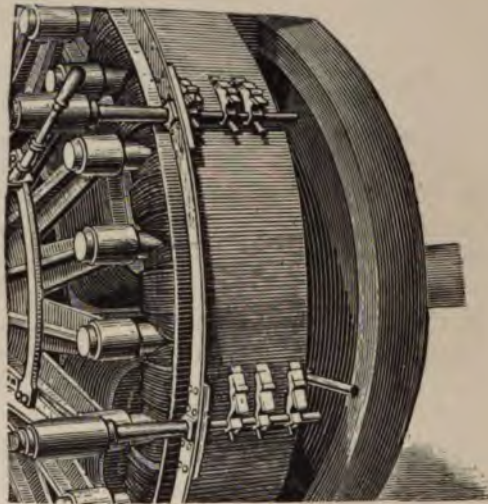


FIG. 27.

arrangement which avoids the above limitations, uses the side connectors of the ring as commutator segments. The general principle, however, is the same, whether the commutator forms part of the winding proper or is a separate structure.

An iron clad drum winding of typical character is shown in Fig. 28. Here the exterior bars are fitted into thoroughly insulated slots in the core, and wedged firmly into place by insulating wedges. Sometimes the bars themselves are shaped so as to act as wedges. In either case the bars are held almost as solidly as if they formed an integral part of the core. The commutator in these windings must be a separate affair. Fig.

28 shows well the nature of the winding, with its slotted core, ventilating spaces, and massive bars—in this example 4 per slot. The end connectors lie in a pair of reverse spirals, one outside the other, and separated by firm insulation. The relation of these connectors to the rest of the winding is illustrated in Fig. 25.

Between the modern drum and ring armatures it is difficult to discriminate. Both have been successfully used in dynamos of the largest size, but the iron clad drum is in the more general use, while the use of ring armatures is declining. It is rather unusual to find a standard generator of recent build of 100 KW or more output with a regular wire wound armature, and the most of them have some modification of the bar windings just described.

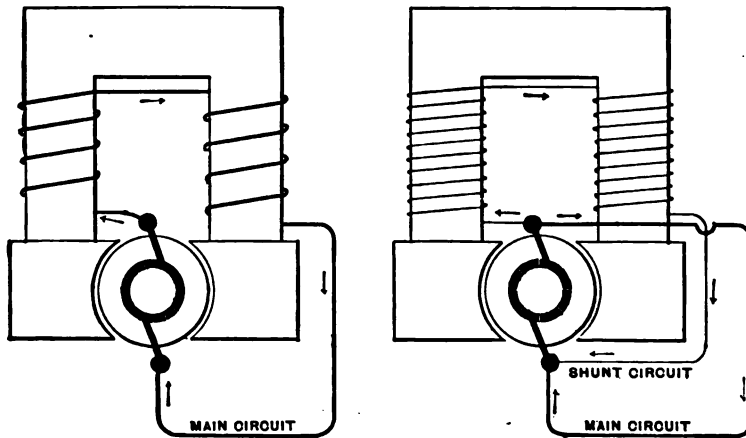


FIG. 28.

We have briefly reviewed here the armature windings at present in general use and may now pass to the various windings employed for the field magnets. These are, in continuous current dynamos, almost always connected with, and supplied with current from, the armature winding, thus making the machines self-exciting. As the armature is turned the action begins with the weak residual magnetism left in the field magnets, and the current set up by the small E. M. F. thus produced is passed around and gradually strengthens the magnets, building them up to full strength. If this residual magnetism is very feeble, as may happen when it is knocked out of the iron by rough handling or the continual jarring of a long journey, it is sometimes quite difficult to get the machine into action.

The simplest form of field winding, and the one which was most extensively used at first, is that in which the current from

one of the brushes passes around the field magnet coils on its way to or from the external circuit of the machine, as shown in Fig. 29. This *series* winding possesses more than one advantage. It consists of a comparatively small number of convolutions of rather large wire and so is cheap to wind; it is, for this same reason, little liable to injury and easy to repair when injured; and what is of particular importance, whenever the series dynamo is called upon for more current, the magnetizing power of the field is raised by the increase, thus increasing the electromotive force. This property, once considered a disadvantage, becomes of great value in modern



FIGS. 29 AND 30.

windings adapted for the purpose. As the generation of E. M. F. at the start depends entirely on the residual magnetism, series wound machines do not "build up" full voltage very easily unless the resistance of the outside circuit is fairly low, thus giving the current a chance.

The common shunt winding shown in Fig. 30 almost describes itself. The brushes are, independently of the exterior circuit, connected to magnetizing coils of fine wire. Although such a field winding is slightly harder to construct and to maintain, it produces a magnetic field that is relatively free from any actions in the working circuit of the machine. So long as the E. M. F. at the brushes is unaffected by changes of speed, the field will

be quite steady except as a very large current in the exterior circuit may reduce the voltage available for the field by causing a loss of voltage in the armature. If the armature resistance be very small, there will be almost a constant E. M. F. at the brushes except as the current flowing in the armature may produce a magnetization opposed to the shunt field. For a considerable time, then, the shunt winding was always used when a constant E. M. F. was required. At the same time, it permits the E. M. F. to be varied, if desired, with a very small loss of energy, by the simple expedient of putting a variable resistance in circuit with the field magnets.

As the principles of dynamo construction became better known, it was apparent that the above method of getting a constant E. M. F. was rather expensive. To build an armature that would carry a heavy current without noticeable loss of voltage and to inclose it in fields so strong as to be disturbed only in a minute degree by the magnetizing effects of such currents, was a task requiring much care and a great amount of material. Even if this difficult problem were solved, the constant voltage would be at the brushes of the machine and not at the load, where it is needed.

An easy way out of these difficulties is found by considering an important property of the series-wound machine just mentioned, *i. e.*, the rise of E. M. F. as the load on the external circuit rises. If now one takes a good shunt-wound dynamo and adds to the field magnets a few *series* turns wound in the same direction as the shunt, the result is as follows: At no load, the voltage at the brushes is that due to the shunt alone. As the load comes on this voltage would naturally fall off by the loss of voltage from armature resistance and reaction. The series turns, however, at this juncture strengthen the field and thus compensate for these losses. This is the *compound winding* now very generally used. It is shown in diagram in Fig. 31. Ordinarily the series turns are more than would be needed for merely compensating the losses due to armature resistance and reaction, so that the voltage at the brushes under load will rise enough to make up for the increased loss in the line due to carrying heavier current.

Machines thus *over-compounded* five or ten per cent. are in very common use.

The foregoing gives the rudiments of the machines used for generating direct current. It now remains, before taking up the question of power transmission proper, to consider briefly the use of such machines as motors. The underlying principle has been already discussed. The power of a motor to do work depends on the stress of the magnetic field on conductors carrying current in it and free to move. This stress is virtually the same as that which has to be overcome in using the machine as a generator, and reaches a very considerable amount in machines of any size.

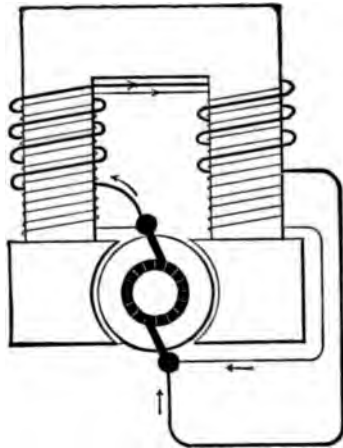


FIG. 31.

In motors with the field strengths often used, the actual drag between the field and the armature wires may amount at a rough approximation to nearly an ounce pull on each foot of conductor in the field for every ampere flowing through the wire. With a 20 HP motor the actual twisting effort or *torque* at the surface of the armature might easily be considerably over a hundred pounds pull. Forces of this size emphasize the need of solid armature construction, with the conductors firmly locked in place, particularly since the magnetic drag is not steady, but comes somewhat violently upon the conductors as they enter the field. With the old smooth core armatures wound with wire, the conductors not infrequently

worked loose and chafed each other, and even the entire winding has been known to slip on the core. In modern windings, either iron clad or modified smooth core, such accidents are nearly impossible.

When the armature conductors of the motor cut through its field as the armature revolves, an electromotive force is necessarily generated in them as in every other case when the magnetic forces on a conductor change. There is thus produced, as a necessary part of the action of every motor, a *counter electromotive force* in the armature. This electromotive force plays a very important part in the internal economy of the motor and is worth looking into.

In the first place, the magnitude of the counter electromotive force determines the amount of current that can flow through the motor when supplied at a given voltage. The resistance of the armature measured from brush to brush may be only a few thousandths or even ten thousandths of an ohm, while the applied voltage may be several hundred volts. The current, however, is not that which would flow through the given resistance under the pressure applied, but the flow is determined by the difference between the applied electromotive force and the counter E. M. F. of the motor, so that in starting a motor when the armature is at rest and there is therefore no counter E. M. F., a resistance must be inserted outside the armature to cut down the initial rush of current.

In the second place, the counter electromotive force measures the output of the motor for any given current. It does this because the very same things, *i. e.*, strength of field, amount of wire under induction, and speed, which determine the output for a given current, also determine the magnitude of the counter electromotive force.

Therefore, when the machine is running as a motor, while the energy supplied to it is the product of the voltage by the amperes which flow through the armature, the output of the motor is determined by the product of the counter electromotive force into the selfsame current; hence, under given conditions, the ratio between the impressed and counter electromotive forces of the motor determines the efficiency of the motor. The difference between these electromotive forces determines the input of energy, since it determines the cur-

rent which may flow; therefore, as the counter electromotive force increases, the efficiency of the motor increases, but the output is limited by the decreased input.

With a fixed electromotive force supplied to the armature, the output of the motor per ampere of current will diminish as the counter electromotive force diminishes, but the total amperes flowing will increase because the difference between the applied and counter E. M. F. has also increased. Thus the total output increases, although at a lower efficiency, when the counter E. M. F. decreases. Since the input (which is determined by the difference between counter and applied E. M. Fs.) multiplied by the efficiency (which is determined by the counter E. M. F.) equals the net output of the motor, this output will be at a maximum when the counter E. M. F. and the effective E. M. F. are equal to each other. This follows from the general law, that the product of two quantities, the sum of which is fixed, will be a maximum when these quantities are equal.

It must be distinctly understood, however, that at this point of theoretical maximum output the motor is very inefficient, and that mechanical considerations prevent the efficiency being wholly determined by the counter E. M. F., while sparking and heating generally prevent working with the counter E. M. F. equal to the effective E. M. F.

In actual practice motors are worked under very diverse conditions, and some of these it is worth while to take up in detail, following the preceding generalizations. The energy may be supplied at constant current, at constant voltage, with neither current nor voltage constant, at fixed or variable speed, and subject to a wide variety of conditions; the motors may be wound either series, shunt, compound, or with various modifications of these windings, and may be either self regulating with respect to various requirements, or regulated by extraneous means. In the ordinary problems dealt with in power transmission, these conditions may be classified in a fairly simple way as follows:

Case I. Series-wound motors at constant current.

Case II. Series-wound motors at constant voltage.

Case III. Series-wound motors with interdependent current and voltage.

Case IV. Shunt-wound motors at constant voltage.

The first class is now less widely used than formerly, and is of great practical importance only in a few cases. The second class is very widely used in a particular case, to wit: electric railway practice, and consequently it is of great importance. The third class of motors is used occasionally with great success but not very extensively, while the fourth includes the vast majority of all the machines running for purposes other than electric railway service. These cases, therefore, it is worth while to take up somewhat thoroughly.

CASE I.—Series-wound motors operated with a constant current originally came into use in connection with arc lighting circuits, which for some years formed the most generally available source of current. Such lines are fed from dynamos in which the current is kept constant by special regulation, while the voltage rises and falls in accordance with the load, consisting of lamps or motors in series with each other. We are therefore relieved of any concern about the current, since it is kept constant quite irrespective of what happens in the motor.

Under these circumstances, in a series-wound motor, the torque will be constant, since the field is constant, and the output of the motor will vary directly with the speed. If it be loaded beyond its capacity, it simply refuses to start the load, inasmuch as its torque is limited by the current. If it starts with a load within its limit of torque, its speed will steadily increase until that limit is reached. This may be comparatively soon if the load is a rapidly increasing one, or the machine may race until its own friction of air and bearings, magnetic resistances and the induction of idle currents in the core and frame serve to furnish resistance up to its limit of torque. When running at a given speed, any increase of load causes the speed to fall off, while decrease of load produces racing. Unless these tendencies are controlled, this type of machine becomes almost useless for practical purposes, as regularity of speed under change of load is generally highly desirable. In fact, the tendency to run at constant torque is generally inconvenient. To obviate this very serious difficulty various devices have been tried with tolerable success. The commonest is to vary the torque in accordance with the load

by changing the field strength or by shifting the brushes so as to throw the armature coils out of their normal relation to the magnetic field.

Since the object of such changes is to vary the output at constant current, and since this output is measured by the counter E. M. F. of the motor, the real problem of such regulation is to vary the counter E. M. F. in proportion to the output desired. Therefore the same general means that serve to accomplish this end in an arc dynamo, keeping the current constant and varying the E. M. F., will serve to regulate the corresponding motor.

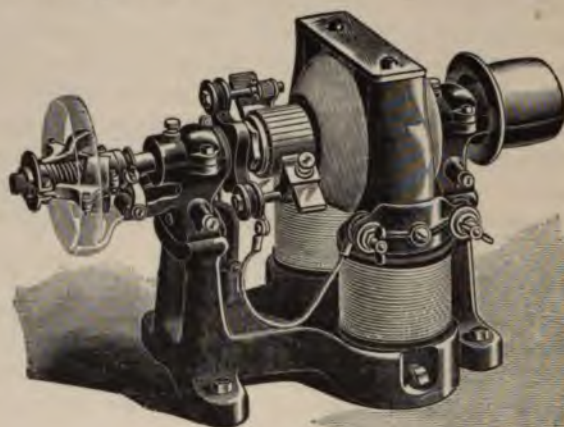


FIG. 32.

As in this case the speed is the thing to be held constant, the usual means taken for working the regulating devices is a centrifugal governor, which generally acts to shift the brushes or to put in circuit more or less of the field winding, which for this purpose is divided into sections. In still other arrangements the governor acts to slide the armature partially into or out of the field, or to work a rheostat which shunts the field magnet, as in the Brush regulator for constant current. An excellent example of a small constant current motor regulated on the last mentioned principle is shown in Fig. 32.

As to the operation of these regulating devices, it is tolerably good if everything is carefully looked after and kept in adjust-

ment. The efficiency of such motors is not generally as high as that of other types at light loads, owing to the nearly constant loss in the armature due to constant current working. At and near full load the efficiency may be good.

In addition, the current is highly dangerous, coming as it does from generators of very high voltage, and even the voltage across the brushes is, in machines of any size, sufficient to give a dangerous or even fatal shock. A 10 HP motor, for example, on the customary 10-ampere circuit, would have a difference of potential of about 800 volts between the brushes at full load. As a few such motors would load even the largest arc dynamos, besides being dangerous in themselves, operations have generally been confined to smaller units. On account of the danger and the mechanical and other difficulties, the arc motor has come to be looked upon as a last resort, is seldom or never used when anything else is available, and, to the credit of the various manufacturers be it said, is nearly always sold and installed with a specific explanation of its general character and the precautions that must be taken with it.

In spite of all these objections, the constant current motor often does good and steady work, and some such motors have been used for years without accident or serious trouble of any kind. They have been employed, however, only sparingly for power transmission work of any kind, and when so used are mostly on special circuits of 50 to 150 amperes.

CASE II.—Series motors worked at constant potential are very widely used for electric railway service and other cases, such as hoisting, in which great variations of both speed and torque are desirable. When supplied at constant potential the speed of a series-wound motor varies widely with the load. In any case the speed increases until the counter E. M. F. rises high enough to cut the current down to the amount necessary to give the torque sufficient for that load and speed.

If the field be strengthened, the motor will give a certain output at a lower speed than before; if it be weakened, at a higher speed; the torque being in these cases correspondingly increased or decreased.

The torque increases rapidly with the current, so that when the counter E. M. F. is small, or zero, as in starting from rest,

the torque is very great, a property of immense value in starting heavy loads. For in starting, not only is the current through the armature large, but the field is at its maximum strength. If the field strength varied directly as the current, the torque would vary nearly as the square of the current.

As a rule, however, these, like most other motors, are worked with a fairly intense magnetization of the fields, so that doubling the magnetizing current by no means doubles the strength of the field. In fact, most series motors for constant potential circuits are of the type used for electric railways and wound so that the field magnets are nearly saturated even with very moderate currents. Hence the torque in such cases increases but a trifle faster than the current. This construction is adopted in order to reduce the amount of iron necessary to secure a given strength of field, and so to lighten and cheapen the motor.

It is quite obvious that while series motors at constant potential have the advantage of being able to give on occasion very great torque, they suffer from the same disadvantage as constant current motors, in that they are not self-regulating for constant speed. A centrifugal governor could, of course, be arranged to do the work, but since it happens that most work requiring great torque also requires variable speed, nothing of the kind is usually necessary.

As previously explained the speed can be easily regulated to a certain extent by changing the field strength, thus changing the counter E. M. F., but owing to the peculiarity of design just noted, this method is rather ineffective, requiring a great change in the field winding for a moderate change in speed.

In general, when a considerable range of speed is needed, constant potential working is abandoned and the speed is changed by varying the impressed E. M. F. by means of a rheostat. If this E. M. F. be lowered, the current decreases and the speed sags off until the new counter E. M. F. is low enough to let pass just enough current to maintain the output at the reduced speed. When the applied E. M. F. is increased the reverse action takes place. Under these circumstances for a fixed load the current is approximately the same independent of the speed; for with a uniform load the torque is constant, while the output (*i. e.* rate of driving the load) varies. Many

railway motors are regulated in the manner just described, although in addition the field strength is sometimes varied by cutting out or recombining fields and by series parallel control. Rheostatic control necessarily wastes energy, and the greatest recent improvement in railway practice consists in reducing the E. M. F. applied to the car motors by throwing the two in series. This secures a low speed economically though the rheostat still comes into play at intermediate speeds.

Speaking broadly then, series-wound motors, while possessing many valuable properties, are limited in their usefulness by their tendency to vary widely in speed when the load

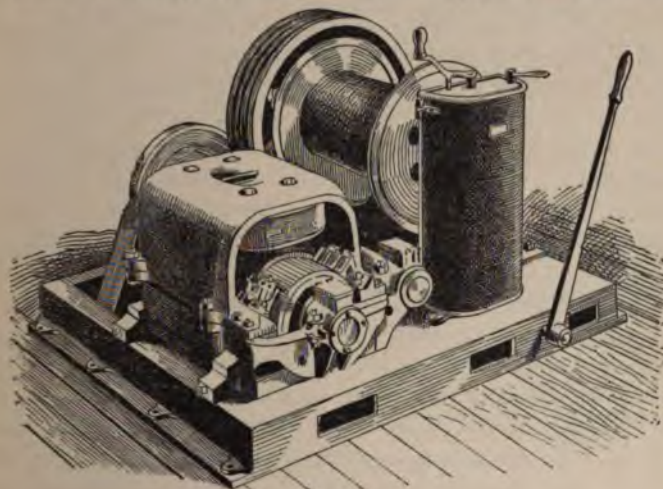


FIG. 33.

changes. Hence they are used chiefly in cases where the speed is to be varied deliberately. A typical motor of this class, such as is used for hoists and the like, with rheostatic control, is shown in Fig. 33.

In spite of the difficulty in regulation, the series motor possesses some considerable advantages: The field coils being of coarse wire are easily and cheaply wound even in motors for very high voltage; the same quick response to changes in current or load that makes it hard to obtain uniform speed is also most important in many kinds of work; the powerful initial torque, coupled with the kindred property of prompt reversal; all these make the series motor pre-eminent for cer-

tain purposes, especially where severe work is to be coupled with hard usage.

There is one case, too, in which the series-wound motor can be made accurately self-regulating for constant speed—a case somewhat peculiar and unusual, but yet worthy of special attention.

CASE III.—We have seen that when the load on a series motor supplied at a certain voltage increases, the speed falls off until the increasing current due to the lessened counter E. M. F. raises the torque sufficiently to meet the new conditions. Imagine now the impressed E. M. F. to be so varied that the slightest increase of current in the motor is met by a rise in the E. M. F. applied to it. Evidently the speed would not have to fall as before, for the greater applied voltage would furnish ample current for all the needs of the load. If the variation in voltage could be made to depend on change of torque, not giving the speed time to change, the regulation would be almost perfect. Such a method has been proposed, but owing to mechanical difficulties has not been used to any extent.

It is possible, however, so to combine a special motor and generator that the former will be very closely uniform in speed quite independent of the load. In this connection we must revert to the properties of the series-wound dynamo. If such a machine be driven at constant speed its electromotive force will increase with the current, since the strength of field, here the only variable factor in the voltage, will increase with the current. If the field magnets of the generator are unsaturated, that is, not so strongly magnetized as to require considerable current to produce a moderate increase of magnetization, they will respond very promptly to an increase of load by raising the voltage. If such a generator be connected to a series-wound motor of proper design, the pair will work together almost as if connected by a belt instead of a long line, and the motor will run at a nearly uniform speed, since the least diminution of speed, with its accompanying increase of current, will be met by a rise in the voltage of the generator. Such an arrangement is shown in diagram in Fig. 34.

In this cut *A* is the generator supplying current to the motor *B*. The machines should be of practically the same

capacity, for the generator cannot supply current except to the one motor without disturbing the regulation. Whenever the load on *B* changes, a very small reduction in speed suffices to raise the voltage of *A* and thereby to hold up the speed of *B*. To this end the field magnets of *B* must be more strongly saturated than those of *A*, else the same increase of current will raise the counter E. M. F. of the motor and defeat the purpose of the combination. If the fields of the two machines are properly designed the generator will increase its voltage under increasing load just enough to hold the motor at speed, as a very slight change in current immediately reacts on the generator.

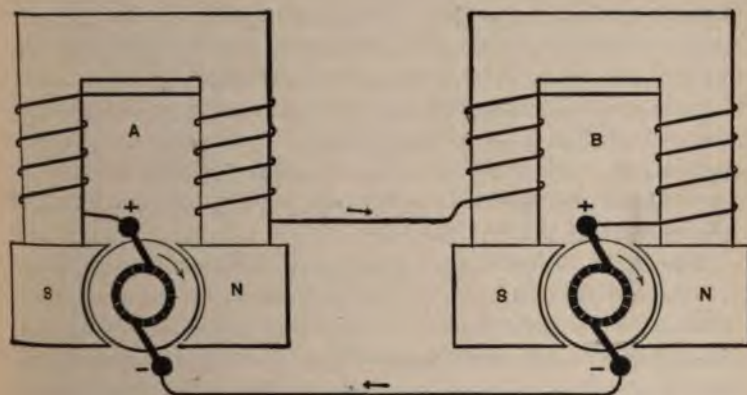


FIG. 34.

It is even possible to make the motor rise in speed under load if the generator is sufficiently sensitive to changes of current. This is generally needless, but it is often useful so to design *A* and *B* that the former will rise in voltage fast enough not only to compensate for the added load on the motor but for the added loss of energy in the line, entailed by the increase of current, thus regulating the motor even at a long distance. The difference of saturation between the generator and motor fields need not involve material difference of design, since it may be effected by shunting the motor field. When properly adjusted the system is capable of holding the motor speed constant within two per cent. through the range of load for which the machines are planned.

It should be noted in connection with Fig. 34 that, whereas the current circulating in the armature of a generator tends to disturb the magnetic field in one direction, in a motor the same reaction is in the opposite direction. For the current in the motor is driven through the armature against the counter E. M. F., *i. e.* in the direction opposite to that of the current the machine would give if running as a generator. As the effect of the reaction is to skew the direction of the magnetic field that affects the armature conductors, and the commutation must take place when the commuted coil is not under a varying induction, the armature reaction compels one to shift the brushes slightly away from the position they would have if the field were perfectly symmetrical. This shifting is in the direction of armature rotation in a generator, but for the reason above noted has the opposite direction in a motor. In either case it should be only a few degrees.

CASE IV.—Shunt-wound motors are almost invariably worked on constant potential circuits, to which they are particularly well suited. They form by far the largest class of motors in general use and owe this advantage mainly to their beautiful self-regulating properties.

The shunt motor is in construction practically the same as a shunt-wound dynamo. Let us look into the action of such a machine when supplied from a source of constant voltage. If the design be reasonably efficient, the armature will have a very low resistance and the shunt circuit, which includes the field coils, a resistance several hundred times greater. When such a machine is supplied with current of constant voltage at its brushes and is running at any given speed and load, the current through the armature is practically determined by the counter E. M. F. developed, the armature resistance being almost negligible. The shunt is of high resistance and takes a certain small amount of current, determined by the voltage across the brushes. Now let the load increase; the field is, aside from loss of voltage on the line, practically constant, and the first effect of the added load is, as in a series motor, to reduce the speed. But this lowers the counter E. M. F., and consequently the armature current rises and the torque is increased, thereby enabling the motor to operate under the larger load. The torque necessary to enable the motor to

maintain an increased load varies directly as the load and is also directly proportional to the current. But since the current is closely proportional to the difference between the impressed and counter E. M. Fs., it is possible to design a machine so as to run at almost exactly constant speed.

The constancy depends really on the armature resistance, small as it is. For example, a motor is designed to run at 100 volts. Running light the counter E. M. F. is 99.9 volts and with an armature resistance of 0.01 ohm the current will be 10 amperes. The work done is say 1 HP. Now let a full load, say 20 HP, be thrown on. The torque will have to be increased 20 times, requiring 200 amperes. But this will flow through the armature under an effective pressure of 2 volts. Hence the counter E. M. F. will only have to fall to 98 volts to provide current enough to meet the new condition. As the counter E. M. F. varies directly as the speed a fall in speed of less than 2 per cent. will follow the increase of load. This computation neglects all questions of armature reaction as well as the effect of this minute fall in speed on the output, but fairly represents a case that might actually be met with in the best modern practice. In fact, shunt motors have been so designed as to vary no more than $1\frac{1}{2}$ per cent. in speed from no load to full load. A variation of 5 or 6 per cent. is, however, more usual.

When supplied from an over compounded generator so that the impressed voltage may increase with the load, a shunt motor can be operated even more closely to constant speed than indicated above, since there is no longer need for a fall in speed to maintain the requisite difference between the impressed and counter E. M. Fs. In such case any tendency to fall in speed is at once corrected by the rise in voltage on the line. This scheme is seldom used, however, since it is ill fitted for simultaneously operating a number of motors at varying loads, and for single units has no particular advantages over the series-wound pair previously noted, or a very simple arrangement of alternating apparatus.

Not only can the shunt motor be worked at nearly constant speed, but it also has the advantage of permitting a considerable range of speed variation without sacrificing much in the matter of efficiency. We have already seen that a change in

field strength involves a change of speed, since it necessarily alters the counter E. M. F., which in turn modifies the current.

In a shunt motor the immediate effect of a decrease of field strength is to lower the counter E. M. F., letting more current through the armature and increasing the torque. Hence the speed rises until the current and torque adjust themselves to the requirements of the load. On the other hand, if the field be strengthened, the current necessary to carry the load cannot be obtained without a fall in speed. It is clear that the changes of speed thus obtained may be quite considerable, for in a motor such as that just described a variation of 10 per cent. in the field would produce an immense variation of current, which would have to be compensated by a change in speed as great as the change in the field. Inasmuch as these field changes can be produced by varying the field current, which is always small, through a rheostat in the circuit, this change of field strength can be accomplished with but a trifling waste of energy. If the field magnets are comparatively unsaturated, it is not difficult to obtain perhaps 50 per cent. variation in speed. A motor designed for such work is, however, necessarily bulky, as it must be possible to get torque enough to handle the full load with a field much below its normal strength.

It should be noted that even when running at a considerably modified speed, the motor must still be nearly self-regulating for changes in load, for the conditions that govern self-regulation are within moderate limits unaffected by the particular strength of field employed. Only when the armature reaction has been greatly modified will the regulation be sensibly disturbed.

A device sometimes used to improve the regulation of motors essentially shunt wound is the so-called differential winding. This consists of an additional field winding in series with the armature, but around which the current flows in such a direction as to demagnetize the field. The total field strength is then due to the difference between the magnetizing power of the shunt and of this regulating coil. When the load on the motor increases, the additional current due to a minute change of speed will weaken the field and thence cause the motor to run faster until the counter E. M. F. adjusts the current to the

new speed and output. Differential winding obviously requires an extra expenditure of energy in the field, since the shunt and series turns act against each other. It is now used much less than formerly, since it has been found that a well-designed pure-shunt motor will regulate very nearly as well and more efficiently. Fig. 35 shows the Sprague motor wound on this differential plan, now only of historical interest, but which through its good qualities did much to popularize the electric motor in America.

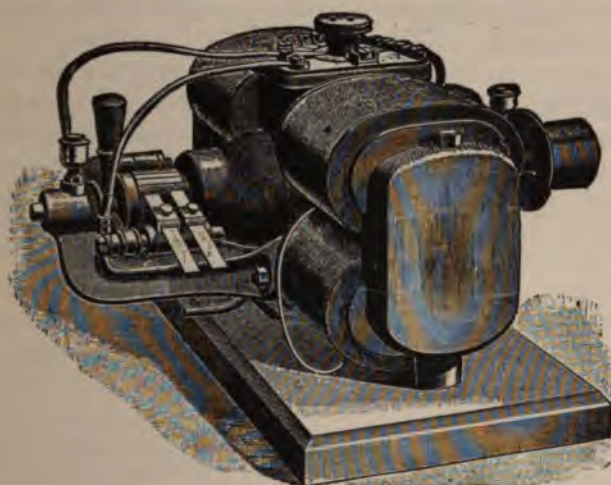


FIG. 35.

Various modifications of shunt- and series-wound motors have from time to time appeared devised for particular adaptation to special purposes or sometimes merely for the sake of novelty. None of them, however, are of sufficiently general importance to find a place here except a single very beautiful method of obtaining efficiently a very wide range of speed.

The principle of this method is to work the motor at normal full excitation, but to deliver to the armature a current of variable E. M. F. so that a given current and hence torque may accompany very various values of the counter E. M. F. Fig. 36 shows the connections employed to effect this result. Here *C* is the working motor, *B* the special generator which feeds its armature, *A* the motor used to drive this generator,

and *D* the rheostat and reversing switch in the generator field circuit which allows the generator E. M. F. to be varied. In the figure the motor *H* is shown as a synchronous alternating machine with a commutator from which are fed the fields of the three machines. In ordinary central station practice *A* is a continuous current motor and the fields are fed direct from the distributing mains. The result of this arrangement is that the motor field *C* remains at full strength, while the armature current can be brought to any required strength at any desired armature speed within a very wide range. Hence *C* can give full load torque or even more while the armature is merely turning over a few times per minute, and the speed can be brought up with the utmost delicacy and held at any desired point. And at every speed the motor holds its speed fairly

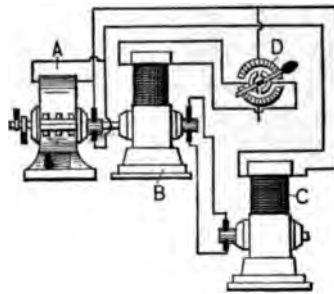


FIG. 36

well irrespective of changes of load. For elevators, hoists and similar work this device is extremely useful. The only objection to it is the cost of installing the two extra machines, which is of course considerable. Nevertheless the regulation attained is so beautiful and perfect that the cost often becomes a minor consideration, and the device is very widely used in cases where variable speed is essential.

POWER TRANSMISSION AT CONSTANT CURRENT.

In its general aspect this method must now be regarded as a makeshift. It came into existence at a time when the only circuits extensively installed were those for arc lighting, and hence, if motors were to be used at all, they must needs be of the constant current type. As incandescent lighting became

more common the arc motors were gradually replaced by shunt motors worked at constant potential. A few constant current plants, especially for motor service, have been installed both here and abroad, but for the most part they have merely dragged out a precarious existence, and in this country have been abandoned.

There is good reason for this. The motors usually regulate indifferently, and there is serious objection to running high voltage wires into buildings when it can be avoided.

The objections of the insurance companies alone are quite sufficient to discourage the practice. The constant current has often been advocated for long distance transmission of power where high voltage is a necessity. For such service the method has the great advantage that the motors do not need extraordinary insulation except from the ground. A constant potential service at 5,000 volts continuous current would be utterly impracticable, if distribution of power in moderate units were to be attempted, while with constant currents it is entirely feasible, although objectionable on the grounds mentioned. In addition, unless a proposed transmission be for power alone, the constant current method shares with constant potential of high voltage the very grave difficulty that an incandescent lamp service is out of the question, without secondary transformation of the necessarily high line voltage to a very moderate pressure. This is somewhat expensive with continuous currents of any kind, and at once introduces the troublesome question of regulation at constant current into the problem.

To reduce the energy sent over a high voltage continuous current line to a pressure at which incandescent lamps can be fed, two methods are possible. We may pass by the plan of using many lamps in series as of very limited applicability and forbidden by the fire underwriters. First, the required power may be received by a motor of appropriate size, which is belted or coupled to a low voltage generator. This device does the work, but it involves installing three times the capacity of the lamps desired in machinery of a somewhat costly character, and losing in the motor and generator perhaps 15 or 20 per cent. of the energy supplied from the line. The other alternative is to employ a composite

machine combining the functions of motor and generator. This piece of apparatus is variously known as a motor generator, dynamotor, or continuous current converter. It is a dynamo electric machine having a double-wound armature and two commutators. One winding with its commutator receives the high line voltage and operates as a motor. The other winding and its commutator furnishes, as a dynamo, low tension current. The field is common to both windings. Fig. 37 shows a small machine of this kind, adapted to receive 5,000 volts from the line, and to deliver 110 volts, or *vice versa*.

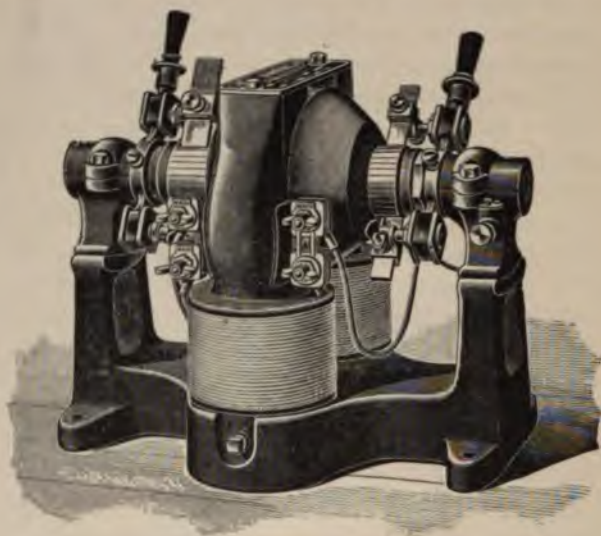


FIG. 37.

This particular machine works at constant voltage on both circuits. Either circuit, however, could be made to work at constant current, provided the means of regulation for this purpose were so chosen as to leave the field and speed unchanged.

The cost of a motor generator, while less than that of two separate machines, is still high, and although its efficiency is somewhat greater than that of the pair mentioned above, it is obtained at the cost of a rather complicated armature, which, from a practical standpoint, is quite objectionable.

In spite of the difficulties incident to working incandescent lamps from a high voltage constant current circuit, the ease with which such circuits can be worked, even if for power alone, at voltages far above those available on the constant potential system, encouraged their installation during the period between the first efforts at long distance transmission and the very recent date at which alternating current apparatus has become thoroughly available. For some years it was constant current or nothing, so far as long distance transmission, coupled with distribution, was concerned.

As a result of the various adverse conditions mentioned, transmission at constant current has never made really any headway in American practice, and in fact the method has been followed to a noticeable extent in only one locality—San Francisco. There, through the activity of local exploiters, constant current power circuits were early established and remained in fairly successful operation for several years.

There were until recently three companies operating constant current circuits in San Francisco for the distribution of power. The currents employed were of 10, 15 and 20 amperes. Most of the motors were small, a very large proportion of them being under one horse power. The total number of motors in circuit on the various systems was between six and seven hundred.

Except in San Francisco, what few constant current motors have been in operation are nearly all on regular arc circuits. Their use is, as a rule, discouraged by the operating companies, and very few new motors are being manufactured or sold; in fact, constant current distribution in modern American practice is almost non-existent. Abroad, the conditions are somewhat different, and on the Continent constant current distribution for long distance transmission work has been exploited to a very considerable extent, probably owing to the early and successful establishment of a number of transmission plants for single motors worked on the series system. There are several successful plants operated at constant current, one of the most considerable of them being that at Genoa, which is an excellent example of the kind and as such is worth more than a passing mention, even although the probability is that it will seldom be duplicated, at least on this side the Atlantic.

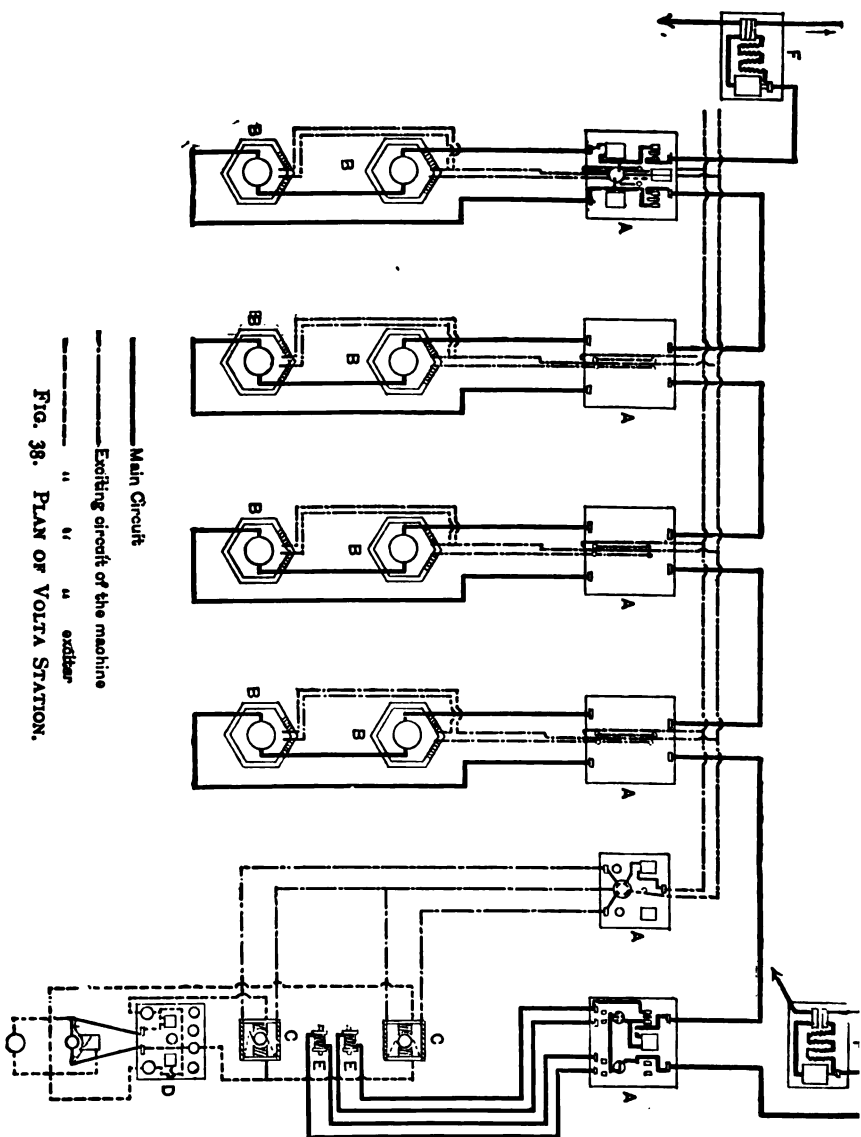


FIG. 38. PLAN OF VOLTA STATION.

The Genoa transmission is derived from the River Gorzente, which about twenty years ago was developed for hydraulic purposes, artificial lakes being established and a tunnel about $1\frac{1}{4}$ miles long being built for an outlet. Beyond the tunnel, an aqueduct some fifteen miles in length conveyed the water to Genoa, where a considerable amount of power is utilized directly. In this development there was left at the mouth of the tunnel an unused fall of nearly 1,200 feet aside from the head employed in the aqueduct. This has been developed electrically. It was divided into three partial falls of 338, 357 and 488 feet, respectively. At each of these was erected a generating station with its own transmission line. These stations were named after the three renowned electricians, Galvani, Volta and Pacinotti. The first mentioned station was the first installed. It consists of two generators operated in series. Each is of about 50 KW capacity, giving 47 amperes with a maximum pressure of 1,100 volts. Current is kept constant by regulating by hand the speed of the dynamos, through the gate which controls the turbines. Each dynamo is provided with an automatic switch, short circuiting the machine in case of extreme rise in voltage. This Galvani station was a preliminary or experimental station and was followed up by the establishment of two others which supply the power to Genoa. One of these stations, which is thoroughly typical of the system employed, is shown in Fig. 38. It consists of four turbines, each driving a pair of dynamos of a little less than 50 KW output at 45 amperes and about 1,000 volts.

These dynamos are similar to those in the Galvani station, but the regulation for constant current is obtained in a different manner. The dynamos are separately excited, the fields being supplied in parallel from a small dynamo driven by a separate waterwheel. The speed of this exciter is automatically varied by controlling its turbine in response to changes of current in the circuit. All the dynamos are operated in series, and like those in the Galvani station are direct coupled in pairs. The machines are insulated with enormous care, heavy layers of mica being placed between the magnets and the bed plates, while the windings themselves are very elaborately protected. Carbon brushes are employed, and the commutators are reported to behave admirably. Each

dynamo is protected by most elaborate safety devices, as in the Galvani station. The regulation is said to be excellent, even under considerable changes of load.

The third station, Pacinotti, contains eight machines of the same capacity as those in the preceding. They are governed as in the Galvani station by controlling their speed. This, however, is done by an electrical motor-governor controlled by a relay on the main line and working in one direction or the other as the occasion may require. In all the stations are carried out the same thorough precautions regarding insulation, and each machine has around it an insulated floor supported on porcelain. The line voltage from each of the two stations last mentioned is from 6,000 to 8,000, and two circuits are carried into Genoa, the extreme distance of trans-

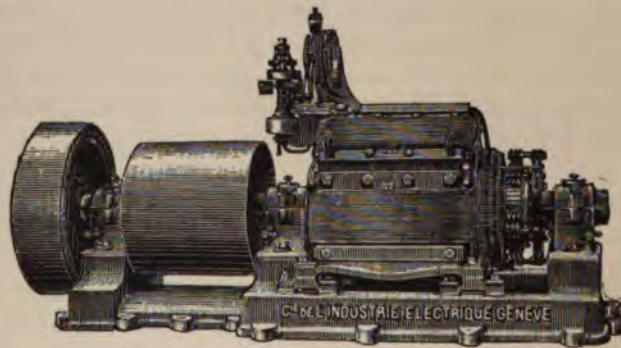


FIG. 39.

mission being about eighteen miles. The conductors, of wire 9 mm. in diameter, (nearly No. 00 B. & S.), are for the most part bare, except when passing through villages, and are supported on oil insulators carried by wooden poles, save in some few cases where iron poles have been used. The two circuits running into Genoa transmit power for motors only. The loss in the line at full load is 8 per cent.

At full load, nearly 1,000 HP is transmitted over the lines, the motors being of all sizes between 10 and 120 horse power. They are of the ordinary series-wound type, and their speed is automatically controlled by centrifugal governors, which act by varying the field strength. Fig. 39 shows one of the Genoa

motors, fitted with an automatic governor acting upon a commutated field winding. They are provided with carbon brushes, and are reported to operate very successfully.

It is to be noted, however, that the motors are placed in special rooms with insulated floors and walls owing to the enormous voltage which has to be taken into the buildings. They are fitted with heavy fly-wheels to assist the governors, and with automatic switches to short circuit around the motor in case of excessive voltage. The motors are under the special care of skilled assistants connected with the staff of the generating station, who inspect the lines and go over the motors at intervals of a few days. These extraordinary precautions both in the matter of insulation and skilled attendance account in great measure for the success of what, under American conditions, would have almost infallibly resulted in disastrous failure. The efficiency of the plant from turbine shaft to motor pulleys is said to be a little over 70 per cent.

As may be judged from this description, the whole installation is of enormously complicated character, although perhaps as simple and efficient as any alternating plant of the same early date. The plan of the Volta station for the most part explains itself. The switchboards for each machine with their plugs for connecting the pair of dynamos coupled to it are shown at *A*, dynamos at *B*, the exciters at *C*, exciter switchboard and rheostat at *D* and the solenoids, which control the exciter turbines, at *E*. Lightning arresters are shown at *F*. These consist of a spark gap, impedance coils in series with the line and condenser shunted around them. Every motor is provided with a similar lightning arrester. Taken altogether, this Genoa plant is an excellent example of the constant current system followed to its legitimate conclusion. A description of the system is a sufficiently condemnatory criticism judged from our present point of view; at the same time, it should be remembered that several years ago, while this station was being built, the method adopted was practically the only one available in the existing state of the art, and that the system has in more recent installations been materially improved. Encouraged, however, by the results obtained at Genoa, a similar station was soon afterwards built delivering a maximum of 700 HP at Brescia at an extreme full-load pres-

sure of about 15,000 volts over a 12-mile line. Since these stations nearly a dozen others have been installed, aggregating about 17,000 HP, and their performance has been uniformly good. In spite of a predilection for modern polyphase work one must admit that a system which has been installed to such an extent, and of late in competition with alternating methods, is far from moribund. Two strong points it undoubtedly has: freedom from all inductive disturbances, and the property of carrying its extreme voltage only at full load, the importance of which will be discussed later. It has shown itself capable of doing steady and efficient work over long distances and under climatic conditions by no means favorable. The Continental makers of this class of machinery have gone far beyond anything that has been attempted in American practice and have turned out constant current dynamos of really remarkable properties.

At present machines of 50 to 60 amperes have been given successfully E. M. F. as high as 3,500 volts, while those of 100 to 150 amperes have gone to 2,500 volts. As they are usually coupled in pairs, a single unit may have a capacity of about 700 KW, each component machine giving over 300. Without pushing beyond present apparatus it then becomes possible to arrange a plant of 1,000 to 1,500 KW having a working E. M. F. at full load of 10,000 to 14,000 volts. Such a plant is not especially complicated and is quite as easy to operate as an alternating plant. For a load of a few large motors, it is capable of thoroughly good work, without, however, presenting any striking advantages over a synchronous polyphase system save that the line is simpler and the motors easily self-starting. An alternating power station of similar output would contain practically as many generators, for sake of security. When it comes to combined lighting and power service the constant current system is hard pushed. In practice recourse is had to motor generators. Perhaps the best idea of the situation may be given by a brief description of the Swiss transmission from Combe-Garot to La Chaux-de-Fonds, a distance of 32 miles. At the former place are installed 8 generating units each giving 150 amperes at 1,800 volts, giving a total capacity of 2,160 KW at 14,400 volts. These generators are six pole Thury machines with drum

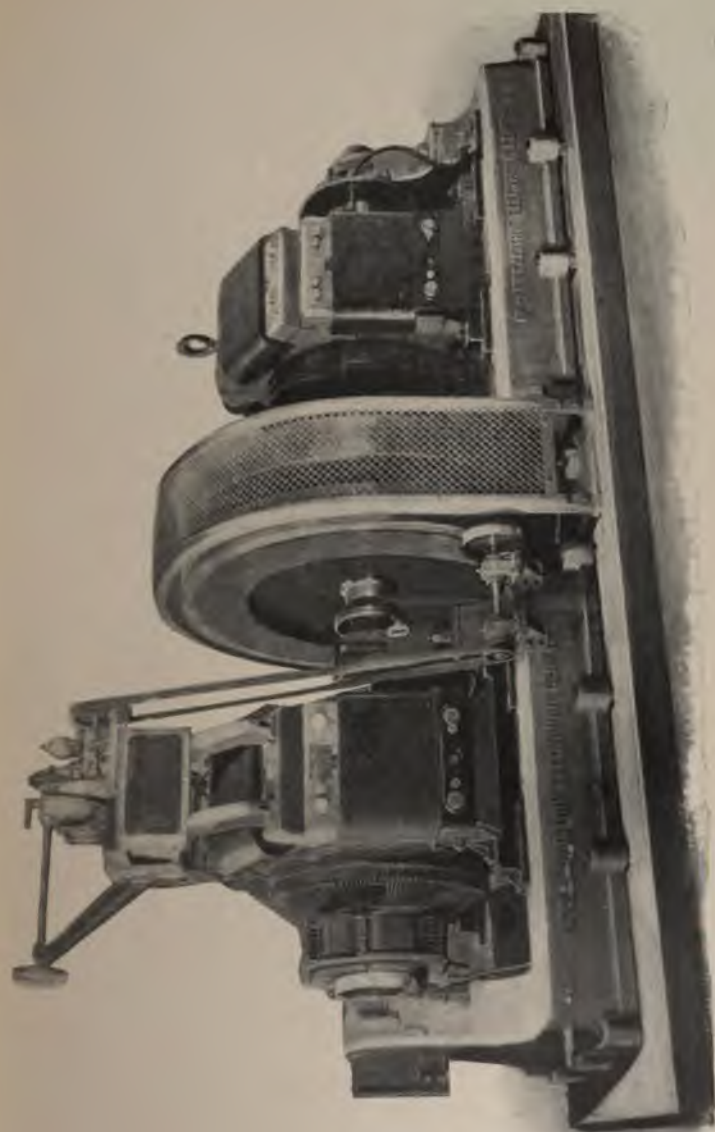


PLATE II.

THE NEW YORK
PUBLIC LIBRARY

ASTOR, LENOX
TILDEN FOUNDATIONS

armatures, and are series wound. Regulation is by automatic variation of the speed of the turbines, the normal full load speed being 300 r. p. m. The line is overhead, of cables having a cross section of about 300,000 cm., bare except in the towns where the power is delivered—Locle, and La Chaux-de-Fonds at the end of the line. Motors aggregating 2,400 HP are in circuit at these points, 2,000 HP being used in the transforming stations. All motors above 20 HP are upon the high tension circuit. The substation at La Chaux-de-Fonds is typical of the methods employed. It is equipped with motor-generators of 200 HP working a three wire system at 320 volts between the outside wires. One of the motor-

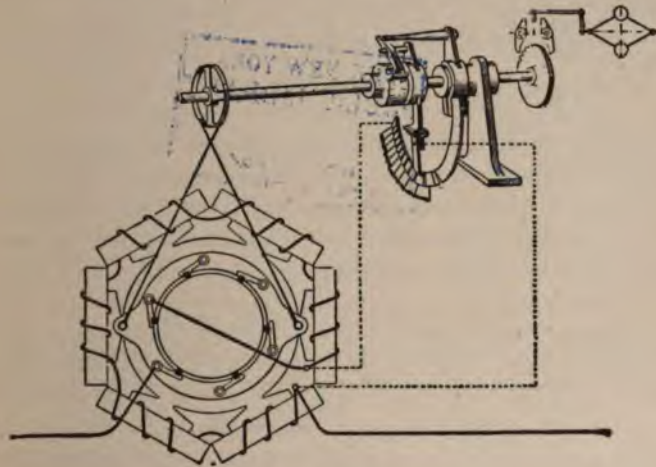


FIG. 40.

generator units is shown in Plate II. It is composed of two six pole machines with a fly-wheel between them. The machine to the left is the motor and upon it is mounted the automatic speed regulator. The principle upon which this works is shown in Fig. 40. The regulating shunt around the fields and the brush shifting mechanism are simultaneously actuated by the dogs thrown into gear by the governor. This form of governor is very generally used for the motors upon the system.

The efficiency of both generator and motor under test has been shown to be 93.5 per cent., or 87 per cent. for the complete unit. Similar motor-generators in connection with a storage battery furnish current at 550 volts for railway service.

Now the drop in the line at full load is 6 per cent., so that we are in position to make a very close estimate of the efficiency of the system from waterwheel to low tension mains. It is obviously

$$93.5 \times .94 \times .87 = 76.5 \text{ per cent.}$$

This is a very creditable figure for the total efficiency, and it is worth while comparing it with the results ordinarily reached in polyphase working. Taking the generator at 94 per cent., the raising and reducing transformers at 97.5 per cent. each, the line at .94 and the distributing banks of transformers at 96.5, we have

$$.94 \times .94 \times .975 \times .975 \times .965 = .81.$$

The difference is substantially that due to the difference in efficiency between the static transformers and the motor generator. If the comparison be made with the railway part of the proposition, assuming the use of a rotary converter the case would stand about as follows:

$$.94 \times .94 \times .975 \times .975 \times .94 = .79.$$

In the simple case of large motors the advantage lies rather the other way, for the constant current plant would show

$$.935 \times .94 \times .935 = 82.1$$

against, for the alternating plant,

$$.94 \times .94 \times .975 \times .975 \times .94 = .79.$$

This merely indicates that after passing the voltages which can be derived directly from the armature, more is lost in the transformers than is gained in a low voltage winding. The figures for the efficiency of the alternating plant are taken from actual data on machines of about the capacity concerned. To tell the unvarnished truth, at voltages of 15,000 or more a constant current transmission coupled with a three wire distribution at 220 to 250 volts on a side is capable of giving even the best alternating system a pretty hard rub. In this country no constant current power transmission machinery is avail-

able, but where it is readily to be had, it is by no means out of the game. A constant current transmission plant is now under construction for service between the falls of the Rhone at Saint-Maurice, and Lausanne, a distance of 34.8 miles. The first installation is of five pairs of generators aggregating 3,300 KW, giving at full load a combined voltage of 22,000. The current in this case is to be 150 amperes, as in the Combe-Garot plant just described.

POWER TRANSMISSION AT CONSTANT POTENTIAL.

The transmission of power to series-wound motors at constant potential is a branch of the art which as regards stationary motors has been developed only in special cases. It is, however, the method universally employed for electric railway work. One or two sporadic efforts have been made to operate electric railway systems at constant current, but with such indifferent success that the method has been abandoned. Counting in electric railways, it is safe to say that at present the majority of all electrical power transmission in the world is done with series motors worked at constant potential or as nearly constant potential as may be practicable. As before mentioned, regulation is generally obtained through the use of rheostats in series with the motors, thereby cutting down the applied voltage, or by throwing the motors either in parallel or in series with each other, or in the third place by a combination of the above methods. Concerning the operation of motors thus arranged, sufficient has been said to explain the situation clearly. The general good properties of the method are most prominently exhibited in the simplicity of the motor windings and the very powerful effort which can be obtained in starting the motors from rest. These properties are of extreme value in railway service.

Aside from the operation of electric railways, series motors at constant potential are frequently employed for hoists and similar work where a powerful starting torque and considerable range of speed at the will of the operator are desirable. In spite of the large use of motors for such purposes there are no plants either here or abroad which may be said to be operated exclusively after this method, for it is generally found desir-

able to combine in the same system series-wound motors for severe work and shunt-wound motors for purposes where uniform speed is of prime importance. As a rule the power transmission so accomplished is over a comparatively small distance and really involves the problem of distribution more than transmission alone. A very large number of electric hoists designed by different makers are in use at various points throughout this and other countries, doing service in mines, operating elevators of one kind or another, working derricks and traveling cranes and employed for a large variety of similar purposes. Many of the motors employed are of the railway type.

The voltage utilized for this work in America at least is usually either 200 to 250 volts or 500 to 600 volts, the former being most generally used in mines, where difficulties of insulation are considerable, or in operating motors supplied by three-wire systems already installed. The latter voltage is generally selected for work above ground. None of the plants so equipped are, however, sufficiently large or characteristic to be worth a detailed description. The power installation and the method of distribution are in general closely similar to those employed for electric railway work. Plants of higher voltage than from 500 to 600 are so infrequent as to be hardly worth considering in practical engineering. It is perfectly possible to wind series motors for voltages considerably exceeding this figure, say for 1,000 or 1,200 volts, or, in rare cases, more, provided the units are of tolerable size, but inasmuch as most plants for the distribution of power require both large and small motors, wound both series and shunt, the general voltage is in nearly every case kept at a point at which it will be easy to meet these varied requirements; therefore 500 volts, the American standard for railway practice, has usually been selected.

The only noteworthy exception may be found in the use of the Edison three-wire system for distribution of power to railway and other motors. By this method it becomes possible to transmit the power at the virtual voltage of 1,000 and to employ 1,000 volt motors, either series- or shunt-wound, for the larger units in order to help in preserving the general balance, while at the same time using motors of all sizes with

any kind of direct current winding, connected between the middle wire and either of the outside wires. The advantages of such an arrangement are very evident, and if the number of motors be considerable, so that it is possible to balance the system with a fair degree of accuracy, we have at our disposal a very convenient method for the distribution of continuous currents. It is interesting to note that this scheme found its first considerable development in electric railway service itself. Of course the use of both 110 and 220 volt motors on Edison three-wire systems is very common, but the extension of the plan to operating electric roads, and under conditions which as regards balance are somewhat trying, is a considerable step toward an individual method.

The method of working electric railways on the three-wire system is well shown in Fig. 41. Here the road is a double



FIG. 41.

track one, to which the method is generally best suited. The ground, track and supplementary wires serve as a neutral wire, both tracks being placed in parallel for this purpose and thoroughly bonded. On a double track road, the cars running on each side of the system will be substantially the same in number, and if the total number of cars be considerable, a very fair balance can be obtained, although never as good as is customarily and necessarily used in an Edison three-wire system for lighting. In order to still further improve the balance of the system and prevent its being disturbed as might otherwise occur by a blockade on one track at some point, it is better to make the trolley wire above each track consist of sections of alternate polarity and of convenient length, so that even in case of a blockade, stopping a

considerable number of cars, the load would be removed almost equally from both sides of the system.

Installed in this way, a railway system is operated at a virtual voltage of 1,000, and the saving of copper over the ordinary distribution at 500 volts is considerable in spite of the inevitable lack of balance, and the loss of the track as part of the main conducting system.

The three-wire method is not confined to double track roads, as even where only a single track is employed various sections or branches of it may be linked together to form a three-wire system. It is interesting to note that this plan has been in use in several American street railway plants during the past few years, notably at Bangor, Me., and at Portland, Ore. Apart from such railway service, the three-wire distribution has been very little used for power transmission purposes either here or abroad, but no particular difficulties are involved and it occasionally may prove a very serviceable method for the distribution of power over moderate distances.

INTERDEPENDENT DYNAMOS AND MOTORS.

Aside from the distribution of power for railway purposes, by far the most interesting kind of power transmission by continuous currents is that in which a special combination of two series machines is employed, giving a self-regulating system comprising a motor unit and a generator unit. This plan has been widely and successfully used abroad, but has not been employed in American engineering practice except in an experimental and tentative way, owing largely to the difficulties that have been encountered in the production of large direct-current generators for high voltage.

While it is not at all a difficult matter to build a machine giving five or six thousand volts with a rather small current, such as is used in arc lighting, the troubles at the commutator have proved forbidding when any attempt has been made to use currents large enough to obtain units of any considerable size. The whole subject of power transmission has been but recently taken up seriously in this country, all the energy of the electrical art being concentrated in lighting and railway work, and so far as the development has now taken place, it has been almost wholly in the line of alternat-

ing current work. It is quite obvious that a system of power transmission such as we are considering possesses very great convenience where single units are to be operated over relatively long distances. In the first place, the inductive difficulties familiar with alternating currents are avoided. In the second place, the motors are self-starting under load, a condition that has not been true of alternating machinery until the introduction of the polyphase system. Through the energy of several foreign engineers, notably Mr. C. E. L. Brown, much was done in power transmission by this method long before alternating current apparatus had been suitably developed. The same difficulties were encountered abroad as here. It proved to be very difficult to build machines of sufficient voltage and of any considerable output.

In this connection it is noteworthy that nearly all the plants of this character on the Continent have been installed at relatively low voltages, most of them less than 1,000, corresponding in general character to the American plants over similar distances worked at constant potential. In the very few instances where long distances have been attempted, the usual method has been to employ generators and motors permanently connected together in series, on account of the impracticability of getting sufficient power in one unit at a very high voltage. This proceeding somewhat complicates the system. In addition, the generators and motors have to be especially designed for each other in order to secure regulation; which, of itself, is a considerable disadvantage.

This last difficulty may be in part avoided by using a shunt around the field coils of the generator, thereby changing its regulation under variations of current. A similar device is widely used in this country in connection with compound-wound generators, where a shunt applied across the terminals of the series coils is used to regulate the compounding. In either case, the obvious result of such a shunt is to diminish the change in the field produced by a given increase in current. In this way the necessity for special machines can be partially obviated. The plants installed on this peculiar series plan have been uniformly successful, and permit of the convenient transmission of moderate amounts of power over considerable distances. Such plants have even been employed

in connection with motor-generators to supply a general distribution system, though evidently at a high cost for apparatus.

In order to distribute low tension currents from such a transmission system, it is necessary to employ either a motor, coupled to a dynamo, or a composite machine with a double winding, combining both functions. Either alternative involves the loss of energy substantially equivalent to that lost in two dynamo-electric machines of the capacities concerned. These losses are necessarily much more serious than those in an alternating current transformer. They are likely to amount to from 12 to 15 per cent., so that quite aside from the efficiency of the generating dynamo and of the line, the price paid for the privilege of obtaining a low tension current is considerable.

For the delivery of power alone, where motors in series coupled to appropriate generators can be used, the method is well fitted for use under certain circumstances and is closely approximate in efficiency to that which would be obtained by an alternating current transmission over the same distance. It is interesting to know that one of the longest lines over which electrical power to any considerable amount is transmitted is operated on this series direct current system. Many longer alternating transmissions are under construction, but only a few are yet in operation.

The plant in question is that which is used in operating the Biberst Paper Mills, near Soluere, Switzerland. The power is derived from the River Suze, near Bienne, and the distance of transmission is a little less than twenty miles. At the generating station the available head of water is about forty-five feet, and the quantity is sufficient to generate about 400 HP. The power station contains a 400-HP turbine running at 120 revs. per minute, of which the vertical shaft is connected by means of beveled gear to two 130-KW dynamos. They are six pole machines, Gramme wound, and give at 275 revs. per minute about 40 amperes at 3,300 volts. The two machines are connected in series, giving a working potential of 6,600 volts on the line. It should be noted that great care is taken in insulating them, the bed plates being carried on porcelain insulators. Carbon brushes are employed. The line is a bare

copper wire, 7 millimetres in diameter, about No. 1 B. & S. gauge. The line runs through a mountainous country, and is liberally provided with lightning arresters at various points.

The two motors at the mills are duplicates of the generators, the only modifications being those to insure their self-regulation. They run at 200 revs. per minute on 6,000 volts delivered, and give about 155 HP each. The commercial efficiency of this interesting system is somewhat in excess of 75 per cent. at full load. Fig. 42 shows one of the motors on

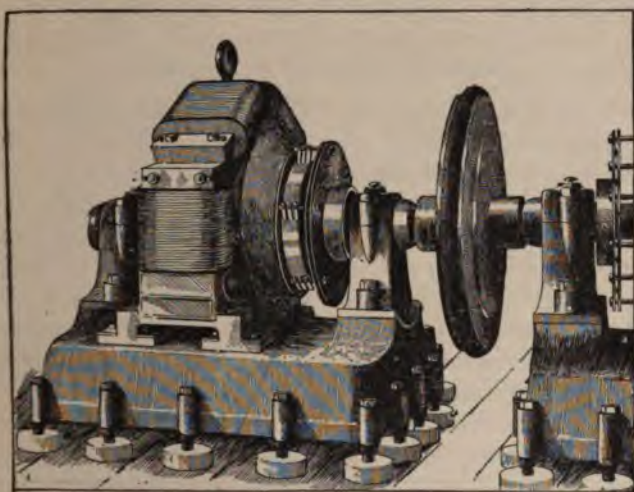


FIG. 42.

its foundation, and its coupling to its mate. This plant is the most striking example of long distance transmission by series-wound interdependent generators and motors, and probably exhibits the system at its best.

In this country the above system has not been used in anything more than an experimental way, owing principally to two reasons: first, for moderate distances, involving not more than 1,000 to 1,500 volts, shunt-wound generators and motors working on either the two-wire or three-wire systems afford better opportunity for distribution, inasmuch as their use is not limited to single mechanical units; second, no serious demand for long distance transmission arose in America

prior to the development of the alternating system to the point at which alternating motors became thoroughly practicable. It has been characteristic of American electrical engineering that it has occupied itself with one thing at a time. The development of the electric light was followed by a concentration of energy on the electric railroad, and this has only recently been succeeded by extensive power transmission enterprises, often in themselves involving railway work. Such a mental habit is not conducive to an even development, but probably accomplishes quite as much as a more symmetrical advance.

CONSTANT POTENTIAL SYSTEMS.

Shunt- or compound-wound generators used in connection with shunt-wound motors have found very extensive use in this country in transmissions over moderate distances. The very obvious advantage of such a system is that it permits the ready distribution of power as well as its easy transmission. If it becomes necessary to transmit power from one point to another, the chances are much more than even that at the distributing end of the line it will be desirable to utilize the power in a number of units of varying size. Such an arrangement bars out transmission from series dynamos unless upon the constant current system with its inherent difficulties of regulation, whereas with shunt-wound apparatus the problem is easy. It often happens, as previously mentioned, that at the receiving end both series and shunt motors are used, the former for hoisting and similar work, the latter for operation at constant speed.

The growth of the electric railway has encouraged the establishment of such transmission plants, and their number is very considerable, scattered over all parts of the Union, not a few of them being in the mining regions of the Rocky Mountains and on the Pacific coast, as well as in various isolated plants through the rest of the country. In most of them, the distances being moderate, an initial voltage of from 500 to 600 has been employed; more rarely, voltages ranging from 1,000 to 1,800. Such plants have been uniformly successful and have done sterling service for some years past. The efficiency of this method of transmission is about the same as that of the

series method, just described, but with the advantage that the shunt motor supplied at constant potential can advantageously be distributed wherever the work is to be done, while with interdependent series units any distribution of power has to be accomplished by means of shafting and belting or its equivalent.

The net efficiency from generator to driven machine is likely to be rather better with the transmission at constant potential than in the case just discussed. The generators and motors are of nearly the same efficiency; the line at ordinary distances is customarily worked at about the same pressure in both methods, but distribution by shafting is far less efficient at any but short distances than distribution of electric power by wire. The loss from the centre of distribution to individual motors will very seldom exceed 5 per cent., while the loss in equivalent shafting will seldom be less than 10 per cent., and more often 15 or more; in fact, it generally turns out upon investigation that so far as efficiency is concerned there is a noticeable saving in transmitting power electrically, even within the limits of a mill or large factory, over the results which can be obtained by the use of transmission by shafts and belts. In a large building where the power is to be widely distributed, it seldom happens that the loss in the shafting is less than 25 per cent. Anything in excess of this figure represents remarkably good practice. With motors, 80 per cent. efficiency, if the units are of tolerable size, can be reached without much difficulty, and there are comparatively few cases where the efficiency need fall lower than 75. In such a plant, recently installed in a Belgian gun factory, and described in the last chapter, the guaranteed efficiency was 76.6 per cent. As the efficiency of the dynamo was reckoned at but 90 per cent., the total efficiency would in practice be raised without difficulty to 78 or 79 per cent. at full load.

As regards efficiency in general, aside from the disadvantages previously mentioned in changing the voltage of direct current circuits, the efficiency of transmission by such currents is in itself as high as has ever been reached by other means. There is no material difference between the efficiency of direct and alternating current generators, nor between the efficiency of direct current motors and the polyphase motors, at least, among alternating motors. In these particulars, the direct

current is able to hold its own against all comers and in the cost of motors it has at present a material advantage.

As regards transmission of power over considerable distances, a case has already been mentioned in which the result is as good as can reasonably be expected. Direct current, however, continually runs into the limitation of available voltage as soon as distribution is to be attempted. Where single or a few large motor units are to be used, consisting of either single machines or groups operated as a unit, the efficiency of the system is likely to be as high as that obtained from units of similar magnitude on alternating current systems. The only disadvantage of the direct current in point of efficiency in this particular case is that if the amount of power to be transmitted be large, it is necessary to use generators and motors coupled in series, while if alternating currents were used, one would have the advantage of employing a single machine of equivalent capacity. The principal disadvantage of direct current machinery is the commutator, which at high voltages is likely to be sooner or later the source of considerable trouble. Careful mechanical and electrical construction may materially reduce this difficulty, but it always remains to be faced, and is liable at any time to become troublesome.

On long lines, the direct current has the advantage of producing no inductance in the line, an advantage, however, which does not apply to plants which can advantageously be operated as single units. Such a single unit system, arranged for alternating currents, can have the inductance of the circuit completely nullified by the simple expedient of strengthening the field of the motor.

It must be remembered, however, that in several particulars continuous current has peculiar advantages. In the first place, it is well known that a direct current is decidedly less dangerous than an alternating current of the same nominal voltage, so far as the question of life is concerned. The difference between the two is even greater than would be indicated by the difference in maximum voltage.

An alternating current has a maximum voltage of approximately 1.4 times its mean effective voltage, and in addition to this an alternating current is certainly intrinsically more dangerous by reason of the greater shock to the nervous

system produced by the alternations of E. M. F. The ease of transforming alternating current to a lower voltage partially obviates this objection, but the fact remains. So far as danger of fire is concerned, the continuous current has the power of maintaining a much more formidable arc than an alternating current of the same effective voltage; but, on the other hand, the alternating current has somewhat greater maximum voltage with which to start the arc, so that, practically, honors are even.

The increase of experience with resonance and kindred phenomena, acquired on long lines and at high voltages, has emphasized the fact that alternating transmission work is not exactly a bed of roses for the engineer, and when it comes to a question of transmission at 50,000 volts or so, difficulties multiply. At and above this pressure, there can be little doubt that insulation is a very difficult task, and there is equally little doubt that of two lines, one constant current and the other polyphase, transmitting the same energy at the same effective voltage, the former would be in trouble much less frequently than the latter. In the first case there are but two wires involved, while in the second there are certain to be three, and generally considerations of inductance would lead to not less than six in a plant of large size. And when the point is reached where insulation is a costly matter the extra wires and precautions are likely to outweigh any intrinsic saving in copper. The constant current plant, too, always has the advantage that it is only working at its maximum voltage during the peak of the load and the rest of the time has a very considerable factor of safety.

Whether the increased cost and complication of the generating station of a constant current system can be endured for the sake of these advantages is a matter open to discussion; it certainly cannot be answered in the negative offhand, however. The continuity of service possible in an alternating plant at 50,000 volts and above is an unknown quantity, and in the absence of data upon this point one is not justified in estimating the importance of an alternative method.

It is a mistake, however, to suppose that the considerably increased maximum voltage in an alternating current involves much greater danger of leakage, or of breaking down insula-

tion under all circumstances. Under many conditions it is highly probable that the electrolytic strain from continuous current on insulating materials, particularly when damp, is more destructive than the added electrostatic strain of an alternating current. Within any voltages now regularly employed, the total difference is probably immaterial. In the matter of one of the great dangers to an overhead line and apparatus, *i. e.*, injury from lightning, direct current has a very material advantage in that it is possible to use coils of considerable self-induction in connection with such circuits, so as to keep oscillatory discharges, like lightning, out of the machines. This is well shown in the singular freedom of arc lighting stations from serious damages to the machines by lightning, as compared with stations containing other kinds of electrical apparatus. In this case the magnets of the arc machines themselves act as a powerful inductance, tending to throw the lightning to earth. High voltage, shunt-wound dynamos and alternators are much more sensitive in this respect.

Consequently, part of the price one has to pay for the privilege of utilizing alternating currents is extra care with respect to protective devices against lightning. In the present state of the art, the best field for combined transmission and distribution of power by continuous currents is in cases involving distribution over moderate distances, within, say, a couple of miles from the centre of distribution, and even then in problems where lighting is not an essential part of the work. The voltage of a lighting circuit is determined by the voltage of the lamps which can be employed upon it, and this is so limited that if lighting is to be done on the same circuit as power distribution there are few cases where such a combined system can be successfully used with continuous currents. The field seems at present to be somewhat widened by the advent of 3-wire systems at 220 to 250 volts on a side, but their place in the art is hardly yet secure, although their use is extending.

At all long distances continuous current is at a disadvantage in point of available voltage where distribution is to be done, and has in most cases no very material advantages for single unit work. It will require considerable further advance in

dynamo building to render continuous current thoroughly available for high voltages, and even then only in units of moderate size, say 300 to 400 KW. In this lies its weakness. Its strength is largely in its present firm foothold in electrical practice, and in the fact that standard apparatus of this kind is available everywhere and is manufactured cheaply in large quantities by numerous makers. It is, furthermore, interchangeable to a degree which will never be true of alternating-current machinery until there is far greater unity in alternating-current practice than we are likely to have for some years to come.

CHAPTER IV.

SOME PROPERTIES OF ALTERNATING CIRCUITS.

WE have already seen in Chapter I that the current normally produced by a dynamo-electric machine is an alternating one, so that a continuous current exists in the external circuit only in virtue of the commutator. Until within the last decade the original alternating current was utilized to but a trivial extent. Nevertheless it possesses certain properties so valuable that their practical development has wrought a revolution in applied electricity.

To describe these properties with any degree of completeness would require several volumes the size of the present, and would involve mathematical considerations so abstruse as to be absolutely unintelligible to any save the professional reader. We shall therefore at the very start drop the academic methods of treatment and confine ourselves, so far as possible, to the physical facts concerning those properties of alternating currents which have a direct bearing on the electrical transmission of energy. This discussion will therefore be somewhat unconventional in form, although adhering rigidly to the results of experiment and mathematical theory. The student who is interested in the exact development of this theory will do well to consult the excellent treatises of Fleming, Mascart and Joubert, Bedell and Crehore, and Steinmetz, all of which are full of valuable demonstrations.

The fundamental differences between the behavior of continuous and of alternating currents lie in the fact that in the former case we deal mainly with the phenomena of a flow of electrical energy already steadily established, while in the latter case the phenomena of starting and stopping this flow are of primary importance. These differences are akin to those which exist between keeping a railway train in steady motion over a uniform track, and bringing it up to speed from a state of rest. In steady running the amount of, and the

variations in the power needed, depend almost wholly on the friction of the various parts, while in starting both the power and its variations are profoundly affected by the inertia of the mass, the elasticity of the parts, and other things that cut little figure when the train is up to a uniform speed.

The characteristic properties of alternating currents are due mainly to the starting and stopping conditions, and are only incidentally affected by the circumstance that the flow of current alternates in direction. As, however, this alternating type of current is in general use and its uniform oscillations give the best possible opportunity for observing the effect of repeated stops and starts, we will look into the generation of alternating current, not forgetting that for certain purposes we shall

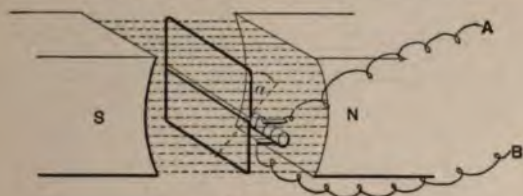


FIG. 43.

have to recur to the phenomena of a single stop or start in the current.

Fig. 43 shows an idealized generator of alternating currents. It is composed of a single loop of wire arranged to turn continuously in the space between the poles of a magnet. This space is a region of intense electromagnetic stress directed from pole to pole, as indicated by the dotted lines. The two ends of the loop are connected to two insulated metallic rings connected by brushes to the terminals *A* and *B* of the external circuit. We have already seen that what we call electromotive force appears whenever the electromagnetic stress about a conductor changes in magnitude. Now in turning the loop as shown by the arrow, the electromagnetic stress through it changes, and of course sets up an electromotive force. In the initial position of the loop shown in Fig. 43, it includes evidently the maximum area under stress; after it has turned through an angle α , this area will be much lessened, and when $\alpha = 90^\circ$, the loop will be parallel to the plane of the electromagnetic stress and hence can include none of it at all.

But the resulting electromotive stress is, other things being equal, proportional to the rate at which work is expended in uniformly turning the coil; *i. e.* it is proportional to the *rate of change* in the electromagnetic stress included by the coil. This rate is, during a single revolution, greatest when the sides of the loop are moving directly across the lines of stress, and least when moving nearly parallel to them. Hence we see from Fig. 43 that the electromotive force in our coil will be a maximum when $\alpha = 90^\circ$ or 270° and a minimum in the two intermediate positions. For a simple loop it is easy to compute exactly the way in which the electromotive force will vary as the loop turns. The area of strain included by the coil in any

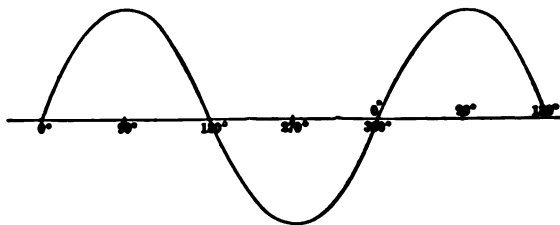


FIG. 44.

position is proportional to the cosine of the angle α , hence for uniform motion the rate of change in the area is proportional to the sine of α . Therefore the E. M. F. at every point of the revolution is proportional to sine α .

If now we draw a horizontal line and measure along it equal distances corresponding to degrees, and then, erecting at each degree a line in length proportional to the sine of that particular angle, join the ends of these perpendiculars, we shall have an exact picture of the way in which the E. M. F. of our loop rises and falls. Fig. 44 is such a curve of E. M. F.—a so-called “sine wave,” which is expressed by the equation, $E = E_s \sin at$.

This simple form of E. M. F. curve—the “sine wave”—is assumed to exist in most mathematical discussions of alternating current to avoid the frightful complications which would result from assuming such E. M. F. curves as often are found in practice. This assumption is somewhat rash, for a true sine wave is never given by any practical generator, but the error does not often invalidate any of the conclusions, for the exact

form of the wave only matters in discussing certain cases, where it can often be taken into account without much difficulty.

Actual alternating generators give curves of E. M. F. greatly influenced by the existence of an iron armature core which collects the lines of force so that as the core turns the change of stress through the armature coils is not directly proportional to anything in particular. A glance at the rudimentary dynamo of Fig. 8, Chapter I, will suggest the reason. It is evident enough that the armature could turn almost 30° from the horizontal with scarcely any change in the magnetic relations

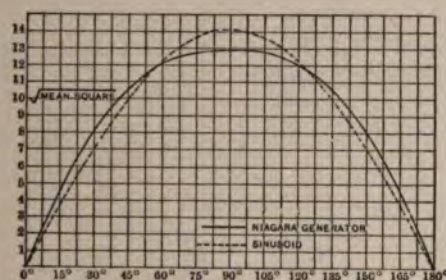


FIG. 45.

of the coils. The result would be a wave with a very flat and depressed top, since the rate of change of induction would be very moderate when it should be considerable. The practical bearings of wave form on power transmission work will be taken up in the next chapter. At present it will suffice to say that the best standard alternators give a fairly close approximation to the sine form. Fig. 45 shows the E. M. F. curve of one of the great Niagara generators. This is an excellent example of modern practice and shows a form slightly flatter than the sine curve and with a mere trace of depression at the crest. Plenty of machines are in operation, however, that give curves not within hailing distance of being sinusoidal—*e. g.* Fig. 46, which shows the E. M. F. curve of one of the earliest alternators designed for electric welding. In this case there is a far sharper wave than the sinusoidal, of a curious toothed form. Many of the early alternators with ironclad armatures gave curves quite far from the sine form, generally rather pointed, while the tendency in recent machines has been rather in the opposite

direction, toward curves like Fig. 45, although seldom so nearly sinusoidal. The general equation for their E. M. F. is,
 $E = E_1 \sin at + E_3 \sin 3 at + E_5 \sin 5 at + \dots + E_{2n-1} \sin (2n-1) at$.
 In other words the E. M. F. is built up of the fundamental frequency and its *odd harmonics*.

Now as to the current produced by this oscillating electro-motive force. In ordinary work with continuous currents, the

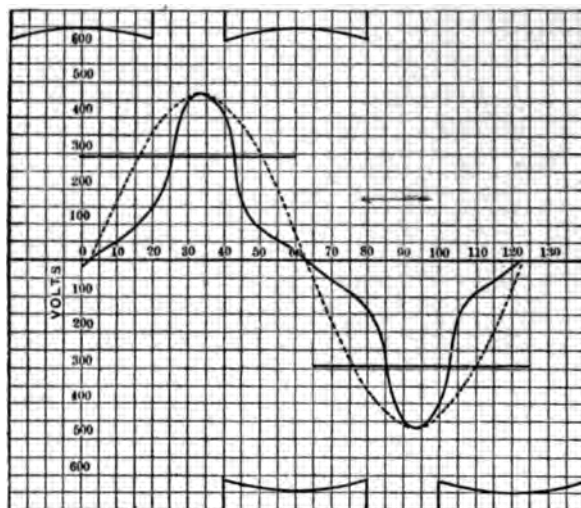


FIG. 46.

current corresponding to each successive value of the E. M. F. would be very easy to determine by simple reference to Ohm's law, $C = \frac{E}{R}$. If the dynamo of Fig. 43 gave one volt maximum E. M. F. and were connected through a simple circuit of one ohm resistance the maximum current would be one ampere, and the current at all points would be directly proportional to the voltage. Hence if the E. M. F. varied as shown in Fig. 44, the current would vary in precisely the same manner and the curve showing its variation would, if drawn to the same scale, exactly coincide with the curve of Fig. 44. This would be generally true if we had only resistance to consider, and the treatment of alternating currents would then be very simple.

But the starting and stopping of current which takes place periodically in alternating circuits produces great changes in the electromagnetic stresses about the conductors, and these changes are in turn capable of very important reactions. They give to the alternating current its most valuable properties, but also involve its action in very curious complications.

Turn back to Chapter I and examine Fig. 4. We see from it that whenever the electromagnetic stresses about a circuit as *A*, change by the variation of the current flowing in it, an E. M. F. is set up in the parallel circuit *B*, opposing the change of E. M. F. in *A*. This fact, as we shall see later, is the root of the alternating-current transformer. Suppose now that in the circuit of our alternator is a coil of wire wound in

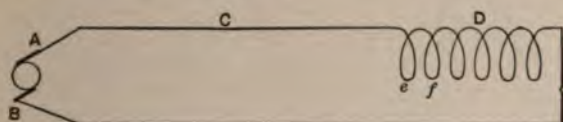


FIG. 47.

close loops as shown in Fig. 47. Here *A* and *B* are the dynamo terminals, *C* the general circuit and *D* the aforesaid coil. Let an E. M. F. be started in the direction *A C D*. The resulting current flows through *D*, but the electromagnetic stresses set up by the current about for instance, the loop *e*, produce an E. M. F. in neighboring coils tending to drive current in a direction opposite to that from the dynamo. In other words *e* acts toward *f* just as *A* acted toward *B* in Fig. 4. Thus each turn tends to oppose the increase of current in the others. When the current in *C* ceases to vary, of course the reactive E. M. Fs. in *e* and *f* stop, for there is for the moment no change of stress to produce them, but as the main current begins to decrease, the reactive E. M. Fs. set in again.

The main or "impressed" E. M. F. is thus opposed in all its changes by the reactive or "inductive" E. M. F. due to the combined action of the loops at *D*. Hence the impressed E. M. F. in driving current through the system has to overcome, not only the resistance of the conductors, but opposing electromotive forces. Therefore since a part of the impressed

E. M. F. is taken up with neutralizing the inductive E. M. F., only the remainder is effective against the true resistance of the circuit. Ohm's law, then, cannot apply to alternating circuits in which there is inductive action, except in so far as we deal with the "effective" E. M. F. The relation between the impressed E. M. F. and the current is not $C = \frac{E}{R}$ but $C = \frac{E}{R}$ less a quantity depending on the amount of inductive E. M. F. encountered.

This state of things leads to two very important results: First, the current in an inductive circuit is less than the impressed E. M. F. would indicate. Second, this current

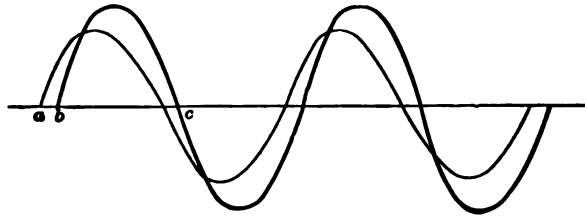


FIG. 48.

reaches its maximum later than the impressed E. M. F. For the current depends on the effective E. M. F., and for each particular value of this the impressed E. M. F. must have had time to rise enough to overcome the corresponding value of the inductive E. M. F. The current is thus damped in amount and caused to lag in "phase" as shown in Fig. 48. The heavy line here shows the variations of the impressed E. M. F. and the light line the corresponding variations of current in a circuit containing inductive reaction—*inductance*. The distance $a b$ represents the "angle of lag," while $b c$ is 180° as shown in Fig. 44. Very similar relations are found in practice, although the lag is often greater than shown in the cut, particularly when alternating motors are in circuit. Fig. 49 shows the curves of E. M. F. and current from a very small alternating motor at the moment of starting. The angle of lag in this case is a trifle over 45° , and the curves are much closer to sine waves than is usual.

The inductive E. M. F., as has already been explained, is due

to the magnetic changes produced by the variation of the current. Just as in the dynamo of Fig. 43, the actual amount of E. M. F. is directly proportional to the rate of change in magnetic stress, which is in turn proportional to the change of current. The inductive E. M. F. is therefore at every point proportional to the rate of variation of the current. But the current wave is, like the impressed E. M. F. wave, still approximately a sine curve, for it has been merely shifted back through the angle of lag and although damped it has been

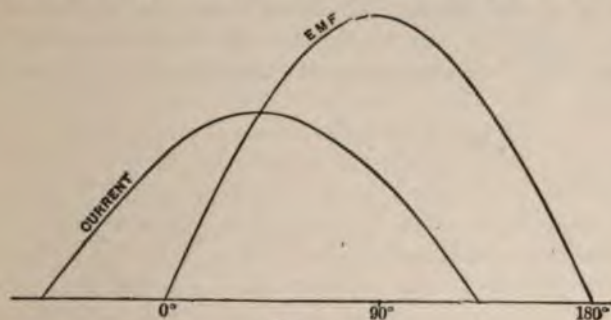


FIG. 49.

simply changed to a different scale. Being still essentially a sine curve its rate of variation is a cosine curve, or what is the same thing a sine curve shifted backward a quarter period, 90° . Indeed this is at once evident, for since the current varies most slowly at its maximum, the inductive E. M. F. must be a minimum at that point, *i. e.* it must be 90° behind the current in phase, while since E. M. F. and current vary symmetrically, in general the forms of the two curves will be similar. The effective E. M. F. which is actually engaged in driving the current is a wave in phase with the current it drives and of similar shape, *i. e.* a sine curve.

We have then in an inductive circuit three E. M. Fs. to be considered:

- I. The impressed E. M. F., acting on the circuit.
- II. The inductive E. M. F., opposing I.
- III. The effective E. M. F., the resultant of I. and II.

Plotting the respective curves, they bear to each other the relation shown in Fig. 50. Here *a* is the impressed E. M. F., *b* the effective E. M. F. (or the current) lagging behind *a*

through an angle usually denoted by φ , and ϵ is the inductive E. M. F. 90° behind b . Now since b is the resultant of the interaction of a and ϵ , and we know that b and ϵ are 90° apart in phase, it is comparatively easy to find the exact relation between the three.

For we can treat electromotive forces acting at known angles with each other just as we would treat any other forces working conjointly. If for example we have a force AB , Fig. 51, acting simultaneously with a force BC , at right angles to it, the magnitudes of the forces being proportional to the lengths of the lines, the result is the same as if a single force in magnitude and direction AC were working

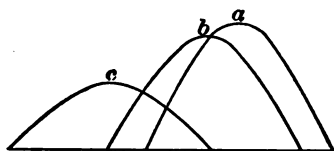


FIG. 50.

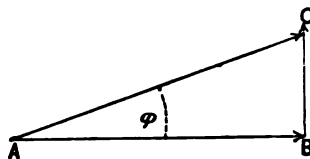


FIG. 51.

instead of the two components. This is a familiar general theorem that proves particularly useful in the case in hand.

If we take AB equal to the effective E. M. F. and BC equal to the inductive E. M. F., then AC is the impressed E. M. F. It at once appears that the angle between AB and AC is φ , the angle of lag. Then from elementary trigonometry it appears that

$$AB = AC \cos \varphi$$

$$CB = AC \sin \varphi = AB \tan \varphi, \text{ hence}$$

$$\tan \varphi = \frac{CB}{AB}.$$

We are therefore in a position to determine the three E. M. Fs. and the angle φ , knowing any two of the four quantities. Thus for a given impressed E. M. F., E , such as is found on any constant-potential alternating circuit, the effective E. M. F. which determines the current is given by $E \cos \varphi$. As φ grows less and less through decrease of the inductive E. M. F., AC , the impressed E. M. F. necessary for a given current, also decreases, and finally when φ becomes

zero, $AC = AB$. In other words the impressed E. M. F. is then simply that needed to overcome the ohmic resistance.

For any particular current, then, AB is directly proportional to the resistance of the circuit, while CB is directly proportional to the "inductance" of the circuit, that property of the particular circuit which determines the inductive E. M. F. Calling this I we may redraw Fig. 51 in a very convenient form—Fig. 52. Here we see the relation between R and I in determining the impressed E. M. F. necessary to drive a certain current through an inductive circuit. The magnitude of the E. M. F. evidently is $\sqrt{R^2 + I^2}$ if the units of measurement are chosen correctly, and it is always proportional to this quantity, which is related to the impressed E. M. F. as resistance is to the effective E. M. F.

Hence $\sqrt{R^2 + I^2}$ has sometimes been called "apparent resistance." The more general name, however, is impedance, which indicates the perfectly general relation between E. M. F. and current. If I be zero, as in a continuous-current circuit, then the impedance becomes the simple resistance. We can now write out some of the general relations of current and E. M. F. in alternating circuits as follows, calling E the impressed E. M. F. as before:

$$C = \frac{E}{\sqrt{R^2 + I^2}}$$

$$E = C \sqrt{R^2 + I^2}$$

and with respect to the angle of lag,

$$\sqrt{R^2 + I^2} = \frac{E}{C}$$

$$I = R \tan \varphi$$

$$\tan \varphi = \frac{I}{R} .$$

Hence knowing the angle of lag and the resistance of a circuit the inductance can be found at once. The angle of lag, depending on the ratio of I and R , must be the same for all circuits in which this ratio is the same. Also in

any circuit of given inductance increasing the resistance diminishes the angle of lag, while of course also diminishing the current for a given value of E . In fact since I does not represent work done, for the inductive E. M. F. represents merely a certain amount subtracted from the impressed E. M. F. by the reaction of the circuit, any process which for a given value of E increases the energy actually spent in the circuit is accompanied by a diminution of the angle of lag.

This freedom of the circuit from any energy losses due to I is a fact of the greatest importance. It is fully borne out by experiment and there is besides good physical reason for it. For since current and E. M. F. are the two factors of electrical energy there can be no energy when the product of

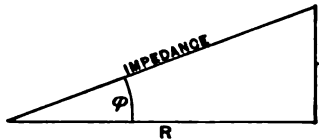


FIG. 52.

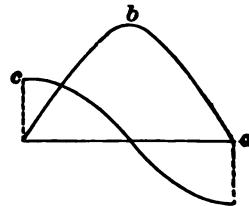


FIG. 53.

these factors is zero. Note now Fig. 53, developed from Fig. 50. Hence a is the line of zero E. M. F. and current, b the current curve for a single alternation, and c the corresponding curve of inductive E. M. F. 90° behind the current. When b is a maximum c is zero and *vice versa*. And since c is equally above and below the zero line during each alternation of current, the average inductive E. M. F. is zero and the average energy throughout the alternation is zero. The same conditions would evidently continue if instead of an alternation we took a complete cycle (*i. e.* the whole curve from the time the current starts in a given direction until it starts in the same direction again) or any number of cycles. Thus I must be entirely dropped out of consideration in discussing the question of work done in an alternating circuit. And since E differs from E_1 , the effective E. M. F., only by a function of I , the energy value of which is zero, the energy in the circuit is exactly measured by E_1 and the corre-

sponding current which, as we have seen, is in phase with it.

But

$$E_1 = E \cos \varphi.$$

Hence multiplying both members of this equation by C to reduce to energy,

$$\text{Energy} = C E_1 = C E \cos \varphi.$$

That is, the energy in an alternating circuit is equal not to the impressed E. M. F. multiplied by the current but to their product multiplied by the cosine of the angle of lag. The product $C E$ is sometimes called the *apparent* energy to distinguish it from $C E_1$, the actual energy. This apparent energy is that obtained by measuring the amperes and the impressed volts and taking their product. The real energy is that which would be obtained by putting a wattmeter in circuit. Hence

$$\frac{\text{watts}}{\text{volt-amperes}} = \cos \varphi,$$

a convenient and common method of measuring the angle of lag. If in addition the value of I is wanted it can be obtained at once from the expression for tangent φ already given.

We thus see that the energy in an inductive circuit is not directly proportional to the voltage as measured but to the effective voltage, which is less by an amount depending on the inductance. This difference is sometimes referred to as the "inductive drop" in a circuit. The result is that to drive a given current through an inductive circuit the generator must give a voltage depending on the impedance of the circuit. On the other hand if an inductive circuit be fed from a given impressed E. M. F. the current required to represent a given amount of *energy* exceeds that required in a non-inductive circuit in the ratio of 1 to the cosine of the angle of lag. The net result, then, of inductance in an alternating circuit is to increase the E. M. F. at the generator required to produce a given E. M. F. at the load, and to increase the current required to deliver a given amount of energy.

The E. M. F. and current are here supposed to be measured in the ordinary way, by properly designed voltmeters

and ammeters. In power transmission work inductance in the circuit (line or load or both) means that the dynamo has to give voltage enough to overcome the impedance of the system and still to deliver the proper number of volts at the motor, while the motor will take extra current enough to compensate for the lag between the E. M. F. at its terminals and the resulting current.

The dynamo thus has to be capable of giving a little extra voltage and the motor must be able to stand a little extra current. In other words both machines must have sufficient margin in capacity to take care of this matter of lagging current.

We have already seen the general relation between resistance, inductance, and impedance. Let us now look into the quantity last mentioned so as to see its numerical relation to the others. If a circuit has a certain resistance in ohms and a given inductance, what is its impedance, *i. e.* the ratio between the measured voltage and the measured current?

The real question involved is the value of the inductive E. M. F. This, like any other E. M. F., is proportional to the rate of variation of the electromagnetic stress which produces it. Its total magnitude depends on the rate of variation of the current and the ability of this current to set up stresses which can affect neighboring conductors as in Fig. 43. This latter property depends on the number of turns, their locality with reference to each other, and other similar conditions which depend simply on the physical nature of the circuit and so for any given circuit are settled once for all. These properties are defined on the basis of their net effect, and the *ratio* of the rate of variation of the current to the inductive E. M. F. produced by it in a given circuit is usually known as L , the "coefficient of self induction" of that circuit. The total inductive E. M. F. is then equal to L , multiplied by the actual rate of current variation expressed in such units as will fit the general system by which E , R and other quantities are concordantly measured.

Expressed in this way the rate of current variation in an alternating circuit is $2 \pi n$, where n is the number of *cycles per second*, and π has its ordinary meaning of 3.1416. Hence the inductance of the circuit is numerically $2 \pi n L$, the last factor being dependent on the nature of the circuit and denoting

the inductance per unit rate of current variation. The $2\pi n$ factor gives the actual rate of current variation, which may change to any amount, while L remains fixed. L therefore may at all times in a given circuit be expressed in terms of any unit that is conveniently related to other electrical units.

Such a unit inductance is the *henry*, which is the inductance corresponding to an inductive E. M. F. of 1 volt when the inducing current varies at the rate of 1 ampere per second.

If therefore L for any circuit is known in henrys the total inductance I is $6.28 n L$.

We are now ready to apply a numerical value to I in Fig. 52 and the resulting equations.

For example let us suppose that a certain alternating circuit has a resistance of 100 ohms and $L = 0.1$ henry. The im-

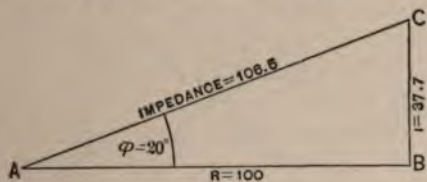


FIG. 54.

pressed E. M. F. is 1,000 volts. What will be the current and its angle of lag? Lay off AB Fig. 54, 100 units long. Then at B , to the same scale erect a perpendicular BC , $2\pi n L$ in height. If we are dealing with an alternating circuit of 60~ per second, such as is often used for power transmission, $2\pi n L$ will be 37.7 units high. Now join AC and the resulting length on the same scale is the impedance in ohms. But $AC = \sqrt{R^2 + I^2} = \sqrt{100^2 + 37.7^2} = 106.9$ nearly. And since the current equals the impressed E. M. F. divided by the impedance, the current in this case would be 9.36 amperes instead of the 10 amperes due if there had been no inductance.

And since $\tan \phi = \frac{I}{R}$ it is here .377, which corresponds to an angle of $20^\circ 40'$.

Also, since $E = C \sqrt{R^2 + I^2}$, we can readily find the impressed E. M. F. required to produce in this circuit any given current. For $C = 10$ amperes, $E = 1,069$ volts and so on.

We have seen that $\cos \phi = \frac{\text{watts}}{\text{volt-amperes}}$ so that in the

case in hand where $\cos \varphi = .936$ the actual energy in the circuit is 93.6 per cent. of that indicated by the readings of voltmeter and ammeter.

This factor, $\cos \varphi$, connecting the apparent and the real energy, is known as the "power factor" of the circuit.

As $I = R \tan \varphi$, and in any given case φ is known, L can readily be obtained from a measurement of lag in a circuit of known resistance. It must be remembered, however, that if the inductance is due to a coil having an iron core, the value of L will change when the magnetization of the iron changes, so that results obtained with a certain current will not hold exactly for other currents. The values of L found in practice cover a very wide range from a few thousandths of a henry in

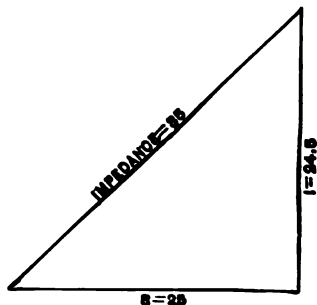


FIG. 55.

a small bit of apparatus like an electric bell, to some hundreds of henrys in the field magnets of a big dynamo. L in fact is nearly as variable as R .

As a practical example in inductance effects we may consider the effect of alternating current in a long straightaway circuit. Suppose for example we have a circuit 50,000 ft. long composed of No. 4 B. & S. copper wires. The wires are about 1 ft. apart and about 20 ft. above the ground. What voltage will be required to deliver 10 amperes through this circuit at 130 cycles per second, and what will be the angle of lag? The resistance of this wire is 0.25 ohms per 1,000 ft. L , its coefficient of induction, is .0003 henry per 1,000 ft. The total resistance of the circuit is then 25 ohms and its total inductance, $I, = 6.28 \times 130 \times .03 = 24.5$. Plotting as before these values, in Fig. 55 we have the impedance equal to

$\sqrt{25^2 + 24.5^2} = 35$ ohms. Hence E must be 350 volts instead of the 250 that would suffice in the case of continuous current.

$\tan \phi = \frac{24.5}{25} = .98$. The corresponding angle is $44^\circ 25'$.

The ratio of impedance to resistance in this case is 1.4:1. This ratio, often called the impedance factor, is a very convenient way of treating the matter, and tables giving its value for common cases will be given later. In case of apparatus being connected to the circuit, the computation of its effect is easy. If it has resistance R^1 and inductance L^1 then the total impedance of the circuit will be $\sqrt{(R + R^1)^2 + (L + L^1)^2}$ and so on for any number of resistances and inductances, the impedance being always equal to the square root of the squared sum of the resistances plus the squared sum of the inductances. Thus an inductance added anywhere in circuit changes the total impedance and the angle of lag.

There are several ways of looking at inductance, according as one wishes to deal more particularly with inductive E. M. F., the changes in electromagnetic stress which produce it, or the energy changes which accompany it. The first point of view is the one here taken, in accordance with the definition of the henry just given. Hence the henry may be called unit inductance, in which case the quantity L which we have been considering measures the inductive E. M. F., and since it is the product of the inductance for unit rate of current change multiplied by $2\pi n$, it is sometimes referred to as *inductance-speed*, now conventionally termed *reactance*.

In alternating-current working inductance may easily become quite troublesome, through the "inductive drop" in the line and the necessity of sometimes delivering a current quite out of proportion to the energy. Thus in alternating-current lighting plants during the hours of daylight when the actual load is small, the current may be of quite imposing size from the lag produced by the inductance of the unloaded transformers in circuit. The sort of thing which happens may readily be figured out. Suppose we are dealing with a transformer or other inductive apparatus having a resistance of 5 ohms and $L = 1$ henry. The impedance at 60 ~ will then be $\sqrt{5^2 + (6.28 \times 60 \times 1)^2} = \sqrt{25 + 376.8^2} = 377.8$ ohms, substantially the same as the inductance alone, and under an

impressed E. M. F. of 1,000 volts the resulting current would be 2.65 amperes. But $\tan \varphi = \frac{377.8}{5} = 75.56$. Hence $\varphi = 89^\circ 15'$ and $\cos \varphi = .013$. Therefore while the apparent energy is $2.65 \times 1,000 = 2,650$ watts the real energy is only $2,650 \times .013$ watts = 34+: really the loss due to heating the conductor. This is of course a very exaggerated case, as it takes no account of the energy that would be required to reverse the magnetization in whatever iron core the apparatus might have. It does, however, show very clearly that the current flowing depends practically on the inductance and very little on the resistance, and that the angle of lag is so great that the dis-

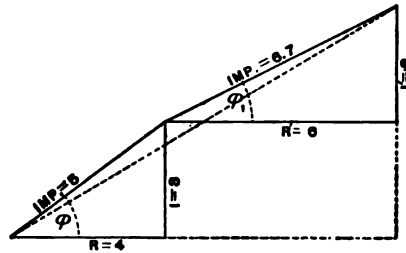


FIG. 56.

crepancy between apparent and real energy may also be very great. In practice $\cos \varphi$ may fall as low as 0.1 on single pieces of apparatus and ranges up under varying conditions of load to .95 or more.

These practical considerations naturally raise a question as to the effect of impedances in parallel. The joint impedance of two impedances in series must first be discussed.

The resistance of two resistances in parallel is of course familiar. If $R = 2$ ohms and $R' = 4$ ohms, then their joint resistance is the reciprocal of the sum of their reciprocals, thus,

$$(R + R') = \frac{1}{\frac{1}{2} + \frac{1}{4}} = 1 \frac{1}{3} \text{ ohms.}$$

We have seen, however, that impedances cannot be added in the ordinary manner. If we take two impedances made up respectively of $R = 4$, $X = 3$, and $R' = 6$, $X' = 3$, we must proceed as in Fig. 56. The first impedance is 5, the second 6.70.

The true impedance of the two in series is given by the dotted lines and is 11.66, not 11.70. That is, the impedances must be added geometrically, since unless $\phi = \phi_1$ the arithmetical sum of the impedances does not represent the facts in the case. Similarly, while it is perfectly true that the joint impedance of two impedances in parallel is equal to the reciprocal of the sum of their reciprocals, the summation must be done as in Fig. 56 to take account of the difference of phase which may exist in the two branches. Taking the data just given, the reciprocals of the two impedances are .20 and .149 respectively. Drawing these on any convenient scale as in Fig. 57, preserving between them the angle due to the difference of phase as given by ϕ and ϕ_1 , we find the geometrical sum of the reciprocals




FIG. 57.

to be .348, of which the reciprocal is 2.87. This is the joint impedance of the two which we have thus geometrically added.

This same process can be extended to any number of impedances in parallel. It is important to note that since the currents in such cases are generally not in phase with each other, it usually happens that the sum of the currents in the branches differs from the current in the main circuit, as they are ordinarily measured. At any particular instant, however, there is strict equality between the whole current and its parts, the inequality appearing when the complete cycles with their phase differences are considered. It is in fact a prominent characteristic of alternating circuits that both currents and voltages are liable to violate all the traditions of continuous-current practice in a way apparently very erratic. Particularly is this the case when there is *capacity* in the circuit, a condition which we will now investigate.

By a circuit having capacity we mean one so constituted that E. M. F. applied to it stores up energy in the form of electrostatic stress, which starts this energy back in the form of current when the constraining E. M. F. is removed.

Such a condition exists whenever two conductors are separated by an insulating medium, or dielectric, as in

the ordinary condenser of Fig. 58. Here *A* and *B* are two metal plates separated by a layer, *C*, of some insulating material. If now these plates are connected to the terminals of a dynamo they become electrostatically charged. The electrostatic stress tends to draw the plates together and in addition sets up intense strains in the dielectric *C*, rendering potential thereby a certain amount of energy which flows into the apparatus in the form of electric current. This energy is returned as current if the original electromotive stress is removed and *A* and *B* are connected together. The medium behaves just as if it were a strained spring, and when it returns its energy to the circuit it does so spring-fashion with rapid

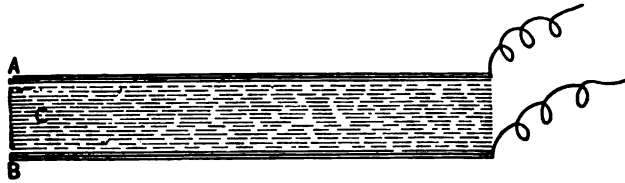


FIG. 58.

oscillations, dying out the more slowly the less resistance they encounter.

The capacity of such a condenser is the quantity of energy which it can store up as electrostatic strains in *C*. It is proportional to the area of the plates, to the E. M. F. producing the strains, and to the "dielectric constant" of *C*, that is, the coefficient which for that particular substance measures its power to take up electrostatic strains. Oddly enough the capacity decreases as *C* grows thicker, indicating that the intensity of the strain is the thing which counts rather than the volume of dielectric. Without knowing the exact character of electrostatic strain it is difficult to get a clear mechanical idea of the state of things which causes the energy stored to increase as the thickness of *C* diminishes. A similar condition, however, holds for a wire held tightly at one end and twisted at the other; the shorter the wire the more energy stored for a given angle of twist.

As in the case of inductance, for practical purposes the unit of capacity is taken in terms of unit pressure, *i. e.*, one volt. Unit capacity then, in terms of energy, is the capacity of con-

denser in which one watt-second can be stored under an electromotive stress of one volt. This capacity is one *farad*, and as it is many thousand times larger than anything found in practice $\frac{1}{1,000,000}$ of it (the *microfarad*) is more often used.

When a condenser is used with an alternating current the rate at which energy is stored and delivered evidently increases with the frequency, or what is the same thing, for a given alternating E. M. F. the greater the frequency the greater the *current* received and delivered by the condenser.

Numerically the current in a condenser of capacity k farads, supplied by an E. M. F. of e volts at n cycles per second is

$$C = 2 \pi n e k,$$

which is simply the current due to e volts and k farads multiplied by the frequency expressed in angular measure. Thus if we have a 2 *microfarad* condenser fed by an alternating E. M. F. of 2,000 volts and 130 cycles per second the current flowing is

$$C = \frac{2,000 \times 6.28 \times 130 \times 2}{1,000,000} = 3.26 \text{ amperes.}$$

In such an alternating circuit then there will be a substantial current flowing in spite of the fact that there is a break in the conductor at the condenser. In short the circuit acts as if it had a resistance of $\frac{2,000}{3.26} = 613$ ohms, which is the impedance of

the circuit. More exactly the impedance is $\frac{1}{2 \pi n k}$. It should be noted here that some writers refer to this fundamental condenser function $(2 \pi n) k$ as capacity-speed. Capacity-impedance really is a *negative reactance*, often termed *condensance*.

To see the relation which this capacity-impedance bears to other impedances in the circuit it is necessary to look into the properties of the E. M. F. of the condenser. As energy is stored in the condenser the opposing stresses in it increase until the applied E. M. F. can no longer force current into it and the condenser is fully charged. At the moment, then, when current ceases to flow, the E. M. F. of the condenser tending to discharge it is at a maximum. Hence since the

one has a maximum as the other is zero, the E. M. F. of the condenser and the charging current are 90° apart in phase.

But the inductive E. M. F. is also 90° from the current, and as we have seen, lagging. It has its maximum when the current is *varying most rapidly*, and when the strength of current in a given direction is increasing, the inductive E. M. F. in the same direction is diminishing, as shown in Fig. 53. As regards capacity, however, the moment of maximum condenser E. M. F. in a given direction is that at which the current thereby becomes zero, so that as the current changes sign it has behind it the thrust of the full E. M. F. of the discharging condenser, while at the same moment as we have just seen the opposing inductive E. M. F. is at its maximum. Hence the E. M. F. of the condenser has a maximum in one direction when the inductive E. M. F. has its maximum in the other direction. The two are thus 180° apart in phase, and each being 90° from the current, the condenser E. M. F. must be regarded as 90° ahead of the current, just as the inductive E. M. F. is 90° behind it.

The condition of affairs is shown in Fig. 59. Here *aa* is the line of zero current and E. M. F. All quantities above this line may be regarded as +, and all below it as -; *b* is a + wave of current to which appertains *c* the curve of inductive E. M. F. lagging 90° behind the current, and *dd* the condenser E. M. F., leading the current 90° .

It is evident that these two E. M. Fs. always are opposing each other—when one is retarding the current the other is accelerating it and *vice versa*.

The condenser E. M. F. has no effect on the total energy of the circuit for the same reason that held good in respect to Fig. 53; it is obviously akin to a spring, alternately receiving and giving up energy, but absorbing next to none.

Capacity may be considered as *negative* inductance in many of its properties. If, as in Fig. 59, it is in amount exactly equivalent to the inductance, the total effect on the circuit is as if neither capacity nor inductance were in the circuit. In such case it is as if *CB*, Fig. 51, should be reduced to zero. The impressed E. M. F. then becomes equal to the effective E. M. F., the angle of lag vanishes and the circuit behaves as

if it contained resistance only. If the condenser E. M. F. is not quite large enough to annul the inductance it simply reduces it.

Fig. 60 illustrates the effect of varying amounts of capacity. In the main triangle $A B C$, the sides have the same

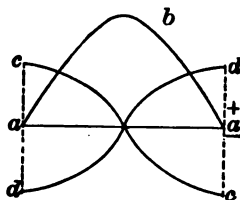


FIG. 59.

signification as in Fig. 51. Since the capacity E. M. F. is 180° , from, *i. e.*, directly opposite to, the inductive E. M. F., the effect of adding the capacity E. M. F. $C D$, is to reduce the effective inductance to $B D$ and give as an impressed E. M. F. $A D$ and an angle of lag ϕ . Now increasing $C D$ to equal $C B$, the inductance is annulled, ϕ becomes zero, and the impressed

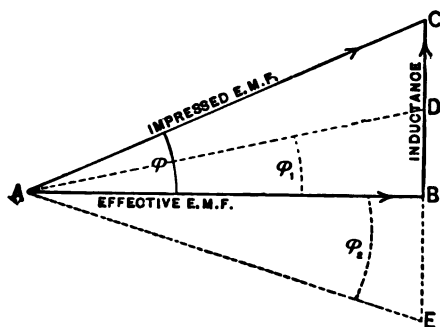


FIG. 60.

and effective E. M. Fs. are the same. Then increase $C D$ still further so that it becomes $C E$. Now the inductance $C B$ not only is neutralized but is replaced by a negative inductance $B E$. The angle of lag now becomes an angle of lead, ϕ_1 , the necessary impressed E. M. F. rises to $A E$, and the circuit behaves as regards the relations between current, E. M. F., and energy, just as it did when affected by inductance. There is the same discrepancy between real and apparent energy, the

same necessity for more current to represent the same energy. But adding inductance now decreases the angle of lead. From a practical standpoint capacity by itself is objectionable, but capacity in a line containing inductance is sometimes a very material advantage.

The nature and reality of this curious phenomenon of "leading" current in an alternating circuit may be appreciated by an examination of Fig. 61. This shows the actual curves of current and E. M. F. taken from a dynamo working on a condenser in parallel with inductance. The maximum of the current wave is very obviously in advance of the maximum of the E. M. F. wave, though by a rather small amount

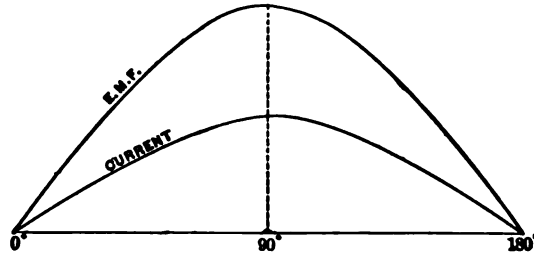


FIG. 61.

(actually about 6°). The capacity in this case was between 2 and 3 microfarads.

Treating capacity as a negative inductance enables us to compute its effects quite easily. We have already seen how to reckon the impedance of a condenser; using the word impedance here in its proper sense of apparent resistance by whatever caused. This quantity we can add geometrically to the ohmic resistance of a circuit and obtain the net impedance just as in Fig. 54. We must bear in mind, however, that the capacity E. M. F. is 180° from the inductance E. M. F., though each is at right angles to the effective E. M. F. which is concerned with the ohmic resistance.

Instead then of computing the total impedance as $\sqrt{r^2 + I^2}$, it becomes $\sqrt{r^2 + \left(\frac{1}{2\pi n k}\right)^2}$, the second term under the radical being the square of the apparent resistance due to the capacity, just as I^2 expressed the square of the apparent resistance due to inductance.

Suppose for example we have a resistance of 100 ohms in series with a condenser of 4 microfarads capacity. The impressed E. M. F. is 2,000 volts at 130 cycles per second.

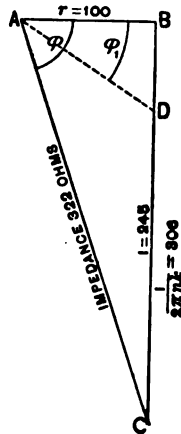


FIG. 62.

What is the total impedance, the resulting current, and the angle φ , in this case an angle of lead? Here

$$2\pi nk = \frac{6.28 \times 130 \times 4}{1,000,000} = .003266$$

$$\frac{1}{2\pi nk} = 306,$$

Laying off the resistance AB in Fig. 62 as in Fig. 54 and drawing $\frac{1}{2\pi nk}$ to the same scale at right angles (downward to emphasize its opposition to the inductance of Fig. 54), we have for the length of the diagonal AC , which represents the total impedance, $\sqrt{100^2 + 306^2} = 322$ ohms. The current flowing is then, 6.21 amperes. The angle φ is determined as before by $\tan \varphi = \frac{306}{100} = 3.06$, whence $\varphi = 72^\circ$, $\cos \varphi = .309$, so that we are dealing with a "power factor" like that produced by a heavy inductance, although the current leads the E. M. F. instead of lagging behind it. If we consider an

inductance in series with this circuit, we should have to reckon it upward in Fig. 62, thereby subtracting it from the former length BC .

Suppose for example for the given inductance $L = .3$ henry. Then $I = 2 \pi n L = 245$. If in Fig. 62 we draw 245 on the scale already taken, upward from C , we shall reach the point D . BD therefore is 61, and AD , the resulting impedance, is $\sqrt{100^2 + 61^2} = 117$ ohms. The new current is therefore $\frac{2,000}{117} = 17.09$ and as $\tan \phi_1 = .61$, $\phi_1 = 31^\circ.5$, being still an angle of lead.

It is easy to see that for a certain value of L , the capacity effect and inductance effect would exactly balance each other.

This value is obviously $2 \pi n L = \frac{1}{2 \pi n k}$, since then in Fig. 62, $BC - CD = 0$, and the impedance and resistance are the same thing, while ϕ becomes zero.

In actual circuits the capacity is seldom in series with the inductance. It is usually made up of the aggregated capacity of the line wires with air as the dielectric, the capacity of any underground cables that may be in circuit, and finally the capacity of the apparatus, transformers, motors, and the like, that may be in circuit. Generally the major part of the total inductance is in the apparatus rather than the line, and hence in parallel with the capacity. In many cases nearly all the inductance and capacity is due to the apparatus, and the two may be regarded as in parallel substantially at the ends of the line. The inductance of generators and transformers may amount to several henrys, while their capacity is by no means small, though very variable, like the inductance. For example, the capacity of a large high-voltage generator or transformer may often amount to several tenths of a microfarad. Armored or sheathed cable has a capacity of from a quarter to a half microfarad per mile. Altogether one may expect to find a capacity of several microfarads not infrequently and considerable fractions of a microfarad very often.

Suppose now we have in parallel a capacity A , Fig. 63, of 2 microfarads, and an inductance of .5 henry, the resistance connected with each being insignificant. Assuming as before 2,000 volts and 130 cycles, what is the total impedance of the com-

bination, and the resulting current? We have already seen how impedances in parallel are to be treated. In the case in

hand the impedance of A is $\frac{1}{6.28 \times 130 \times .000,002} = 613$ ohms, and that of B is $6.28 \times 130 \times .5 = 408$ ohms. Now remembering that in adding impedances their geometrical sum is to be taken and that joint impedance is the reciprocal of the geometrical sum of the reciprocals of its components, we can proceed as follows: The reciprocal of 613 is .00163. This we will lay off to any convenient scale just as in Fig. 57. As it is capacity-impedance we will draw it downward for the sake of uniformity, making AB , Fig. 64. Now take the inductance.




FIG. 63.

The reciprocal of 408 is .00245. As the inductance and capacity E. M. Fs. are here as before at an angle of 180° , we must draw this upward from B , giving us the distance BC . The geometrical sum is then $AC = .00082$, of which the reciprocal gives the resultant impedance as 1,219 ohms. Hence

the net current in the line under 2,000 volts is $\frac{2,000}{1,219} = 1.6$

ampere. But under the same pressure the current in A would obviously be 3.26 amperes and that in the inductance B would be 4.90 amperes. We have then the curious phenomenon of a total current in the line smaller than that through either of the two impedances in circuit. It is as if A and B formed a local circuit by themselves in which the condenser A served as a species of generator. It is quite evident that the total energy of the system, however, is that due to the current in the line, so that the phases in A and B are greatly displaced. If the resistances in the circuit were quite negligible the net current in the line would be indefinitely small when $A = B$,

that is, when $L = \frac{1}{k}$. Of course, however, the true impedances of both A and B are modified by the resistances, however small,

so that in Fig. 64 the impedances will always be at a small angle with the E. M. Fs. instead of being coincident. Hence the net current can never become zero, though when the impedances of *A* and *B* are large compared with the resistances, the line current will be very small when $L = \frac{1}{k}$.

This case is in sharp contrast to that in which condenser and inductance are in series with each other. For then the line current is increased as L approaches $\frac{1}{k}$ instead of becoming smaller relatively to the branch currents, although in each case the same relation between capacity and inductance gives




FIG. 64.

the maximum "power factor" on the circuit, since whatever the current, under this condition it depends most nearly on the resistance alone. When the resistance is quite perceptible in comparison with the impedances of *A* and *B*, we should form a resultant impedance with each, and then combine the two somewhat as in Fig. 56.

If then we have an inductive load of any kind in circuit, a condenser in parallel therewith will reduce the current on the line and thereby increase the "power factor" of the system. It does this, too, without any material loss of energy and without necessarily increasing the amount of current flowing through the inductance under a given E. M. F. on the line. Were condenser and inductance in series the power factor could likewise be improved up to a certain point, but trouble would be encountered in that the condenser would necessarily have

to be large enough to let pass enough current to supply the energy required in the inductance at full load.

In all practical cases the relations between resistance, capacity and inductance which have just been set forth, are somewhat modified by the existence of losses of energy in the circuit quite apart from these due merely to overcoming of resistance. Energy is required to reverse the magnetization of the iron cores of inductance coils, and to reverse the electric strains in the dielectric of condensers. It therefore happens that with a condenser in circuit the condenser current is not

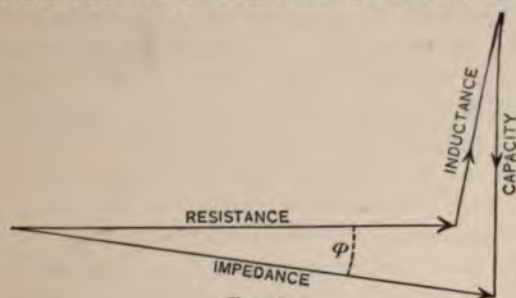


FIG. 65.

exactly 90° ahead of its impressed E. M. F., as shown in Fig. 59, but a trifle less, so that the current has a small component in phase with its E. M. F., thus supplying the energy in question. The deviation from 90° is generally but a small fraction of a degree. The same sort of thing happens when an inductance having an iron core is in circuit. However small the resistance, the lag still misses 90° by enough to take account of the energy required for magnetic losses. The variation from 90° in this case may amount to 30° or more. Hence the failure to take account of these energy losses in the example given on page 137.

It therefore comes to pass that in practically figuring the relations between resistance, capacity and inductance, one apparently deals with oblique-angled triangles. The result is that in adding inductance and capacity effects one seems not to get so simple results as in Fig. 64, but something more like Fig. 65. Here it is clear that no combination of capacity and inductance can leave the circuit free from everything except resistance, for both the inductance and the capacity demand energy

in the circuit beyond that expended in the resistance. Evidently, however, ϕ may be reduced to zero if the relation between capacity and inductance is just right. Thus while the lag may be reduced to zero, no combination can dodge the energy losses.

Closely connected with this subject is the matter of resonance, which will be taken up in connection with the discussion of the line. Briefly the phenomenon is this: We have seen that the E. M. F. of a condenser is a maximum when the current is zero, so that as the current changes sign the thrust of the condenser E. M. F. is behind it. Now if the condenser E. M. F. synchronizes with this current, the impressed E. M. F. is added to it, imposes an added stress on the condenser during the next alternation, catches therefrom an additional kick as it passes through zero again, and so on. Thus the net effective E. M. F. is raised by the action of the condenser and would increase enormously but for its being frittered away in overcoming resistance and supplying such energy losses as we have just been considering. By avoiding these losses as far as possible one can actually raise the voltage on an alternating circuit to twenty-five or thirty times its nominal amount by employing a condenser of the proper capacity. Even when the impressed E. M. F. and the current are not quite in phase, one has always a component of the condenser E. M. F. tending to act in a similar manner. Whether it actually produces a sensible rise of voltage depends on its relations to the frequency and resistance with which it has to deal. In fact it is the addition of this same condenser E. M. F. to the circuit that enables one to neutralize inductive E. M. F. Whether or not the neutralization of inductance by capacity produces a real resonant rise of voltage depends on the frequency and whether the energy losses are small or large. If they are small enough to let the sum of the impressed and the condenser E. M. F. accumulate during several alternations there will be a noticeable increase of voltage, otherwise not.

The dynamics of resonance may perhaps be best understood by a very pretty mechanical analogue due to Dr. Pupin. The apparatus on which it is based is shown in Fig. 66. It is a torsional pendulum composed of a heavy bar *A* suspended by a *stiff* elastic wire *B*, from a light circular bearing plate *C*

This plate rests in a recess *a*, with a frictional resistance which can be regulated by the screw shown in the cut. Such an apparatus acts much like an electric circuit, having inductance, capacity and ohmic resistance. The moment of inertia of the bar *A* corresponds to self-induction, the elasticity of *B* to condenser capacity as we have just noted in connection with Fig. 58, and the friction of *C* to the resistance. Moreover, if *I* is the moment of inertia of the bar *A*, and *B* the reciprocal of the elastic capacity of the wire, then within certain values of the frictional resistance the oscillation period of the pendulum thus formed is, in seconds,

$$T = 2\pi \sqrt{I B}.$$

This corresponds most beautifully to the time constant of an electric circuit, which is, if the energy losses are within certain limits,

$$T = \frac{2\pi}{1000} \sqrt{L C},$$

wherein *L* is in henrys, *C* the capacity in microfarads, and the denominator comes from the units being thus chosen.

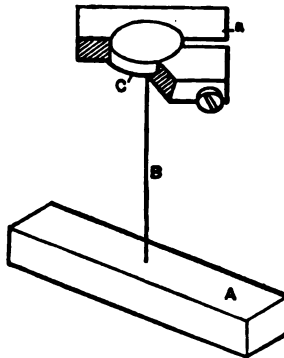


FIG. 66.

Now if this pendulum be given a twist it will oscillate at constant frequency until the friction gradually brings it to rest with oscillations of steadily decreasing amplitude. If, however, at the end of each complete swing it should receive a slight push, its oscillations would continue and would increase in amplitude up to a limit set by the frictional resistance.

The condition for such permanent increase of amplitude is that the *frequency* of the pushes must coincide with the period of the pendulum. In the electrical case, resonance thus occurs when the frequency and the time constant of the circuit are equal. Further, maintaining our auxiliary pushes at their original frequency, suppose I to be decreased by taking weight off A progressively. As the time constant of the pendulum thus diminished a point would be found, and that very soon, at which resonance would cease, and the same result would follow increase of I , so that when the circuit begins to get out of tune the resonance soon becomes rather trivial. If, however, the pushes were supplemented by others of 3, 5, 7, etc., times the frequency, corresponding to the harmonics found in an ordinary alternating circuit, new points of resonance would appear when the period of A assumed corresponding values.

As to the magnitude of the resonant effect, in the torsional pendulum case the amplitude evidently increases with the strength of the pushes, their absolute frequency, which measures the energy supplied, and the moment of inertia of A , which stores this energy. It decreases in virtue of the frictional resistance. Corresponding reasoning holds in the electrical case, and to a first approximation the E. M. F. in a resonant circuit is

$$E' = \frac{n L}{R} E,$$

in which E is the impressed E. M. F. concerned, L the inductance in henrys, R the resistance in ohms, and n the frequency. In case of resonance with harmonics, n and E refer to the frequency and magnitude of the harmonic implicated, and E' becomes a resonant component of the E. M. F. wave. This subject will be discussed more at length in Chap. XII.

We have now looked into the most important characteristics of alternating currents—those concerned with the phenomena of inductance and capacity.

It remains to note very briefly some other physical peculiarities that are of practical importance.

The most important single property of alternating current

is the ease with which it can be changed inductively from one voltage to another. If a circuit carrying such a current is put in inductive relation with another circuit as in Fig. 4, Chap. 1, the electromagnetic stresses set up by the first circuit can be utilized to produce alternating current of any desired voltage in the second circuit. The details of the operation will be taken up later; suffice it to say here that it is essentially the transformation of the electromagnetic energy due to one circuit into electrical energy in another circuit.

Alternating currents can be regulated in amount by putting inductance in the circuit without losing more than a very trifling amount of energy. This very property, however, is troublesome when an alternating current is used for magnetizing purposes. It is very difficult to get a large current to flow around a magnet core because of the high inductance, and even then the magnetic and other losses in the core are serious unless great care is taken. These difficulties have stood in the way of getting a good alternating motor until within the past few years, and even now such motors have to be designed and constructed with the greatest care to avoid trouble from inductance and iron losses. For some classes of work, such as telegraphy and electrolytic operations, the alternating current is ill suited save under special conditions and with special apparatus. For the general purposes of electrical power transmission it is singularly well fitted, from the great ease with which transformations of voltage can be made, certain very valuable properties of the modern alternating motor, and the great simplicity and efficiency with which regulation can be effected. In addition there is some reason to believe that with equally good regulation of the voltage, incandescent lamps are subject to slightly less deterioration on an alternating circuit than when worked with continuous current. This difference becomes very conspicuous in the case of the recently introduced Nernst lamp.

CHAPTER V.

POWER TRANSMISSION BY ALTERNATING CURRENTS.

BROADLY considered, we may say that all systems of transmitting power by alternating currents are closely akin in principles and characteristics. The growth of the art, however, has proceeded along several lines, and certain conventional distinctions have come to be observed in considering the methods employed for rendering the alternating current applicable to the working conditions of power transmission.

Alternating systems are usually classified as either monophase or polyphase. By the former term is generally understood a system generating, transmitting and utilizing a simple alternating current such as shown in diagram in Fig. 44. By the latter is meant a system generating, transmitting and utilizing two or more such currents differing in phase and combined in various ways. As regards the systems, this distinction is sufficiently sharp, but as regards individual parts of such systems the line of demarcation is sometimes hazy, since a monophase current may be the source of derived polyphase currents, and on the other hand polyphase currents may be so combined as to give a monophase resultant. Mixed systems involving unsymmetrical phase relations may properly be called *heterophase*.

As regards apparatus, any device that performs all its functions in a normal manner when deriving all its energy from a simple alternating current should be classified as monophase. If its functions require the co-operation of energy received from two or more alternating currents differing in phase, the apparatus is essentially polyphase.

For certain purposes the one system is best adapted, for certain other purposes the other is most advantageous, but the underlying principles are the same, and the apparatus has much the same general properties.

The material of alternating transmission work may be classified as follows, the transmission line itself being reserved for

discussion in another chapter in connection with other line work:

- | | |
|-------------------|--------------------------|
| I. Generators. | III. Synchronous Motors. |
| II. Transformers. | IV. Induction Motors. |

After a tolerably careful examination of the practical properties of this apparatus in its various forms, we shall be able to appreciate its application to the electrical transmission of power under various circumstances. Subsidiary apparatus of all kinds will be referred to in its proper place, and the divers systems that have been exploited can best be considered after we have, in a cold-blooded sort of way, looked into the characteristics of their component parts.

Alternating power transmission is now going through the stage of development that is inseparable from the rise of a comparatively new art—the planting time of “systems,” if one may be allowed the simile. A little later we shall be able better to judge the quality of the crop. It is sufficiently certain already that the same sort of plant will not do equally well under all circumstances.

The principles of the alternating current dynamo have already been explained, but the constructional features of such machines are sufficiently distinct from those of continuous current dynamos to warrant examination in considerable detail.

The modifications peculiar to alternators are in general due to two causes; first, the general use of a fairly high frequency, and, second, the necessities of rather high voltage.

We have already seen that, while an ordinary continuous current dynamo fitted with collecting rings will give alternating current, the frequency is rather low. To secure a higher frequency it becomes necessary to increase the number of poles, the speed, or both. Increasing the number of the poles is the usual method employed, since continuous current dynamos are generally for the sake of keeping up the output operated at speeds as high as the conditions of economical use render desirable. So we usually find that for equal outputs alternators have many more poles. The general relation between poles, speed and frequency is,

$$n = \frac{p}{2} \frac{N}{60}$$

where p is the number of poles, N the revolutions per minute, and n the complete cycles per second.

For example, belt-driven continuous current dynamos of 100 to 500 kilowatts usually run at speeds from 600 down to 300, and have four or six poles, thus giving 15 to 20 cycles per second, while modern alternators of similar size and speed have from 12 to 24 poles, thus adapting them for a frequency of 30~ to 60~. Machines for the older frequencies of 120~ to 140~ were usually even more liberally provided with poles unless driven at speeds considerably above those mentioned. The general appearance and design of a typical modern alternator is shown in outline in Fig. 67. This is a 150-KW gener-

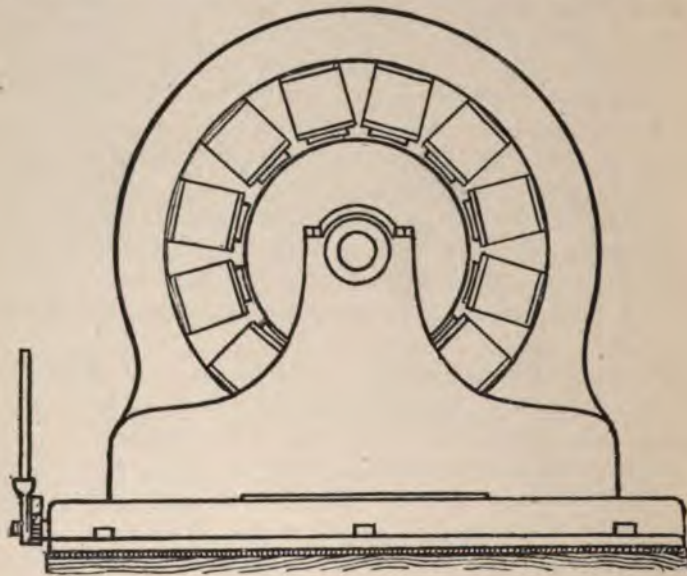


FIG. 67.

ator running at 600 revolutions per minute, and shows admirably the general characteristics of rather numerous poles, low base, and massive bearings that nowadays belong in common to machines by nearly all makers. Such alternators usually have very powerful field magnets, and the projecting pole-pieces are usually built up of iron plates like the armature, for the same purpose of preventing eddy currents in the iron. The ring of field magnets is split on the level of the centre of

the shaft, for convenience in removing the armature. The weight of belt-driven generators of the output named is usually in the neighborhood of seven tons.

This same general type is adhered to whatever the nature or voltage of the armature winding, save in the case of special machines.

The winding of a modern alternator is nearly always widely distinct from continuous-current windings. In alternators the voltage is generally from 1000 volts up, seldom below 500 volts, and to obtain this the windings corresponding to the numerous poles are almost universally connected in series instead of in parallel.

This necessitates specially connecting the armature coils in a very characteristic way. For when a given armature

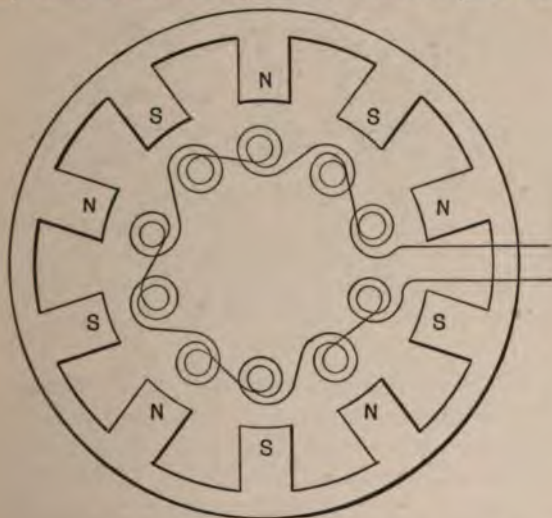


FIG. 68.

coil is approaching one of the north poles of the field magnet and is generating current in a given direction, the next armature coil is necessarily approaching the neighboring south pole, and if wound in the same direction as the first coil would generate a current flowing in the opposite direction. Hence if all the armatures coils are to be in series, they must be wound alternately in opposite directions, as shown in Fig. 68. This arrangement throws in series the E. M. Fs. generated by all the armature coils. Sometimes for convenience the halves of the armature are connected in parallel, thus giving

REGULATION OF POWER.

... by a simple change in
... such a winding for a
... collecting rings. Note
... the characteristics

... the armature coils are
... armature core. The
... built with smooth
... were laid and held in
... This construc-
... the principal manu-



... which
... and of
... roughly
... and
... very
... dif-
... Here
... They
... sit
... a
... them
... order
... standing

insulation permanently in place. The coils here shown consist of only four turns of heavy wire. Often there are many more turns per coil, and sometimes the round wire is replaced by rectangular bars. For use with raising transformers each coil sometimes consists of a single turn of bar copper, but whatever the nature of the coil the slots are arranged much as shown below.

Another excellent form of slotted armature is shown in Fig. 71. The coils are, as in the case just mentioned,

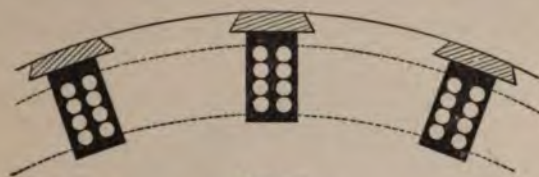


FIG. 70.

wound in forms and solidly insulated. They are then sprung over the armature teeth into place and tightly wedged. The slots are carefully insulated also, and by the time the winding is completely assembled it is so thoroughly insulated that repairs are few and far between. The special peculiarity of this form of core is that the outer corners of the teeth are cut away, so that the coils come more gradually into the field of

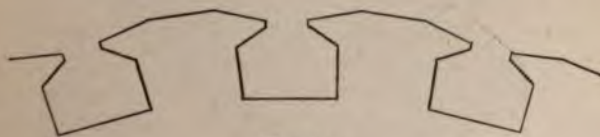


FIG. 71.

the pole-pieces than if the edges were sharp. The object of this device is to obtain a curve of E. M. F. more nearly according with the sine wave form, and experience shows that the plan works successfully. Without such precautions the E. M. F. curve is very likely to be quite irregular, and even with them it is generally none too smooth. The pole-pieces of alternators are very often rounded off or chamfered away for the same purpose.

Nearly all modern alternating windings are like those just

indicated, of the drum type. The Gramme winding is seldom or never employed, as it is hard to wind and repair and has, for alternators, no compensating advantages. Nor has the flat coil winding without iron core found a permanent place in American practice, although it is widely used abroad.

The flat coil is well exemplified in the form introduced by Ferranti, of which the armature is shown in Fig. 72. The thin coils revolve in the space between two opposite crowns of field magnets. The winding is connected as in Fig. 69, which not only enables the same armature to be reconnected for two voltages, but if extraordinary voltages are to be attempted,



FIG. 72.

keeps armature coils of widely differing potential far apart in the structure. The Ferranti type of armature, being without iron core, has a very low inductance, which property is often highly desirable. There is, however, considerable likelihood of eddy currents in the armature conductors unless they are individually very thin, and for this and obvious mechanical reasons American designers have adhered to the iron-clad armature,

which is admirable mechanically and magnetically, and have taken other means to get out of the difficulty of its high inductance.

As in other dynamos, the theoretical E. M. F. generated by an alternator depends on the strength of the magnetic field, the number of armature conductors under induction, and the speed at which they are driven through the field. As an alternator receives load the E. M. F. at its terminals is reduced by three several causes.

First, there is a loss of voltage due to energy lost in the armature conductors. This depends simply on the current and resistance and is numerically equal to CR .

Second, there is self-induction in the armature windings, which, as we have already seen, involves an inductive E. M. F., lagging 90° behind the impressed E. M. F. The effect of this is to partly neutralize the impressed E. M. F.,

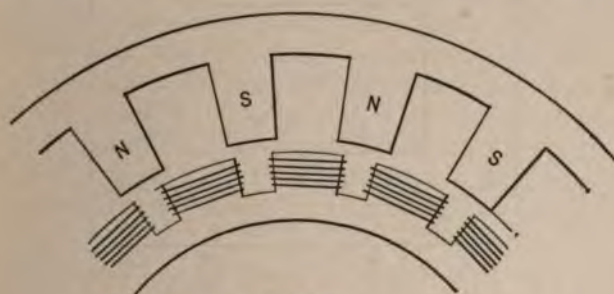


FIG. 73.

as in all cases of inductance. The amount of this disturbance depends on the frequency, and the magnetic relation of the armature coils to each other and to the field magnets. This relation of course varies according to the relative position of the armature teeth which carry the coils. In Fig. 73, purposely shown with somewhat exaggerated teeth, the armature is in the position of minimum inductance, for the magnetic field set up by the armature coils is not here much strengthened by the presence of the pole-pieces. If, however, the armature were shifted forward or backward so that each tooth would be just opposite a pole-piece, the field from the armature coils would traverse an almost complete loop of iron

and the inductance of the armature would be a maximum. In this position the armature teeth might be almost as good magnet poles as the field poles themselves; at all events, consecutive teeth would be united by an almost continuous iron core, and the armature inductance would be very high.

One of the best ways of reducing this inductance and its train of troubles is to make the magnetization due to the field magnets as strong as is practicable. This not only utilizes the iron of the field magnets and armature to the best advantage, but, so to speak, pre-empt its power of receiving magnetization so that the current about the armature teeth finds a poor field for its inductive operations. In addition, this strengthening of the field enables the required E. M. F. to be obtained

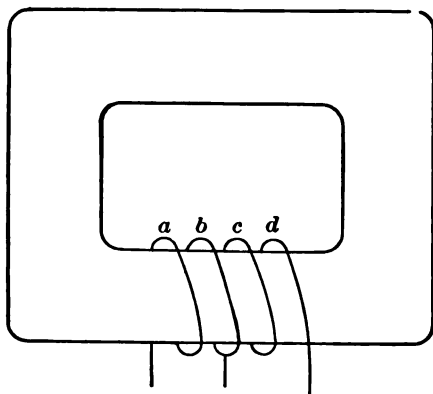


FIG. 74.

with fewer turns per tooth. This of itself is a great advantage, since increasing the number of turns in an iron-cored coil runs up the inductance with appalling rapidity. A glance at Fig. 74 will show the reason why. Suppose we have a looped iron core wound with four turns of wire, *a*, *b*, *c*, *d*. If we pass a certain alternating current around two turns, *a* and *b*, we shall have a certain inductance due to the reaction of the change in magnetism on these two coils. Now pass the same current around all four coils. The magnetization will be approximately doubled and the number of turns on which it acts will also be doubled. That is, each coil is acted upon by double the force and there are twice as many total

coils. Hence the total inductance will be about four times as great as at first, and in general it will increase with the square of the number of turns. If, however, as just suggested, the core is nearly saturated already, adding the two extra turns, c and d , will not anywhere nearly double the magnetization, since iron already magnetized responds less and less to additional magnetizing force as this force increases.

Hence, as we shall see later, diminishing the number of armature turns that can act conjointly in producing effective magnetization lowers the inductance very rapidly.

The third disturbing cause which tends to reduce the effective E. M. F. of an alternator is the reaction of the armature current, through the resulting magnetization, on the field magnets. We have already seen that when a closed coil is driven into and out of a magnetic field the induced current is always in such direction as to cause work to be done in driving the coil. But, since the current due to entering the field is equal and opposite to that produced in leaving the field, the total magnetizations due to these currents are equal and opposite, and if one opposes the field due to a pole-piece the other will in an equal degree strengthen that field. Hence, provided these two actions are applied alike; *i. e.*, are symmetrical with respect to the field, the total effect of armature current will be neither to weaken nor strengthen the field.

In practice the effect of the armature reaction is two-fold. If the current be nearly in phase with the E. M. F. the main result of the magnetic field set up by the armature is to distort that due to the field without greatly weakening it as a whole. The result of this distortion is that the E. M. F. does not increase and decrease steadily following a sine wave, but becomes irregular. The working E. M. F., as measured on a voltmeter, changes but a trifle, but the maximum E. M. F. becomes subject to great variations. Fig. 75 shows in a very striking manner the result of field distortion from a purely non-inductive load. Here a is the E. M. F. curve on open circuit and b is the curve as modified by the armature reaction at nearly full load. The arrow shows the direction of rotation of the armature. In this case the maximum voltage was increased about 30 per cent., while the measured

voltage was nearly constant. Bearing in mind that the E. M. F. at any moment is due to the *rate of change* of the magnetic induction through the armature, and not to the absolute amount of that induction, it is tolerably obvious that the effect of field distortion due to armature reaction may vary widely according to the shape and position of both the pole-pieces and the armature teeth. It may increase the maximum voltage as above, or decrease it fully as much, but if it is of any considerable magnitude it always deforms the E. M. F. wave very materially.

If, however, through armature inductance or inductive load the current lags behind the E. M. F., we have a very different state of affairs. The current reaches its maximum after the

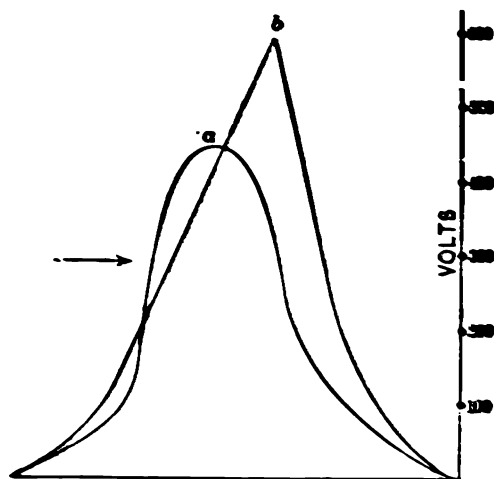


FIG. 75

armature coil has passed beyond the position of maximum E. M. F., and the net magnetization produced by it chokes back the field, at the same time greatly distorting it.

If the only effect of armature reaction and inductance were to cause a loss of voltage there would be little cause for alarm. But as shown in Fig. 75, the E. M. F. wave-shape often undergoes profound changes, which may greatly increase the chance for serious resonance. As already noted, alternating generators, monophasic and polyphasic alike, give in practice an

E. M. F. wave which is not sinusoidal, but contains the odd harmonics of the fundamental frequency. These are a necessary result of the variations in magnetic reluctance and armature reactance when the armature is in various angular positions, as well as of subsidiary reactions in transformers and other apparatus. The harmonics of even order do not appear, since, unless a machine is deliberately made unsymmetrical, all the variations in E. M. F. are complete within each half period, the second half of the cycle merely showing a reversal of sign. Hence, only those harmonics appear which pass through one or more complete cycles in a half period of the fundamental, *i. e.*, by construction all the harmonics are of odd order. These harmonics have a very real existence,

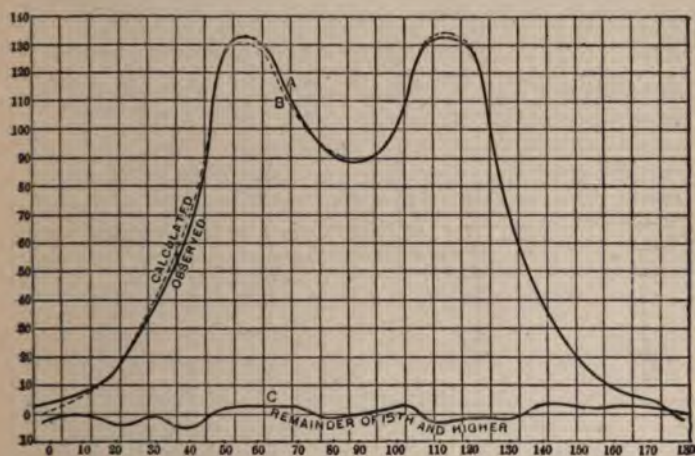


FIG. 76.

and can readily be identified by testing electrically for resonance, or even by hunting for them with a telephone in some cases. By taking the wave form of the machine by the contact method or photographically, the nature and magnitude of the harmonics are at once made evident.

Fig. 76 shows the wave form of a machine that was carefully studied by Steinmetz. It is from a three-phase generator having but one armature tooth per phase per pole, and giving 150 KW at 2000 volts and 60~. Curve A is the E. M. F. wave of

one coil to the common connection, at no load, *B* is the wave as calculated from a summation of the harmonics up to the fifteenth, and *C* shows the residual traces of still higher harmonics. To reduce the vertical scale to primary volts, multiply by 10. Analysis of this wave showed that it corresponded approximately to the following equation:

$$\sin a - .12 \sin (3a - 2.3) - .23 \sin (5a - 1.5) + .134 \sin (7a - 6.2).$$

In other words the third harmonic has about 12 per cent., the fifth about 23 per cent., and the seventh about 13 per cent. of the amplitude of the fundamental.

At full load the shape of this wave is changed in a most singular manner. The armature reaction shifts the magnitudes and positions of the variations in the magnetic field and of the harmonics due to them. Fig. 77 shows the wave form from

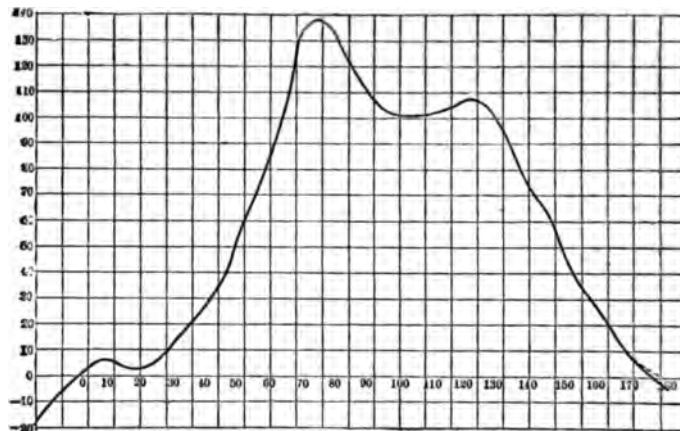


FIG. 77.

this machine under load. The central depression of Fig. 76 is replaced by a slight hollow between a high peak and a shoulder, and the wave is conspicuously unsymmetrical, as might readily be predicted from the general effect of the armature reaction. The approximate equation to the wave of Fig. 77 is

$$\sin a - .176 \sin (3a + 11.7) - .085 \sin (5a - 33.8) + .01 \sin (7a + 26.6).$$

The effect of the armature reaction due to load has been greatly to strengthen the third harmonic, greatly to weaken the fifth, and nearly to suppress the seventh.

Obviously changes of this sort may have a very great effect in the matter of resonance. Suppose, for example, that the conditions on the line at light load were such as to give marked resonance with the seventh harmonic of the frequency. Now, under all ordinary working conditions this harmonic would be practically absent; but if a large part of the load were thrown off, resonance would suddenly appear, and with the lessened armature reaction the general voltage would rise sharply, so that serious results might follow. In case of a high voltage generator, say for 10,000 volts, having the curves just given, at load the seventh harmonic would only have an amplitude of about 100 volts, while this amplitude would suddenly rise to 1340 volts, increased perhaps four or five times by resonance, when the load was thrown off. Under other conditions throwing on load might produce an equally unpleasant effect.

Change in wave form at varying load is for the most part chargeable to armature reaction, like the accompanying change of voltage, so that for stability of performance under changes of load a generator must have low armature reaction and small armature inductance. These, however, do not necessarily imply a sinusoidal wave form, which may be given at light load by a machine of fairly high reaction and inductance. But if a generator is to give a wave form closely sinusoidal at all loads, it must have these constants small, particularly if it is expected to perform well under inductive load, which produces the severest distortional effects upon the magnetic field.

The magnetizing and demagnetizing effects of the armature current in case of inductive lag no longer can balance each other, for they are unsymmetrical with respect to the poles. If the angle of lag is large the result will be a very serious weakening of the field, and a correspondingly large drop in the effective voltage. For example, a certain alternator of 120 KW output has 40 turns of wire per armature tooth, carrying a normal full load current of 60 amperes. There is thus a possible demagnetizing force of 2400 ampere-turns at full load. The ampere-turns per pole-

piece in the same machine are 3,600, so that if the current should lag enough to give the armature reaction full play, as might happen from excessive armature inductance alone, the total net magnetizing force would be reduced to a third of its normal amount and the resulting voltage to a half or less. It is in fact common enough to find alternators that require from 50 to 100 per cent. increase in the exciting ampere-turns to hold them at normal voltage under a full load current lagging even 15° or 20° .

Between inductance and armature reaction the effective E. M. F. of alternators generally falls off rapidly under load,

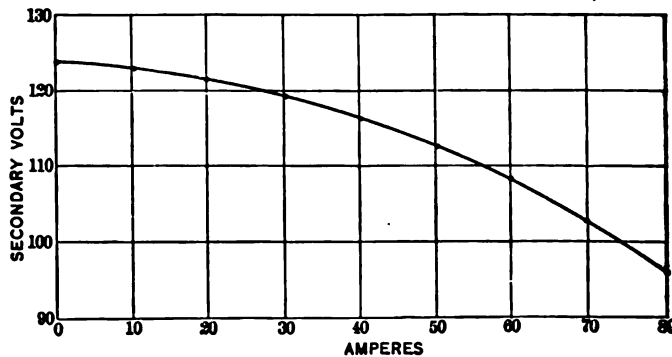


FIG. 78.

unless special care be taken with the design. The loss from ohmic resistance is usually trivial compared with those just named. It is in fact perfectly practicable to build an alternator with inductance and armature reaction so exaggerated, that a very slight increase in current will cut down the voltage so rapidly as to keep the current virtually constant. This plan was successfully carried out in the remarkable Stanley alternating arc machine of a few years ago.

In this case the current varied only about 10 per cent., while the voltage varied between a few volts and over 2,000. An automatic short-circuiting switch was provided to avert dangerous rise of voltage in case of an accidental open circuit.

In so-called constant potential alternators, as usually built, the inherent regulation is by no means good. Fig. 78 gives an excellent idea of the performance of some of the earlier

machines in this respect, and it is about what one would find in many alternators now in service, except for their compound winding.

It has often been held that high inductance and large armature reaction are desirable in alternators in order to prevent burn-outs in case of accidental short circuits. While it is perfectly true that sufficiently crude armature design does produce this effect, by limiting the possible current, it is equally true that a machine with sufficient inductance and reaction to serve as a practical safeguard will regulate so atrociously as to be under most circumstances incapable of decent commercial service under present conditions. When it was sufficient for an alternator to give current, that with sufficient hand regulation could supply house to house transformers most of the time, high inductance machines, which are easy and cheap to build, answered the purpose.

At present, when the importance of good regulation is generally understood, and most large alternating plants must look forward to assuming a motor load, low inductance machines with small armature reaction are essential for first class service. For power transmission plants with heavy mixed loads of lights and motors, no other class of machine should be tolerated, or can be used without incessant annoyance.

Most even of the older alternators are compound-wound to compensate for armature effects, and are thus enabled to work successfully up to outputs at which the voltage begins to fall off too fast to be thus compensated. So long as the compounding process actually gives good regulation, it is useful and enables the generators to be worked at a high output. As a matter of fact when used with generators of the older type, even compounding left much to be desired. As alternating practice has gradually improved, compound-wound alternators have been more skillfully designed, and recent machines give on non-inductive load a very fair approximation to constant potential. Fig. 79 shows the E. M. F. of a modern over-compounded alternator at varying load. If, however, the current has even a moderate lag behind the E. M. F., owing to inductance in the machine or the load, the machine will no longer give constant potential, and the voltage may fall off rapidly as the load comes on, as shown in the cut. The reason for this we have

already found in the extra increase of field excitation necessary to compensate for the demagnetizing effect of armature reaction. Incidentally if the current commuted to supply the series field lags much, the process of commutation cannot go on normally without adjusting the brushes to compensate for the lag.

Therefore for inductive load the compounding has to be greatly increased, and even then is correct only for a particular inductance.

It must be understood that alternators are compounded on the same general principles as continuous current machines, except

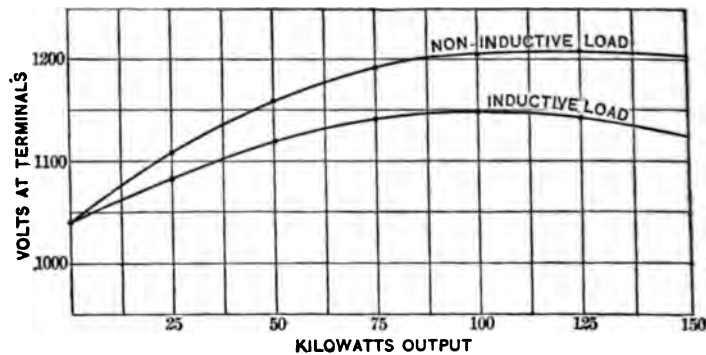


FIG. 79.

that instead of the current for the series winding being derived from the general commutator of the dynamo, it is generally obtained from a simple special commutator. A shunt around this commutator diverts most of the main current, while a portion is rectified and passed around the fields. Fig. 80 shows in diagram a common compounding arrangement. The two collecting rings *A* and *B* with the commutator *C* are mounted on the armature shaft. Brushes on *A* and *B* take off the alternating current. One of these rings, *A*, leads directly to line. The current going to the other ring is divided, part passing around *C* through the resistance box *D*, and part being rectified by the commutator for use in the series field. This commutator has as many segments as there are pairs of poles in the field, the alternate sections being electrically united.

By varying the resistance D , the amount of current diverted into the field can be varied and the compounding may thus be arranged to keep the voltage constant at the terminals or at any point on the line. A similar change in D may be made to adjust the compounding for inductive load of any given power factor.

For non-inductive loads, or for inductive loads of constant

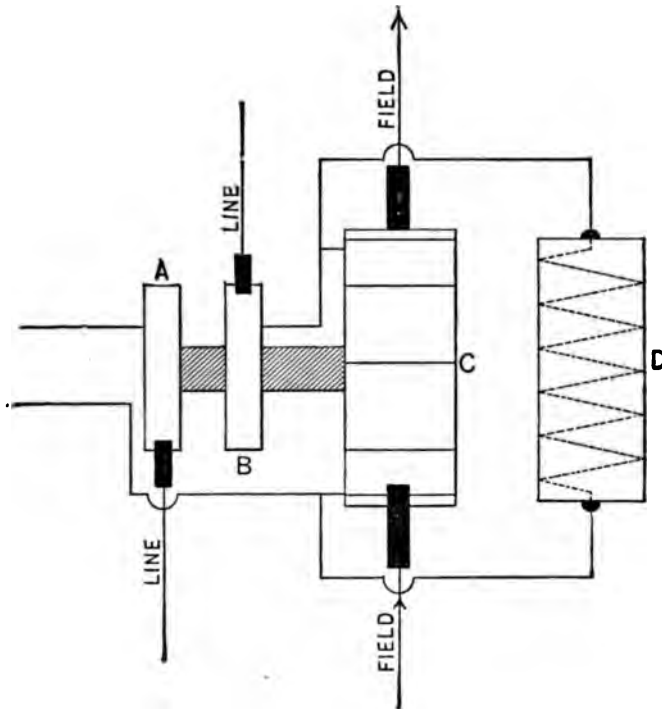


FIG. 80.

power factor, this compounding gives good results, but for a load of widely varying power factor it is simply worthless unless supplemented by hand regulation.

If compounding is to be successfully used for keeping constant potential on a circuit of lights and motors subject to considerable variations in the power factor, it must be applied to a generator of very low inductance and armature reaction. Otherwise no adjustment of the compounding for any particu-

lar power factor will give approximately constant potential when the power factor varies.

For example it would be hopeless to attempt to compound in the ordinary way an alternator having a characteristic like Fig. 78, so that it would be tolerable on a commercial circuit of lights and motors. On the other hand, a generator having a voltage characteristic like Fig. 81 could readily be so compounded. Here the fall in voltage at constant field excitation, from no load to full load (non-inductive), is about $3\frac{1}{2}$ per cent. Under inductive load this fall would

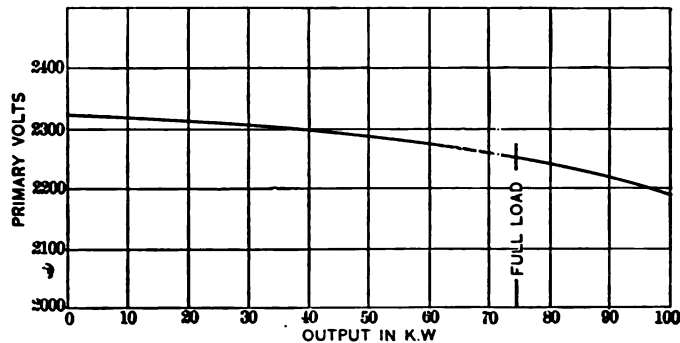


FIG. 81.

be increased considerably, but from the usual ratio of inductive drop to armature reaction found in the best modern generators, the variation for the power factors likely to be encountered with a mixed load would be somewhat smaller than the original drop. The total variation from no load to full inductive load would then be between 6 and 7 per cent., and with compounding adroitly adjusted for average conditions the greatest variation from normal voltage could easily be brought within 2 per cent. A little intelligent hand regulation at certain times of the day would improve even this good result.

These considerations apply to polyphase as well as to monophase generators. The advent of polyphase work has done much to improve all alternators, and especially with respect to regulation.

The generation of polyphase alternating currents is a very simple matter. The object in view is the production of two or

more similar currents differing in phase by some convenient amount, usually 60° or 90° . To obtain two currents 90° apart in phase, it is only necessary to clamp together the shafts of two common alternators, so that, for a construction like Fig. 70, the slots of one armature would be opposite the teeth of

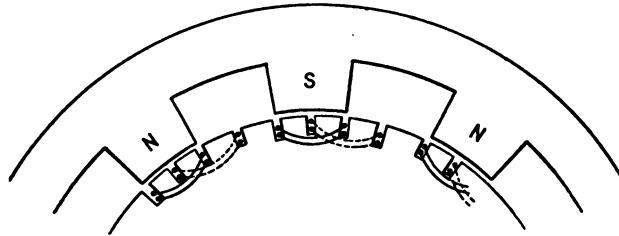


FIG. 82

the other armature. The armatures would then give currents 90° apart in phase. Such combination alternators were built for the Columbian Exposition by the Westinghouse Company, and were used for the principal lighting and power circuits. These structures are, however, expensive for the output obtained, and the two windings are nearly always put on a single armature core, and spaced as just described. Fig. 82 shows a very simple

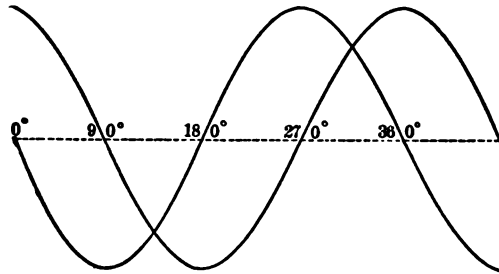


FIG. 83.

winding of this character. There are four times as many armature slots as there are field poles. Each coil spans two teeth. The coils shown by solid lines form one phase winding, the dotted coils the other phase winding. Each set of coils is connected as an ordinary monophase winding, and the terminals are brought out to two pairs of collecting rings. Such a winding gives two simple alternating currents related in phase as shown in Fig. 83. The armature core is very fully occupied

by the two windings, rather more advantageously than it could be by a single winding, so that the machine gives a somewhat better output as a two-phaser than would be possible with a simple alternator of the same dimensions. And, what is of more importance, the regulation of the machine as a two-phaser is much better than it would be as a single-phaser. In the first place the armature inductance is greatly reduced by the distribution of the windings and the reduction of the ampere-turns per armature tooth. Second, the same causes act to cut down the armature reaction in case of a lagging current. Anything that improves the intrinsic regulation also means greater output for unimproved regulation. Moreover, the increased number of armature teeth gives a more uniform reluctance than in the case of fewer teeth, and hence tends to give a better approximation to a sinusoidal wave form.

So, aside from the value of polyphase currents for motor purposes, which we shall presently examine, polyphase winding is valuable on its own account as increasing output and improving regulation. In fact diphas windings were devised for this purpose before their importance in the operation of motors became generally known.

The value of a subdivided winding in reducing inductance and armature reaction was greatly emphasized by the introduction of polyphase generators, and it was a short step from windings like Fig. 82, having one coil and virtually one tooth per phase per pole, to windings in which each phase winding is split up into several sets of coils in adjacent slots, thereby still further decreasing the effective inductance and armature reaction. Such windings may be called *polydental*, from their several teeth per phase per pole, and are very generally used in the best recent machines. A fine example of this class of winding is shown in Fig. 84. This is a quarter section of the armature of one of the 5,000 HP Niagara generators, showing a portion of one coil belonging to a single phase. The full winding is composed of two conductors per slot, half the total slots, in alternate groups, belonging to each phase.

Such complete subdivision of the coils results in low inductance and a very low armature reaction. A similar winding could be used for a monophase generator, and will have to be employed if monophase machines come to be used extensively for

power transmission purposes. The form of armature slot used for polyodontal windings is shown in Fig. 85, a single segment of one of the core plates of the armature of the Niagara two-phaser. The appearance of one of these great machines complete is admirably shown in the frontispiece, showing the

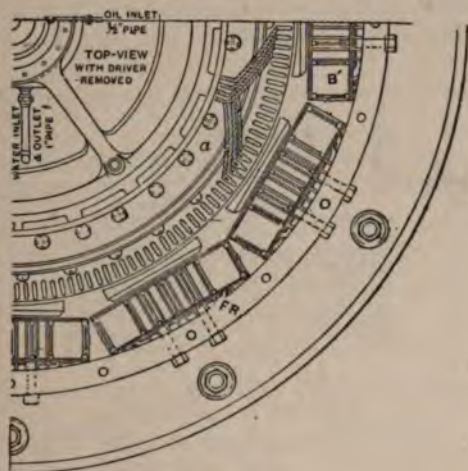


FIG. 84.

interior of the Niagara station. The field magnets are revolved instead of the armature, although they are exterior to it. A very powerful fly-wheel effect is gained by this arrangement, since the weight of the revolving structure, turning at 250 r. p. m., is about 75 tons, half of this being in the field



FIG. 85.

itself. This is about 12 feet in diameter, a single forged steel ring with twelve massive pole-pieces secured to its inner face. The normal voltage of the machine is about 2,250, and the frequency is 25~. The stationary armature is provided with six ample ventilating ducts, through which air is forced by

the revolving field. Fig. 86 shows a vertical section of the whole apparatus with its shaft and upper bearings. A hundred and forty feet below the generator is the turbine which supports by hydraulic pressure the weight of the revolving mass, save a ton or two of residual weight, which may be either positive or negative, and which is taken care of by a thrust bearing.

The full load of this generator is 775 amperes on each of the

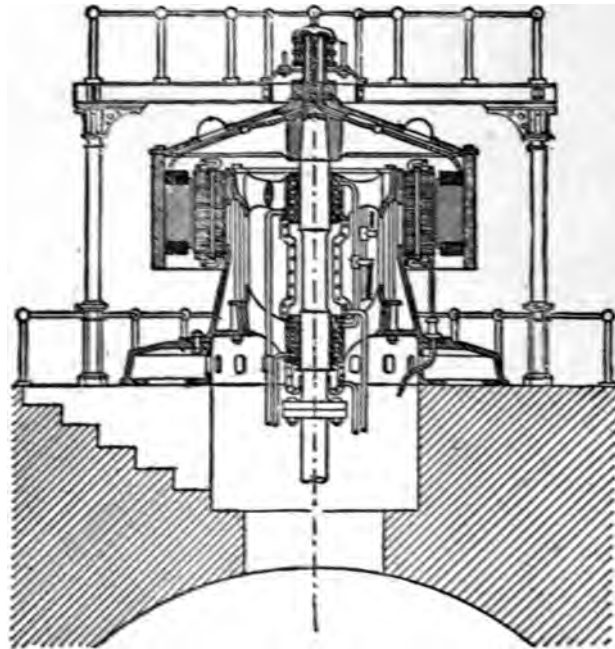


FIG. 86.

two circuits, and at this load the commercial efficiency is very nearly 97 per cent.—the highest figure yet touched by any kind of generator. The exciting current for the fields is derived from a rotary transformer, and is led into the revolving magnets through a pair of collecting rings shown in Fig. 86 at the extreme top of the shaft. The armature current is of course taken from stationary binding posts. Altogether the Niagara machine is a magnificent specimen of polyphase construction.

When three-phase currents instead of two-phase are to be generated, separate armatures are out of the question, and a winding similar to that of Fig. 82 is frequently employed. To obtain the three currents, however, three separate windings are employed, arranged as in Fig. 87. The coils are connected

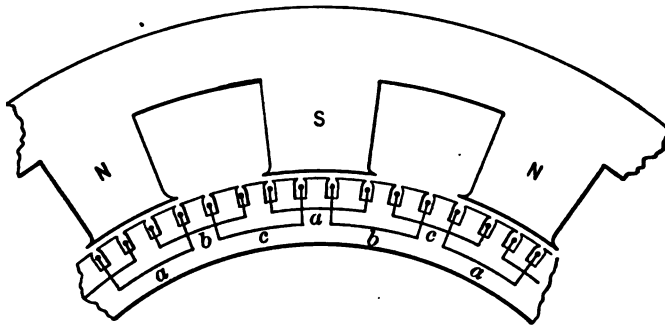


FIG. 87.

so that *a*, *a*, *a*, etc., form one phase winding, *b*, *b*, etc., a second, and *c*, *c*, etc., the third. The close similarity of this winding to the two-phase shown in Fig. 82 is at once apparent.

It is worth noting that these three windings are spaced 60° apart, instead of 90° , as in a winding for two phases. Naturally

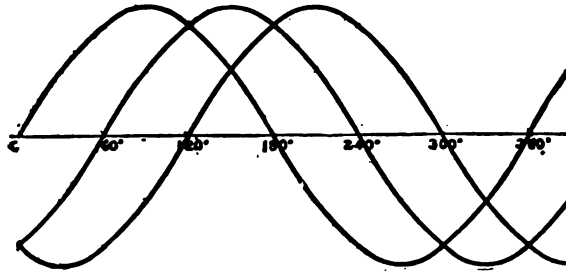


FIG. 87a.

therefore the currents generated would be different in phase by only 60° , giving the arrangement of currents shown in Fig. 87a. This is homologous with the two-phase current system of Fig. 83.

In practice it is necessary, however, to have the sym-

metrical arrangement of phases given by three similar currents 120° apart. This is very easily obtained in the external circuit by winding one set of the armature coils in a direction reversed from the other two, or by merely reversing the terminals in making connections. The result of this is a true three-phase current, such as is shown in diagram in Fig. 88. It has now the curious property that at all times the system is simultaneously carrying currents substantially equal in both directions, as will readily appear from inspection of the curves. With such a current it is usual to combine the circuits cor-

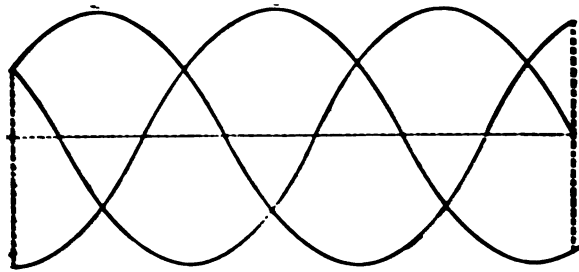


FIG. 88.

responding to the several armature windings. Otherwise we would be compelled to deal with circuits of six wires, and the generator would have six collecting rings.

Moreover, the distribution circuits formed by combining the circuits as just indicated have the advantage of economy in copper, as we shall presently see. Hence, the three-phase system has become the mainstay of electrical power transmission so far as the principal circuit is concerned. The generators may be two-phase and the distributing circuits two-phase when convenience dictates, but the main line is, save in very rare instances, worked three-phase. The change from two-phase to three-phase, or the reverse, is accomplished in a beautifully simple and efficient manner, to be described later. Under certain circumstances the use of a two-phase generator has at least the theoretical advantage that the currents in the respective armature windings, being in quadrature, can have little or no mutual reaction, so that the two phases are more independent than the three phases of a three-phaser.

As might be expected, the subdivision of windings in a three-phase armature results in small inductance and armature reaction, smaller in fact than would be found in a similar two-phase winding. Nevertheless experience shows that if the armature has only a single coil per phase per pole, the reaction is too great for first-class regulation, and the curve of E. M. F. is rather too wide a departure from the sine wave. It is quite usual, therefore, to adopt the polyodontal construction with from two to four coils per phase per pole. A machine carefully

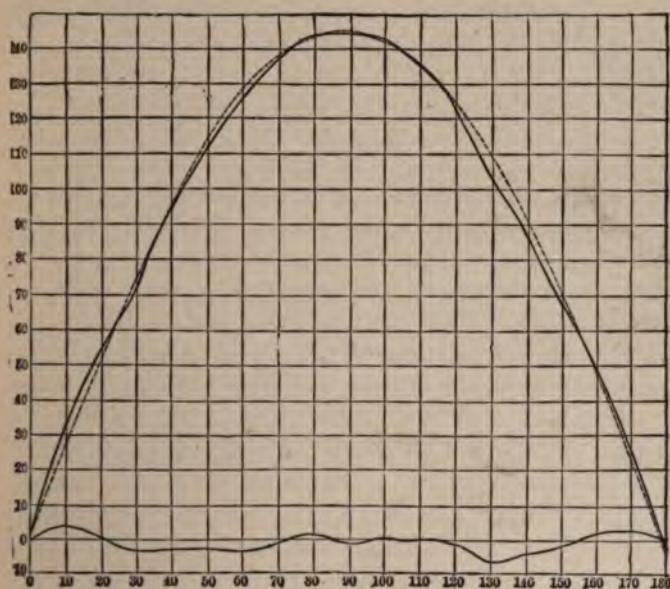


FIG. 89.

designed on these lines can be made to give excellent regulation, with voltage not varying more than 3 or 4 per cent. from no load to full non-inductive load, and is capable of giving a very close approximation to a true sinusoidal wave, a valuable characteristic for long distance transmission. Fig. 89 shows the wave form given by one of these polyodontal three-phases. The full curve shows the actual E. M. F., the dotted line the corresponding sine curve, and the irregular line at the base of the figure the difference between the two.

There are several methods of connecting a three-phase wind-

ing to its external circuit. The two chiefly used are generally known as the "star" and "mesh" connections. In the former one end of each of the three windings is brought to a common junction, and the three remaining ends are connected to three line wires. The three lines then serve in turn as outgoing and

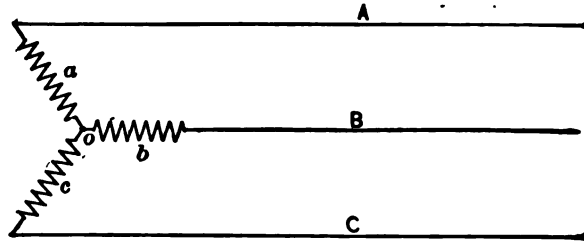


FIG. 90.

return circuits, the maximum current shifting in regular rotation from one to the others in succession. The three E. M. Fs. in the three coils differ in phase by 120° , owing to the reversal of which we have spoken. We may draw the star connection diagrammatically in Fig. 90, drawing the three coils $a\ b\ c$ 120° apart to show the relation of the E. M. Fs. and currents, although they lie on the armature as shown in Fig. 87. Three

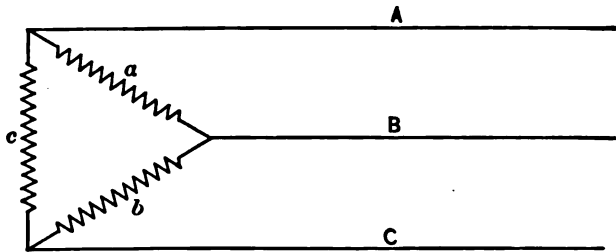


FIG. 91.

of the terminals meet at the point o , the others are connected respectively to the lines A, B, C . As the three windings on the armature are alike, the E. M. Fs. generated by the three coils are equal. So if each winding a, b, c , is designed for 1,000 volts, that will be the voltage between the point o and each of the three lines A, B, C . Clearly, however, the voltage between any two of these lines, as A and B , is a very different matter,

since it results from the addition of the voltages of a and b , which are, however, 120° apart in phase. They must then be added geometrically. Now the chord of 120° is $\sqrt{3}$ times the radius, so that the geometrical sum of the voltages a and b , 120° apart, is 1.732 times either of them. The voltage then between A and B in the case in hand is 1,732. The same is evidently true of the other pairs of lines B, C , and C, A .

The other ordinary three-phase connection is the mesh, in which the six terminals of the three coils are united two and two, and the lines are connected to the three points of junction. This arrangement is shown diagrammatically in Fig. 91. Here each coil must generate the full E. M. F. between any two of the lines, but the current in any line, as B , is made up of the geometrical sum of the currents in a and b , differing in phase, just as the E. M. F. between lines in Fig. 90 was made up of the sum of two E. M. Fs. The current in B being then so constituted, is $\sqrt{3}$ times the current in a or b , and so on for the other lines. In the mesh connection we deal with resultant currents just as in the star we find resultant E. M. Fs.

An armature designed for a given working voltage, measured in the ordinary way between lines, would, if planned for star connection, have fewer turns of larger wire than if intended for mesh connection. This is sometimes convenient, and is useful in keeping the voltage between coils low. The mesh connection on the other hand has more turns of smaller wire, as the current is diminished while the E. M. F. in each coil is the full E. M. F. between lines. This property is useful under certain conditions, as it makes the E. M. F. between any two lines somewhat less dependent on the actions going on in the other pairs of lines. The same windings can of course be connected either star or mesh, according to the dictates of convenience. Both these combination circuits have in common one immensely valuable property. They require for the transmission of a given amount of energy at a given percentage of loss, only 75 per cent. of the weight of copper required for the same transmission at the same working voltage, by continuous current or by any alternating system having two wires per phase. That is, if 100 tons of copper are required for a given transmission by continuous current, single-phase alternating, two phase with two circuits, or three phase with three circuits, 75 tons will suffice

for the same transmission by the star or mesh three-phase circuit without any increased loss of energy. The proof of this saving is very simple. Assume a three-phase circuit carrying a non-inductive load at V volts between lines, the current in each line being I and the resistance r . Then for a star connection, as we have already seen, the voltage in each branch to the neutral point o (Fig. 90) is $V \frac{1}{\sqrt{3}}$, the current in each branch is I , the power in each branch is $\frac{1}{\sqrt{3}} IV$, and the total power is $IV\sqrt{3}$.

The loss in each branch of the circuit is obviously I^2r , and the total loss for the above power $3I^2r$. Now let the same amount of power be transmitted by a single-phase circuit at the same voltage V . The current will evidently have to be $I\sqrt{3}$. Let r' be the resistance of one of the two monophase wires, such that the total loss shall be $3I^2r$ as before. The resistance of the complete circuit will be $2r'$, and the total loss $6I^2r'$. But since

$$6I^2r' = 3I^2r,$$

$$r' = \frac{r}{2}.$$

That is, the resistance of each of the monophase wires must be only one-half the resistance of a single three-phase wire. The cross section of each monophase wire must then be double the cross section of one three-phase wire. If the weight of the latter be w , the total weight of the three-phase copper will be $3w$, while the weight of the two monophase leads of double cross section will evidently be $4w$ for a circuit of the same length. A mesh connected three-phase system leads to exactly the same result, since the voltage in each branch is V (see Fig. 91), the current is $\frac{1}{\sqrt{3}}$, the power per branch $\frac{1}{\sqrt{3}} IV$, the total power $IV\sqrt{3}$, and the loss $3I^2r$, as before.

The result seems so singular that in the early days of the three-phase system it was slow to be accepted by the public, until checked experimentally with the greatest precision, and by various experimenters. A similar saving can be effected by the use of some other polyphase combination circuits, but

it happens that the three-phase combination is the one least open to practical objections.

In actual working the two-phase system is nearly always installed with a complete circuit per phase as regards the distribution circuits, unless for short connections to apparatus; the three-phase system is used with the star or mesh combination, except for occasional special work, and the more complicated polyphase systems are practically not used at all.

In speaking of the voltage of an alternating circuit, it must be borne in mind that we do not mean the voltage corresponding to the extreme crest of the E. M. F. wave, but that volt-

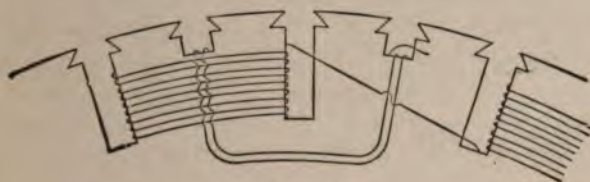


FIG. 92.

age which, multiplied by the current in a non-inductive circuit, equals the energy in that circuit. This effective working voltage bears no fixed relation to the real maximum voltage, since their ratio evidently varies with the shape of the E. M. F. wave. For a sine wave the ratio is 1.414, so that an alternating working pressure of 1,000 volts means a maximum voltage of 1,414. As may be judged from Fig. 89, this ratio is very nearly true for the best modern alternators.

Save in rare instances the work of power transmission is done by two-phase or three-phase currents. Abroad some pure single-phase plants are in operation with fairly good results, but the difficulty of getting good single-phase motors has so far rather checked development along this line. In this country the "monocyclic" system has been introduced to some extent for simplicity in the connections for lighting purposes, and in a few cases the apparatus is used largely for motor purposes.

In this system there is a main armature winding to which the lighting circuits are connected as in ordinary single-phase working, while a subsidiary armature winding furnishes magnetizing current for the motors. The general arrangement of the armature coils is shown in Fig. 92. The

winding in the small intermediate slots is of the same size of wire as the main coil, but has only one-fourth as many turns, and consequently one-quarter the main E. M. F. This so-called "teaser" E. M. F. is obviously 90° in phase

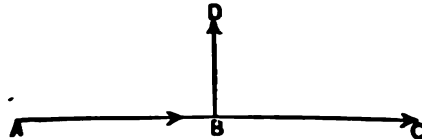


FIG. 93.

from the main E. M. F. The relation of the two E. M. Fs. is better shown in Fig. 93, where $A B C$ is the main E. M. F. and $B D$ the teaser E. M. F. The generator has three col-

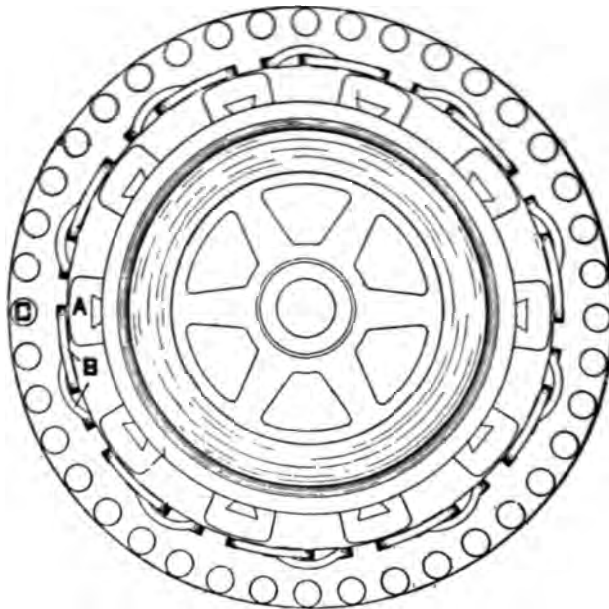


FIG. 94.

lecting rings, of which the middle one is connected to D . The outer rings have the full E. M. F. between them, while between D and C the E. M. F. is the geometrical sum of $B C$ and $B D$, approximately .56 of the main E. M. F. For motor

service the resultant E. M. Fs. differing in phase may be variously combined, usually into approximately three-phase relation, although in normal running all the *currents* in the motor are in very nearly the same phase. The object of this system is to obtain for lighting purposes a perfectly simple circuit, the voltage of which will be quite undisturbed by actions going on in the subsidiary motor circuit, which object is attained if the generator is so arranged as to hold its voltage closely under inductive load.

A similar device for simplifying the operation of lighting circuits is a three-phase system arranged to supply the entire lighting service from two of its lines, as *A* and *B*, Fig. 90. The other two connections *BC* and *AC* would only be used for motor service, and if desirable the coils *b* and *c* could take up very little space on the armature. Still another of these heterophasal schemes employs regular single-phase alternators for the lighting work, and a small adjunct machine in phase 90° from the others, and connected with them to form a two-phase circuit with one common wire. This connection is used for starting ordinary two-phase motors.

In general the heterophasal systems have no considerable advantage over the ordinary polyphase systems, save for a few special cases. In the chapter on centres of distribution the working properties of various alternating systems will be taken up in more detail.

In general construction and arrangement of parts all alternators are similar. Those specially intended for power transmission are sometimes, however, modified for convenience in obtaining high voltage or for direct coupling to water wheels. The vertical shaft arrangement as exemplified in the Niagara machines is now and then used both in this country and abroad. Machines for 3,000 to 5,000 volts and upward are best constructed with stationary armatures, to avoid mechanical strains on the high voltage insulation. In following this design the armature is usually exterior to the field magnets. It is very doubtful whether the fly-wheel effect gained by revolving an exterior magnet compensates for the great inaccessibility of the high voltage armature. A good example of the stationary armature construction is the Stanley two-phaser, shown in Figs. 94 and 95. The end view of the machine is shown in Fig. 94.

There are two rings of laminated iron placed side by side, and connected by the iron keeper bars *C*. On the interior face of each ring is a two-phase winding *B*, similar to that shown in Fig. 82.

In front of these coils revolves the interior field magnet, of which a pole-piece is shown at *A*. This magnet structure is duplex, like the armature, carrying two crowns of laminated

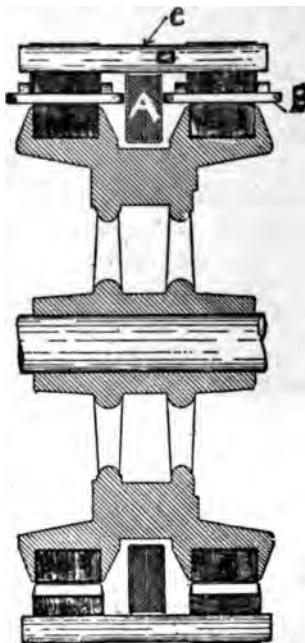


FIG. 95.

poles. Between these and supported by the armature structure is the field coil *A*, Fig. 95, inside of which the field magnet revolves. The relation of the parts is shown in Fig. 95. Obviously all the poles at one end of the machine are north poles, those at the other end south poles, so that both sides of the armature are required to complete the magnetic structure. As these poles revolve they increase and decrease the magnetic induction through the armature coils *B*. Machines of this magnetic character are known as "inductor" dynamos. The example shown has upon it no moving wire whatever, and is admirably adapted for high voltage work.


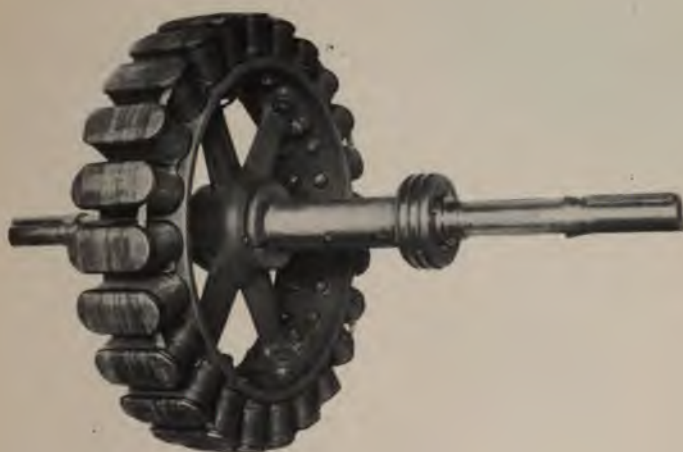


PLATE III.

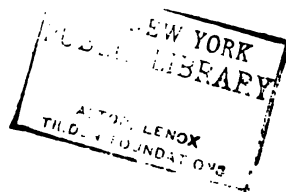

In the more common form of internal pole machine, the field magnet takes the shape of a star of outwardly radiating poles wound so that each alternate pole is north and the intermediate poles south. All are generally excited in series, the current being taken in *via* two small slip rings, while the armature currents are taken from appropriate stationary connections. The armature ring, having coils in slots in its inner face, is built up in sections of laminated iron in the ordinary way, with ample spaces for ventilation. As, however, it is often of great size and many separate punchings are required to go once around the armature, a specially rigid exterior armature spider is needed to support the laminated mass. The coils are wound on forms, thoroughly insulated, and are then slipped into place in the armature slots and secured by wooden wedges.

Plate III shows the field and the two halves of the armature of a modern high voltage polyphase generator for direct connection to the prime mover. In this case the diameter of the armature frame is so great that it has been found desirable to design it as a hollow circular truss in order to give it the necessary rigidity against distortion by its own weight and by inequality of magnetic pull, if there were a trifling eccentricity due to wear of the bearings. In some of the early machines of large diameter flexure from the weight alone was very troublesome. Half the armature coils are shown in place and wedged in, and a coil belonging in the second half is all ready to put in place. Four shapes of coils are necessary to complete this winding, but they can be kept well clear of each other at the ends and are easy to put in and take out, so that in case of damage a coil can be easily replaced, although it may sometimes be necessary to move several others to get at the damaged one. An injured coil, however, can readily be put out of circuit by cutting it loose at the ends, insulating them, and connecting the adjacent coils of the same phase across the dead one. A generator so temporarily repaired in a few minutes can be run until opportunity offers for permanent repairs, and can even be worked in parallel with others without material difficulty.

To facilitate repairs the armatures of large revolving pole machines are often carried on a sliding bed, so that they can

be shifted by their own width along the shaft, exposing the windings of both armature and field.

The field is really a compact, massive fly-wheel with the poles bolted on its rim, the pole surfaces being shaped so as to give as nearly as may be a sinusoidal wave. The pole-pieces are generally laminated, at least near the tips, and are sometimes provided with ventilating spaces like those in the armature.

The advantage of revolving field generators is so great in point of easy insulation and ready collection of even very great currents, that this type of machine has been rapidly displacing the older form for high voltage work, and indeed for large

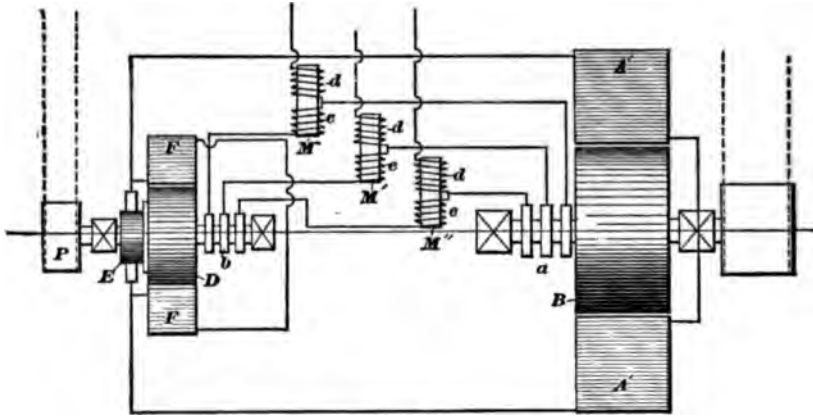


FIG. 96.

work of every kind. In such generators voltages of 10,000 and 12,000 are now quite common, and the limit has not been reached.

In large polyphase generators the question of regulating the voltage in response to changes of load is a serious one, and no final solution of it has as yet been reached. It is not economical to build generators with so small inherent variation of voltage as is in itself desirable. In small polyphase machines compounding has been accomplished with an arrangement of parts similar to that shown in Fig. 80, the connections being so modified as not to take the commutated current from a single phase. This is troublesome in machines requiring con-

siderable energy for the field excitation, and besides it only compounds correctly for a particular value of the power factor, which in many plants is constantly changing.

Several modern methods of compounding direct the compounding at the exciter. A rotary converter is used as exciter, and the voltage at its commutator, which depends on the alternating voltage applied at the slip-rings, is modified in various ways in response to changes in the magnitude and phase of the working currents from the generator. A typical method of this kind, successfully applied by the author half a dozen years ago, is shown diagrammatically in Fig. 96. Here the generator fields $A' A'$ are fed from the commutator end of a rotary converter FF . Current from the main collecting rings a is led to

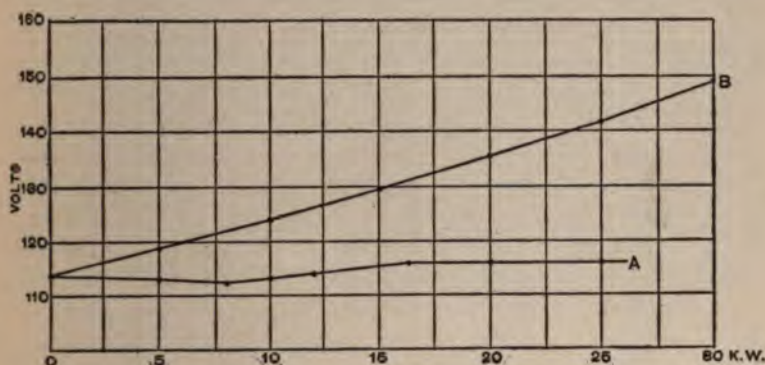


FIG. 97.

the collecting rings b of the exciter through the reactive coils $c c c$ on the cores $M M M$, which are also wound with series turns $d d d$ in the main leads of the generator. At light loads the voltage at b is cut down by the reactance, while as the main current increases or lags the series turns $d d d$ raise the voltage $a b$, and hence strengthen the generator field. By properly proportioning the coils $c c c$, $d d d$, and their cores $M M M$, the apparatus can be made to regulate the voltage very closely for all loads of the generator, inductive or non-inductive, or even may overcompound on inductive load so as to compensate for the change in the inductance of the system.

Fig. 97 shows the working of this device when arranged to show extreme overcompounding on inductive load. The gen-

erator chosen was one which uncompounded would drop its voltage about 40 per cent. on a heavy inductive load. Curve *A* shows the regulation of the secondary voltage on non-inductive load, curve *B* the overcompounding produced by a load of induction motors running light, having a power factor of not over 0.25.


The same general principle has been lately applied in several forms with very promising results. An interesting modification is the compensated field alternator recently brought out by the General Electric Company, and shown in Plate IV. Here the exciter armature is on the shaft of the main machine, and is in a field having the same number of poles, so that it revolves synchronously pole for pole with its generator. Exciter and main fields are fed in shunt from the exciter commutator, but the exciter armature also receives through its collector rings an auxiliary current derived from series transformers in the main leads of the generator. This device holds the voltage with beautiful precision under ordinary changes of load and lag, but the necessity of being in mechanical synchronism is somewhat embarrassing, save in high-speed machines.

Along such lines as these good results are certainly attainable, and in addition there are several automatic devices for working a rheostat in the generator field so as to hold the voltage constant, irrespective of load or lag. These perform fairly well, but are apt to require attention to the working parts. They do best when dealing with rather slow variations in load, and, while they need rather careful handling, are capable of giving very good regulation. The whole matter is at present in a transitional stage, and practice has not yet settled into any definite lines.

As a matter of fact, in much power transmission work compound winding is not necessary, since the machines hold their voltage closely without it if well designed, and in large plants the variations of load are usually so gradual that the voltage at the end of the transmission line can be easily kept constant by hand regulation. Again, in many transmission plants several lines are fed by one generator, so that no compounding would suit all the lines; and whenever a sub-station is installed, the secondary voltage has to be kept constant by special regulation in any event.



PLATE IV.

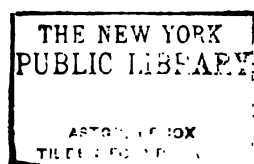

TRANSFORMERS.

The alternating current transformer is merely a glorification, as it were, of the fundamental idea shown in Fig. 4, p. 12. The loops *A* and *B* are expanded into massive coils and are given a very perfect magnetic core of laminated iron, but the principle is unchanged.

In Fig. 98, *A* is a core composed of soft iron plates perhaps $\frac{1}{8}$ inch thick, stamped into the form shown, and then built up together like the leaves of a book, *B* is a coil of insulated wire wound in a spiral around one side of the core, and *C* is a single loop of heavy insulated copper bar around the other side. Now suppose an E. M. F. is suddenly applied to the terminals

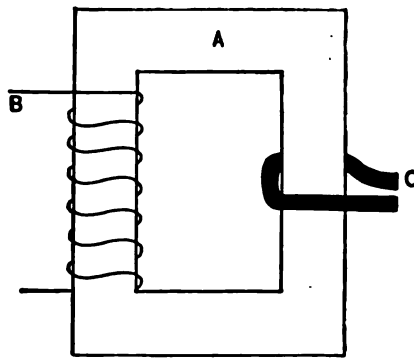


FIG. 98.

of the coil *B*, the loop *C* being left open. Current will flow through *B* in amount determined by its resistance and inductance, setting up a magnetic field throughout the mass of *A*. If the current is an alternating one an alternating magnetic field will be set up in *A*, and the current in *B* will settle down to that value which is determined by the resistance and inductance of the coil. The energy represented by this current is spent in heating the coil and in doing work by the reversal of magnetism in the core *A*. The current thus engaged lags behind its E. M. F. as in other cases of inductive circuit, the power factor at no load being in ordinary cases from .6 to .7.

Now close the loop *C*. Current opposing the current in *B* will be at once set up. The magnetizing effect of this reverse

current opposes the magnetization due to B , and hence tends to cut down the inductance imposed on B , which is, as we have already seen, determined by the magnetic induction through its core. To this action B simultaneously responds with an increased current, so that any increase of the current in C and its consequent demagnetizing action, is automatically compensated by an increased current in B . The increase of energy represented by this compensates for the energy due to the current in C . Energy is thus virtually transferred from the primary circuit B to the secondary circuit C .

Now as to the voltage of these two circuits. The energy in the two circuits is evidently equal save for losses in the iron and copper, which amount ordinarily to only a few per cent.

For any given magnetization in A the inductive E. M. F. in B is proportional to the total number of turns in the coil; so also the induced E. M. F. in the secondary is proportional to the number of turns in it. That is for a certain rate of change of the magnetic induction in A , the induced E. M. F. is the same *per turn* throughout A , whether that E. M. F. appears as inductance in B or secondary E. M. F. in C . Hence the E. M. Fs. across the terminals of the primary and secondary coils are proportional to the respective numbers of turns in those coils. But the energy in the two is substantially equal, and hence the currents in primary and secondary must be inversely proportional to the respective E. M. Fs. In Fig. 98 are shown seven primary turns and one secondary turn. Therefore the secondary E. M. F. is one-seventh the primary E. M. F., and the primary current is one-seventh the secondary current. For the same density of current in amperes per square inch the secondary turn must have seven times the cross-section of the primary conductor. By simply changing the relative number of primary and secondary turns,—the *ratio of transformation*,—electrical energy at any voltage can be transformed to any other voltage with trifling loss if the apparatus be properly constituted.

The losses which exist are of three kinds. First is the loss due to the resistance of the copper. This at light loads is very trifling, but increases with the square of the load, being numerically equal in watts to C^2R , as in all cases of loss through resistance.

Second comes the loss through *hysteresis*—virtually magnetic friction—produced by the alternate reversals of magnetization in the iron core. This is nearly constant at all loads and is kept as low as possible by securing the best possible iron, and working it at rather low magnetization, since the hysteretic loss increases very rapidly as the iron is more and more strongly magnetized.

Finally comes the loss from eddy currents in the core. This is due to the fact that the core is a fairly good conductor, and currents are induced in it for precisely the same reason that they are induced in the secondary winding. These eddy currents are largely reduced by carefully laminating the core across the natural direction of flow of these currents, and insulating the laminae with sheets of tissue paper or with varnish. The loss from eddy currents is, generally speaking, of about the same magnitude as the hysteretic loss, and in transformer practice the two are usually lumped together and denominated core loss.

By careful construction and design these losses can be kept very small compared with the total output. The following data from a test of a 7,500 watt transformer designed for a frequency of 15,000 to 16,000 alternations per minute, about 125 to 135~, will give a clear idea of the results that can be reached commercially:

Output,	7.5 KW
Transformation ratio,	20 : 1
Full load amperes (primary),	3.6
Full load amperes (secondary),	72.0
Resistance (primary) ohms,	6.15
Resistance (secondary) ohms,012
Total $C^2 R$ loss (watts),	143.
Total core loss (watts),	78.
Primary current (no load),063
Power factor (no load),595
Total C R drop (per cent.),	1.9

The efficiency curve of this transformer at various loads is given in Fig. 99. The interesting feature of this curve is the very uniform efficiency from half load to full load, with a maximum of 97.4 per cent. at three-quarters load. This is the result of a relatively very small core loss. Even at one-tenth

the normal load the efficiency is still good, over 90 per cent., although the curve falls more rapidly below half load.

Still larger transformers, such as are used for heavy power transmission work, are even more efficient than the one here described, although the room for increase is very limited indeed. Within the last few years the improvement in commercial transformers has been very great. In practice they

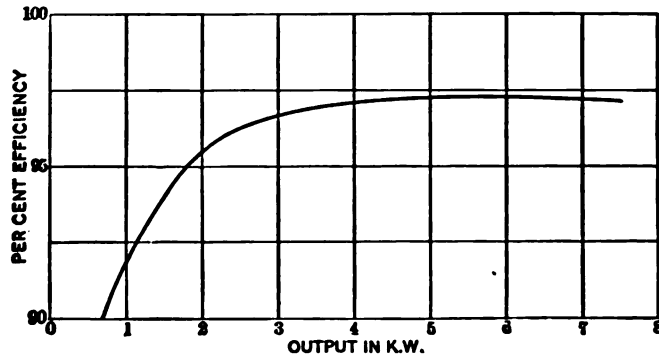


FIG. 99.

are seldom so simple in form as in Fig. 98, the core plates being universally built up of several pieces, so that the coils

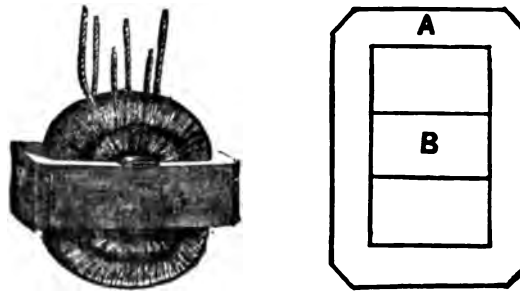


FIG. 100.

may be wound in forms and slipped into their respective places on the core. One of the forms which has been widely used is shown removed from its case in Fig. 100. The hollow rectangle *A* forms the main part of the core, while the bridge piece, *B*, is built up separately as the core of the coils, together with which it is forced into the position shown. The secondary coil immediately surrounds the bridge, and

outside of it is the primary coil. Both coils are of course elaborately insulated. Another familiar form of transformer is shown in Figs. 101 and 102. Here the core, Fig. 101, is built up of straight rectangular slips of iron into a hollow rectangle upon the longer sides of which the coils are wound. The whole assembled core and coils are shown in longitudinal



FIG. 101.

section in Fig. 102. This form of construction gives the coils a large available cooling surface and simplifies their insulation somewhat, although magnetically the arrangement of Fig. 100 is to be preferred.

As transformers are usually inclosed in tight iron boxes to protect them from the weather, the heat generated in the coils and core has a rather poor chance to escape, and the tempera-



FIG. 102.

ture may therefore rise higher than is safe for the insulation. It is usual to take special precautions to prevent this overheating. One of the commonest and best devices for this purpose is the subdivision of the core into bunches of laminæ separated by air spaces.

This arrangement is well shown in Fig. 103, in which the core is provided with a dozen of these ventilating spaces. The arrangement of the coils is somewhat like that of Fig. 100.

As an additional precaution against overheating, the transformer case is often filled with heavy mineral oil after the core is in place. This both provides additional insulation, and facilitates the transfer of heat from the core and coils to the iron case, whence it is radiated to the surrounding air. In very large transformers the primary and secondary windings are often built up of thin flat sections assembled with spaces between them.

For huge transformers such as are used for sub-station work, means are generally provided for artificial cooling. Two

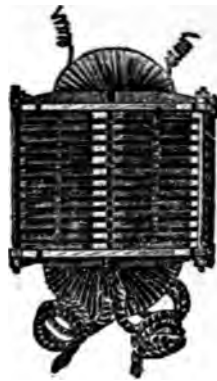


FIG. 103.

methods are at present in use for this purpose. One is the use of a blast of air from a small blower streaming through the interstices provided in core and coils, and rapidly carrying away the heat generated. The other is applied to oil-filled transformers, and consists in cooling the oil by a worm in the transformer case through which cold water is allowed to flow, or with a small pump circulating the oil itself slowly through a worm cooled by water. Either plan is very effective, and both are extensively used.

With properly designed transformers there is no difficulty in dealing with any voltage now in use, without the device of connecting transformers in series, which was formerly often employed for high voltage. If transformers are of similar size and design, they can be run in parallel with the utmost facility, and may very often be thus "banked" most advan-

llegously, as with such connection it is easy to proportion the number of transformers in use to the load, so that they can be worked nearly at full load, and consequently at their best efficiency.

In general the larger the transformer the higher its efficiency, though the improvement is very slow after the output reaches 25 KW or thereabouts. The curve of Fig. 104 shows the change in full load efficiency with the size of transformer as found in the best American practice.

The data here given relate to transformers of the kind

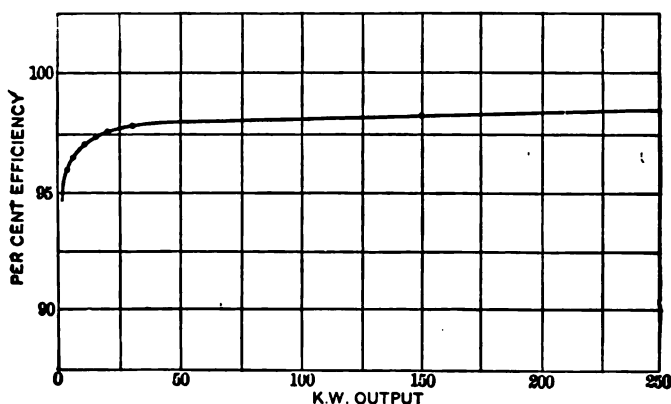


FIG. 104.

employed for power transmission work, as now produced by the best makers. The sizes above 50 KW are frequently artificially cooled. The frequency is taken at 60~ to 70~, and the figures do not apply to transformers originally designed for higher frequencies. At lower frequencies the efficiencies are likely to be a fraction of a per cent. lower, but at any frequency within the range of ordinary working a first-class transformer of 50 KW capacity or upward can be depended on for a full load efficiency of just about 98 per cent., and a half load efficiency about one per cent. lower. With care in planning a sub-station equipped with these large transformers the loss under normal conditions of working should not exceed $2\frac{1}{2}$ per cent.

For polyphase work it is the almost universal custom in this country to employ simply groups of ordinary standard trans-

formers. Abroad, composite transformers, transforming two or more phases in a single structure, are often used. The intent of this arrangement is to utilize more fully the iron

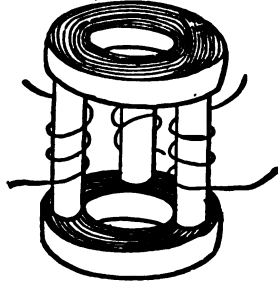


FIG. 105.

core by making it common to the several phase windings. Fig. 105 shows in rudimentary form the application of this

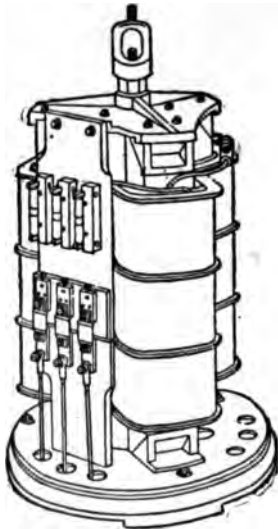


FIG. 106.

principle to a three-phase circuit. Three laminated cores, with the laminæ running vertically, are united at the ends by laminated yokes somewhat in the manner shown. Each core receives the primary and secondary windings belonging to a single phase, while the iron belongs to the three in common.

The arrangement is akin to the mesh connection of three-phase circuits. Fig. 106 shows the form actually taken by a small three-phase transformer built up in this manner. It is a very neat and compact structure and certainly convenient for small work. In this country it is found that with American costs of labor, the saving due to a common use of core iron is more than counterbalanced by the extra work of building up the composite structure, besides which the distribution of the iron in three cores is somewhat less advantageous in itself than the concentration of each core about its own coils.

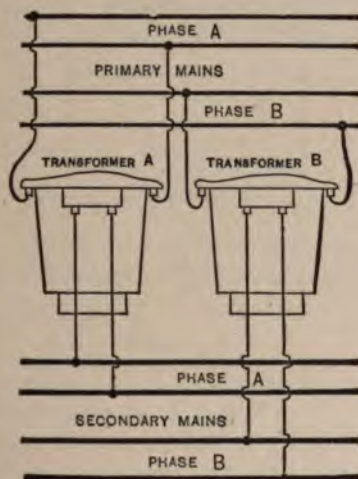


FIG. 107.

Several arrangements of transformers are employed in poly-phase working corresponding to the various arrangements of polyphase circuits. For example, in two-phase systems the transformers are generally connected as shown in Fig. 107. This is simply one transformer per phase connected in the ordinary manner. The two phases are kept distinct both as regards primary and secondary sides of the circuit. Fig. 108 shows the composite circuit method of connection. Both primary and secondary circuits have one wire common to both phases. In this case there is between the outside wires of the system a higher voltage than exists between either outside wire and the common wire. This voltage is of course the geometrical

sum of two separate phase-voltages. As these are 90° apart the resultant voltage is $\sqrt{2}$ times either component. Not infrequently the primary arrangement of Fig. 107 is combined with the secondary circuit of Fig. 108. This is the ordinary connection of two-phase motors, which are often built for this three-wire circuit. As a rule all lighting connections and all long circuits of any kind are made as shown in Fig. 107.

Transformers for three-phase circuits, are, like the circuits themselves, very seldom worked with the phases separated, but in nearly every case are combined in the star or mesh connection. The former is useful in dealing with very high voltages, since the individual transformers do not have to carry

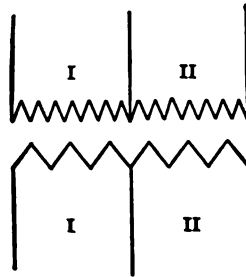



FIG. 108.

the full voltage between lines. Fig. 109 shows a diagram of the star connection and Fig. 110 the corresponding mesh. In each a, b, c , are the primary leads, and A, B, C the corresponding secondary leads. Of the two connections the mesh is rather the more in use except for high voltage work, and for secondary distribution with a connection to the common junction of the transformer system, which connection has for certain purposes very great advantages.

Whether the star or the mesh connection is employed, one transformer per phase is required, and this condition is sometimes inconvenient as rendering necessary the use of three small transformers where a two-phase system would need but two. To obviate this difficulty, what may be called the "resultant mesh" connection is extensively used, particularly for motors. The principles on which this is based have already been set forth.

Briefly, if one takes the geometrical sum of two E. M. Fs. not in phase with each other, the resultant will be less than the

arithmetical sum of the components, and not in phase with either. From the examples of geometrical summation already discussed, it is evident that by varying the magnitudes of the components and the angle between them, *i. e.*, their phase

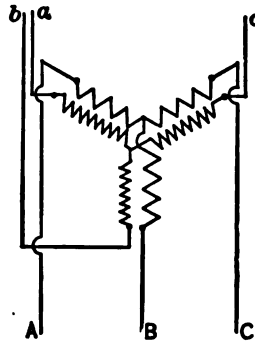

difference, the resultant may have any desired value and any direction with reference to either component.

The "resultant mesh" three-phase connection is shown

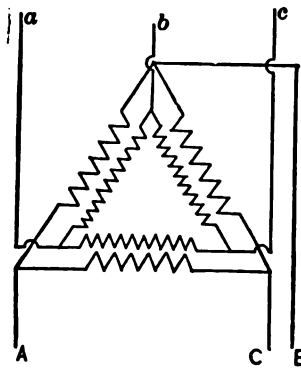


FIG. 110.

in Fig. 111. It is composed of two transformers instead of three as in Fig. 110, the E. M. F. between the points *A* and *C* being the resultant derived from the two existing secondaries. Each of these secondaries contributes its part of the output in the resultant phase, and the secondary circuit behaves

substantially as if it were derived from the ordinary mesh connection. This arrangement is very convenient in motor work, since it is very simple and allows the use of two transformers when desirable for the required output. Sometimes a motor is of a size that is fitted better by three standard transformers than by two, or the reverse, and with the choice of the two mesh connections it is often possible to avoid some extra expense or to utilize transformers that are on hand.

A very beautiful application of this principle of resultant E. M. F. is the change of a two-phase system into a three-phase, or *vice versa*. The method of doing this is shown in

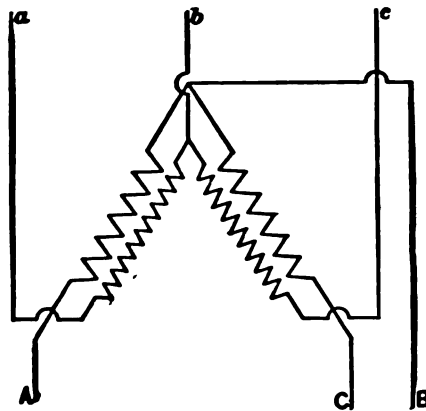


FIG. III.

Fig. 112. Suppose we have two equal E. M. Fs. 90° apart, as in the ordinary two-phase system, as the primary circuit. The secondary E. M. Fs. will still be 90° apart, but can be of any magnitude we please. Let one of these secondaries AC give say 100 volts, and tap it in the middle so that the halves, AD and DC will each be 50 volts; now wind the other secondary, BD , for $50\sqrt{3}$ volts, and connect one end of it to the middle point of the first secondary. Taking now the geometrical sums of BD with the two halves of AC , the resultants are equal to each other and to AC , and leads connected to A , B , and C will give three equal E. M. Fs. 120° apart, forming a three-phase mesh with two resultant E. M. Fs. instead of one, as in Fig. III. The actual connection of a 1,000-volt two-phase system to form a 100-volt three-phase secondary system is

shown in Fig. 113. Reversing the operation by supplying three-phase current to the three-phase side of the system gives a resultant two-phase circuit.

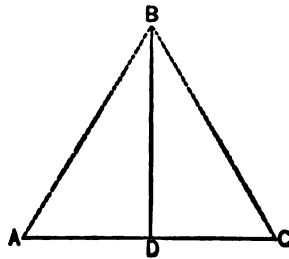


FIG. 112.

This change-over process is valuable in that it allows a three-phase transmission circuit to be used for the saving in copper characteristic of it, in connection with two-phase generating and distributing plants, and permits two-phase and

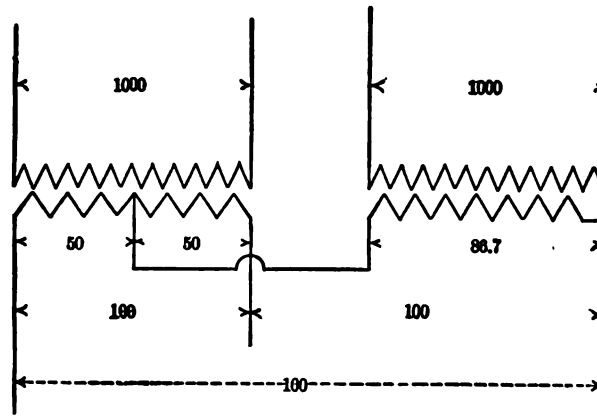


FIG. 113.

three-phase apparatus to be used interchangeably on the same circuit, which is sometimes advantageous. A somewhat analogous arrangement permits the transformation of a monocyclic primary circuit into a three-phase or two-phase secondary form, as may be convenient, and in fact any system with two or more phases may be transformed into any other similar system in the general manner described.

It is worth noting that the three phase-two-phase transformation shown in Fig. 113 can in an emergency be very readily made without special transformers if one has available transformers of ratios 9 : 1 and 10 : 1, respectively, both these being obtainable commercially. For the latter tapped from the middle of the secondary, as is common for three-wire work, gives the left-hand half of Fig. 113, while the 9 : 1 transformer is sufficiently near the required ratio to give the rest of the combination. Such an extemporized arrangement is very serviceable in operating three-phase induction motors from two-phase mains or *vice versa*, and can be put together very easily. In default of this it is easy enough in using standard transformers of makes in which the secondary windings are fairly accessible to tap the secondary winding so as to leave about 12 per cent. of it dead-ended, and this forms the supplementary transformer required.

The electrician will do well to familiarize himself with the handling of transformers in all sorts of connections, for in a sudden emergency a little deftness in this respect will often extricate him from an uncomfortable corner. For instance, one can connect transformers backwards to get high voltage for testing, or with the usual three-wire secondaries transform twice and reach half the primary voltage, or put several secondaries in series, with the corresponding primaries in multiple, or do many other things occasionally useful. The chief things to be borne in mind are that the normal currents in primaries and secondaries must not be exceeded, that the polarities must be kept straight and great care exercised not to inadvertently get any coils on short circuit.

One of the most useful temporary expedients is boosting the primary voltage by means of a standard transformer to meet excessive drop in a long feeder. The process is exceedingly simple, being merely the connection of the secondary in series with the line to be boosted, while the primary is put across the mains as usual. The result is that the feeder voltage is raised by nearly the amount of the secondary voltage. Fig. 114 shows a convenient way of arranging the connections, in which one of the primary lines is so connected to a double throw single-pole switch that while boosting goes on with the switch in the position shown, on throwing the switch to the reverse

position the booster is cut out and the line receives its current as usual. It must be remembered in such boosting that the strain on the transformer insulation is more severe than usual, and in particular that the strain between secondary coils and core is the full primary voltage, for which provision is seldom made in insulating secondaries from cores. Hence in rigging a booster transformer one of the oil-insulated type should be chosen, and it should be very carefully insulated from the ground. For the same reason the boosting transformer should be of ample capacity, so that it will not be likely to

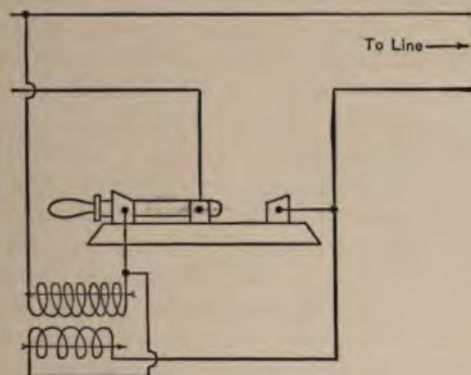


FIG. 114.

overheat, and should in general be treated rather gingerly, like any other piece of apparatus subject to unusual conditions. Nevertheless, it is capable of most effective service if properly operated.

All these systems which involve resultant E. M. Fs. are open to certain practical objections which may or may not be important according to circumstances.

In the first place, the resultant E. M. F. is less than the sum of the E. M. Fs. for which the transformers in the component circuits are wound. For instance, in Figs. 111 and 113, 100 resultant volts are derived from transformers aggregating respectively 200 and 186.7 volts, through the secondaries of which the resultant current has to flow. In the former case one-third and in the latter case two-thirds of the total current is thus derived at a disadvantage, using up more transformer capacity for a given amount of energy than if the transformers

were used in the normal manner. On a small scale the disadvantage is seldom felt, but in heavy transmission work with large transformers it may be quite perceptible.

Second, the disturbance of any one component voltage from drop or inductance, or any shifting of phase between the components from unequal lag, disturbs all the resultant E. M. Fs. This, again, may or may not be of importance, but it must always be borne in mind, as in every case of combined phases.

It is possible by combinations of transformers similar to those described, to obtain at some sacrifice in transformer capacity a single-phase resultant E. M. F. from polyphase

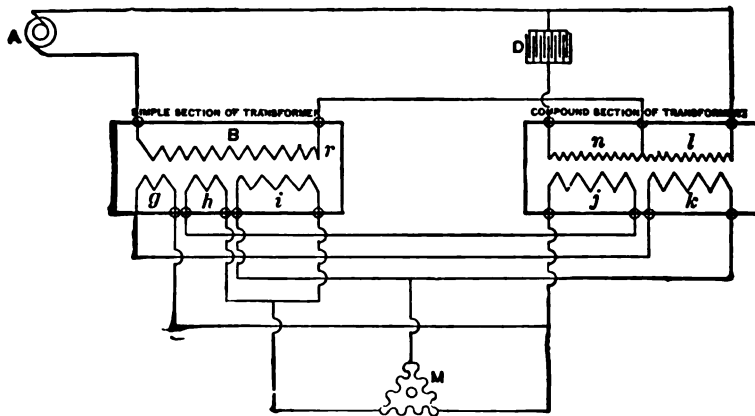


FIG. 115.

components, or to split up a single-phase current, by the aid of inductance and capacity, into polyphase currents. Neither process is employed commercially as yet, since both encounter in aggravated form the difficulties common to resultant phase working mentioned above, and others due to the special form of the combinations attempted. Combining polyphase currents for a single-phase resultant is a process that would be very seldom useful, but the reverse process if it were successfully carried out might be of very great importance in certain distribution problems, and especially in electric railway practice, although in working on the large scale that offers the best field for alternating motors the disadvantage of two trolleys is at a minimum. One very ingenious method of splitting an al-

ternating current into three-phase components is the following, due to Mr. C. S. Bradley, one of the pioneers in polyphase work. His process is essentially twofold, first splitting the original current into a pair of components in quadrature and then combining these somewhat as in Fig. 113. The apparatus is shown in diagram in Fig. 115. Here A is the generator, B the simple primary of one transformer element, D a condenser, n and l the sections of the compound transformer primary, and g, h, i, j, k the secondary transformer sections. The condenser D is so proportioned that acting in conjunction with the compound primary $n l$ the original current is split into two components in quadrature, in B and $n l$ respectively. Then the secondaries are so interconnected as to produce three-phase resultant currents which are fed to the motor M . The coil i gives one phase, the resultant of g and k another, and the resultant of h and j the third. The combination of these resultants gives a more uniform and stable phase relation under varying loads than would be obtained from two-phase secondaries fed by B and $n l$ respectively. The condenser is necessary in getting a correct two-phase relation in the primaries to start with, and even so the E. M. Fs. will not stay in quadrature under a varying load on the secondaries unless the condenser capacity be varied, but the recombination in the secondaries partially obviates this difficulty. A device brought out abroad by M. Korda for a similar purpose omits the condenser and splits the monophase current into two components 60° apart by variation of inductance alone, and these are utilized to give three-phase resultants. The phase relations thus obtained are, however, somewhat unstable, as must always be the case in phase splitting by inductance alone. For the energy supplied by a monophase current is essentially discontinuous, while the energy of a polyphase circuit has no periodic zero values, so that in passing from one to the other there should be storage of energy during part of each cycle such as is obtained by the condenser of Fig. 115.

CHAPTER VI.

SYNCHRONOUS AND INDUCTION MOTORS.

THE principles of the synchronous alternating motor are a snare for the unwary student of alternating current working, since they involve, when discussed in the usual way, rather complicated mathematical considerations. And the worst of it is that the generalized treatment of the subject often causes one to lose sight of the fundamental ideas that are at the root of alternating and continuous current motors alike. The subject is at best not very simple, and unless we are prepared to attack the general theory with all its many considerations, it is desirable not to cut loose from the common basis of all motor work.

Recurring to the rudimentary facts set forth in Chapter I, we see that an electric motor consists essentially of two working parts—a magnetic field and a movable wire carrying an electric current. The motive-power—torque—is due to the reaction between the magnetic stresses set up by the current and those due to the field. The refinements of motor design are concerned with the efficient production of these two sets of stresses and their co-ordination in such wise that their reaction shall produce a powerful torque in a uniform direction.

In continuous current motors, for example, the field magnets are energized by a part or the whole of the working-current, and this current is passed, before entering the armature, through a commutator like that of the generator, so that in the armature the direction of the currents through the working conductors shall be reversed at the proper time, so as to react in a uniform direction with field poles which are consecutively of opposite polarity. Were it not for the commutator the armature would, on turning on the current, stick fast in one position, as may happen when there is a defect in the winding.

Now, since the function of the commutator in the generator is to change a current normally alternating, so that it shall

flow continuously in one direction, and since the object of the commutator in the motor is periodically to reverse this current in the armature coils, thus getting back to the original current again, one naturally asks the reason for going to all this trouble. Why not let the generator armature do the reversing instead of providing two commutators—the second to undo the work of the first?

The reason is not far to seek. In a generator running at uniform speed the reversals of current take place at certain fixed times—whenever an armature coil passes from pole to pole, quite irrespective of the needs of the motor. The commutator on the other hand reverses the current in the motor armature coils in certain fixed positions with respect to the field poles so as to produce a continuous pull, irrespective of what the generator is doing.

If we abolish the commutators the motor will run properly only when the alternating impulses received from the generator catch the armature coils systematically in the same positions in which reversal would be accomplished by the commutator. Hence for a fixed speed of the generator the impulses will be properly timed only when the motor armature is turning at such a speed that each coil passes its proper reversal point simultaneously with each reversal of the generator current. If generator and motor have the same number of poles, this condition will be fulfilled only when they are running at exactly the same number of revolutions per minute. In any case they must run synchronously *pole for pole*, so that if the motor has twice as many poles as the generator, it will be in synchronism at half the speed in revolutions per minute, and so on.

If we try to dispense with the commutators when starting the motor from rest, the action will obviously be as follows: The first impulse from the generator might be in either direction, according to the moment at which the switch was thrown. The reaction between this current in the armature coils and the field poles might tend to pull the armature in either direction, but long before the torque could overcome the inertia of the armature a reverse impulse would come from the generator and undo the work of the first. Consequently the motor would fail to start at all.

If the impulses from the generator came very slowly indeed, so that the first could give the armature a start before the second came, the armature would stand a chance of getting somewhere near its proper reversal point before the arrival of the reverse current, and thus might get a helping pull that would improve matters at the next reversal, but the direction of the first impulse would be quite fortuitous. Starting the armature in either direction before the current is thrown on gives it a better chance to go ahead if the first impulses in the wrong direction are not strong enough to stop it altogether.

We see, then, that an alternating current derived directly from the generator does not give reversals in the motor coils that are equivalent to the action of a commutator, save at synchronous speed. Except at this speed the current from

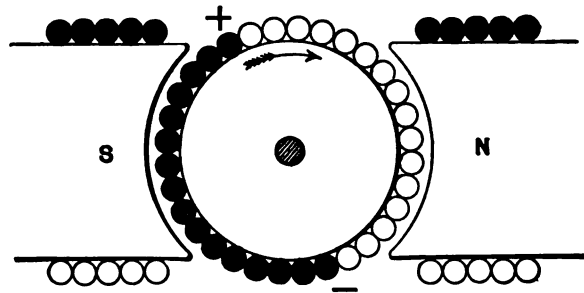


FIG. 116.

the generator does not reverse in the motor armature coils when the latter are in the proper position.

Fig. 116 will give a clear idea of the condition of affairs in the field and armature conductors of a continuous current motor. Here *S* and *N* are the poles, and + and - mark the positions of the positive and negative brushes with reference to the armature winding. The solid black conductors carry current flowing down into the plane of the paper. The white conductors carry current upward. The armature turns in the direction of the arrow, and as each conductor passes under the brush the current in it is reversed. This distribution of current is necessary to the proper operation of the motor, and if the brushes are moved the motor will run more and more weakly, and then stop and begin to run in the opposite direc-

tion, until when the brushes have moved 180° the motor will be running at full power in the reverse direction. This final position means that the currents in the two halves of the armature have exchanged directions, so that the conductors originally attracted toward *N* and repelled from *S*, are now repelled from *N* and attracted toward *S*. If alternating current from the generator is led into the windings, the distribution of current shown in Fig. 116 must be preserved, and since in abolishing the commutator the alternating current leads are permanently connected to two opposite armature coils through slip rings, the distribution of Fig. 116 can only be preserved when these leads change places by making a half revolution every time the current reverses its direction.

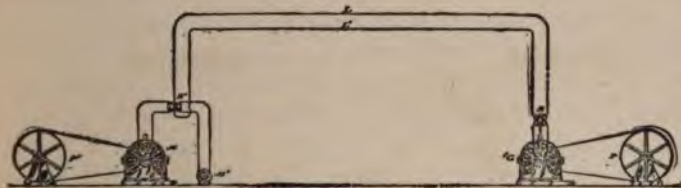


FIG. 117.

Otherwise the distribution of currents will be changed, and the motor will fail to operate, since each reversal of current will catch the armature in a wrong position, and may tend to turn it in the wrong direction as much as in the right.

Hence such a motor must run in synchronism, or not at all, and to operate properly it must either be brought to full synchronous speed before the alternating current is turned on, or nursed into action by running the generator very slowly, working the motor into synchronous running at very low speed, and then gradually speeding up the generator, thus slowly pulling the motor up to full speed. In practice the former method is uniformly employed, and the machine used as a synchronous motor is substantially a duplicate of the alternating generator as already described. In fact, it is an alternating generator worked as a motor, just as a continuous current motor is the same thing as the corresponding generator.

Fig. 117 gives a clear idea of the way in which synchronous alternating motors are employed for power transmission.

Here G is the generator driven from the pulley P . S is a switch connecting the generator to the line wires $L L$. At the motor end of the line is a second switch S' , which can connect the line either with the synchronous motor M , or the starting motor M' . This latter is usually some form of self-starting alternating motor to which current is first applied. M' then gradually brings M up to synchronous speed; when the switch S' is thrown over, the main current is turned on M , and then the load is thrown on the driving pulley P' by a friction clutch or some similar device.

Such a system has certain very interesting and valuable properties. We can perhaps best comprehend them by comparing them with the properties of continuous current motor systems.

In the alternating system both generator and motor are usually separately excited, which means really that the field strengths are nearly constant; as constant in fact as those in a well designed shunt-wound generator and motor for continuous current.

Now we have seen that this latter system is beautifully self-regulating. Whatever the load on the motor, the speed is nearly constant, and the current is closely proportional to the load. If the load increases, the speed falls off just that minute amount necessary to lower the counter E. M. F. enough to let through sufficient current to handle the new load. The effective E. M. F. is the difference between E , the impressed E. M. F. and E' , the counter E. M. F. The current produced by this E. M. F. is determined by Ohm's law.

$$C = \frac{E - E'}{r} \quad (1)$$

where r is the armature resistance, and since we have seen that the output of the motor is measured by the counter E. M. F.,

$$W = C E' \quad (2)$$

where W , in watts, includes frictional and other work. E' , neglecting armature reaction, is proportional to the speed of the armature, which falls under load just enough to satisfy equation (2) by letting through the necessary current.

Now we have seen that when we abandon the commutator the motor has to run at true synchronous speed, or else lose its grip

entirely. How can it adjust itself to changing conditions of load? If the load increases, more current is demanded to keep up the output, but the field strength remains constant, and the counter E. M. F. of the motor cannot fall by reduction of speed. We must note that while in a continuous-current motor the counter E. M. F. of the armature is constant at uniform speed, in an alternating motor the counter E. M. F. varies like that of the generator, following approximately a sinusoidal curve, as the position of the armature with respect to the field poles varies.

Hence at any given instant the counter E. M. F., the speed and field strength remaining the same, depends on the position of the motor armature. In Fig. 118 we have a pair of alternating machines, generator *A* and motor *B*. In normal running

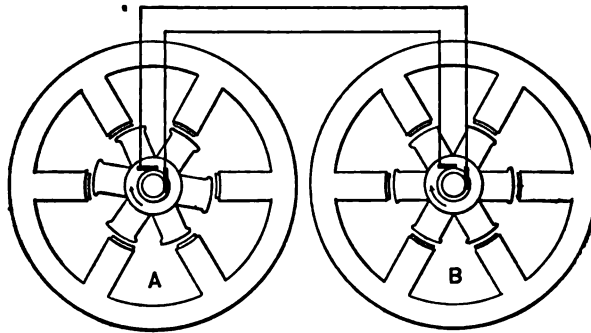


FIG. 118.

at light load, the two are nearly in opposite phase, since of course the impressed and counter E. M. Fs. are virtually in opposition.

Now, if there is an increase of load the motor armature sags backward a little under the strain, thereby lessening the component of its counter E. M. F. that is in opposition to the impressed E. M. F. The current increases, and with it the torque, and the sagging process stops when the torque is great enough to carry the new load at synchronous speed. The change of phase in the counter E. M. F. thus takes the place of change of absolute speed in the continuous current motor, by the same general process of increasing the E. M. F. effective in forcing current through the circuit. This effective E. M. F. is generally by no means in phase with the impressed

E. M. F., and in general the current and the impressed E. M. F. are not in phase in a synchronous motor. Here, as elsewhere, the input of energy is

$$C E \cos \phi,$$

while the output, which in the continuous current motor is simply the product of the current and the counter E. M. F., in the synchronous motor depends evidently on such parts of both as are in phase with each other, *i. e.*,

$$W = C E' \cos \phi' \quad (3),$$

in which ϕ' is the angle between current and counter E. M. F. Likewise the current, which in the continuous current motor depends on the effective E. M. F. and the resistance, now depends on the counter E. M. F. and the impedance I . So that

$$C = \frac{E - E'}{I} \quad (4).$$

In this equation the values of all the quantities depend on their relative directions, and by combining geometrically the

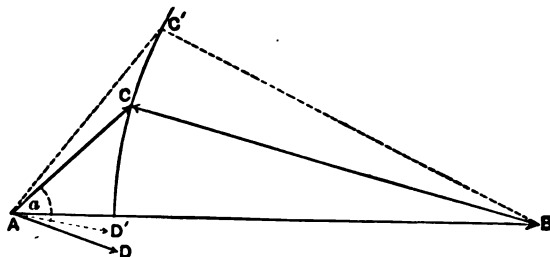


FIG. 119.

factors of (4) we can form a clear idea of the singular relations that may be found in synchronous motor practice.

The construction is similar to that found in Fig. 51, p. 130.

In Fig. 119, we will start with an assumed impressed E. M. F. of 1000 volts, a counter E. M. F. of 800 volts and an impedance composed of 5 ohms resistance and 10 ohms equivalent inductance.

To begin with, we will lay off the impressed E. M. F. AB , and then the counter E. M. F. BC , which as we have seen is in partial opposition to AB . In this case AC is the resultant E. M. F., which, on the scale taken, is 300 volts. This, then, is the available E. M. F. taken up by the inductive and ohmic drops in the armature. The next step is to find C (eq. 4),

from I , and the value of $E - E'$, just obtained. To obtain I , we must combine resistance and inductance, as shown in Fig. 109. Performing this operation, it appears that $I = 11.18$. Hence in the case in hand $C = \frac{300}{11.18} = 26.8+$ amperes. As to the direction of this current, we know that it is at right angles to the inductive E. M. F., *i. e.*, is in phase with the resistance in Fig. 120. Solving that triangle to obtain the angle between the current and impedance, it turns out to be a little over 63° , being the angle whose tangent is $\frac{1}{2}$. Laying off this angle a from AC , the impedance in Fig. 119, we find the current to be in the direction AD . This current then is out of phase with the impressed E. M. F. by the angle of lag DAB . It is also out of phase with the counter E. M. F., though by chance very

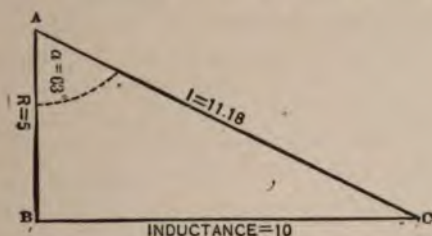


FIG. 120.

slightly, and lags behind the resultant E. M. F. AC , by the angle a . Being nearly in phase with the counter E. M. F., the gross output of the motor is approximately $26.8 \times 800 = 21.4$ KW.

Now, what happens when the load increases? The motor armature sags back a few degrees under the added torque, and the counter E. M. F. takes the new position BC' . The new resultant E. M. F. is AC' , which on the scale taken equals 450 volts. The new value of the current is $C = \frac{450}{11.18} = 40.25$ amperes, and its phase direction, 63° from AC' , is AD' . The new angle of lag is then $D'AB$, showing that under the larger load the power factor of the motor has improved. If CB should lag still more, AC' , together with the current, would keep on increasing. Evidently, too, the angle of lag $D'AB$ will grow less and less until $AC'B$ becomes a right angle,

when in the case shown it will be very minute, and the power factor will be almost unity. Beyond this point the angle $C'AB$ will obviously begin to decrease, and $D'AB$ will begin to open out, again lowering the power factor at very heavy loads.

Hence it appears that at a given excitation there is a particular load for which the power factor is a maximum, and it is evident from the figure that in the example taken this maximum will be higher as the inductance of the system decreases, and also will pertain to a smaller output. Let us now see what happens when the excitation of the motor is varied. In Fig. 121 the conditions are the same as before, except that we

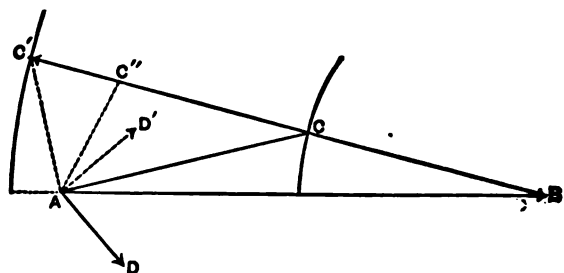


FIG. 121.

assume counter E. M. Fs. of 500 volts corresponding to C and 1,100 volts corresponding to C' . Examining the former, the resultant E. M. F. is $AC = 528$ volts, the corresponding current is 47+ amperes and the angle of lag DAB is much greater than before. The power factor evidently would still be rather bad under increased loads, and worse yet, when at lighter loads the angle ABC decreases. Lessened inductance, however, would help the power factor by decreasing the angle CAD , and hence BAD . Now, consider the result of increasing the motor excitation to $BC' = 1,100$ volts. The resultant E. M. F. now becomes AC' , being shifted forward nearly 90° , its value is 280 volts and the current is 25+ amperes. But this current is now in the direction AD' , a being the same as before, and hence it no longer lags, but *leads* the impressed E. M. F. by nearly 45° . The power factor is therefore still bad, but gets better instead of worse under loads greater than that shown. Inductance in the

system now improves the power factor, and combined with heavy load might bring the current back into phase with the impressed E. M. F.

The counter E. M. Fs. corresponding to C and C' are rather extreme cases for the assumed conditions, but it is easy to find a value for the excitation which would annul the lag exactly for a particular value of the load. Laying off in Fig. 121, $C''AB = C'AD'$ we find the required counter E. M. F., which is very nearly 910 volts. At the particular output corresponding to this condition, the power factor is unity, the current and the impressed E. M. F. are in phase, and since the current is therefore a minimum for the output in question, the efficiency of the conducting system is a maximum. At this point, too, the energy is correctly measured by the product of volts and amperes, so that if wattmeters are not at hand the input at a synchronous motor can be closely approximated at any steady load by varying the field until the armature current is a minimum, and reading volts and amperes.

Throughout this investigation it has been assumed that the ratio of resistance and inductance has been constant. This is not accurately true, but is approximately so when the inductance is fairly low. The phenomenon of leading current in a synchronous motor system does not indicate that the current, in some mysterious way, has been forced ahead of the E. M. F. which produces it, for the impressed E. M. F. is not responsible for the current, which is determined solely by the resultant E. M. F. behind which the current invariably lags.

The net practical result of all this is that a synchronous alternating motor, under varying excitation, is capable of increasing, diminishing, or annulling the inductance of the system with which it is connected, or can even produce the same result as a condenser in causing the current to lead the impressed E. M. F. The maximum torque of the motor, which determines the maximum output, is determined by the greatest possible value of $C E' \cos \phi'$ consistent with the given impedance and electromotive forces. The stronger the motor field, and the less the armature inductances and reactions of both generator and motor, the greater the ultimate load that can be reached without overburdening the motor and pulling it out of step.

As regards the relation in phase between current and impressed E. M. F., the three commonest cases are those for which the currents were computed for Figs. 120 and 121. The first, and commonly the most desirable, is that in which the current lags slightly at small loads, gradually lags less and less, comes into phase, or very nearly so, at about average load, and lags slightly again at heavy loads. The maximum efficiency of transmission, reached when the lag touches zero, is then at about average load. The second and commoner case is when the motor is rather under-excited, so that the lag merely reaches a rather large minimum, never touching zero. The third case is that in which the current leads at all moderate loads, passes through zero lag, and then lags more and more. The average power factor may be the same as in the first case, but more energy is required for excitation, and no advantage is gained except in carrying extreme loads, often undesirable on account of overheating, or in modifying the general lag factor.

It is highly desirable for economy in transmission that the product of current and E. M. F. should be a minimum for the required load. This condition can be fulfilled for the motor circuit at any load by changing the excitation until the current for that load becomes a minimum. Further, the field of a uniformly loaded motor may in the same way be made to bring the entire line current of the system to a minimum if the motor be of sufficient capacity. Thus a synchronous motor load can be made very useful in improving the general conditions of transmission. By changing the motor excitation as the load on the motor or the system varies, the power factor can be kept at or near unity for all working loads.

Fig. 122 shows the power factor of a synchronous motor somewhat under-excited, and that of a similar machine with a field strong enough to produce lead at moderate loads. With proper adjustment of its field, the effect of a synchronous motor on the general conditions of distribution is very beneficial. In curve *A*, Fig. 122, the indications are that the motor had rather a high inductance and armature reaction, and the excitation was decidedly too low for good results. Curve *B* is from a 300 HP motor, with its field adjusted for zero lag at about $\frac{1}{2}$ load. The inductance was low and the armature

reaction small. The result is somewhat startling. Even at $\frac{1}{8}$ load the power factor (current leading) is about .93. At half load it has passed .99, touches unity, and then slowly diminishes to very nearly .98 (lagging) at full load. In this case the generator was held accurately at voltage while the excitation of the motor was uniform. Both were polyphase machines wound for 2,500 volts.

When a synchronous motor is used in this manner, it obviously will show, at the same load, values of the current varying if the excitation be varied. For any load the minimum current is given by that excitation which brings the current into phase

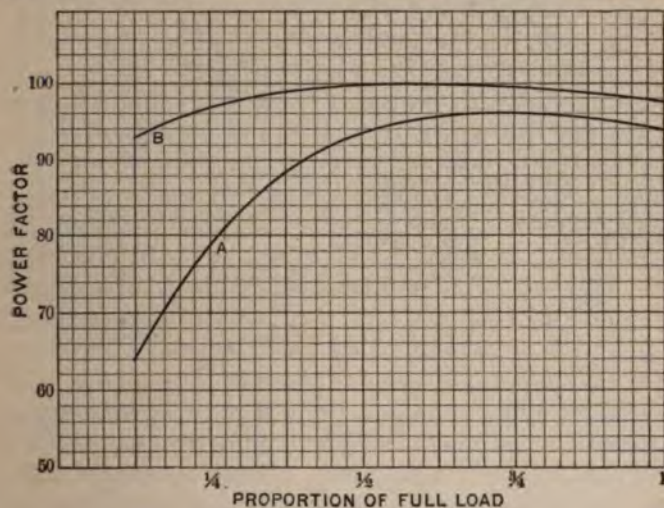


FIG. 122.

with the impressed E. M. F. This point is fairly well defined. At less excitation the current lags, with more it leads.

Fig. 123 shows for a particular instance the relations between the current and the excitation of the motor field, at full load of the motor. It is evidently easy to adjust the excitation to the proper point.

In the practical work of power transmission the synchronous motor has several salient advantages to commend it. At constant frequency it holds its speed absolutely, entirely independent of both load and voltage until, from excessive load or greatly diminished voltage, it falls out of phase and stops.

It constitutes a load that is substantially non-inductive, so that it causes no embarrassing inductive complications in the system, and takes current almost exactly in proportion to its work.

Finally it can be made to serve the same end as a condenser of gigantic capacity in compensating for inductances elsewhere in the system, and thus raising the general power factor substantially to unity.

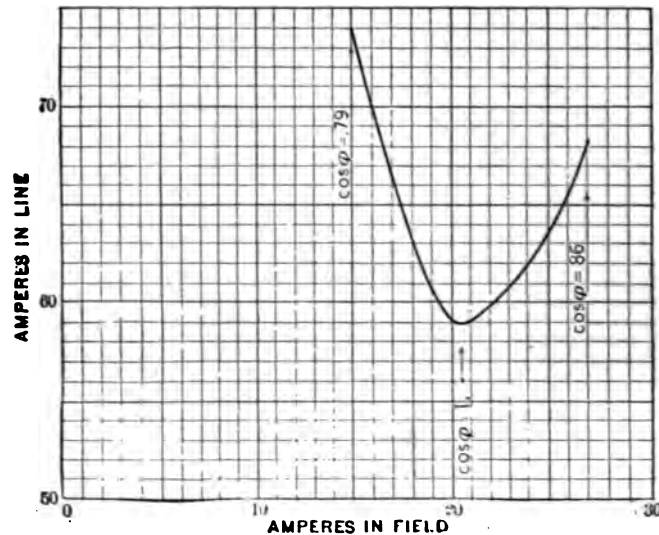


FIG. 123.

As compensating disadvantages, it must run at one fixed uniform speed under all conditions, it is not self-starting, and it requires the constant use of a continuous-current exciter.

For many purposes the fixed speed is no objection, and in most large work the exciter can be used without inconvenience. Inability to start unaided, even when quite unloaded, is on the other hand a very serious matter, and has driven engineers to many ingenious subterfuges. The simplest of these is to provide a starting motor, which is supplied with power by any convenient means, and serves to bring the main machine up to synchronous speed. Then the main current is thrown on, the motor falls into synchronism, and the load is taken up by means of a clutch. The difficulty is to start the starting

motor. In transmissions of moderate length, continuous current may be delivered over the main line from the exciter of the generator to the exciter of the motor, which is thereby driven as a motor, and brings the alternating motor up to speed. As the energy required for this work is not great, say 10 per cent. of the whole power transmitted, it can often be delivered quite easily. At long distances, however, the drop becomes too great for the moderate voltages available with continuous current, and other methods have to be used.

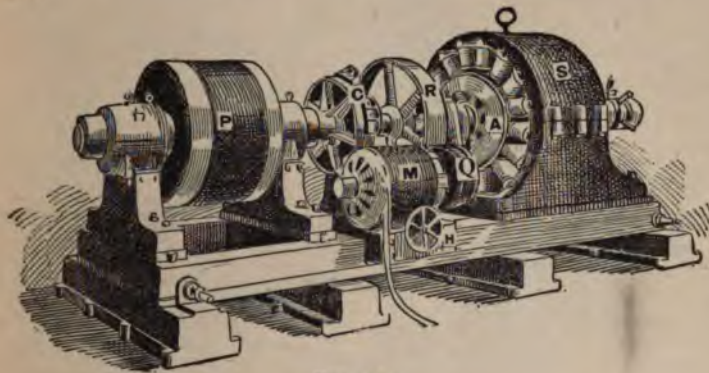


FIG. 124.

The best known of these is one used in a large pioneer alternating plant at Telluride, Col. This method is shown in Fig. 124. The main synchronous motor *S* is connected to its driving pulley *P* through the friction clutch *C*. On the motor shaft is a friction pulley *R*. The starting motor *M* is a Tesla induction motor, fitted to run on a single-phase circuit, and supplied with a friction pulley *Q*. *M* slides upon ways so that by turning the handle *H*, *Q* can be brought into contact with *R*.

In starting, current is first thrown upon *M*, bringing it up to speed. Then, the clutch *C* having been opened, *M* is moved until *Q* and *R* are in good contact, and rapidly brings *S* up to speed. The current is then thrown from *M* into the armature *A* of the large motor, the load is taken up by tightening the clutch *C*, and *M* is withdrawn to its original position. The process is quite simple and easy, and the apparatus worked

well, although it has now for several years been replaced by polyphase machinery.

Another method sometimes used is a special commutator to rectify the current applied to the main motor armature, thus directing the impulses so as to secure a small starting torque,

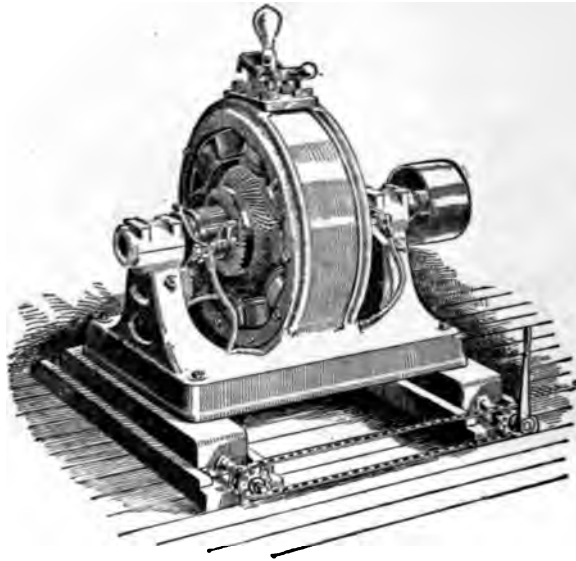


FIG. 125.

enough to bring the motor to speed. Then the commutator is abandoned and the motor falls to running synchronously.

An ingenious modification of this plan is found in the self-starting synchronous motor of the Fort Wayne Electric Corporation, shown in Fig. 125.

This machine has a double-wound armature. The main winding is of the kind usual in alternators, wound in slots in the armature core, and the leads belonging to it connect with the collecting rings *via* the brushes on the pulley end of the shaft.

The other winding is a common continuous current drum-winding, laid uniformly on the exterior of the armature. It is provided with a regular commutator as shown in the figure.

The field is of laminated iron, and the field coils are in duplicate, there being a coarse wire winding which in starting is in series with the commutated armature winding, and a fine wire winding cut out in starting, but used alone when the motor is at speed.

Now, when alternating current is fed into a series-wound continuous current motor, the machine will start itself and run, for although the armature current reverses at all sorts of times with respect to the winding, the field also reverses simultaneously, so that the motor tends to run in the same direction, the relation between the currents in armature and field being quite unchanged by the reversal.

The motor in question is started by turning the alternating current, reduced to a moderate voltage by transformation, into the series field and the commutated winding. The machine then starts with a good torque, and when it has reached synchronous speed, indicated by the pilot lamp on the top of the motor being thrown into circuit by a small centrifugal governor, a switch is thrown over, sending the main current through the alternating winding and closing the fine-wire field circuit upon the commutator, at the same time cutting out the series coils. The motor then runs synchronously, the excitation being furnished by the fine wire winding. This construction is best suited for rather small machines, as the double-winding is rather cumbersome for large motors.

Except for inevitable sparking and rather high inductance, a series-wound commutating motor could be successfully used on alternating circuits, particularly of low frequency. When the series connection is used only for starting, little trouble is encountered from these causes.

At present the tendency in synchronous motor practice is wholly toward the use of polyphase machines. These will start, when properly designed, as *induction* motors, or may be started by separate motors. When at speed the field excitation is thrown on, and the machine thereafter runs in synchronism. Synchronous polyphase motors possess the same general properties as other synchronous motors, and as most power transmission work is now done by polyphase currents, they are widely used. The Telluride plant mentioned is now changed to the quarter phase system.

In general transmission work, synchronous motors find their most useful place in rather heavy work, which can be readily done at constant speed.

They have high power factors even when used for very varying loads, and are valuable in neutralizing inductance in the line and the rest of the load. Even when not deliberately used for this purpose, they raise the general power factor, and thus have a steadying effect that is very useful. When working under steady load and excited correctly, they almost eliminate the lagging current that sometimes becomes so great a nuisance in alternating current working.

The polyphase synchronous motors will run steadily even if one of the leads be broken, working then as mono-phase machines, and by stiffening the excitation will generally carry their full normal loads without falling out of synchronism; but, of course, with increased heating.

In one case that came to the author's notice, such an accident befell a three-phase synchronous motor, which went quietly on driving its load of 1,700 looms for four hours, until the mill shut down at night.

For small motor work synchronous machines are somewhat at a disadvantage, from the complication of the exciter and inability to start under load. In sizes below 100 HP they have been very generally superseded by the far simpler and more convenient induction motor, the use of which is a most characteristic feature of modern power transmission. In the use of synchronous motors, both monophase and polyphase, there has been often encountered an annoying and sometimes alarming phenomenon known as "hunting," or where several machines are involved, as "pumping." In mild cases it appears merely as a small periodic variation or pulsation of the current taken by the motor, often sufficient to cause embarrassing periodic variations in the voltage of the system. The frequency is ordinarily one or two periods per second, varying irregularly in different cases, but being nearly constant for the same machine. The amplitude may vary from a few per cent. of the normal current upwards. Generally the amplitude remains nearly constant after the phenomenon is fairly established, but sometimes it sets in with great violence and the amplitude rapidly increases until the motor actually falls out of synchronism.

This is usually the result of pumping between two or more motors, and seems to be especially serious in rotary converters, not only throwing them out of synchronism, but throwing load off and on the generators with dangerous violence.

Fig. 126 shows a facsimile of a record from a recording voltmeter showing the pulsation of the voltage on the system

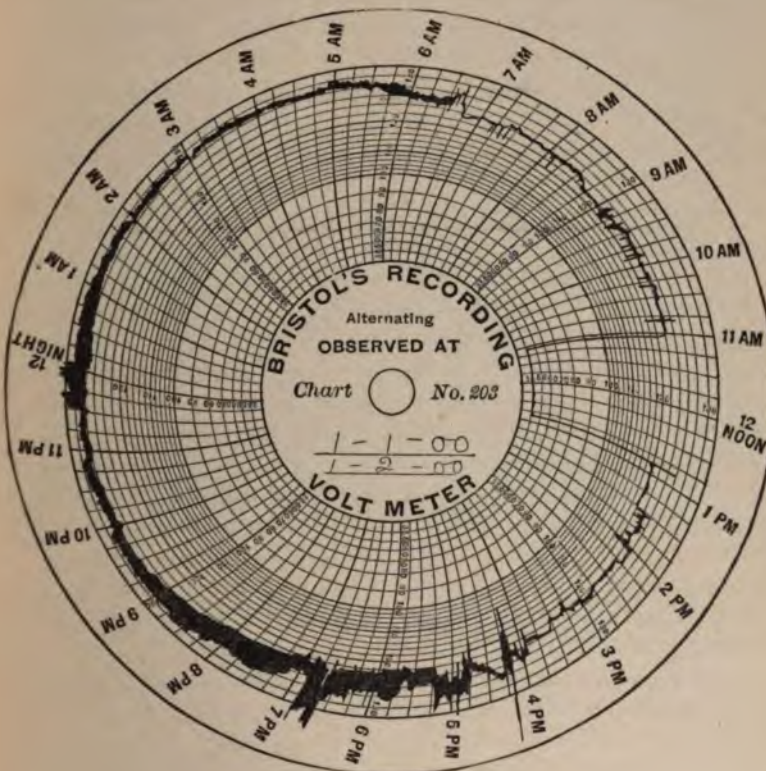


FIG. 126.

produced by the hunting of a 300 HP synchronous motor. It set in as the peak of the load came upon the system and persisted until the peak subsided, when it was gotten under control, only to break out again when the late evening load fell off. During the early evening it was so severe as to produce painful flickering in all the incandescents on the circuit.

In this case the dynamo tender was inexperienced and had

not acquired the knack of so juggling the field current as to suppress the hunting. A few months later the same system was in regular operation without the least trouble from hunting, the operators by this time having been thoroughly broken in. In the majority of cases adroit variation of the field strength abolishes hunting, which almost always starts with a sharp change in load or power factor. Just how to handle the excitation to obtain the best results is a matter of experiment in each particular case, but except in cases of unusually serious character the knack is soon acquired. A rather strong field often steadies things, although if strong enough to produce leading current the trouble is sometimes aggravated. But in this case, as in operating alternators in parallel, the best running conditions have to be learned by experience.

Much yet remains to be learned about the exact nature of hunting, but its general character is about as follows: A sudden change in current or phase causes the armature to seek a new position of equilibrium. In so doing the sudden change in the armature reaction momentarily changes the field strength, which aggravates the instability already existing and causes the armature under the influence of its own inertia to overreach and run beyond its normal position of equilibrium. Then the field recovers and the armature swings back, once more shifting the field and again overrunning, and so on *ad nauseam*. The pulsation of the exciting current in cases of hunting is generally very conspicuous, and the periodicity of the hunting seems to correspond in general with the time constant of the field magnetization.

A fly-wheel on the motor or direct connection to a heavy machine generally increases the trouble, while belted and flexibly connected motors suffer less. Heavy drop in the supply lines, which makes the voltage at the motor sensitive to variations of current, and low reactance in the armature, which favors large fluctuations of current, are conditions specially favorable to violent hunting. Rotary converters in which the armature current and its reactions are very heavy compared with that component of the current which is directly concerned with the rotation of the machine as a synchronous motor, are subject to peculiarly vicious hunting, which has often risen to the point where it threw the rotary out of synchronism.

They are far less stable in this particular than ordinary synchronous motors, and cannot readily be controlled by varying the excitation on account of the consequent variation of voltage on the continuous current side.

Motors and rotaries having their pole pieces not laminated, but solid, often show less tendency to hunt than machines with laminated poles. If the poles are solid any violent swaying of the armature current with reference to them is checked and damped by the resulting eddy currents, so that the hunting is

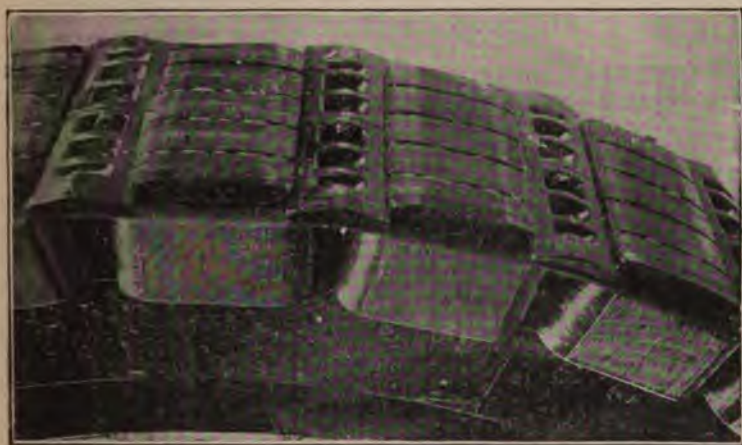


FIG. 127.

pretty effectively choked. For the same reason alternators in parallel are less likely to pump if they have solid poles, and most foreign machines are built in such wise. Here, where laminated poles are just now the rule, recourse is had to "bridges" or "shields." These are essentially heavy flanges of copper or bronze attached to the edges of the poles so that fluctuations of armature reaction and of field are damped by heavy eddy currents whenever they arise. An example of such practice is shown in Fig. 127, which shows a portion of the revolving field of a large polyphase generator fitted with massive castings, bridging the spaces from pole piece to pole piece and serving at once to hold the field coils rigidly wedged into place and to check pumping when the generators are running in parallel. A similar device is used in connection with many rotary

converters with a very fair degree of success. Occasionally pumping may be traced to some definite cause like a defective engine governor having a periodic vibration, but more often the phenomenon is purely electromagnetic. The use of shields or solid pole pieces constitutes the best general remedy, for, while adjustment of the field is often effective, it is often desirable to adjust the field for other purposes, and the necessity of varying it to suppress hunting is sometimes very embarrassing, if not impossible.

INDUCTION MOTORS.

An induction motor is a motor into which working current is introduced by electromagnetic induction instead of by brushes. It has therefore two distinct, although co-ordinated, functions—transformer and motor. To understand its action we must take care not to confuse these functions, and this is best done by recurring to the fundamental principles that are at the root of all motors of whatever kind.

An electric motor consists of these essential parts, viz.: A magnetic field, a movable system of wires carrying electric currents and means for organizing these two elements so as to produce continuous torque.

These parts are beautifully shown in their elementary simplicity in Barlow's wheel, Fig. 128, invented nearly three-quarters of a century ago.

In this machine *NS* is the permanent field-magnet, the arms of the star-shaped wheel are the current-carrying conductors, and a little trough placed between the magnet poles, and partly filled with mercury, serves with the wheel as a commutator. Its function is to shift the current from one conductor to the next following one, when the first passes out of an advantageous position. In other words it keeps the current flowing so as to produce a constant torque, irrespective of the movement of the conductors. Such is precisely the function of the modern commutator, and it is interesting to note that the device of making the armature conductors themselves serve as the commutator is successfully used in some of the best modern machines.

These same fundamental parts are found alike in motors

designed for continuous or for alternating currents. We have already seen that a series-wound motor can serve for use with both kinds of current, since the commutator distributes the current alike for both, and since the direction of the torque is determined by the relative direction of the main field and that due to the moving conductors, alternations which affect both symmetrically leave the torque unchanged.

We have seen also that if the distribution of currents given by the commutator can be simulated by supplying the armature with alternating impulses timed as the commutator would

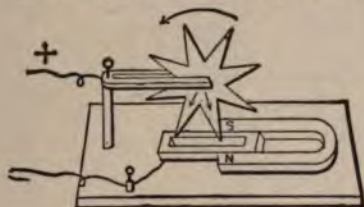


FIG. 128.

time them, we can dispense with the commutator, and substitute two slip rings. In this case, however, the motor will only run when in synchronism, since then only will the alternating impulses from the generator be properly distributed in the armature, as has already been explained. Besides, the current has to be introduced into the armature through brushes bearing on a pair of slip rings, and an exciter is required to supply the field. If one could use an alternating field, and induce the currents in the armature as one would in the secondary of a common transformer, the machine would be of almost ideal simplicity.

This is what is accomplished in the induction motor. The field is supplied with alternating current, and the working current is induced directly in the armature conductors.

To this end the brushes used in the previous examples may be replaced by a pair of inducing poles, carrying the primary windings, to which the armature windings play the rôle of secondary. These armature windings are therefore closed on themselves, instead of being brought out to slip rings.

For this short-circuited winding various forms are employed, the simplest being shown in Fig. 129. It consists of a set of copper bars thrust through holes near the periphery of the

laminated armature core, and all connected together at each end by heavy copper rings.

The simplest arrangement of field and inducing poles is shown in Fig. 130. Here each pair of opposite poles is provided with a separate winding, so that the circuit *AA* supplies alternating current to one pair and *BB* to the other pair. The armature we will assume to be like Fig. 129. Now apply an

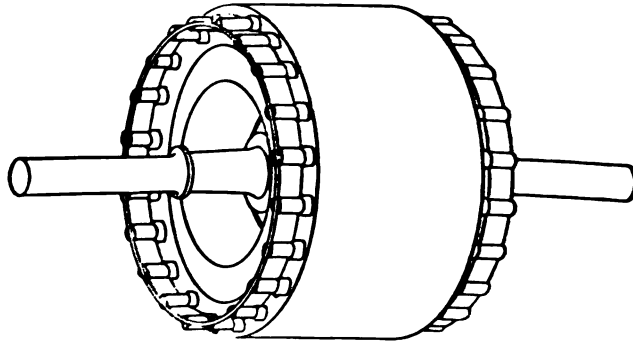


FIG. 129.

alternating current to *AA*. The windings of the armature which enclose the varying electromagnetic stress will have set up in them a powerful alternating current almost 180° behind the primary current, *i. e.*, in general opposed to it in direction, as considerations of energy require. The armature will not turn, however, for two very good reasons: first, the current in it is far out of phase with the magnetization of the poles; and second, this current is quite symmetrical with respect to the poles, so that the only effect could be a straight push or pull without the slightest tendency to attract or repel one side of the armature more than the other.

To produce rotation as a motor, there must be not only a current in the armature conductors, but there must be field poles magnetized and disposed so as to produce a torque upon these conductors.

Suppose, now, an alternating current to be sent around the circuit *BB*. If it is applied simultaneously with the current in *AA*, we shall be no better off than before, for since the two pairs of poles act together and just alike, there is no magnetiza-

tion in phase with the armature current, and nothing to cause the armature to turn either way.

To obtain rotation we must arrange the two sets of poles so that one pair may furnish a magnetic field with which the current induced by the other pair is able to react. The simplest way of doing this is to supply *BB* with current 90° in phase behind the current in *AA*. Then when the current induced by *AA* rises, it finds the poles *BB* energized and ready to

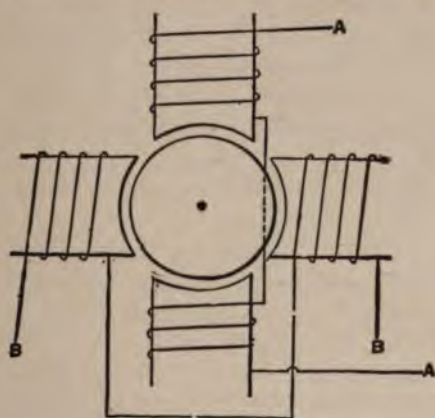


FIG. 130

attract it, for the magnetization in *BB* and the current are less than 90° apart in phase. The less the lag of the armature current behind its E. M. F., the more nearly will the magnetization of these field poles be in phase with the armature current, and the more powerful will be the torque produced.

The *BB* set of poles necessarily induce secondary currents in the armature in their turn, toward which the *AA* poles serve as field during the next alternation. The directions of both armature current and field magnetization are now reversed, so that, as in the commutating motor, the torque is unchanged. The next alternation begins the cycle over again, and so the motor runs up to speed. Its direction of rotation depends evidently upon the relative directions of magnetization in the two sets of poles, for these determine the direction of the armature current and the nature of the field poles that act

upon it. Reversing the current in *AA* or *BB* will therefore reverse the motor, while reversing both will not.

The speed of the armature is determined in a rather interesting manner. When the armature is in rotation the electromagnetic stresses which act upon a given set of armature conductors are subject to variation from two causes. First is the variation in magnetization, due to changes in the primary current; second, the variation due to the armature coils moving as the armature turns, so as to include more or less of the magnetic stress. The E. M. F. in the armature conductors is due to the summed effect of these two variations. And since the two are in opposition, if the armature were moving fast enough to make a half revolution for each alternation of the field, the E. M. F. produced would be zero, since the rates of change in the field and in the area of stress included by the armature coils would be equal.

This means that the armature must always run at less than synchronous speed—enough less to produce a net armature E. M. F. high enough to give sufficient armature current for the torque needed.

Under varying loads, therefore, an induction motor behaves much like a shunt-wound continuous current motor. In both, the armature current is due to the net effect of an applied and a counter E. M. F., the former being delivered from the line through brushes in the one case and by induction in the other. In neither case can the speed rise high enough to equalize these two E. M. Fs. There is, however, a very curious and interesting form of induction motor which runs at true synchronous speed until the load upon it reaches a certain point, when it falls out of step like any other synchronous motor, or under certain circumstances falls out of synchronism and then operates like an ordinary asynchronous motor.

Its operation in synchronism seems a paradox at the first glance, but the principle involved is really simple, although the exact theory of the motor is a bit complicated. As has already been noted, if the rates of change of magnetic induction due to the pulsation of the field and to the cutting of the field by the armature coils are equal and opposite, there will be no E. M. F. in these coils, and obviously no energy can be transferred from field to armature. If, however, the

E. M. F. wave due to the change of magnetization in the field and that due to the motion of the armature coils through the field are very different in shape, there can still be a periodical resultant E. M. F., generally of a very complicated description, accompanied by a transfer of energy even at full synchronous speed. A very irregular wave shape in the E. M. F. of supply, or a distortion of it due to extraordinary armature reactions, may produce this condition. Fig. 131 shows the primary E.

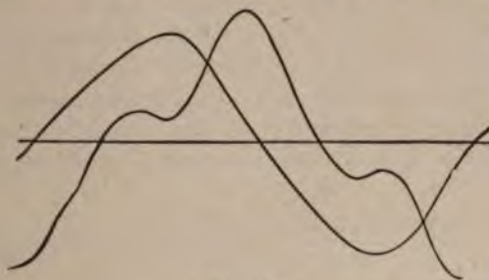


FIG. 131.

M. F. wave form as taken by the oscillograph across the terminals of such a synchronous induction motor, and the corresponding current wave, which emphasizes the significance of the facts just given. The condition is best reached in small motors having sharply salient field poles. The writer has never seen one which would start from rest unaided, the great field distortion necessary being in the way, but once spun up to or near synchronism they work admirably on a small scale. The conditions of energy supply are obviously such as to be highly unfavorable in motors of any size, but for laboratory or other purposes where synchronous speed is wanted they are very convenient for an output of $\frac{1}{8}$ HP or so, and form a very striking modification of the ordinary induction motor. They have, up to the present, been made mostly by the Holtzer-Cabot Electric Co.

If the load on an induction motor increases, demanding an increased torque, the armature slows down a trifle, until the new armature E. M. F. and resulting current are just sufficient to meet the new conditions. In the continuous current motor this speed is determined by the resistance of the armature, to which the current corresponding to a given decrease of speed

is necessarily proportional. In the induction motor the armature resistance plays a precisely similar rôle. Fig. 132 shows the actual speed variation of a 100 HP induction motor in terms of its output. The maximum fall in speed under full load is a trifle less than 3 per cent., and even this result is sometimes surpassed in induction motors for especial purposes, even a 1 per cent. variation having been reached. A motor with higher armature resistance would fall more in speed, like a shunt motor with a rather high armature resistance. We thus see that the induction motor, as it should, behaves much like any other motor; the torque is produced in the same way, and obeys similar laws; the motor is similarly self-starting, and works on the same general principles throughout. Obviously the magnitude of the armature current in an induction motor is

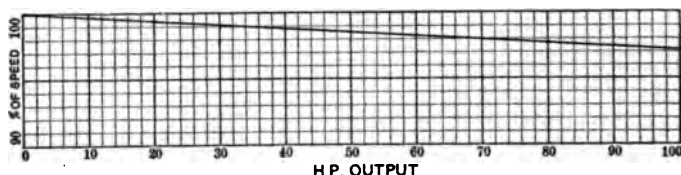


FIG. 132.

determined, not by the armature resistance alone, but by its *impedance*. As, however, the presence of *reactance* shifts the phase of the current, and that component of current which is effective in producing torque depends upon the resistance, the relation just explained holds good. That current is delivered to the armature by induction is a striking feature, but not one that implies any radical difference in principle.

It is not even necessary to use a polyphase circuit for working induction motors, for, under certain conditions, the same set of poles can perform the double duty of delivering current and interacting with it to produce torque.

The principles of the induction motor, as here given, thus become part of the general theory of the electric motor which applies alike to machines for continuous and alternating current, quite independent of particular methods of construction or operation.

The great pioneers in induction motor work, Tesla, Ferraris,

and some others, preferred to view the matter from the special rather than the general standpoint, and hold to the theory of the rotary pole action of induction motors—very beautiful, mathematically, but unfortunately hiding the kinship of induction to other motors, and distracting attention from the transformer action, which is so prominent.

From this point of view the two pairs of poles in Fig. 130

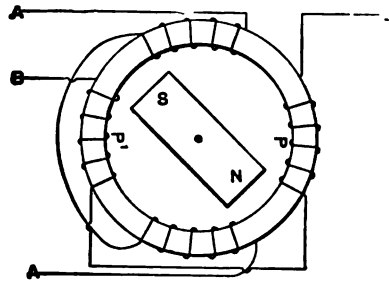


FIG. 133.

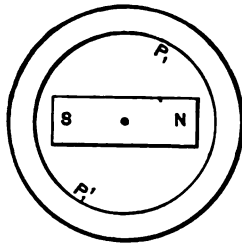


FIG. 134.

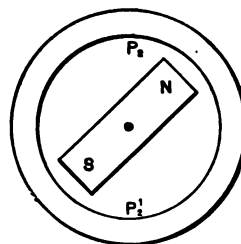


FIG. 135.

co-act to produce an oblique resultant magnetization, which shifts around the field, producing a moving system of poles, following the sequence of the current phases, and dragging around the armature after them, by virtue of the currents induced in it. Figs. 133, 134, 135 show the rudimentary principles of the rotary pole. In Fig. 133 an annular field magnet is wound with two circuits *AA* and *BB*, supplied with alternating currents 90° apart in phase. The polarity of the armature is represented diagrammatically by the rotating magnet *NS*.

Now, when the current in *AA* is maximum (and that in *BB* is consequently zero), the field has poles at *P* and *P'*, which

exert a torque on the armature poles. As the current falls in $A A$ and rises in $B B$, the resultant poles move forward to P_1 and P_1' (Fig. 134), followed by the armature. When the current $B B$ is a maximum, and $A A$ has become zero, the poles are at P_2 and P_2' and so on. In order that the revolving poles may induce current in the armature, the latter must slip behind so as to produce relative motion and change in electromagnetic stress.

This point of view is very interesting and instructive. It deals, however, not directly with the two field magnetizations,—the functions of which have just been discussed,—but with a resultant rotary magnetic field, which may or may not have a concrete existence, according to circumstances. It by no means follows that because two equal energizing currents are 90° apart in phase, they must or do form a resultant rotary magnetic field, or that, if they are so organized as to give a physical resultant, their individual functions are superseded and must be neglected.

The two views of the induction motor here set forth are not in any way conflicting; they merely represent two methods of treatment of the same phenomena. As it happens, the rotary field point of view is from a mathematical standpoint the easier, for it treats the resultant instead of its components, and hence has been the oftener used, but in discussing certain classes of induction motors it is by no means convenient, and is less general than the analytical method, which deals with the separate components. In most commercial induction motors there is undoubtedly a resultant rotary field, but however convenient it may be to consider the motors in that light, it is not well to lose sight of the general actions of which the rotary field is a special case.

As a matter of fact, the several currents in a polyphase induction motor may be so distributed that they cannot produce a resultant rotary magnetization, and in certain heterophase and monophase motors the “rotary field,” in so far as one is formed by the field, may revolve in one direction while the armature starts and runs strongly in the other direction. Hence the view here taken of the induction motor has been generalized for the purpose of bringing out its relation to the general theory of motors, and to take account of induction

motors in explaining which the rotary pole theory would have to be, as it were, dragged in by the ears.

Salient poles, like those of Fig. 130, are seldom used, and the induction motor, as generally constructed, consists of two short concentric cylinders of laminated iron, slotted on their opposed faces to receive the windings. Sometimes these slots are open, and again they are simply holes close to the surface of the iron.

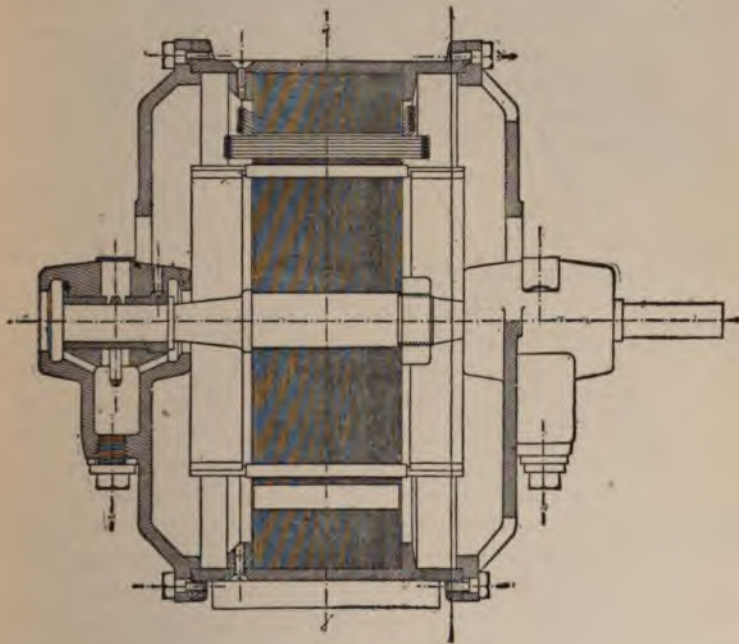


FIG. 136.

The relation of the parts is well shown in Fig. 136, a 6 HP two-phase motor by C. E. L. Brown.

In this case the exterior ring is the primary, and the revolving ring the secondary, element of the motor. The primary winding is of coils of fine wire threaded through the core holes, while the secondary member is wound, if one may use the term, with solid copper rods united at the ends by a broad copper ring. The clearance between primary and secondary is very small in all induction motors, almost always

less than $\frac{1}{4}$ inch, sometimes less than $\frac{1}{16}$ inch. The smaller the clearance the better the machine as a transformer.

The primary of an induction motor is wound much as the armature of a polyphase generator is wound, as described already. Fig. 137 shows in diagram a two-phase winding for a 24 slot primary, and Fig. 138 a three-phase winding for the

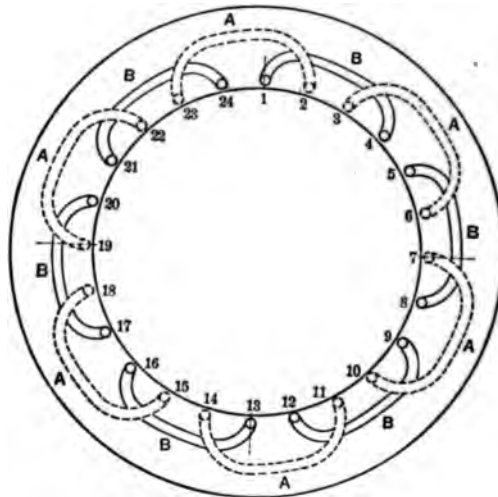


FIG. 137.

same primary. In the former there are two sets of coils *A* and *B*, each forming a separate phase winding; in the latter the three sets *A*, *B*, *C*, may be united to form either a "star" or "mesh" three-phase winding. In practice the primary winding is nearly always polyodontal, for the same general reasons that hold for generator armatures, but especially to keep down inductance. For the same reason the secondary winding is polyodontal. As an example of the best usage in this respect, Fig. 140 shows the number and relation of primary and secondary slots in the motor shown in Fig. 136. There are no less than 40 primary slots for a four-pole winding, *i. e.*, 5 slots per phase per pole, while the secondary has 37 slots, this odd number being chosen to reduce the variation in the magnetic relations of primary and secondary due to different positions of the armature.

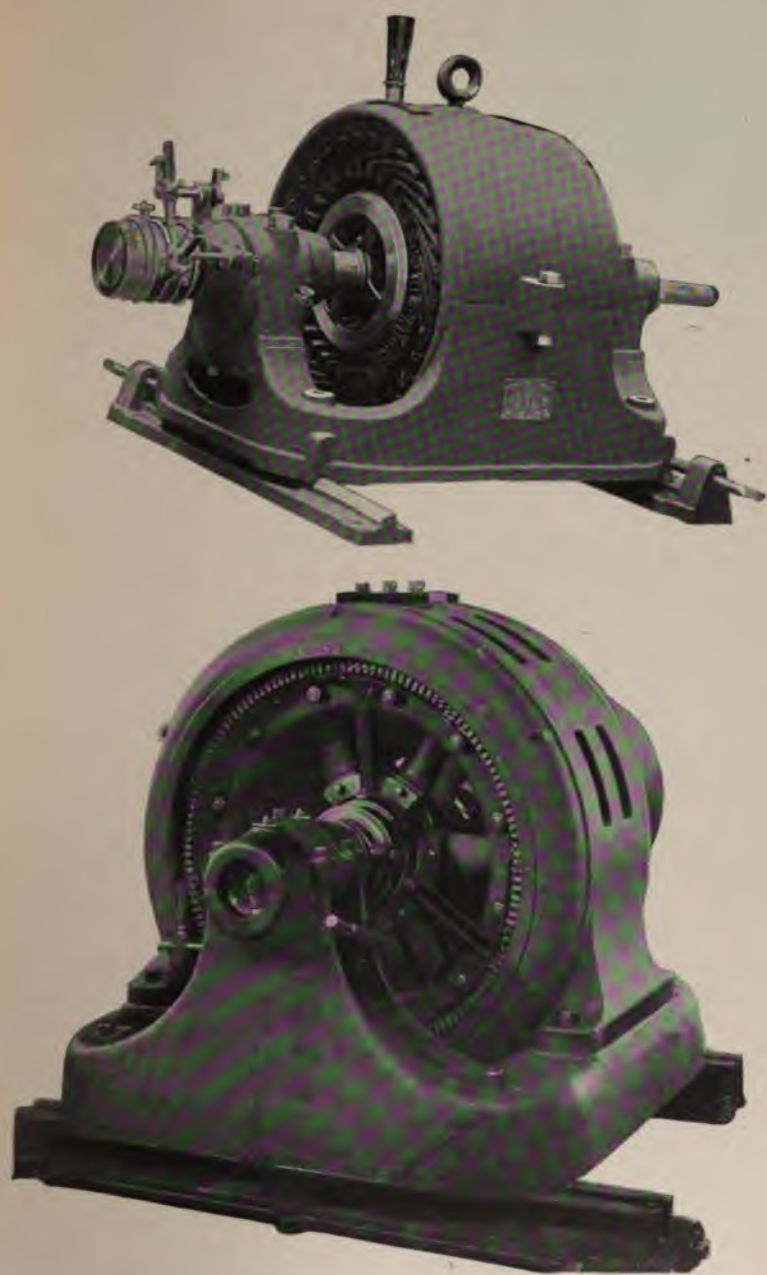


PLATE V.



Induction motors with fixed primary have the great advantage of having no moving contacts, and no high voltage windings exposed to the strains due to revolution. On the other hand a revolving primary makes it very easy to vary the resistance in the secondary circuit, which is often desirable. Both forms are used, the latter only rarely. Inasmuch as a large proportion of the hysteretic loss occurs in the primary, since in the secondary the variation of the magnetization is small, a revolving primary, being of less dimensions than its secondary, gives a slight advantage in efficiency. There is, however, small reason to suppose that on the whole it is easier to build one form than the other for a given efficiency with the same care in designing.

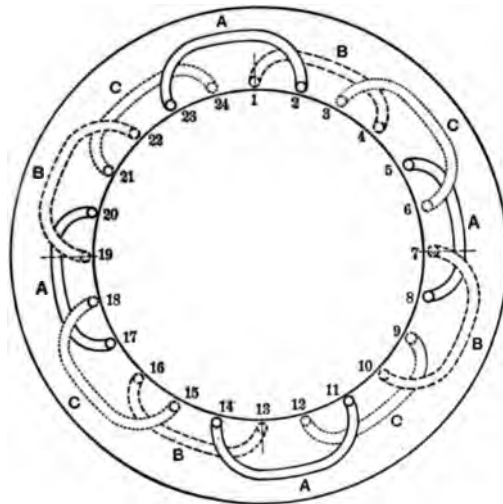


FIG. 138.

Plate V shows a pair of induction motors of the American types. Fig. 1 is a 15 HP two-phase Tesla motor, manufactured by the Westinghouse Company. The primary is the revolving member, and receives current *via* the slip rings just outside the bearing. If resistance is to be inserted in the secondary, it can be done with a stationary rheostat.

Fig. 2 is a 125 HP three-phase motor, made by the General Electric Company. In this machine the secondary rotates.

The short lever alongside the bearing moves a loose ring along the shaft, and thus serves to cut in or out a resistance in the secondary, which resistance is carried on the armature spider, and is generally in two or three sections, thrown in or out consecutively. With the lever placed as shown, all the secondary resistance is in circuit.

A glance at the plate shows that the secondary windings are by no means as simple as that of Fig. 129. They are true bar windings, not merely bars with a common connection. At the present time both these forms of motor have been super-

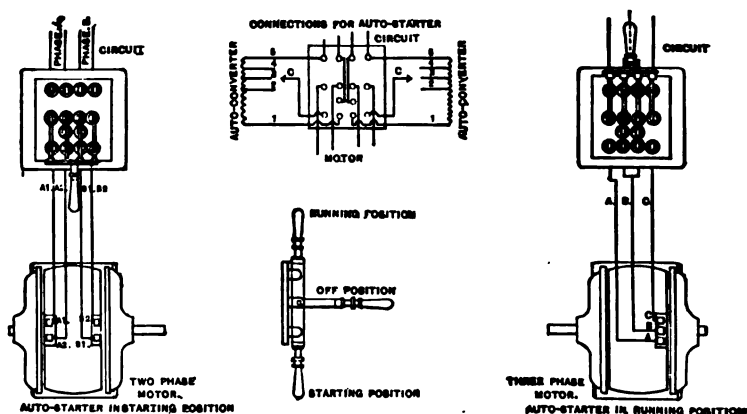


FIG. 139.

seded, but they are of interest in showing the progress of the art. Motors with revolving primary are no longer regularly manufactured, the superior simplicity of the other construction being generally recognized. Plate VI shows the motors now in common use in this country. Fig. 1 is a standard Westinghouse "Type C" motor of 20 HF. It is exceedingly simple in construction, and efficient in operation. It has a "squirrel-cage" armature similar to that of Fig. 129, but the bars are in open slots and are of rectangular section, a construction which gives a lower armature reactance than if the iron were closed over the armature bars. These motors start with a powerful torque, approximately three times the torque at rated full load, when the full line voltage is thrown

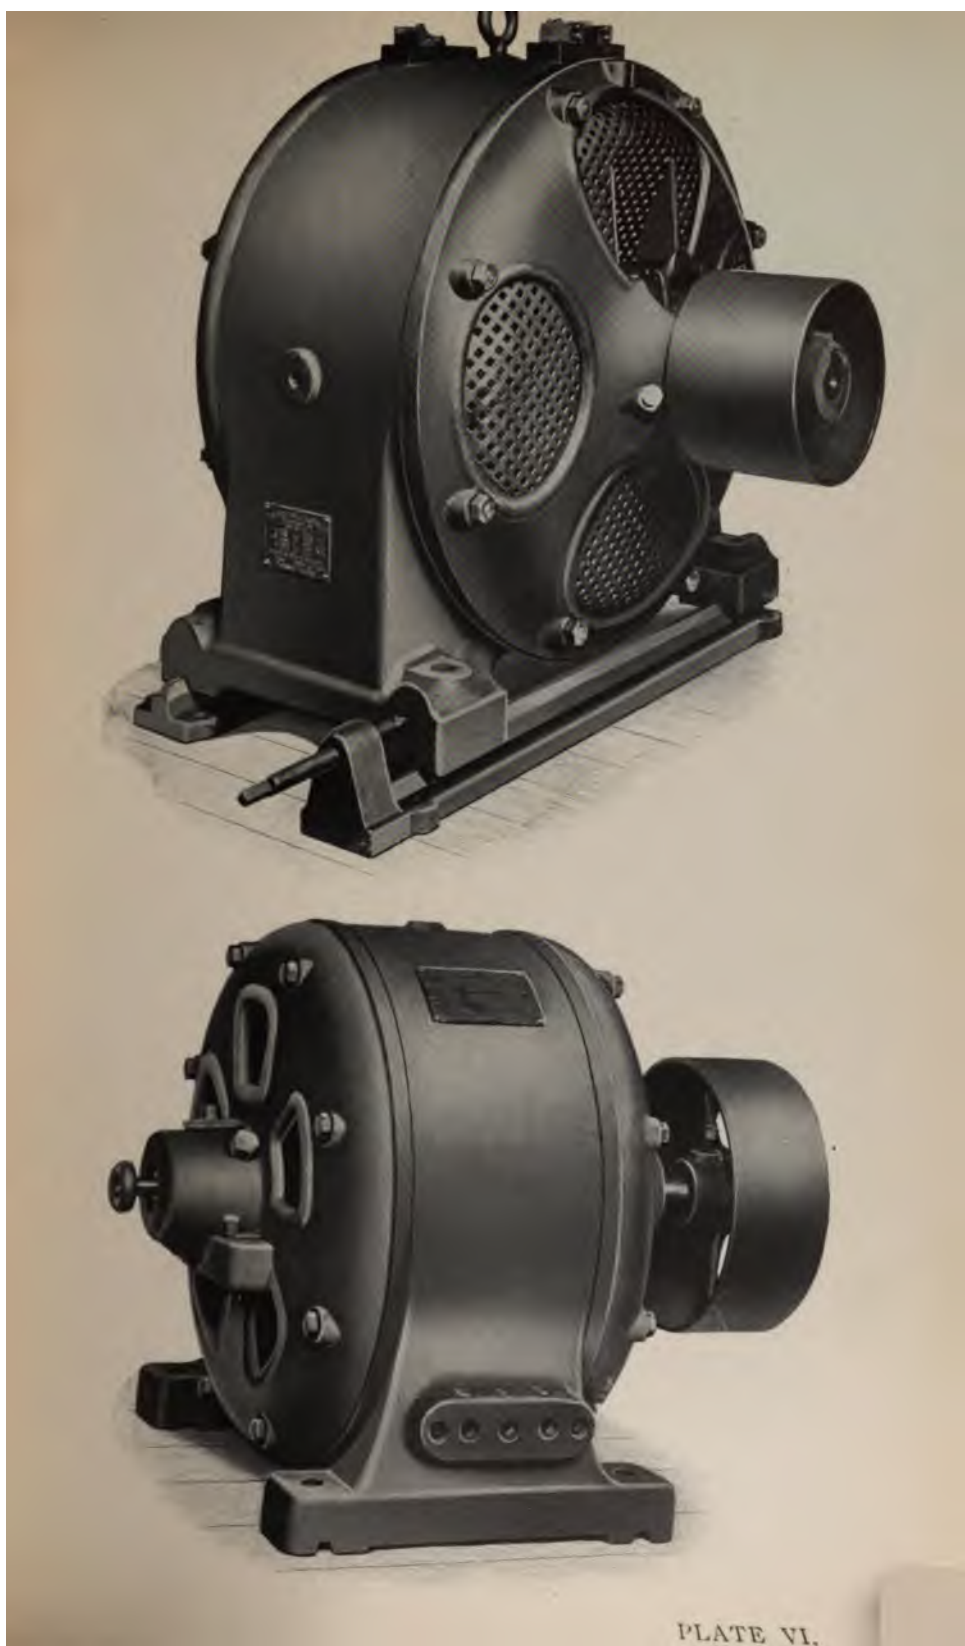


PLATE VI.

ASTOR, LENOX
TILDEN FOUNDATIONS

THE NEW YORK
PUBLIC LIBRARY
ASTOR, LENOX
TILDEN FOUNDATIONS

upon the primary, but of course take, under these conditions, a very heavy current, so that in practice it is usual to start them at reduced voltage, which gives all the torque necessary without calling for excessive current. This is accomplished by means of a so-called auto-converter, of which the essential connections are shown in Fig. 139. With the switch in the starting position the applied voltage is only a quarter or a half the normal voltage, the actual amount being adjusted by means of the variable connections shown, and when the motor has come up to its full speed under the starting conditions the switch is suddenly thrown over, putting the full working voltage in circuit. It is necessary to let the motor reach its full speed with the lower voltage before making this change, else there will be a needlessly severe current due to the sudden acceleration under full voltage, and the change should be made quickly, lest the armature speed should fall off during the change and produce the same unpleasant result. When intelligently handled the starting current can be kept within very reasonable limits, but the auto-converter should be adjusted when set up to give at starting merely the voltage needed to start under the required torque, an excess of voltage meaning excess of current. Fig. 2 of Plate VI is a General Electric "Type L" motor of 10 HP, having characteristics similar to the motor Fig. 2 of Plate V. The special peculiarity of the later form is the arrangement of the starting resistance in the secondary. This is operated by a rod attached to the knob which appears at the end of the armature shaft. The shaft is hollow and the rod is attached through a slot to the short-circuiting brushes, which bear upon the resistances stowed away within the armature spider. These resistances are in many sections and can be short-circuited very gradually, holding the primary current practically constant from start to full speed even when starting under a heavy torque. The start is made with the rod pulled out to its fullest extent, and it is gradually pushed or tapped home until full speed is reached. Such motors are peculiarly well adapted for use on lighting circuits, and in large sizes requiring heavy starting torque. The start can be made with very moderate currents, and the torque per ampere is considerably greater than in any motor starting on reduced primary voltage, which

is the compensation for the rather elaborate starting device. Neither of the companies mentioned holds rigidly to the constructions here shown, but the cuts show their best standard practice. There is very little difference in the essential properties of the two forms, and both are very widely used.

These recent motors are nearly all made with extremely small clearance between armature and field, from $\frac{1}{16}$ to $\frac{1}{32}$ inch or less, even in large motors. This practice renders it easy to design for a good power factor, but may, and sometimes does, cause trouble mechanically, as might be anticipated. It is not difficult to make thoroughly good motors without resorting to such extreme measures, unless the designer is hampered by troublesome specifications in other particulars. Demand for slow speed motors at a periodicity of 60~, and insistence on a uniformity of speed at various loads that would not for a moment be demanded in direct current motors, are responsible for serious and needless impediments in induction motor design.

The "Type L" motors just described have on the armature a regular three-phase winding of rectangular bars united by end connectors. A simple four-pole form of such a winding is shown in Fig. 141. It obviously is more troublesome to construct than a "squirrel-cage" winding, but it possesses certain advantages. Conspicuously, it renders it possible to insert resistance in the secondary circuit at starting, which in the "squirrel-cage" would be a very difficult matter, although it has been tried.

If the field is very uniform, with a thoroughly distributed winding, there is very little difference in the actual performance of the two kinds of armatures (drum-wound and "squirrel-cage") when at speed. In case of a motor with salient poles or with few winding slots in the field, the drum armature has a very considerable advantage, owing to the fact that the currents in it are directed into definite paths which they must follow at all times, while in the "squirrel-cage" form the currents are only uniformly organized when there is a uniform field. In the early motors, therefore, the drum-wound armature had a great advantage, but as the art of designing has advanced the two types have become closely approximated in their properties.

In this country the windings of induction motors are generally placed in open or nearly open slots, as in the case of the motors shown in Plate VI. Abroad the arrangement of windings in holes as shown in Fig. 140 is very common. Each procedure has its advantages. The American practice renders it very easy to place the windings, and to put a very large amount of copper upon the armature, for open slots can be made radially deep and filed true, while holes unless rather

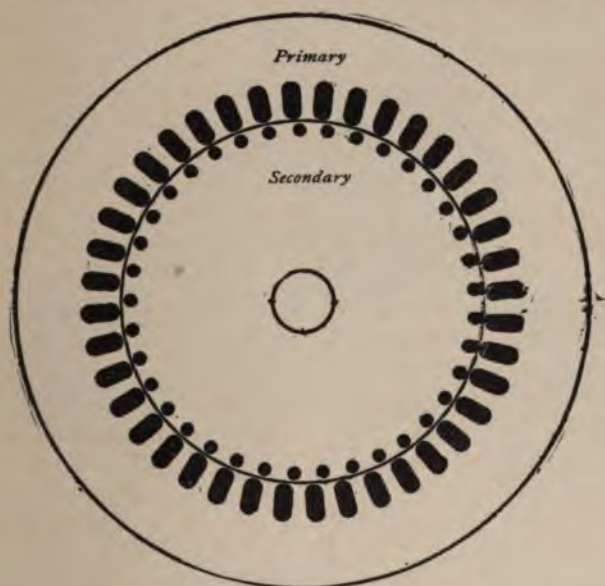


FIG. 140.

large can only be trued by reaming, which implies a round hole, unfavorable if a great amount of copper is to be crowded upon the armature. Hence with open slots it is easier to subdivide the winding into many slots, thus reducing the armature reactance. On the other hand, open slots are extremely unfavorable as regards power factor, since the iron surfaces opposed in armature and field are very greatly reduced, and hence the tendency to use extremely small clearances in order to make the best of a bad matter. The European practice is on the whole better as regards power factor, but does not facilitate the construction of motors of very low armature resistance,

and is considerably more difficult of proper execution. The matter really hinges on the relative cost of labor here and abroad. With cheap labor the manufacturer can afford to go into little refinements if it is otherwise worth while, but at American labor-rates handwork has to be minimized. On the whole, the American motors are fully up to foreign standards in general design, although the tendency here has been to make a fetish of uniformity of speed, even at the expense of more important characteristics.

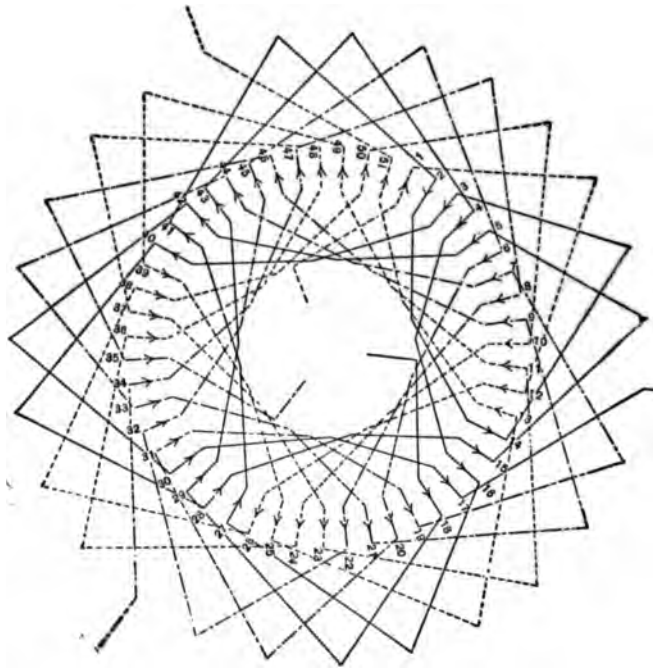


FIG. 141.

In motors such as those just described, with distributed windings and no sharply defined polar areas, the consecutive exchange of motor and transformer functions among the windings is almost lost sight of in the presence of the very apparent phenomenon of resultant revolving poles, but the appearance of the latter is a necessary result of the persistence of the former. These induction motors are generally operated from

the secondary circuits of transformers, although the large sizes (50 HP and upward) are sometimes wound for use of the full primary voltage up to 2,000 volts or more.

Another form of induction motor which possesses some interesting features is the Stanley machine, shown in Figs. 142, 143. The field shown in Fig. 142 is composed of two separate rings of laminated iron, each having eight polar projections. These field rings are assembled side by side with the poles

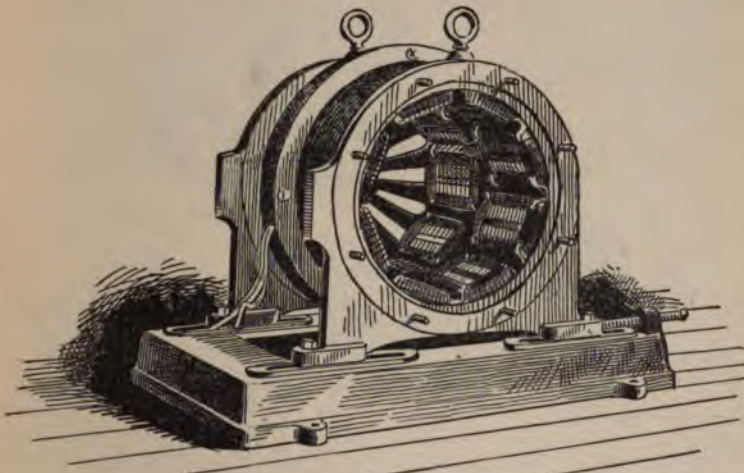


FIG. 142.

“staggered,” as shown in the cut. Each field is energized separately, one from each branch of a two-phase circuit. The armature, Fig. 143, is composed of two separate cores assembled side by side. The secondary winding, polydental as usual, is common to the two cores. The transformer and motor functions are here entirely distinct, for each half of the machine acts alternately as transformer and motor, each set of fields inducing current which serves for motor purposes in the other half of the machine. There is no rotary field in the ordinary sense of that term, since there is no physical resultant of the two field magnetizations, nothing but the alternation of transformer and motor functions that is a characteristic of all polyphase induction motors.

These motors are generally used in connection with condensers to improve the power factor, and to facilitate this practice are usually wound for 500 volts.

The "monocyclic" induction motor is in structure similar to ordinary polyphase induction motors, but differs from them in function, in that under normal running conditions the energy received by it is essentially monophasic. Its principle can be best seen by referring to Fig. 130. Suppose that instead of

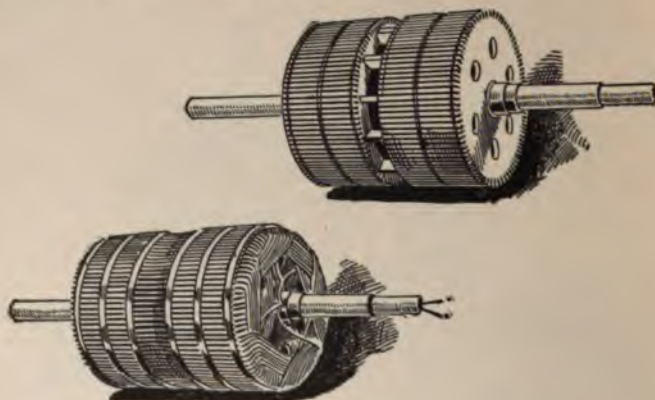


FIG. 143.

winding the *A* and *B* poles alike, the *A* poles are proportioned so as to supply all the energy required by the motor, while the voltage supplied to the *B* poles is sufficient merely for magnetizing purposes—*i. e.*, it is so near to the counter E. M. F. of the revolving armature at normal speed that there can be no material transfer of energy. The *B* poles are then specialized as field poles, while the *A* poles serve in lieu of brushes to supply the energy. The magnetizing current for the *B* poles is furnished by a separate circuit in order that the magnetization may be in phase with the armature current. The E. M. F. of this circuit is thus about 90° ahead of that of the power circuit, while the currents in the *A* and *B* circuits are nearly in phase. Only at heavy loads is there any material transfer of energy from *B* to the armature. The object of this rather singular construction is to confine the main distribution of energy to a single circuit, the small magnetizing current being sent over a subsidiary wire of small cross-section, as already

described. The motors actually used on monocyclic circuits are nearly always ordinary three-phase motors in the monocyclic connection.

A step further in the same direction of simplicity, but inferior to both polyphase and heterophase forms, are the true monophas induction motors. The principle of these motors is shown in Fig. 144. Here there is but one set of poles energized

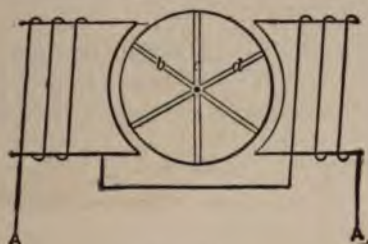


FIG. 144.

by the circuit *A*, while *b, c, d*, are portions of the armature winding, which may be a simple squirrel cage, or a complex bar winding similar to those used in polyphase motors.

If *A* be supplied with an alternating current, induced currents will be produced in the armature, out of phase with the field magnetization and symmetrical with respect to it, so that no torque is produced.

If, however, we spin the armature up to nearly synchronous speed, the armature currents will lag, from self-induction, behind the E. M. F. set up by the field, so that they have an angular displacement with respect to the field at a time when the latter is still active. There is therefore torque between these two elements—in the direction of the initial rotation. The motor will thus run, when once started, equally well in either direction.

In every motor there must be not only a field magnetization and current in a movable conductor substantially in phase with each other, but there must be a stable angular displacement between the two in order to ensure continuous torque. In continuous current motors this displacement is secured by the position of the brushes. In polyphase induction motors it is obtained by the space relation of the sets of poles combined

with the time relation of the two or more currents. In the monocyclic motor the currents are nearly in phase, and the condition is like that in a continuous current motor with the substitution of inductor poles for brushes.

In the monophase motor this angular displacement is due to the displacement of the armature currents by inductance. Hence there is a particular value of the inductance corresponding to the best condition of torque, more or less than this being highly injurious.

In practice monophase induction motors are built in very much the same form as polyphase motors, and for the same reason, *i. e.*, to make the structure good as a transformer. In

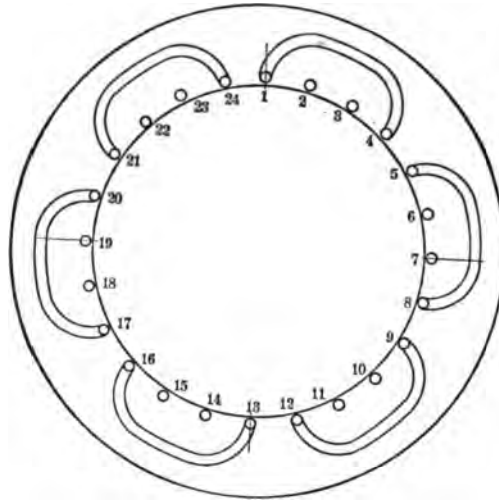


FIG. 145.

fact, the same motor structures are often used for both types. Fig. 145 shows the manner of winding a six-pole monophase primary, homologous with Figs. 137, 138. A monophase induction motor of 120 HP by Brown, Boveri & Co. is shown in Fig. 149. Monophase motors are not used to any considerable extent in this country, and abroad their use is generally confined to motors much smaller than the example shown.

A moment's reflection will show that while the supply of energy to a polyphase motor is substantially continuous, in

some heterophase, and all monophase, motors it is essentially intermittent, so that these latter give less output for the same structure. The dependence of the torque on the existence and magnitude of the armature inductance, too, leads to low power factors and great difficulties in speed regulation—never too easy in induction motors.

As we have already seen, polyphase induction motors are self-starting. To give a monophase motor a definite starting torque is not a difficult matter. In normal monophase working there is no initial torque, and to obtain it some form of heterophase connection is generally used. The commonest method is to employ a set of subsidiary windings to produce temporary motor poles, with which the current produced by the main or inductor poles can react as in the polyphase systems. When the motor reaches speed this subsidiary winding is cut out or thrown in series with the main winding, and the motor thereafter runs as already described. The starting windings are usually energized by a current out of phase with the main current, but derived from it with a phase difference produced by a difference of inductance.

By reason of inefficient starting and the disadvantage inherent in discontinuous energy supply, monophase motors in this country have made very little headway. A few small motors have from time to time gone into use on circuits still adhering to the old frequency of 120~ to 130~, and a few more on the occasional monophase circuits at 60 cycles. Now and then the use of such motors is convenient, but there is no reason for using them on circuits for power supply only, and they are apt to cause trouble if used on lighting circuits on account of the large starting currents. When occasion requires their employment in sizes larger than a horsepower or two, it is advisable to follow the European practice of starting them on a loose pulley and then taking up the load with a clutch.

One of the recent American contributions to the list of monophase motors is somewhat out of the ordinary in that it starts as an induction motor by the aid of a commutator. This is the Wagner motor shown in Fig. 146. In its general construction it is a pure monophase motor with an armature winding the coils of which are at one end connected with a

commutator. This has bearing on it a pair of brushes which close upon themselves those armature coils which are in such angular relation with the field magnetization as to give a strong motor reaction with it. By thus keeping in action only coils giving an efficient torque in one direction, the necessary directed torque at starting is secured, and when the

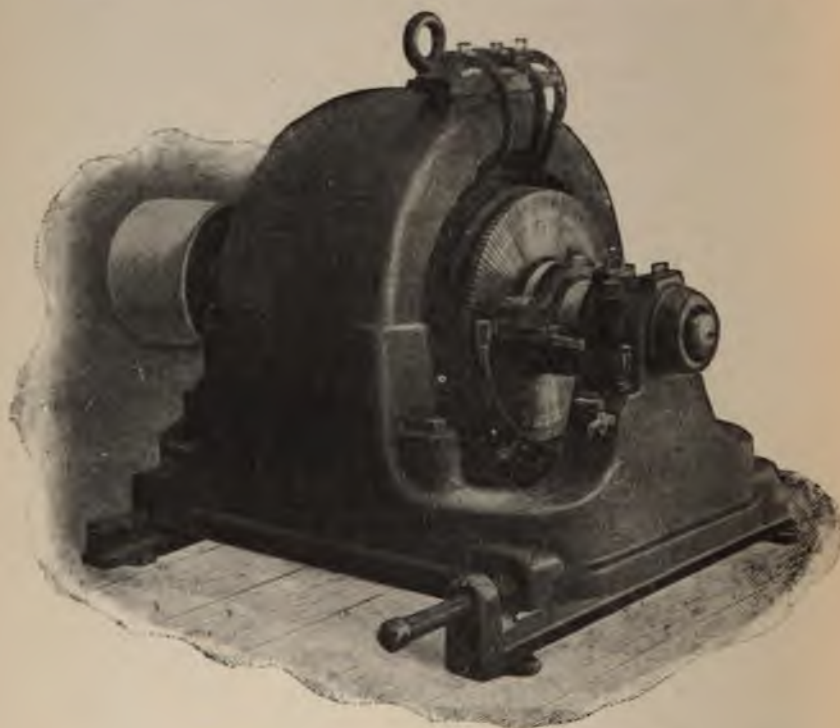


FIG. 146.

motor reaches a predetermined speed a compact little centrifugal governor throws over a short-circuiting ring, converting the motor into an ordinary monophase induction motor. It is possible to start under load with this device by drawing heavily on the mains for current, but in any except the smallest sizes it is better to start light, as with other monophase motors.

Although monophase motors as a class start at a great disadvantage compared with polyphase motors, they can be made to give pretty good results at load by extraordinary care in designing. Fig. 147 shows the curves obtained from a certain Brown motor by Professor Arno. The motor was nominally of 15 HP, but was evidently overrated at that load. Nevertheless within a certain range of load the performance of this motor compares well with that of the best polyphase motors of similar size. This motor had an extremely small air gap, and shows doubtless a record performance in several re-

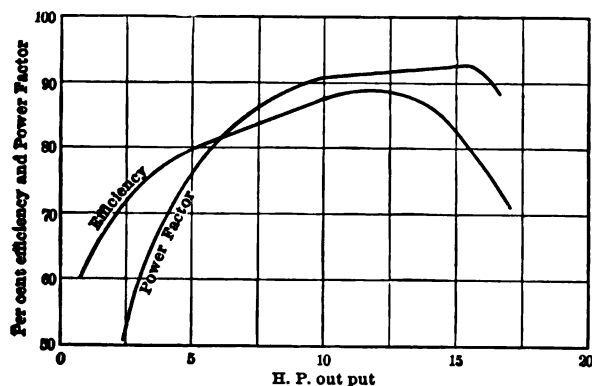


FIG. 147.

spects, but it proves that barring the matter of starting it would be possible to turn out a pretty useful machine of the monophase type if anybody desired it, although it is certain that at anything like equal cost of construction the polyphase motor must retain the advantage. Fig. 148 shows the characteristic curves of a recent 4 HP Wagner motor which gave a highly creditable performance for a monophase motor of so small size. It comes much nearer representing real commercial conditions than the curves of Fig. 147, and, as we shall presently see, does not make a bad showing as compared with the polyphase motors ordinarily found upon the market. Speed regulation, never any too easy in induction motors, is almost out of the question in the monophase form. Still, within its limitations it has its uses.

The practical properties of good modern induction motors

are strikingly similar to those of shunt-wound or separately excited continuous current motors.

For the same output, the induction motor generally has the advantage in weight, owing to the fine quality of iron which has to be employed, but its laminated structure and rather complicated primary winding make it fully as expensive to build, in spite of the absence of a commutator.

In point of commercial efficiency there is but little difference. It is not difficult to build an induction motor which is fully up to the average efficiency of other motors of similar output and speed. And what is of greater importance, the question of sparking being eliminated, the point of maximum

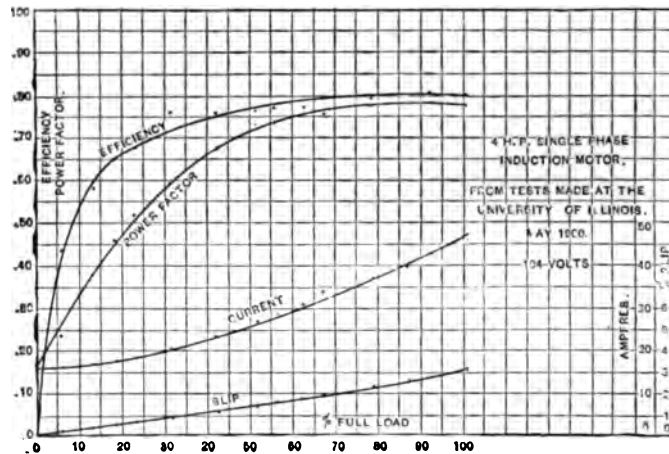


FIG. 148.

efficiency can quite easily be brought somewhere near the average load. It must be remembered that here, as elsewhere, the last few per cent. of efficiency are somewhat costly, and not always found in the rank and file of commercial machines.

The weak point of commercial induction motors is apt to be the power factor. Of course low power factor means demand for current quite out of proportion to the output, and hence greater loss in the lines and greater station capacity. In addition, a heavy lagging current makes regulation of voltage on the system anything but easy.

Now, it is perfectly feasible to build induction motors with power factors so high as to avoid these practical difficulties almost entirely. But this result is somewhat expensive, whether reached by *finesse* in design, or by the addition of condensers, and it is therefore not always attained.

Slow speed induction motors, large and small, are subject to bad power factors, and so in fact are all induction motors having many poles. The best results, however, are very good indeed. A power factor of .9 or thereabouts at normal load is quite unobjectionable in practice, and this figure can be reached or closely approximated by careful design.

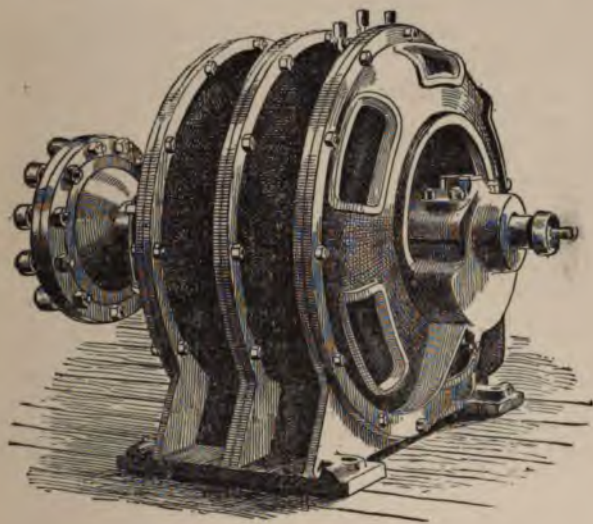


FIG. 149.

In point of efficiency there is little difficulty in reaching satisfactory figures. The actual properties of polyphase induction motors can be best appreciated by the examination of their characteristic curves, showing the variations of efficiency, power factor, and speed under varying loads. Fig. 150 shows these curves for a 75 HP three-phase motor built by the General Electric Company. It is a 60~ motor, intended for severe service, and hence is arranged to carry considerable overload at a good efficiency. The fall in speed from no load to full load is

but 3 per cent., and the starting torque is 80 per cent. greater than full running torque, with an expenditure of current closely proportional to the torque. The commercial efficiency reaches 91.1 per cent., and the power factor 84.3 per cent., which is not bad for so large a motor intended for considerable overloads.

Fig. 151 shows the characteristics of a Westinghouse two-phase induction motor of 50 HP for 25~. Its properties, as might be expected of a well-designed motor for so low a frequency, are admirable, particularly the great efficiency at small loads.

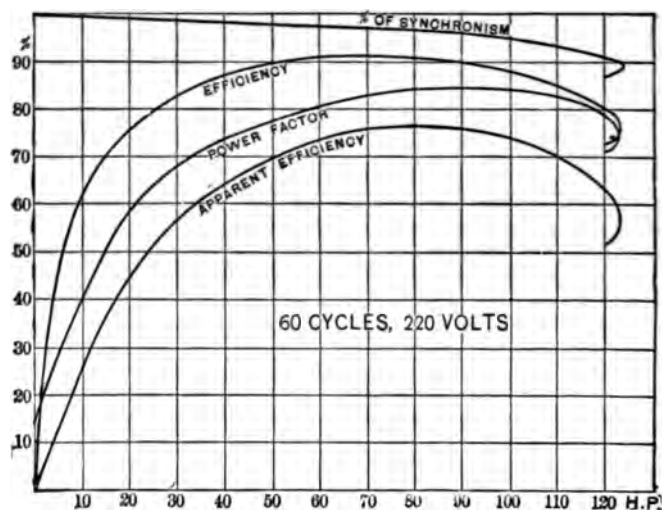


FIG. 150.

Fig. 152 shows the properties of a polyphase motor of 20 HP at 130~, used with Stanley condensers to keep down the results of the inductance encountered at so high a frequency. The effect of this device, particularly at moderate loads, is very striking indeed. Without condensers one could not obtain such a power factor even at full load. While the condenser does not perfectly compensate for inductance, it does so sufficiently well for all practical purposes. In other properties the motor is not so especially remarkable.

These curves are from the manufacturers' tests, and the author believes them to be entirely trustworthy, although they

probably represent good results. Better curves than these are occasionally obtained, generally for some individual reason. Now and then a "freak" motor is produced, with enormously high efficiency or power factor, like a certain 5 HP three-phase motor designed and tested by the author, which gave at full load a power factor of .94.

On the other hand, it is unfortunately true that many commercial induction motors are not as good in point of efficiency and power factor as they ought to be. A series of tests of

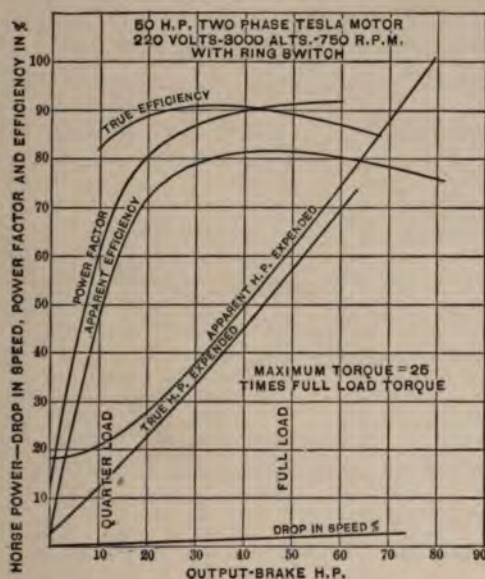


FIG. 151.

induction motors under the direction of Professor D. C. Jackson has recently been published, which gives data so instructive and impartial as to be well worth reproduction here. The motors tested were, except for a 10 HP Westinghouse two-phase, all of 5 HP nominal capacity, and by the following makers: Westinghouse, Fort Wayne Electric Corporation (synchronous self-starting monophase), Stanley, Allgemeine Electricitäts Gesellschaft, General Electric Company. In addition, results of tests on Oerlikon and Brown motors are included in the results. Fig. 153 shows the efficiency curves and regulation of

the several machines, and Table I on page 258 gives a general view of their respective properties.

Looking over these results, Nos. 3, 5, and 8 are decidedly the best of the lot. Of these No. 3 is possessed of a fairly high and very uniform power factor, but rather moderate efficiency. It starts well, and with a moderate current has sufficient margin of capacity for all ordinary work, but its speed falls considerably under load. No. 5 has extraordinary efficiency at all loads, starts admirably, and can carry a tremendous overload—more than double its rated capacity. Moreover, it regulates very closely. The power factor, however, is so bad as to be a curiosity, having apparently been sacrificed to

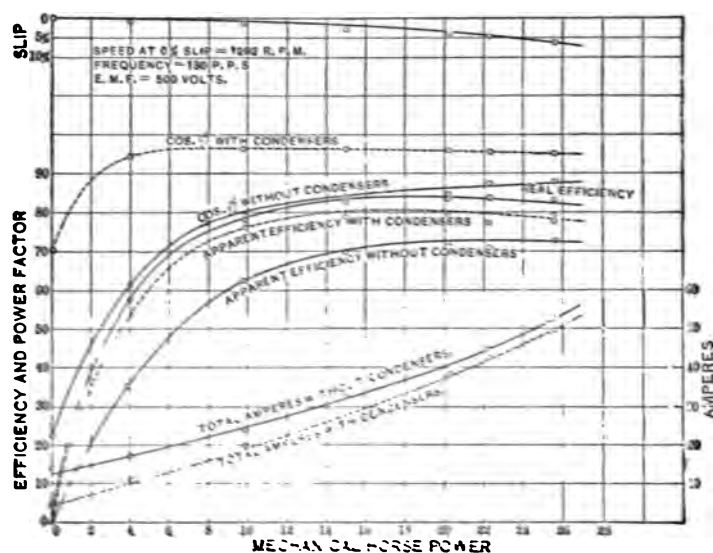


FIG. 152.

obtain great maximum output, which is for many purposes useless. No. 8 is a far better all-around machine than any of the others, has a good maximum efficiency at a little below full load, and an excellent power factor. Professor Jackson notes that since, at an output of 3.5 HP, No. 3 has an efficiency of 75.5, and a power factor of 83.5, while No. 5 shows respectively 85 and 50, the station capacity for the latter must be considerably greater than for the former. That is, the apparent efficiency of No. 3, which determines the necessary station

capacity, is 64 per cent., while that of No. 5 is 50 per cent., Hence to supply one brake HP with No. 5 motors, there must be a station capacity of 2 HP, while with No. 3 motors 1.56 HP is sufficient. But with No. 8 the efficiency is about .83, and the power factor about .80, giving an apparent efficiency of .66, which is better than either No. 3 or No. 5. Motors like No. 3 are excellent for the power station, but hard on the customer, while No. 5 is admirable for the customer, but bad for the station. No. 8 is fair to both parties.

Most of the motors shown start quite well enough for ordinary purposes. Neither heavy starting torque nor ability to carry large overloads is needed in ordinary motor work. Large torque per ampere is, however, desirable. It is best

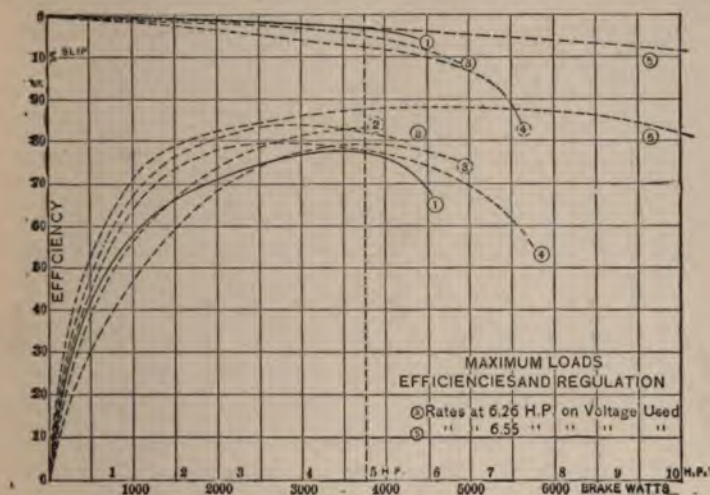


FIG. 153.

secured by using at starting a non-inductive resistance in the secondary circuit. The effect of this resistance is as follows: It reduces the current drawn from the mains so that the motor will not seriously disturb the voltage on the lines at starting; by diminishing the current flowing in the armature it limits the armature reaction so that it may not beat back the field so as to interfere with proper starting, nor distort it so as to produce dead points; and, finally, it largely increases the torque per ampere, which greatly aids in starting under load.

The function first mentioned is very important where lights and motors are to be operated, since if a motor is capable of starting under heavy load it is likely to take at starting a pretty large current, which may pull down the voltage in the neighborhood merely in virtue of ohmic drop. Besides, the power factor of an induction motor at starting is only about .7, so that the heavy current lags severely and still further interferes with proper regulation.

The heavy lagging current set up in the armature is likely to distort the field seriously, sometimes so much as to block the starting of the motor, sometimes merely producing dead points, *i. e.*, points of no torque, or greatly weakening the

TABLE I.

COMPARATIVE QUALITIES.

Number.	Rated Capacity, H.P.	Rating at Voltage Used, H.P.	TORQUE, τ IN % OF FULL LOAD.					EFFICIENCIES—%.					POWER FACTORS—%.					
			Max. Running.	Static.	Starting.	Starting Current, in % of Full Load.	Drop in Speed at Full Load, %.	Max. Eff.	¼ Load.	½ Load.	¾ Load.	Full Load.	Max. P. F.	o Load.—	¼ Load.	½ Load.	¾ Load.	Full Load.
1	5	5	140	131	77	157	3	77.8	55.2	70.6	77	76.6	76.4	13	37.5	50	62.3	71.5
2	5	5	100	45	44	153		83.8	54.5	72.5	80.5	81.8	67.5	10.5	25.5	58	67.3	64
3	5	6.5	104	90	83	114	9.7	79	52	71.9	78.0	77	84	74	81.6	83.3	83.7	84
4	5	6.5	186.5	136	30.4	262	7	79.5	62.2	77.2	79.5	77.8	82.6	15.5	44.7	62.5	73.7	80.3
5	5	6.5	171	138.5	86.6	156	3.7	88	75.2	85	87.7	88	78.5	6.8	27.5	45.5	50.8	70.3
6	10	10	147	142	137	194	4.5	82	67	78.4	81.6	81.1	70	15	40.4	59.1	69	73.4
7	4.5	4.5	163	232		357	3.7	70.1	61	73.8	78.4	79.1	88.4	22.2	51.3	69.4	80.3	85.2
8	5	5					4.6	83	65	80.2	83.8	82	89		52	71.5	81.7	87.2

NOTE.—6, 7 and 8 were not run up to maximum load, on test.

torque in certain positions of the armature. The introduction of resistance in the secondary circuit both diminishes the current and its angle of lag, and thus keeps down the armature reaction. In some motors the reluctance of the magnetic circuits is sensibly the same in all angular positions of the armature, so that there are no points of noticeably weak torque either with or without a starting resistance. But some motors otherwise excellent have sufficient variations of reluctance to produce bad dead points when the armature reaction is severe, while these nearly or quite disappear by adding resistance in the secondary circuits.

The use of resistance in the secondary at starting obviously throws forward the phase of the secondary current so that it is in better relation to the field magnetization, and hence although the numerical value of the current is reduced, its effective component is increased. The considerations which affect the relations between torque and current in the armatures of induction motors are in reality quite simple. The absolute value of the current, other things being equal, is determined by the armature impedance, and is the same for the same impedance whatever the relation between the reactance and resistance components of that impedance. The ratio between these components, however, determines the phase angle of the armature current, so that for a given value of the current the torque depends on the ratio between resistance and reactance in the armature.

By lessening either the resistance or reactance of the armature a motor is obtained in which a very large current flows at starting, but reducing the impedance by cutting down reactance gives the resulting current a better phase angle than that obtained by reducing resistance alone. For a given motor the maximum torque is obtained when the ratio of resistance and reactance is unity, *i. e.*, when

$$I = R.$$

Now one can cut down the resistance by increasing the allowance of armature copper, and can diminish the reactance by subdividing the winding so that there shall be many slots in the armature, and the minimum possible number of turns per slot. Also the better the mutual induction between field and armature the less the reactance of either member is likely to be, so that by close attention to design it is possible greatly to reduce the armature reactance. In commercial motors the relation between resistance and reactance in the armature is generally from

$$I = 3R \text{ to } I = 10R.$$

Hence when large torque per ampere is desired the simplest thing to do is to insert non-inductive resistance in the secondary, and when

$$I = R$$

the given motor will be at its best with respect to starting torque. With

$$I = R$$

the largest torque will be obtained when both are as small as possible. Hence if very great starting torque is desired the motor should be designed with very low armature resistance and reactance.

The slip of the motor below synchronous speed depends upon the armature resistance in induction motors, just as in continuous current motors the slip below the speed at which the armature would give the impressed E. M. F. is determined by armature resistance. In each case the slip measures the percentage of energy lost in the armature, so that if an induction motor, for example, runs loaded at 5 per cent. slip the loss of efficiency in the armature is 5 per cent.

Commercial induction motors vary widely in slip—from as little as 1 per cent. to 8 or 10 per cent., according to design. It must not for a moment be supposed, however, that small slip implies high efficiency of the motor. One can put, in designing a motor, most of the loss into the armature or into the field, as one pleases, and it is pretty safe to say that if there is remarkably little in the armature there will be an unusual amount in the field, unless cost is utterly disregarded. Probably the best all-around results can be obtained by dividing the permissible loss nearly equally between armature and field.

There is a very simple relation between the static and running torques of an induction motor, the static and running currents, and the slip, as follows:

$$\frac{T}{T_s} = S \frac{C}{C_s^2}$$

In this equation T is the static torque, C the static current, T_s and C_s torque and current of the slip s , and s that slip expressed as a percentage. As an example of the application of this formula, suppose the full load current of a certain motor is 60 amperes per phase, the current with the armature at rest 400 amperes, and the slip at full load is 5 per cent. Then

$$\frac{T}{T_s} = .05 \times \frac{160000}{3600} = 2.22,$$

i. e., the static torque will be 2.22 times the full load running torque. Of course if a motor is to have a powerful starting torque it must take a pretty heavy current, but the extra resistance at starting helps very materially in keeping the current within bounds. An adjustable secondary resistance makes it easy to bring to speed any load that the motor will carry continuously, without demanding excessive current.

As to overload, an ability to carry 25 per cent. more than the rated capacity is ample, save in rare cases, and greater margin than this usually means some sacrifice in effi-

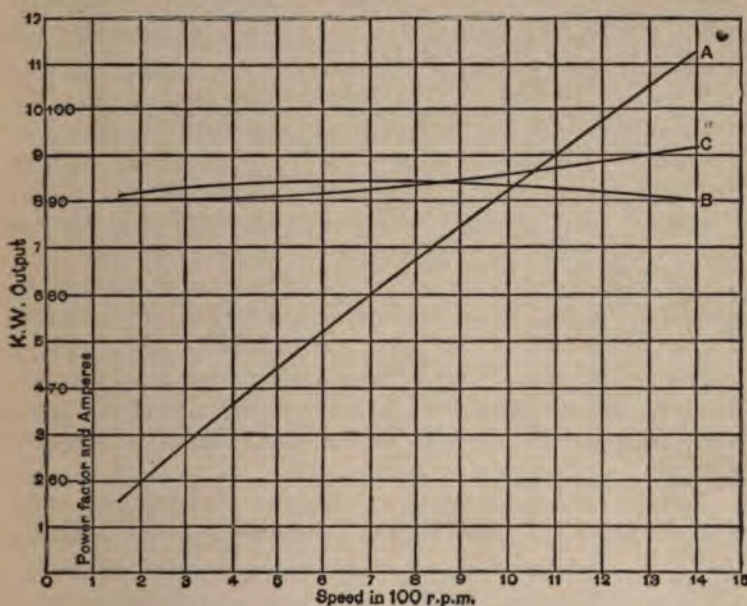


FIG. 154.

ciency or power factor at normal loads. For most work an efficiency curve like that of No. 8 is preferable to one like that of No. 5. When great margin of capacity is needed, it is best to use a motor deliberately adjusted to such use, and not to expect it of a motor properly designed for ordinary service.

The speed of induction motors is best regulated by inserting a non-inductive resistance in the secondary circuit. Under these circumstances the motor can be made to run at constant torque over a very wide range of speeds by varying the

resistance, just as one would regulate a street-car motor. Fig. 154 shows the variation in speed, current, and power factor in a 15 HP three-phase motor fitted with rheostatic control. The speed was varied at constant torque from about 1400 r.p.m. down to 150 r.p.m. Curve *B* shows the variation of the power factor, in this case high at all speeds, and curve *C* shows the slight variation in input. Operated in this way, the motor behaved almost exactly like a series-wound direct current motor with rheostatic control. Such a rheostat is used in operating hoists and the like with induction motors. Regulation by varying the primary voltage is highly unsatisfactory, since the torque falls off nearly in proportion to the square of the voltage, so that at low speeds the output is enormously reduced. Regulation by any method involving resistance is of course inefficient, not materially more so, however, than in the case of continuous current motors. It should be understood that all these remarks concerning torque, regulation, and the like apply to polyphase induction motors and do not hold true in general of monophase motors.

The weak point of induction motor practice is in the heavy inductance likely to be encountered unless motors with first-class power factors are used. It is depressing to find the current capacity of your generator exhausted long before it has reached its rated output in kilowatts, and if the motor service is part of a general system, the effect of a bad power factor on regulation is disastrous.

With generators of moderate inductance and good motors, general distribution by polyphase currents gives admirable results. The station manager should see to it that his motors are not of excessive size for their work, and are good in the matter of power factor. A few motors for very variable loads can be handled readily enough, but no motor with a bad power factor should be tolerated simply because it is cheap. Power factors of at least .85 at full load, and .80 at two-thirds load, are quite obtainable except in case of some special motors, and should be insisted upon rigorously.

One polyphase station operating more than fifty induction motors showed, when tested by the author, about .65 as average power factor when carrying all the motors. Rigorous inspection of the motors installed would have raised this

figure to .75, although the existing power factor actually gave no trouble, there being ample generator capacity.

So much for polyphase induction motors. Heterophase and monophase induction motors generally fail to give so uniformly good results. Occasional extraordinary results have been reported from the latter class, but in the author's opinion they concern motors which belong to the "freak" class alluded to, and cannot be expected in commercial practice. Monophase motors are usually weak in power factor, and start badly, most of those in use abroad being started without load. Even so, the starting current is large, as may be safely concluded from the discreet silence preserved on this topic in all descriptions of monophase motor installations. In general power transmission work the incandescent lamp and the induction motor are the chief factors. Synchronous motors are valuable in their proper place, and arc lighting and continuous current work are sometimes relatively important. The alternating current systems are now far enough developed to be entirely workable and trustworthy for incandescents and motors. The alternating arc lamp is, however, not quite in condition to replace the continuous current arcs for all purposes and under all circumstances, and for work specially suited to continuous currents reliance has at present to be placed in various current reorganizing devices, which are, so far, of rather indeterminate ultimate value. Whether they are to have a large permanent place in the art, or whether their sphere will gradually be much contracted, is uncertain, although the author inclines to the latter opinion. At all events it is sufficiently clear that the main body of power transmission will have to depend on alternating currents, at least for a long while to come.

Even if continuous current should be obtained somewhat directly from coal in the near or far future, the result would be not to increase power transmission by continuous currents, but to render the transportation of coal by far the cheapest method of transmitting energy.

The relative importance of polyphase, heterophase and monophase systems is a question often raised. The present indications are that the polyphase systems, in virtue of increased output of generators, possible economy in copper and

general convenience, have come to stay. The monophasic motor problem has not yet been satisfactorily solved in any general way, and until it has been solved, the monophasic system must remain subordinate, like the heterophase systems, which are special rather than general in their applicability. The much mooted question of frequency will be referred to in its different bearings in connection with other topics. The frequencies once common, 120~ to 135~, are rapidly passing out of use for all important work. They are inconveniently high for long lines by reason of inductance, are troublesome for large units, lead to high inductance in the system, and have for their only compensating advantage, lessened cost of transformers. Both here and abroad lower frequencies have come into use. In this country 60~ to 65~ seems to be the favorite range, except for work with rotary converters, when 25~ to 33~ is usual. Both these last are too low for general practice, since the cost of transformers is greatly increased; the former is unsuitable for incandescent service, unless with extremely low voltage lamps, and both are unsuitable for alternating arcs. It is now pretty generally recognized for the above reason that the adoption of so low a frequency as 25~ in the great Niagara plant was an error of judgment, perhaps brought about by an overestimate of the importance of rotary converters in general distribution.

On the other hand, abroad a compromise frequency of 40~ to 50~ is in general use. In the author's opinion there are very few cases in which lower frequencies than these are desirable, and none in which less than 30~ should be tolerated; 50~ to 60~ meets general requirements admirably, and only in rare cases is the use of rotary converters of sufficient importance to call for a lower frequency.

In connection with this topic we may consider a verbose controversy which has raged of late, respecting the advantages of certain irregular forms of alternating current waves as a true sine wave. The facts in a nutshell are as follows: Certain complex current waves, whose irregularity is due to the presence of harmonics of higher frequency, have been found to give slightly better efficiency in transformers than sine waves of the same nominal frequency. Such waves, however, do not hold their form under varying conditions of load, and

by reason of their harmonics of higher frequency raise the inductance of the line and apparatus, increase the probability of resonance on the line, disorganize all attempts to balance the inductance of the system by condensers or synchronous motors, and finally sometimes interfere with the proper performance of induction motors. The use of such wave forms, then, is likely to lead to very embarrassing complications in a power transmission system, and their sole advantage is far better secured by using a sine wave of slightly increased frequency, than by interpolating a set of worse than useless harmonics.

It is needless to say that all cases of power transmission cannot be treated alike—there is no system that will meet all conditions in the best possible manner. The best results will be obtained by treating, in the preliminary investigation, each problem as an unique and independent case of power transmission, and afterward boiling down the conclusions to meet practical conditions. Avoid, when you can, apparatus of peculiar sizes and speeds—remember that you are after results, not electrical curios. See to it that what is done is done thoroughly, and for general guiding principles keep your voltage up and your inductance down, and watch the line.

CHAPTER VII.

CURRENT REORGANIZERS.

WHATEVER method may be employed for the transmission of power in any given case, it will often be found that the current delivered at the receiving station is not of the character needed. Sometimes in transmissions for special purposes no difficulty will be met, but frequently, especially in the transmission of power for general distribution, both continuous and alternating currents are needed, whereas only one is at hand. For all electrolytic operations, for railway work at present, for telegraphy, and sometimes for arc lighting, continuous current is necessary, while alternating current is necessary for convenient application to electric furnaces, electric welding, electro-cautery and other minor purposes. So whichever kind of current is transmitted the other must be derived from it for certain uses.

All devices for thus changing alternating to direct currents, or *vice versa*, with or without accompanying change of voltage, may properly be called *current reorganizers*.

Three classes of such apparatus have come into more or less use: 1. Commutators; 2. Motor dynamos; 3. Rotary converters. These classes are quite distinct from each other; each has advantages and faults peculiar to itself, and all three are in every-day practical use to a greater extent than would seem probable at first thought.

We have already looked into the matter of commutation in Chapter I., and have seen how the naturally alternating currents in a continuous current dynamo are rectified and smoothed. Given, then, an alternating current received from a distant generator, and it would seem an easy matter to receive this current upon a commutator and deliver it as continuous current. In point of fact there are very serious difficulties in this apparently simple process.

The current received is a set of simple alternations shown

diagrammatically in Fig. 155. The figure shows three complete periods. Now if such a current be sent into a simple two-part commutator, such as is shown in Fig. 9, Chapter I., revolving




FIG. 155.

at such a speed that the brushes will be just passing from one segment to the other every time the current received changes direction, the result will be a rectified current, shown in Fig. 156, unidirectional, it is true, but far from continuous. Vari-



FIG. 156.

ous modifications of this simple rectifying apparatus have been and are in extensive use for supplying current to the field magnets of alternating generators. As these machines are generally multipolar, the two-part commutator has been modified so as to reverse the current at each alternation. Fig. 157 shows one of the simple forms of commutator arranged

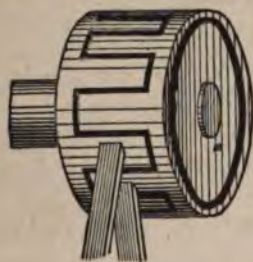


FIG. 157.

for self-exciting alternators. It consists of a pair of metal cylinders mounted on and insulated from the dynamo shaft. Each cylinder is cut away into teeth, and the two are mounted so that the teeth interlock with insulation between them. Each pair of consecutive teeth acts like the ordinary two-part commutator, and there are of course a pair of teeth for every pair of poles, so that the commutator acts at each alternation.

The resulting rectified current is then led around the field magnets of the generator, furnishing either the whole excitation, or enough to compound the machine. Such a current, however, is so fluctuating that it is by no means the equivalent of an ordinary continuous current for magnetizing purposes, hence in most modern machines the main exciting current is furnished by a small exciting dynamo, driven from the alternator shaft or by separate means, while the rectified current is used only now and then for compounding.

This simple current reorganizer is very successful for the purpose described. But it must be remembered that the amount of energy concerned is trifling, only a very few kilowatts being required to compound even the largest alternators. And despite this, there is often trouble from sparking, such commutators being notoriously hard to keep in good order.

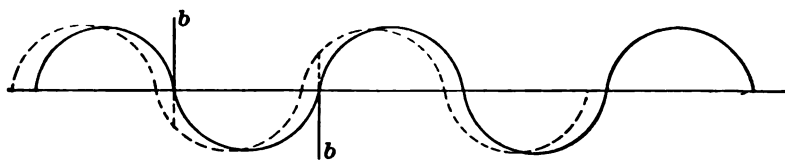


FIG. 158.

In applying the same process to rectifying current on a larger scale, the difficulties from sparking are very serious, in fact generally prohibitive. And the worst of it is that they are inherent. The root of the trouble is that the alternating current on a line used for general purposes cannot be kept accurately in step with the motion of the commutator. To ensure sparkless commutation the conditions must be as shown in Fig. 158.

The alternations of the current and E. M. F. are shown by the solid line, while the brushes at the moment of passing from one commutator segment to the next must take the position *b b*, with respect to the current. That is, they must pass from one segment to the next at the moment when the current, just reversing, is practically zero. So long as the electromotive force and the current are in phase with each other, as shown in the solid line, the current will be rectified without troublesome sparking. But when the current lags behind the E. M. F., as shown by the dotted line of Fig. 158, there is trouble

at once. The brushes, as can be seen from the dotted prolongations of *b b*, must break a considerable current, and there is certain to be sparking. Nor can any point be found for the brushes at which they will not have either to break this current or to pass from one segment to the next while there is considerable E. M. F. between segments. The case is bad enough in a compounding commutator having a position fixed with reference to the E. M. F. of the machine and dealing with low voltage and moderate current. The inevitable result is sparking that can be only mitigated by shifting the brushes, and more or less demoralization of the compounding. If the current be received from a distant generator on a commutator driven by a synchronous motor, the condition of things is much worse. When the current lags (or leads), not only are the brushes generally thrown out of step with it, but if there is a sudden change of phase the inertia of the commutating apparatus will put it at serious variance for the time with both current and E. M. F. Add to this the disturbances of phase produced by armature reaction in both generator and motor, and one has a set of conditions that renders sparking absolutely certain. The most that can be done to help matters is to employ palliative measures to delay the destruction of the commutator. Aside from this sparking, it is nearly out of the question to hold the voltage of the rectified current steady if the phase is shifting, as it often is likely to be.

Incidentally may be mentioned the fact that in working such a commutating apparatus, as in rotary converters, the direction of the rectified current will be uncertain; the brush which happens to be on a positive segment when the brush circuit is closed, will stay positive, as can readily be seen by tracing out the rectifying process in Fig. 157. In ordinary compounding commutators this uncertainty is absent, for with the brushes in a fixed position the positive segments will always be under the same brush, since the segments are fixed with reference to the armature coils.

No small amount of time and money has been spent in trying to work out a successful synchronizing commutator. The main trouble is, of course, sparking, and the exasperating part of the problem is that while on a small scale, as in compounding alternators, fair results can be obtained, the difficulties

increase enormously with the output, so that every attempt on a scale really worthy of serious consideration has ended in discouragement and the scrap heap.

The great usefulness of such apparatus if of reasonably good qualities has made this field of experimentation very interesting, and a vast amount of ingenuity has been expended in elaborately devised plans for reducing sparking and minimizing the evil results of shifting phase. An example of such work, of more than usual merit, was shown at the International Congress of 1893 at Chicago. This was the current reorganizer devised by C. Pollak, for use in connection with accumulator installations. It was intended specifically for charging accumulators, and is very ingeniously adapted to that use. Its general appearance is shown by Fig. 159. The apparatus consists of a

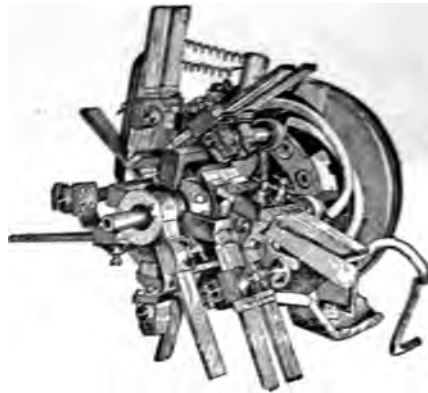


FIG. 159.

small synchronous motor driving a commutator, which has, in the example shown, eight segments coupled alternately in parallel so as to produce the effect of Fig. 157. The Pollak commutator is, however, peculiar in that the spaces between segments are of nearly the same width as the segments themselves, while the collecting brushes are set in pairs, so that by setting one of each pair ahead of, or behind the other, the ratio of segment width to space width can be changed. In charging accumulators the E. M. F. of the charging current must always, to prevent waste of energy, exceed the counter E. M. F. of the battery. Hence a current rectified as in Figs. 156 and 157 can-

not successfully be used. The arrangement of segments just described enables the brushes to be so set that contact with a segment is made at the moment when the rising E. M. F. of the alternating side is exactly equal to the counter E. M. F. of the battery, and broken when the falling E. M. F. reaches the same value. Only that part of the current wave of which the E. M. F. exceeds the counter E. M. F. of the battery is used, the charging circuit being open during the remainder of the period. When well adjusted and used on a circuit nearly non-inductive, the machine in question is almost sparkless and very well adapted for the particular purpose intended. It is also highly efficient, the only losses being those in the motor, *plus* brush friction. The total amount of these need be but trifling, probably less than 5 per cent. of the output.

But such apparatus cannot be considered as a general solution of the problem, for while quite successful for an output of 10 KW or so, it has not been tested in large sizes, nor under the conditions of inductance ordinarily to be expected on a power transmission circuit. For the reasons already adduced the chances for success are not good, particularly since all questions of sparking become very grave when large currents must be dealt with. This difficulty is well known in dynamo working. For instance, in an arc machine there may be frequent recurrence of the long, wicked-looking, blue sparks familiar to every dynamo tender, without noticeable damage to the commutator, while in a low voltage generator sparking of much less formidable appearance may put the machine *hors du combat* in a very short time.

Bearing all this in mind, it is but natural to expect that another particular solution of the reorganizing problem might be found for arc lighting. Here the irregularity of a "rectified" current is of small consequence, while the small amount of current cannot cause really destructive sparking if other conditions are fairly favorable. So it is that we find commutating apparatus in quite successful use for arc lighting in connection with alternating stations. The form of apparatus shown in Fig. 160, designed by Ferranti, has been introduced in several British stations with good results. The commutating mechanism is of course used in connection with a "constant current" transformer, arranged so as automatically to hold

the current closely uniform under all variations of load. Each commutating unit supplies two separate arc circuits of moderate capacity—twelve lights in each. How well the same device works at several times the E. M. F. necessary to supply so small a series, is now being demonstrated. The present tendency in central station practice is to employ very high voltages for arc lighting—50 to 100 or 125 lamps in series, thus greatly simplifying both the station equipment and the circuits. The rectifier should at least be able to replace the smaller generators now in use and such machines are now built for as many as sixty lights. This is probably practical—in

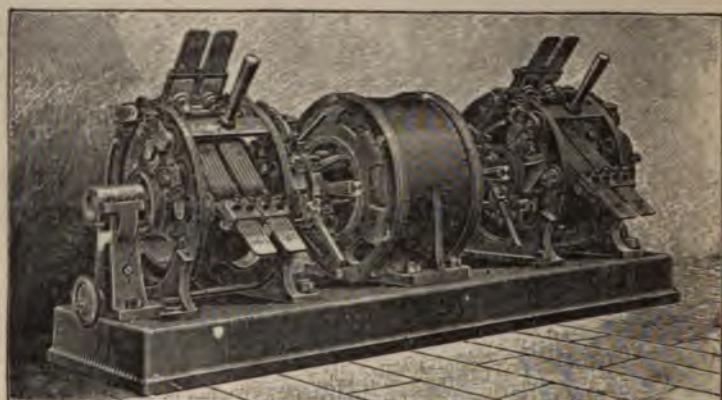


FIG. 160.

fact there seems to be no good reason why the rectifier should not be entirely available wherever it is desirable to work series arc circuits in connection with a transmission plant. Although not in use sufficiently long to enable one to pass a final judgment, the machine is at least promising and worth careful investigation. There seems to be some doubt as to the successful working of these rectifiers at anything except rather low frequencies, 30 to 40~ or less, but such a difficulty would appear to be constructional rather than inherent. It is possible that the alternating arc lamp will be developed far enough to render continuous current arcs entirely unnecessary, but this remains yet to be proved, although the inclosed alternating arc now gives highly successful results, particularly in street lighting.

All rectifying commutators now in practical service are of very limited output—not much exceeding 10 to 20 KW, an amount merely trivial so far as large enterprises are concerned. For railway work or incandescent lighting, these very interesting machines cannot be considered in the race at present. The general problem is as yet unsolved by such means, useful as they may be for special purposes.

The current delivered by rectifiers is in a measure discontinuous, and, hence, is not the full equivalent of an ordinary continuous current. The Pollak machine, however, which is intended to be used with a somewhat flat-topped alternating current wave, has been successfully employed for working motors as well as for charging accumulators. It is not impossible that such apparatus may yet be constructed of sufficient capacity to be of much practical service, although the difficulties, as has already been pointed out, are very considerable, and of a kind very hard to overcome. Of course, polyphase currents can be rectified by following the same process as with monophasic current, and a successful apparatus would often find some place in transmission plants.

The advantages of the rectifying commutator are simplicity, efficiency, and cheapness, particularly the last. The working parts are a small synchronous motor, made self-exciting (and self-starting) by a commutator, and one or more rectifying commutators driven by this motor. To obtain 100 KW output, it is not necessary, as in other forms of current reorganizers, to have a machine nearly as large and costly as a 100 KW dynamo. On the contrary, a one or two horse power motor would be amply powerful to drive the commutator, and the whole affair could hardly cost a quarter as much as a dynamo of the same capacity, besides being of greater efficiency, particularly at partial loads. But a hundred kilowatts is far beyond the output of any rectifier that has yet been put to commercial service, and even a hundred kilowatts is but a fraction of the output that is often desirable in a single unit.

On the other hand a rectifier must require at least the same care as a dynamo, and must in every practical case be employed in connection with reducing transformers to bring the alternating current to the right voltage. The regulation too, is somewhat dubious, since compound winding is out of the

question. And the current is at best disjointed, likely to produce needless hysteresis, and of a character rather hard to measure conveniently.

To sum up, the rectifying commutator, while quite good enough for certain particular purposes, has so far given no definite promise of general usefulness. All of the serious attempts to develop it on a considerable scale have ended in failure. It is not effectively reversible, so that the task of converting continuous to alternating currents is quite beyond it. While the cheapness, lightness and efficiency of such apparatus puts it in these particulars far ahead of any other type of current reorganizer, the verdict of experience has so far been adverse in spite of these advantages, and engineers have been driven to other and more cumbersome devices.

The most obvious method of deriving continuous from alternating currents, is to employ an alternating current motor in driving a continuous current dynamo. The two machines may be connected in any convenient way, by belting, clutching the shafts together, or by putting them in even more intimate connection by placing two armatures on the same shaft or two windings on the same core.

The procedure first mentioned is not infrequent, particularly when a transmission of power plant is installed in connection with an existing lighting or power station. A synchronous motor is installed in place of the previously used engines, belted in any convenient way to the existing generators, and the operation of the station goes on as before. Good examples of this practice may be found at Walla Walla, Wash. (monophase), Springfield, Mass. (two-phase), Taftville, Conn., and Sacramento, Cal. (three-phase). Further description is unnecessary, as the apparatus is in no way out of the ordinary, and not at all specialized for the conversion of alternating to continuous currents.

A more interesting way of accomplishing the same result is by the use of a twin machine comprising motor and generator on the same bed plate, or even on the same shaft. In this way the reorganizing apparatus is formed into a compact unit, convenient to install and to operate, and possessing an efficiency higher than that of two belted machines, by the belt losses and more or less of the bearing friction. The total

increase of efficiency is perhaps 5 per cent., when the comparison is between a pair of coupled machines and a pair directly belted, or more if the belting be indirect. Moreover the motor and dynamo parts of the machine can each be designed so as to give the best efficiency and economy of construction possible at the given mutual speed. A typical unit of this class is shown in Fig. 161—a Siemens continuous

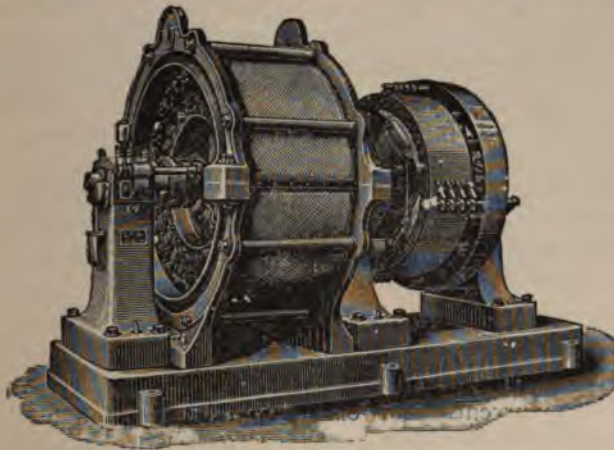


FIG. 161.

alternating transformer. The motor part is wound for 2,000 volts, monophase, and the dynamo part, of the well-known Siemens internal pole type, with overhung armature and brushes directly on the windings, delivers continuous current at 150 volts. In this case the machine has three bearings, although in many cases it would be quite possible to get along with two. The main advantage of this duplex form of machine is the complete independence of the two component parts in their electrical relations. The motor part can be designed for any desired voltage or number of alternations. It can often, except in very long transmissions, take the line voltage directly without need for reducing transformers, while the number of alternations can be chosen solely with reference to general conditions and without considering the direct current end of the machine at all. This, as will be seen when we have considered some other types of current reorganizers, is a very valuable property, since it gives the power of obtaining con-

tinuous current in a thoroughly practical way from alternating currents of any frequency. Other reorganizers can be worked to advantage only within a somewhat limited range of frequency. Again, the motor-dynamo can be compounded on the continuous current side without in any way reacting upon the alternating circuit, and the two circuits can be regulated independently in any desired manner. All difficulties due to lagging current can be eliminated, and the continuous current side can be kept at constant pressure irrespective of loss in the main line or any variations of voltage or phase occurring in it.

Finally the apparatus can as readily give alternating current from continuous, as the reverse, and with the same independence in each case.

The compensating disadvantages are high first cost and rather large loss of energy in the double transformation. As to the former count, it may be said that the advantages gained in possible range of frequency and flexibility in the matter of voltage go far to offset the increase of cost. Often such a motor-dynamo is the only possible way of securing the necessary current. For example, if one wished continuous current for heavy motor service, such as hoists and the like, where the only current available was monophase alternating of 125~, or even of 60~ for that matter, the motor-dynamo would be the only practical way of solving the problem.

As regards efficiency the motor-dynamo should be, and is, a little better than motor and dynamo separately, owing to lessened friction of the bearings. Its efficiency should be as great as 85 per cent. at full load, and might easily be 2 or 3 per cent. higher, in large machines. At half load it should be say 82 to 85 per cent. Practice too often shows results several per cent. below those mentioned, but this is because motor-dynamos have usually been of very small size and sometimes have been made up from any machines of the right speed that were at hand.

The usual synchronous motor may in small motor generators be replaced to advantage by an induction motor, which is simpler than the synchronous form and requires no brushes. Such a combination is shown in Fig. 162. This machine is intended for supplying the current for a large telegraph office.

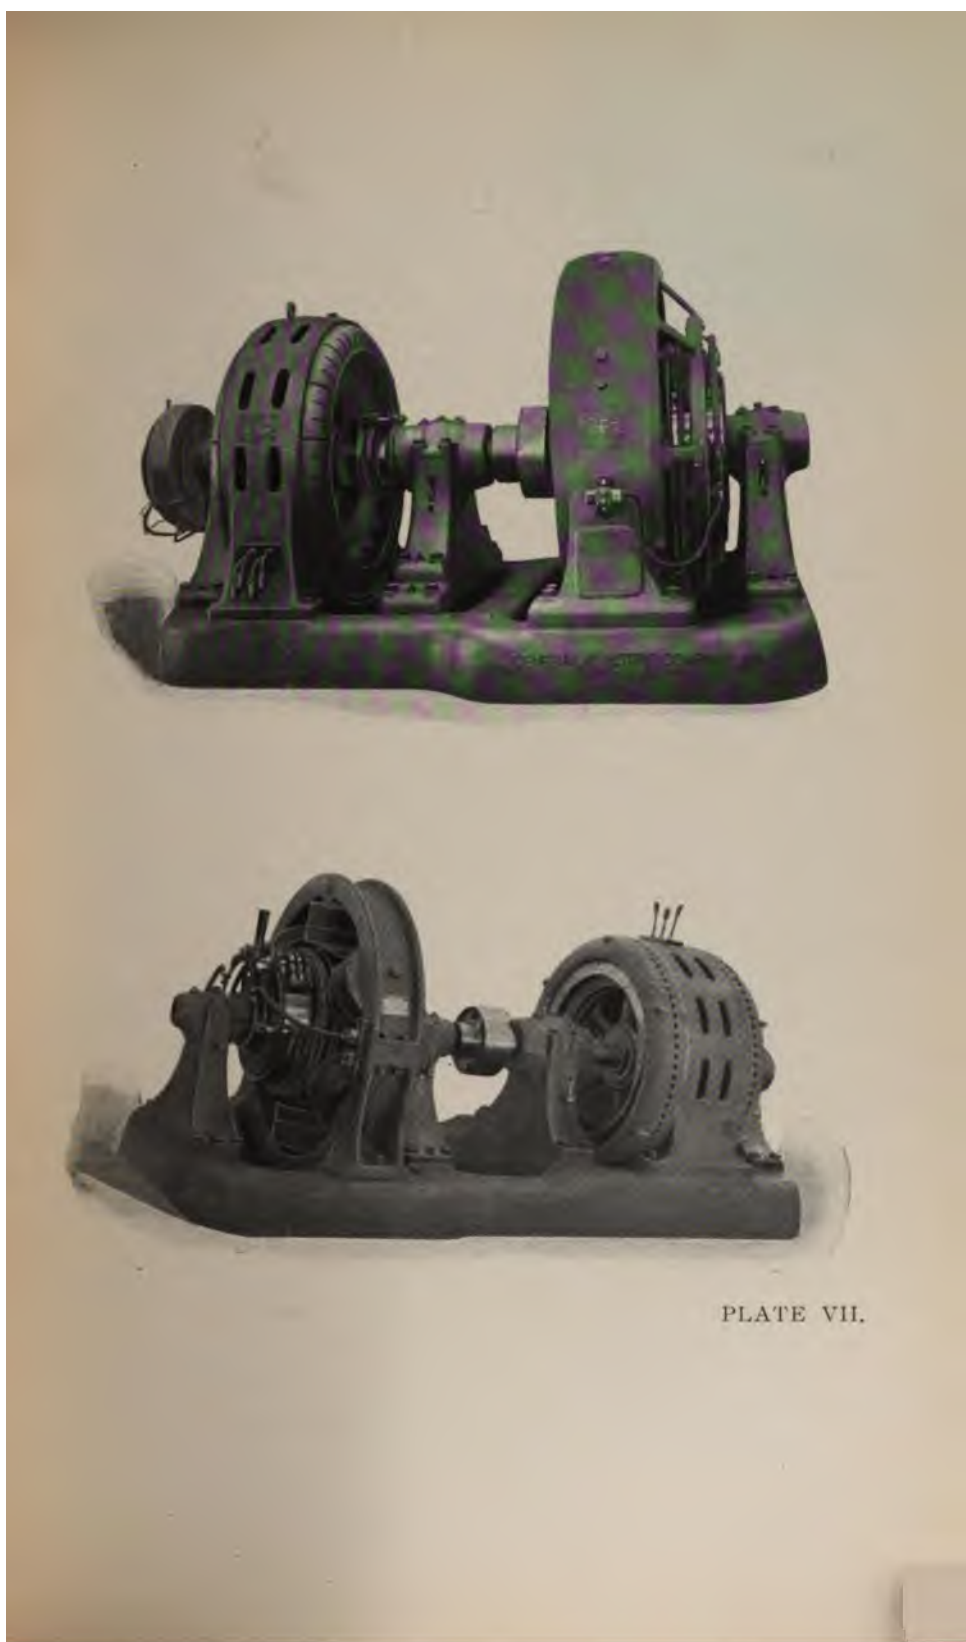


PLATE VII.

LIBRARY
TILDEN FOUNDATIONS

LIBRARY

The motor is a three-phase induction machine of 2 HP output, operated from a 110-volt secondary at 50~. The speed is a trifle less than 1,500 revolutions per minute. With this arrangement the attention required is very trifling, and a large number of troublesome batteries are displaced. Of late such machines have assumed considerable importance, and many large units have been produced. Plate VII shows in Fig. 1 a 500 KW quarter-phase set running at 400 r.p.m. It consists of an 8 pole 500 KW railway generator coupled directly to a 20 pole 2200 volt synchronous motor, the two machines having a common bearing between them. An interesting feature of this set is the exciter mounted on the same shaft, an 8 KW multipolar generator, so that the whole outfit is self-contained. The frequency in this case is 66~, a periodicity at which such motor-generators have a material advantage over other apparatus for a like purpose.

Fig. 2 is out of the ordinary in that the motor is of the induction type, instead of the ordinary synchronous machine. The set shown is of 100 KW output, and comprises an ordinary 6 pole 600 volt railway generator coupled to a 12 pole three-phase induction motor, running at 600 r.p.m., the periodicity being 60~. Induction motors have recently come into considerable use in this sort of work, in spite of somewhat lower efficiency than the corresponding synchronous motors. It is safe to say that the difference in efficiency is 2 or 3 per cent., and while the synchronous motor may be overexcited so as to improve the power factor of the system, the induction motor always introduces lagging current. Yet a number of motor-generators with induction motors are now being built of capacity from 500 to nearly 1000 KW. The real reason for the use of induction motors on so large a scale is the trouble which has been experienced at many times and places from hunting. These troubles do not get widely advertised outside the stations where they occur, but it is a fact that in the use of rotary converters and synchronous motors on a large scale very serious and formidable developments of this phenomenon have occurred, so that in spite of the use of shields it has under certain conditions, especially when incandescent lighting circuits were to be fed, seemed wise to have recourse to induction motors. It is, however, probably best to regard this as a temporary expedient,

as synchronous motors, at least, can be practically freed from hunting by proper design and construction, and possess very considerable advantages. The demand for machines of extreme multipolar construction, a demand based largely on fashion, and the use of laminated pole pieces, are responsible for a good share of the trouble. Rotary converters, as we shall presently see, present more serious problems.

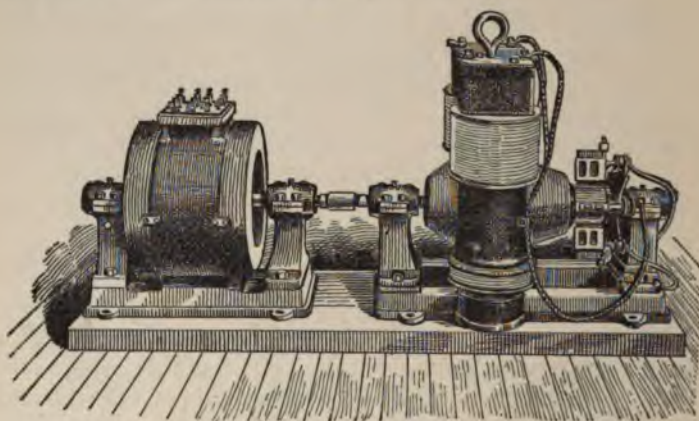


FIG. 162.

In these large motor-dynamos it is possible to reach full load efficiencies in the neighborhood of 90 per cent., and figures fully up to that point have actually been obtained. As large synchronous motors can readily be wound for 10,000 or 12,000 volts, under favorable conditions motor-dynamos can be used without reducing transformers, which averts a loss of 2.5 or 3 per cent., that would otherwise be incurred.

From the duplex machines just described it is but a short step to the composite dynamotor, so called, of which the armature is double wound. The primary or high voltage winding may of course be either alternating or continuous. The secondary winding is likewise for either current, and may well be fitted with both commutator and collecting rings. A favorite arrangement of the windings is to place the secondary coils in slots in the armature core, apply a sheathing of insulation, and then to wind the primary coils on the smooth surface thus formed. The commutators or rings

are placed one at each end of the armature, as in the continuous current transformer shown in Fig. 37, Chap. III.

A typical dynamotor of this sort is shown in Fig. 163. This is specifically intended to derive a high voltage alternating current for testing purposes from a low voltage continuous current. The output is small, only a fraction of a kilowatt, and the armature is in the ordinary bipolar field used for small motors. The motor or primary winding is for 110 volts, continuous, and the secondary for 5,000 volts, alternating. Of course these voltages might be anything desirable, since in so small a machine there are no difficulties in the way.

Another excellent specimen of the same type is Fig. 164, a Lahmeyer "*umformer*" of about 30 KW output. It is primarily a continuous current transformer, with 675 volts primary

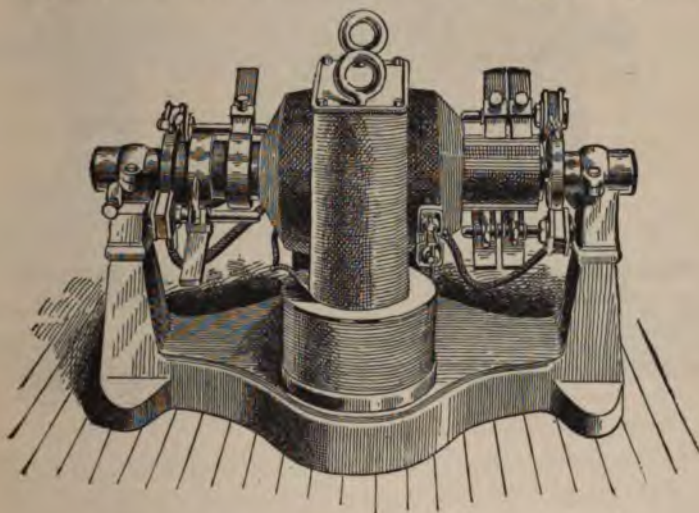


FIG. 163.

and 115 volts secondary. It is fitted, however, as shown in the cut, with collector rings outside one of the bearings, from which three-phase current at about 70 volts can be taken. There are four field poles, and as the normal speed is 850 revolutions per minute, the three-phase current is at a frequency of a little less than 30~ per second.

This was one of the machines exhibited at the Frankfort Exposition of 1891, and fortunately an efficiency test of it is

available, dealing, however, only with continuous currents. From the nature of the case the efficiency with a three-phase secondary would not differ substantially from that found, so that the curve, Fig. 165, gives a closely approximate idea of the general efficiency of such apparatus in the smaller sizes. At full load the commercial efficiency is very nearly 85 per cent., while at half load it has dwindled to 77 per cent. This is not bad for a small machine, and in a unit of 100 KW or more could

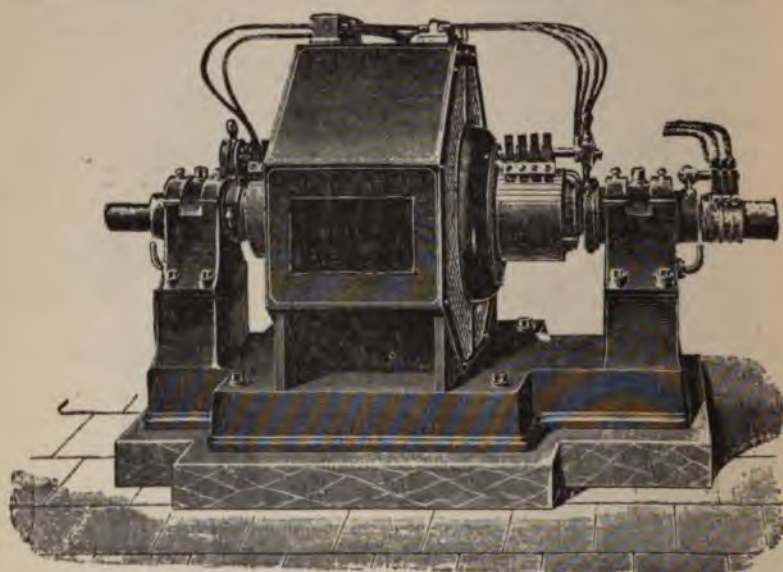


FIG. 164.

undoubtedly be raised several per cent. It should be at least as high as can be obtained from a duplex motor dynamo, in fact rather higher, since the bearing friction and core losses are diminished. The composite machine is also cheaper, since but one field is used, and it has a certain advantage in that the armature reactions due to the motor and dynamo windings tend to oppose each other, and hence to diminish possible sparking and disturbance of the field. It has the same independence of primary and secondary voltage as the duplex motor dynamo. On the other hand, by reason of a common field, the periodicity of the currents in both windings must be the same. It

must be remembered that a continuous current armature has a periodicity just as truly as an alternating armature. The current as generated in each is alternating, but in the former it is commuted before leaving the generator. Now the frequency of these alternations depends directly on the number of poles and the revolutions per minute, being in fact the numerical product of the two. So if one of these composite dynamotors be used with the continuous current winding as primary, the

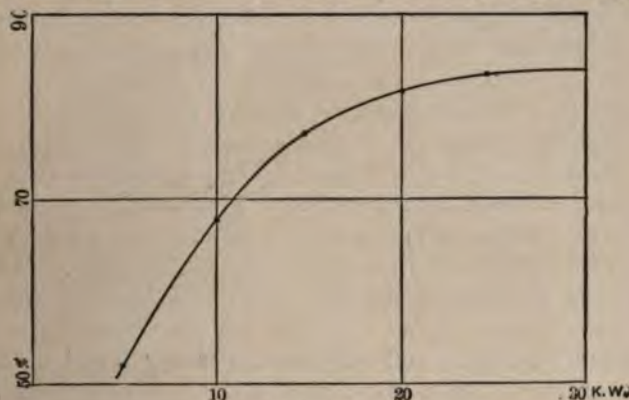


FIG. 165.

frequency of the alternating secondary is fixed, since the speed of the machine cannot be changed without involving both primary and secondary voltages. If the alternating current side be used as the primary, the speed of the machine is fixed by the number of alternations, and whatever the voltage of the secondary, the frequency must be the same as that of the primary. Now it is a fact well known to dynamo designers, that continuous current dynamos generating a high frequency current prior to its commutation are troublesome and costly to build. Most continuous current dynamos have an intrinsic frequency of 15 to 25~ per second. To increase these figures to 40~ involves some difficulty, particularly in large machines, while 50 or 60~ are rather hard to reach, unless in sizes of 50 KW and below.

Hence in spite of the good points of the composite dynamotor, it is of limited utility compared with the duplex machine previously described, particularly since there is a simpler way of doing the same work with a higher efficiency.

This is found in the so-called rotary converter, (the name is in no wise descriptive).

This machine is nothing more than a continuous current dynamo fitted with collecting rings in addition to the commutator. These rings are connected to appropriate points of the armature winding, and supplied with alternating currents of the same frequency which would be generated by the armature if the machine were used as a dynamo. The brushes being raised, the machine is nothing but a synchronous motor running without load at its normal speed. Now when the brushes are put down, the alternating current simply flows through the armature just as if it were generated therein, is commuted and passes out upon the line. This commutation takes place under just the same general conditions as if the machine were used as a generator. Meanwhile a portion of the current supplied is passing as before, not through the brushes but through the winding to the collecting rings, keeping up the action as a motor. Of the total current then, a small part forces its way against the E. M. F. set up in the windings by the field, and supplies the motor function; a far greater part, in amount determined by the resistance and inductance of the armature, flows as if urged by this E. M. F., to the brushes, and supplies the generator function of the machine. Thus a single armature winding serves to drive the armature and to furnish a large output of commutated current. And this current is not simply rectified, but is of exactly the same character as if generated in the armature.

The character of the winding in a rotary converter is generally precisely the same as in a continuous current generator, the only addition being two or more leads from symmetrically placed points in the winding to the collecting rings. These leads can be so arranged as to form a monophasic system for the alternating current or, if desired, a two- or three-phase system. The latter forms are generally preferred, since like the corresponding synchronous motors they can be made self-starting, while the monophasic machine has to be brought to speed by special and by no means simple methods. Fig. 166 shows the character of the armature in a simple bipolar rotary converter (monophasic). Here the continuous current winding is a Gramme ring in 16 sections. From the brushes *B, B*, continuous cur-

rent may be applied or withdrawn, while the brushes on the collecting rings *C, C*, perform the same office for the alternating current. Such a machine may serve a variety of purposes as follows: 1. Continuous current dynamo. 2. Alternating current dynamo. 3. Continuous current motor. 4. Synchronous alternating motor. 5. Continuous-alternating converter. 6. Alternating-continuous converter.

Diphase rotary converters are usually supplied with four collecting rings connected to form two circuits, each one joining the windings in two opposite quadrants of the armature.

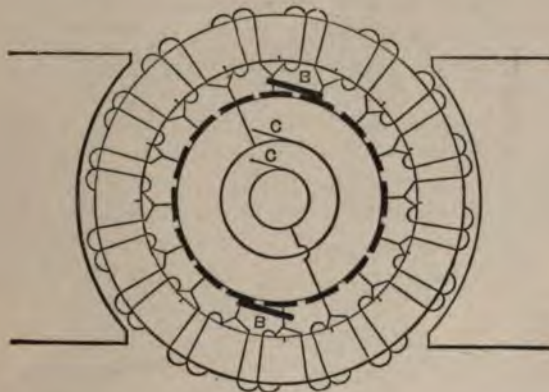


FIG. 166.

Triphase transformers generally have three collecting rings, with their respective leads tapped into the windings 120° apart. The connections vary somewhat for different kinds of armature windings, but are the same in effect as those just indicated. One of the early practical machines of this sort exhibited at the Frankfort Exposition of 1891 is shown in Fig. 167. It is of the flat ring type usual to dynamos of Schuckert make, and is fitted with four collecting rings outside the bearing at the commutator end. The rings were arranged for either monophase or diphase connection. The rotary converter thus organized attracted great attention, and was successfully operated in its manifold and diverse functions. It should be noted that if driven as a dynamo, such a machine can furnish continuous and alternating current simultaneously, a property sometimes convenient, and now not infrequently utilized.

These rotary converters in the diphas and triphase forms are playing a very important part in electric railway operations involving considerable distances, and a large number of them are in highly successful use. A good idea of the modern type of rotary converter is shown in Fig. 2, Plate VIII. This is one of the 400 KW machines installed in 1894 to operate the electric railways in the city of Portland, Ore. It is designed to deliver continuous current at nearly 600 volts, and receives its energy from Oregon City, about fourteen miles away, where is installed a triphase transmission plant. The motive power is

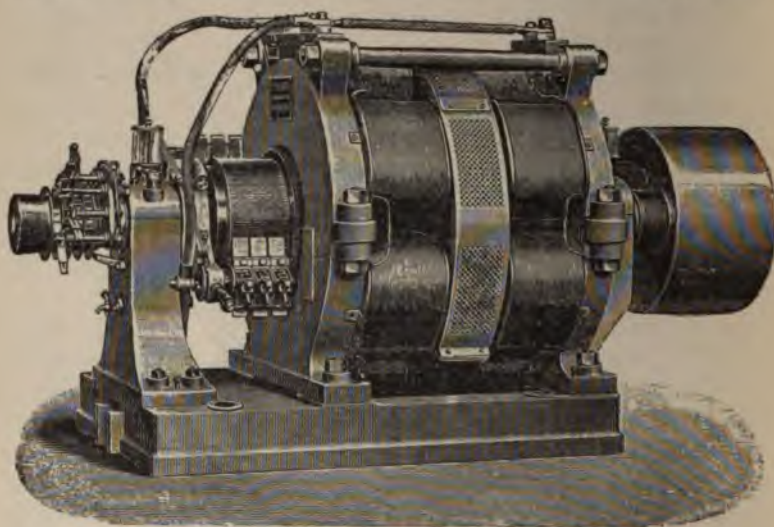


FIG. 167.

derived from the great falls of the Willamette River. Current is generated at 6,000 volts, with a frequency of 33~ per second, and is given to the rotary converters at about 400 volts, from the secondaries of the reducing transformers. Fig. 1, Plate VIII, shows a 250 KW Westinghouse diphas machine, adapted for use on a 60~ circuit and giving continuous current at 250 volts. An interesting feature of this machine is the diphas induction motor with its armature on an extension of the main shaft. This serves to bring the machine to speed without calling for the excessive current that would be required if the main lines were closed upon the converter armature




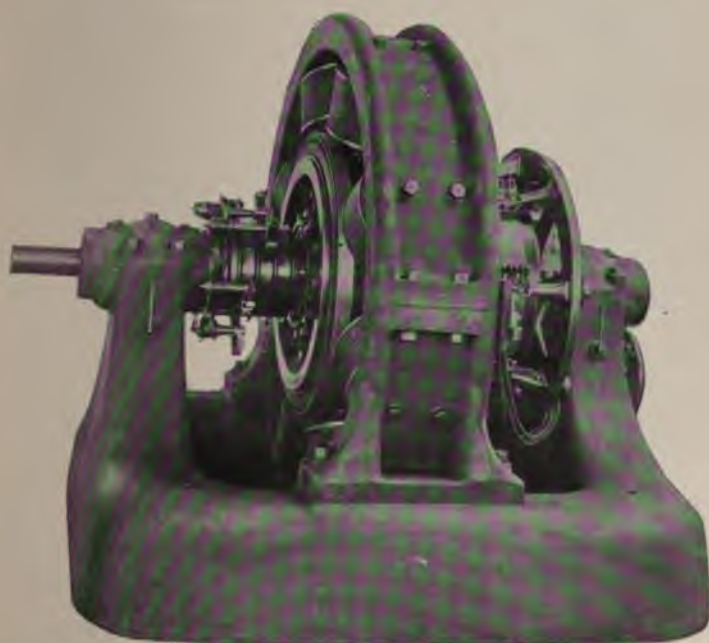


PLATE VIII.

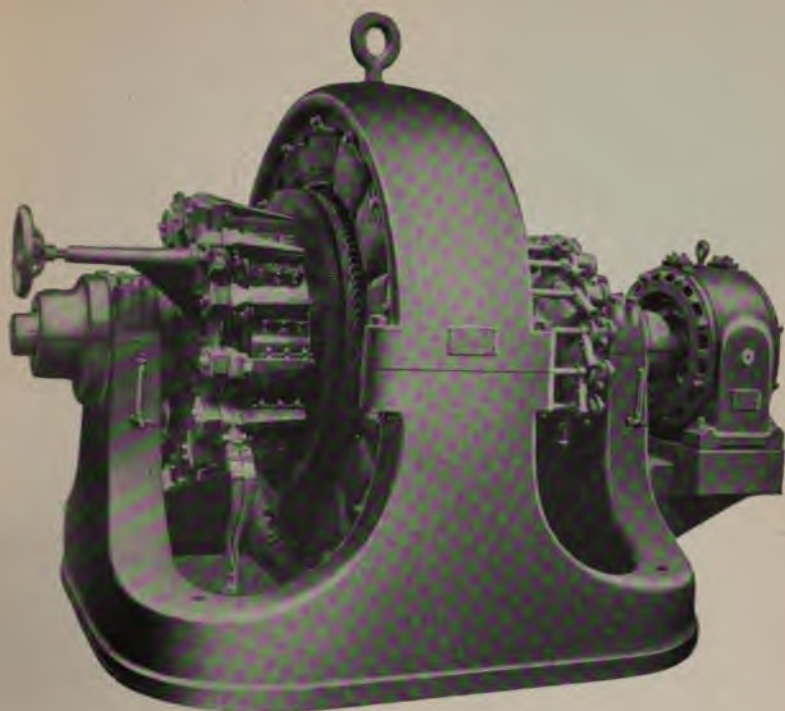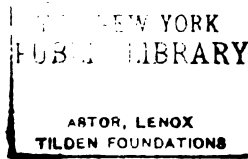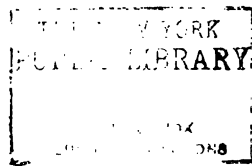

itself. The monophasic form of this very interesting apparatus has not yet come into much practical use, not through any inherent faults, but because most of the power transmission has so far been accomplished with diphase and triphase currents.

The efficiency of these machines is, as might be expected from their character, practically the same as ordinary continuous current dynamos of the same output, or rather better on account of the shorter average path for the current in the armature. In fact, so far as general properties go, they are dynamos. They furnish at present by far the most available means of deriving continuous from alternating currents, for they are simple, of great efficiency, and of about the same price as other generators of the same capacity. In point of fact, a well-designed polyphase rotary converter has rather better output and efficiency than the corresponding generator, since for the reason just noted the armature losses are diminished. Bearing this in mind, it is apparent that increasing the number of points at which the armature is tapped for the alternating current supply, thus shortening the average path to the brushes, will, other things being equal, lessen the armature loss. In practice it is found that a three-phase converter with three armature taps is considerably better than a monophasic converter with two; a quarter-phase converter with four is somewhat better still, while a three-phase connection with separate phases and six taps gives even a higher output and efficiency. The net result is that while a monophasic converter is rather inferior to the corresponding dynamo the two- and three-phase converters are considerably better than the corresponding dynamos. Quarter-phase converters are always connected for four collecting rings, and large three-phase converters not infrequently have six, to gain the advantage just mentioned.

Efficiencies as great as 96 per cent. at full load have been obtained from large rotary converters, with 93.6 per cent. at half load. These figures are from a three-phase, six collecting ring converter of nearly 1000 KW output.

As already indicated, there is a strong tendency toward the use of low periodicity, 25~ to 30~ in rotary converters. This is partially due to the complication of the commutator in high frequency converters, partly to the current fashion for

extremely low rotative speeds, and partly to lack of *finesse* on the part of the average designer. That converters for a frequency as high as 60~ are entirely feasible even in capacities up to several hundred kilowatts admits of no discussion, as the machine put in evidence in Plate VIII, of which a number are in successful operation, plainly shows. It is undoubtedly easier to build them for somewhat lower periodicities, but there seems very little reason for going so low as is the current custom, and it tends needlessly to multiply special types of apparatus.

And yet the simplicity of the rotary converter is attained at the cost of certain practical inconveniences that cannot lightly be passed by. Their source is the employment of a single field and armature winding for all the purposes of the apparatus. The results are, first, complete interdependence of the alternating and continuous voltages, and, second, consequent difficulties of regulation that are occasionally very troublesome.

The immediate result of a single winding is that there is an approximately fixed ratio between the alternating and the continuous voltage. The former is always the less, and, while varied by changes in the number of phases determined by the connections, is approximately the alternating voltage that would be yielded by the machine driven as a generator. This is, for monophase or diphasé connections, about seven-tenths of the continuous current voltage, and for three-phase connections about six-tenths. The proportions would approximate to

$\frac{1}{\sqrt{2}}$ and $\frac{\sqrt{3}}{2\sqrt{2}}$ respectively, if the alternating E. M. Fs. were

sine waves, which they never are when derived from an ordinary continuous current armature. In service the real proportions may, and generally do, vary by several per cent., according to the excitation. In a particular two-phase case the actual ratio was .68, and in a three-phase case .65. If, therefore, a rotary converter be used for supplying continuous current, the applied alternating current must be of lower pressure than the derived continuous, in about the proportion above noted. This compels the use of reducing transformers in every case of power transmission involving this apparatus.

Further, any cause that affects the alternating pressure affects the continuous as well. Line loss, inductance, resonance effects, as well as changes at the generators, all influence the voltage at the continuous current end of the rotary transformer. Nor can this voltage be freely altered by changing the field strength of the rotary transformer, since as we have already seen this may profoundly change the inductance of the alternating circuit, which is for many reasons undesirable. Therefore compound winding, while perfectly practicable, may cause trouble. The best results are obtained by carefully adjusting the generator, line, and rotary transformer to work together. Otherwise there is very likely to be trouble in regulation.

For these reasons in cases where close regulation is necessary, as for incandescent lighting, preference has frequently been given to the motor generator with double field and armature, as in the large Budapest plant installed by Schuckert & Co., who were among the pioneers in developing the rotary transformer. In this case the transmission is at 2,000 volts diphasic, at which pressure current is delivered to the motor end of the motor generators placed in sub-stations at convenient points. In such a plant the increased cost of the duplex machines is not so great as might be supposed, for reducing transformers are needless, and the output of both generators and motors can be forced to the utmost limit of efficient operation, without fear of injuring the regulation, which is reduced to the easy problem of accurately compounding a continuous current generator. The net efficiency of the Budapest transformation is said to be 85 per cent. Some recent experiments on the relative efficiency and cost of motor generators and rotary converters are as follows: The sets compared were of 200 KW capacity for changing tri-phase current from the Niagara circuits at 11,000 volts, 25~ into continuous current at 120 to 150 volts. The efficiencies given are net, including the necessary provisions for obtaining a variation of 25 per cent. in the finally resulting voltage:

	MOTOR- GENERATOR.	TRANSFORMERS AND ROTARIES.	DIFFERENCE.
Full load	87.40	89.87	2.47%
$\frac{3}{4}$ load	85.54	88.70	3.16%
$\frac{1}{2}$ load	81.42	84.90	3.48%

The extra apparatus required with the rotaries brought the two methods to substantially the same cost, but for lighting work the motor generators gave the better results.

From the foregoing it is sufficiently evident that every case of current reorganization cannot be successfully met by the same apparatus. For arc lighting at low frequency the rotating commutator seems to be fairly well suited, and for that particular purpose it is somewhat cheaper and more efficient than any of its rivals. Next in point of efficiency and cheapness comes the rotary converter, infinitely better for heavy work than any commutating device, and finding already extensive application to electric railway work. Finally, for work requiring very close regulation, the motor generator is specially well suited, closer to the rotary transformer in cost and efficiency than would be supposed offhand, and unique in the complete independence of its working circuits.

Practice in this line of operations has not yet settled into fixed directions, and is not likely so to do just at present. Each plant must therefore be considered by itself and treated symptomatically.

American usage is at present tending strongly toward the rotary converter, on account of its ready adaptation to railway service, but, in view of the work that has been done on alternating motors for such service, it is an open question how far current reorganization will be generally necessary in the future, although just now it is of very great practical importance.

As the price of copper rises the use of current reorganizers becomes more and more important in railway work, and for this particular use the rotary converter is generally chosen.

There should be mentioned here some curious devices for obtaining rectified alternating currents based upon the phenomena of electrolytic polarization.

Obviously if one could find a conductor which would let pass currents in one direction, and block those in the other, the result of putting it in an alternating circuit would be that all the current impulses in one direction would be suppressed, so that the resulting current would be a series of separated half-waves of the same polarity. It would be as if in Fig. 155 all the half-waves above the base line were erased. Now such a conductor is actually obtainable in certain electrolytic cells in

which a counter electromotive force or severe polarization resistance impedes current flowing in a particular direction. Under favorable circumstances the selective action is quite complete, so that the alternating current becomes unidirectional. Fig. 168 shows the current curve for a complete cycle as modified by electrolytic rectification. The positive half of the wave is practically wiped out of existence. The

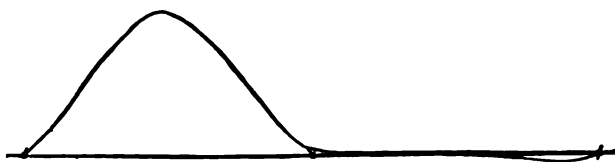


FIG. 168.

efficiency of these devices as regards the energy rectified is quite low, and most of the apparatus constructed has been upon a very small scale, but there are certain purposes, like energizing induction coils, for which it might occasionally be of service. It is given place here more on account of its general interest than for any practical value. It works best, like other rectifying devices, at low frequencies.

CHAPTER VIII.

ENGINES AND BOILERS.

MECHANISMS that constitute the link between natural sources of energy and mechanical power are called prime movers. So far as the electrical transmission of energy is concerned, but two classes of prime movers, steam engines and water-wheels, have to be seriously considered. All others sink into insignificance or are limited to special and rarely-occurring cases. When power is transmitted electrically over considerable distances the prime mover is usually a water-wheel, since, as yet, the transmission of power from coal fields has been hardly more than begun, although when long electrical lines become somewhat more familiar, coal may become a frequent source of energy. Where the distribution of power from a central point is to be accomplished, the prime mover is frequently a steam engine.

The general principle of the steam engine may be fairly supposed to be somewhat familiar to the reader, but the conditions of economy are not always so clearly understood. The source of power in an engine is the pressure of the steam, which must be utilized as fully as possible to get anything like efficient working. Since the pressure is in direct proportion to the temperature in any gas, the proportion of the total pressure which can be used depends on the original temperature at which its use is begun, and the temperature at which one ceases to use it and rejects it together with all the energy it then possesses. These temperatures are not to be reckoned from the ordinary zero of a thermometer, but from the so-called absolute zero. This is that point from which, if the temperature of a gas be reckoned, its pressure will be directly proportional to the temperature. It is 461° below zero, Fahrenheit, that is, 493° below the melting point of ice. It is determined by the consideration that any gas at this melting point loses $\frac{1}{273}$ of its pressure for a change in temperature of

one degree, hence if it could be cooled down 493° , would lose its pressure and would have given up all of its energy. Counting from this absolute zero then, one can utilize that part of the whole energy of a gas which lies between the temperature at which the gas begins to work and that at which it ceases to do work. In other words the efficiency of any engine operated by gaseous pressure is:

$$\frac{T_1 - T_2}{T_1}$$

In which T_1 is the absolute temperature of the gas when it begins to do work in the engine, and T_2 the absolute temperature at which its work ends. In practice T_1 is the temperature of the steam when it enters the cylinder, and T_2 the temperature of exhaust or condensation. Steam permits the use of but a limited range of temperature on account of the temperature at which it liquefies, and bothers us by condensing as it expands, even in the cylinder. It must be remembered that while we are limited by our possible range of temperature to a low total efficiency in any heat engine, of the energy that can possibly be obtained within this limitation, a very good proportion is recovered in the best modern engines—from one-half to two-thirds. The remainder is lost in various ways, largely through radiation of heat and cylinder condensation. Besides these thermal losses a portion of the energy utilized is wasted in friction of the mechanism.

From these considerations we may derive the following general principles of engine efficiency:

I. The steam should be admitted at the highest pressure feasible and exhausted at the lowest pressure possible.

This indicates that high boiler pressure should be used, and that it is better to condense the steam than to expel it into the air, as by condensing most of the atmospheric pressure can be added to the working range of pressure in the engine. In the next place it is evident that the steam should be sent into the engine at full boiler pressure, and finally condensed after expanding and yielding up its pressure as completely as possible.

II. Waste of heat in the engine should be stopped as far as possible. This means checking losses from the cylinder by radiation and conduction, and internal loss from cylinder

condensation. The first principle laid down has for its object the increase of the possible efficiency, while this second principle bears on the securing of as large a proportion as possible of this possible efficiency. It requires the prevention of escape of heat externally by protecting the cylinder, and incidentally shows the advantage of high pressure and high piston speed in securing as much work as possible without increasing the size of the working parts, and hence their chance for radiation. On the other hand it indicates the danger of working with too great a range of temperature in the cylinder, thus producing cylinder condensation.

III. The work of the engine should be the maximum practicable for its dimensions and use. This secures high mechanical efficiency as the previous principles secure high thermal efficiency. To fulfill this condition high steam pressure and high piston speed are necessary, and the latter usually means also rather high rotative speed. The importance, too, of fine workmanship in the moving parts is evident.

It will be realized that some of the conditions just pointed out are mutually incompatible to a certain extent. Everything points, however, to the great desirability of a condensing engine, worked with a high initial steam pressure and great piston speed. The tendency of the best modern practice is all in this direction, and the efficiency of engines is constantly improving. The greatest advances of the past decade or two have been in the introduction of compound engines. The principle here involved is the lessening of thermal losses in the cylinder by avoiding extremes of temperature between the initial and the final temperature of the steam expanded into it. Compound engines simply divide the expansion of the steam between two or more cylinders, so that the temperature range in each is limited, without limiting the total amount of expansion.

Following the same line of improvement, triple and quadruple expansion engines are becoming rather common, although the value of the last mentioned is somewhat problematical at present.

For practical purposes steam engines may be classified in terms of their properties, somewhat as follows:

First, there is the broad distinction between condensing and

non-condensing engines. The former condense the exhausted steam and gain thereby a large proportion of the atmospheric pressure against which the latter class is obliged to do work in exhausting the steam. Where economy of operation is seriously considered, the non-condensing engine has no place, if water for condensation is obtainable.

Each of these classes falls naturally into sub-classes, depending on the number of steps into which the expansion is divided—simple, compound, triple expansion, etc. Of these the first may now and then be desirable, where the size is small and coal very cheap, but for the general distribution of energy the last two are more generally useful. Furthermore each of the sub-classes mentioned may be divided into two genera, depending on the nature of the valve motions that control the admission and rejection of the steam. To follow out the first principle of economy laid down, the steam must be admitted at a uniform pressure as near that of the boiler as possible, the admission should be stopped short after entrance of enough steam for the work of the stroke, the steam allowed to expand the required amount, and then rejected completely at the lowest possible pressure. The admission valves should therefore open wide and very rapidly, let in the steam for such part of the stroke as is necessary, and then as promptly close. The exhaust valves should open quickly and wide when the expansion is complete, and stay open until nearly the end of the stroke, closing just soon enough to cushion the piston at the end of its stroke. In proportion to the completeness with which these conditions are met the use of the steam will be economical or wasteful. The two genera of engines referred to are those in which the motions of the admission and exhaust valves are independent of each other or dependent. Fig. 169 shows in section the cylinder and valves of an independent valve engine, Corliss type. The arrows show the flow of the steam. The admission valve on the head end of the cylinder has just been opened, as also has the exhaust valve on the crank end.

The essential point of the mechanism is that the admission valves open and close at whatever time is determined by the action of the governor without in the least affecting the working of the exhaust valves. In the Corliss valve gear the steam valves are closed by gravity, or by a vacuum pot, and

are opened by catches moved by an eccentric rod, and released at a point determined by the governor, which thus varies the point of cut-off according to the load. Ordinarily the admission of steam is thus cut off in a simple engine at full load after the piston has traversed from one-fifth to one-quarter of its stroke, according to the pressure of the steam. If the cut-off is too late in the stroke, there is not sufficient expansion of the steam ; if too early the steam is partially condensed by too great expansion. For every initial pressure of steam there is a particular degree of expansion which gives the best results in a given engine.

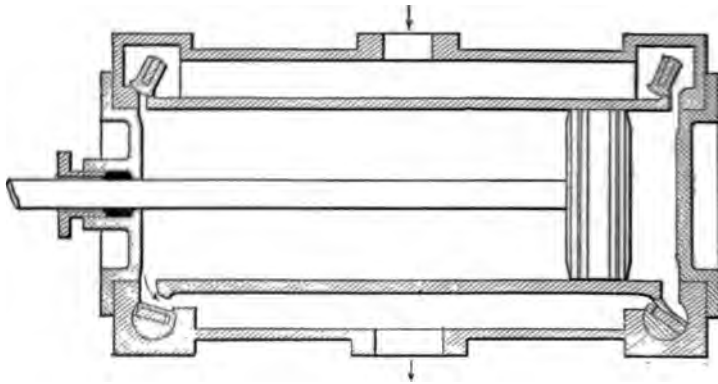


FIG. 169.

Fig. 170 shows the valve motion of one of the best of the dependent-valve genus. Steam is just being admitted at the head end both around the shoulder of the hollow piston valve and through the ports at the other end of the valve *via* the interior space. At the crank end the exhaust port has just been fully opened. It will be seen that any change in the conditions of admission also involves a change in the conditions of exhaust, and although some variation may take place in the latter without serious result on the economy, simplicity in the valve gear has been gained at a certain sacrifice of efficiency in using the steam. Both independent and dependent valve engines have many species differing widely in mechanism, but retaining the same fundamental difference. Of the two genera, the independent-valve engine has the material advantage in efficiency, and under similar conditions

of pressure, capacity, and piston speed consumes from 10 to 20 per cent. less steam for the same effective power. It therefore is generally employed, in spite of somewhat greater first cost, for all large work, often in the compound or triple-expansion form. Except in small powers, or for exceptionally high speed, the dependent-valve engine has few advantages, and in the generation of power on a large scale, such as for the most part concerns us in electrical transmission work, it hardly has an important place.

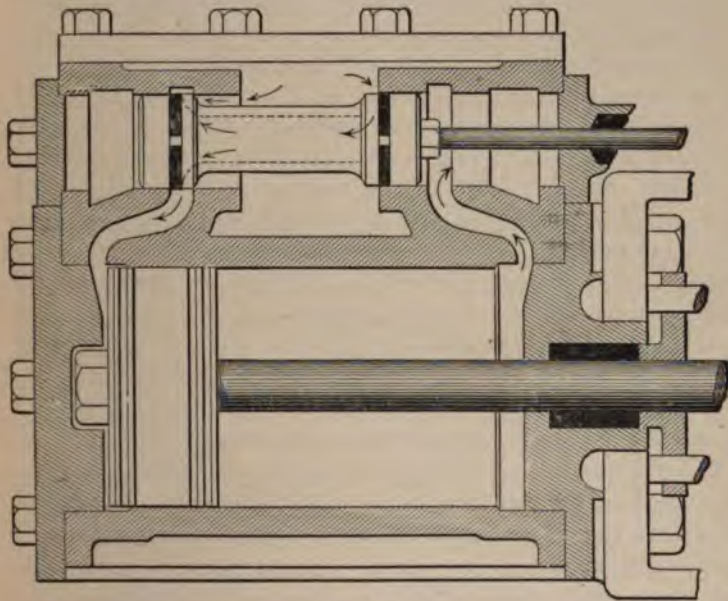


FIG. 170.

It must not be supposed that between the various sorts of engines mentioned there are hard and fast lines. In the economical use of steam a very large non-condensing engine may surpass a smaller condensing one, or a fast running dependent-valve engine, a very slow running one with independent valves. Broadly, however, we may lay down the following propositions concerning engines of similar capacity:

I. Condensing engines will always furnish power more economically than non-condensing ones. This is particularly

true at less than full load, since the loss of the atmospheric pressure may be taken as a constant source of inefficiency, which, like mechanical friction, is very serious at low loads. For example, a triple-expansion engine working at one-quarter load in indicated HP, will be likely to have its consumption of steam per IHP, increased from 15 to 25 per cent. above the consumption per IHP at full load; while worked non-condensing, the increase would be from 50 to 100 per cent. Hence for electrical working where light loads are frequent, condensing engines are an enormous advantage. With simple or compound engines the same general rule holds good as for triple-expansion engines, with the additional point that light loads affect their economy even more, when worked non-condensing. It must be borne in mind that if any engine is to do its best under varying loads, its valve gear and working pressure must be arranged with this in mind, else the advantage of high expansion and condensing may be thrown away. It is frequently said that triple-expansion engines do not give good results in electric railway work. When this is the case there has been improper adjustment of engine to load.

II. Among engines having the same class of valve gear, compound engines give better economy than simple ones, and triple-expansion better than compound. This is true irrespective of the nature of the load, supposing each engine to be suitably adjusted to the work it has to do. In rare cases, owing to exceedingly cheap fuel and short working hours, it may happen that the advantage of a triple-expansion engine over a compound in economy of coal may be more than offset by increased interest on investment, but at the present cost of engines and boilers, this could not well occur unless in the case of burning culm or poor coal obtained at a nominal price.

III. As regards speed of engines, there is always advantage in high piston speed both as respects first cost and mechanical efficiency. So far as the economical use of steam goes, speed makes little difference save as it sometimes involves a change in the valve gear. Most high-speed engines have valve gear of the dependent sort, which puts them at a disadvantage except in so far as lessened cylinder condensation and friction may offset the losses due to less efficient distribution of the

steam. But the best dependent-valve engine is uniformly less economical than the best independent-valve engine of the same class and sub-class. Even the lessened friction of the small high-speed pistons does not offset this difference in intrinsic economy.

As regards actual economy in the steam consumption, the size of engine has a powerful though somewhat indeterminate influence. Even at full load, simple non-condensing dependent-valve engines of moderate size require from 30 to 40 lbs. of steam per indicated horse-power-hour. Only in very large engines, such as locomotives, and specially fast running engines such as the Willans, does the steam consumption of these dependent-valve engines fall below 30 lbs., and not very often even in these cases. Worked condensing the same machines use from 20 lbs. in exceedingly favorable cases, to 25 or 30 lbs. more commonly.

Independent valve engines, simple and non-condensing, will give the indicated HPH on 25 to 30 lbs. of steam, occasionally on as little as 22 to 23 lbs. With the advantage of condensation these figures may be reduced to say 18 to 25 lbs., the former figure being somewhat exceptional and probably very rarely attained in practice.

Passing now to compound non-condensing engines, the effect of compounding on efficiency is about the same as that of condensing. Ordinary dependent-valve engines of compound construction require from 20 to 28 or 30 lbs. of steam per IHP hour. The former result is very exceptional, and seldom or never reached in practice, while the last-mentioned would be considered rather high. Independent-valve compound engines are so seldom worked non-condensing, that the data of their performance are rather meagre; 18 to 25 lbs. of steam is about the usual amount, however.

When condensation is employed, on the other hand, the dependent-valve engines are in rather infrequent use. When the need for economy is so felt as to lead to the use of compound engines, it also leads to the use of economical valve gear. The steam consumption of dependent-valve compound-condensing engines is quite well known, however, and is usually from 16 to 24 lbs. per IHP hour. The first mentioned figure is rarely reached, and only in special types of engine.

Plenty of tests on compound condensing engines with independent valves are available; 14 to 20 lbs. of steam covers the majority of results. Occasional tests run as low as 13 and as high as 22 lbs.

It is noticeable that in compound engines the difference between dependent and independent valve gear is less than with simple engines. This is due to a variety of causes. The larger range of expansion used in compound engines tends to lessen the deleterious effects of moderate variations in the distribution of the steam, and besides, the valve gear of compound engines is not infrequently composite, the high-pressure cylinder having independent valves and the low-pressure cylinder dependent ones.

The same arrangement is often used in triple-expansion engines, so that, in conjunction with the condition before mentioned, it is usually true that the economy of dependent-valve triple-expansion engines is much nearer that of independent-valve ones than would be at first supposed. Without condensing a dependent-valve triple-expansion engine may be expected to require from 19 to 27 lbs. of steam per IHP hour. With condensation such engines perform much better, the steam consumption being reduced to 14 to 20 lbs.

Nearly all triple-expansion engines, however, are built with independent valves at least in part, the intention being to secure the most economical performance possible. Under favorable conditions their steam consumption runs as low as 12 lbs. per IHP hour, and seldom rises above 18 lbs. In a few exceptional cases the record has been reduced slightly below 12 lbs., but such results cannot fairly be expected. Anything under 13 lbs. of steam per HP is exceedingly good practice for running conditions.

All the figures given refer in the main to good-sized engines of at least 200 HP and over, operated at full load and at favorable ratios of expansion. It must be clearly understood that there is for each steam pressure a particular ratio of expansion which will give the most economical result—less expansion than this rejects the steam at too high a temperature; more, causes loss by condensation, etc. Compound and triple-expansion engines permit greater expansion of the steam without loss of economy, hence allow higher steam pressure and a

greater temperature range—hence higher thermal efficiency. Good practice indicates that for simple engines the boiler pressure should be not less than 90 to 100 lbs. per square inch, for compound engines not less than 110 to 120, and for triple-expansion engines not less than 140 to 150, and thence up to 175 or 200 lbs.

We may gather the facts regarding steam consumption into tabular form somewhat as follows:

KIND OF ENGINE.	STEAM PER IHP. GENERAL RANGE.	STEAM PER IHP. WORKING AVERAGE.
Simple, non-con. dep. v.....	30-40	33
" " indep. v.....	25-30	28
" con. dep. v.....	20-30	25
" " indep. v.....	18-25	21
Compound, non-con. dep. v....	20-28	24
" " indep. v....	18-25	22
" con. dep. v.....	16-24	20
" " indep. v.....	14-20	17
Triple, con. dep. v.....	14-20	17
" " indep. v.....	12-18	15
"large," ".....	12-14	13

The engines considered are supposed to be of good size—say 200 to 500 HP, and to be worked steadily at or near full load. The figures given as working average are such as may be safely counted on with good engines, kept in the best working condition, and operated at at least the boiler pressures indicated. The steam is supposed to be practically dry and the piping so protected as to lose little by condensation. These results are such as may regularly be obtained in practice, and indeed it is not uncommon to find them excelled. Compound-condensing engines of large size not infrequently work down to 15 pounds of steam, and triple-expansion condensing engines down to 14 pounds, which result will be guaranteed by most responsible builders.

Unfortunately engines employed for electrical work are comparatively seldom kept at uniform and full load. Furthermore, they are subject to all sorts of variations of load. In electric railway service there are sudden changes from light loads to very heavy ones, while in electric lighting there is generally a gradual increase to the maximum load, which continues an

hour or two, followed by a rather gradual decrease. These variations affect the economy of the engines unfavorably—at certain loads there is not enough expansion, at others decidedly too much. The variations in economy are largely controlled by the proportioning of the engine to its work. To say that an engine is of 500 HP means little unless the statement be coupled with a definite explanation of the circumstances. If that output is obtained by admitting steam for half the stroke, the engine will work at 500 HP very uneconomically, supposing a simple engine to be under consideration. Its point of maximum economy may be perhaps 300 HP. On the other hand 500 HP may be given when cutting off the steam at one-fifth stroke. In this case the engine will be working near its point of maximum economy, and at 300 HP will require much more steam per IHP. It could give probably 600 to 700 HP at a longer cut-off, and is really a much more powerful engine than the first. For uniformity it is better to rate an engine at the HP of maximum economy, whatever the real load may be. The relation of load to economy is well shown in the curves of Fig. 171.

Curves 1, 2, 4, and 5, are of engines so rated as to have their maximum economy near full load. Curve 3, on the other hand, is from an engine intended to give its highest economy at about three-quarters load. For very variable output this is the preferable arrangement, while for large central station work, when the number of units is large enough to permit loading fully all that are running at any one time, it is better to have each unit give its very best economy near full load and to vary the number of units according to the requirements of total load.

For electric railway service under ordinary conditions, it is best to employ an engine which at full load is worked to a high capacity, and hence somewhat uneconomically, while at lesser loads, which more nearly correspond with the average conditions, its economy will be at a maximum. For electric lighting service it is preferable to have the point of maximum economy fall more nearly at full load. For power service, which is on the one hand more uniform than railway service, and less uniform than electric lighting work, it is probably best to employ an engine having characteristics between those just

mentioned. In every case attention must be paid to the character of the load as regards average amount and constancy in the choice of an appropriate engine for the work. In cases where the variations of load are likely to be very sudden, great mechanical strength of all the moving parts is

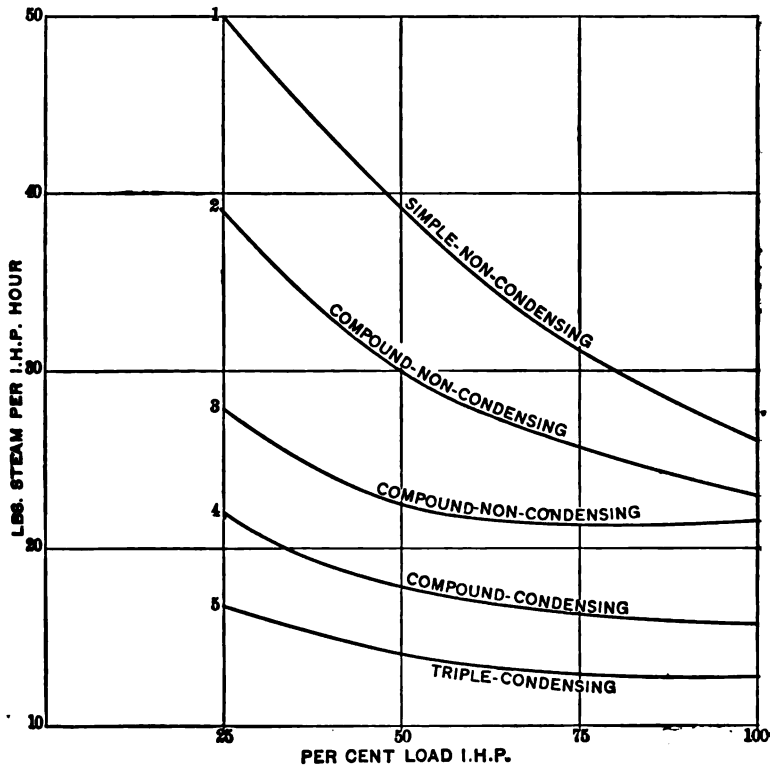


FIG. 171.

absolutely necessary, and an attempt should be made in planning the power station to arrange the engine for its best economy at average load as nearly as this can be predicted.

With care in planning an electric power station the engines can be made to give an exceedingly good performance, much better than was considered possible a few years ago. Fig. 172 shows a set of curves from the experiments of Prof. R. C. Carpenter giving the performance of engines of different kinds.

over a wide range of loads, from mere friction load up to 50 per cent. overload. The results are in pounds of water evaporated per indicated HPH. The immense advantage to be gained by using compound and triple-expansion condensing engines appears plainly from the curves. Another conspicuous fact is the great economy attained by such engines over a wide range of load. It is a common fallacy to suppose that

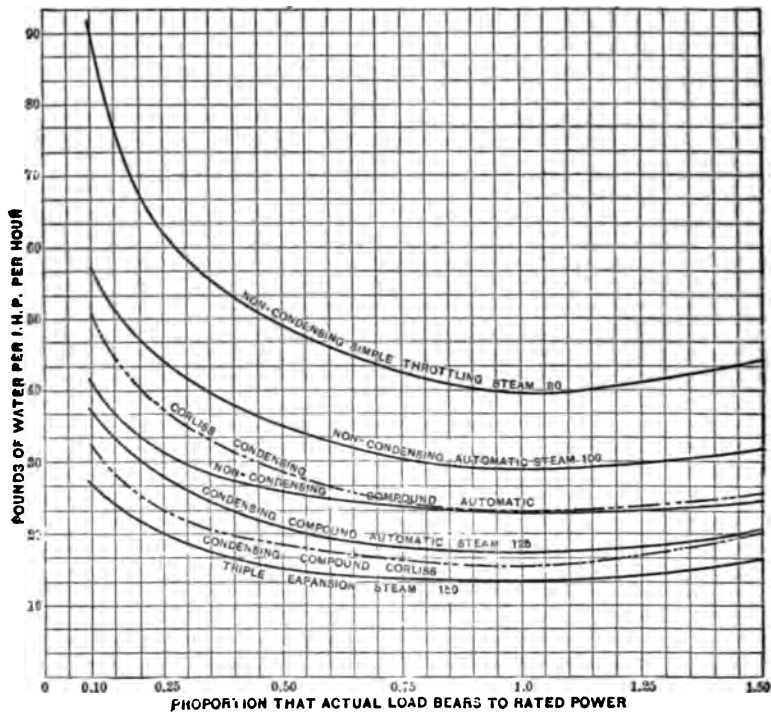


FIG. 172.

while compound or triple-expansion condensing engines are all well enough at steady load, simple engines have the advantage if the load varies over a wide range. The facts in the case as shown in Fig. 172 are exactly the reverse: not only do the high expansion engines have the advantage of the simple engines at their rated loads, but at all loads, and particularly light ones. And their advantage is so great that under any ordinary circumstances the use of a simple or a non-condensing engine for


power generation is willful waste of money. If the saving in first cost were great the mistake might be excusable, but the greater amount of steam required for running simple engines means larger boiler capacity, which nearly offsets the lower cost of engine. For example, a glance at Fig. 172 shows that a triple-expansion condensing engine requires only half the boiler capacity demanded by a non-condensing automatic engine for the same output. In other words, if the former requires 500 HP in boilers, the latter will need 1000 HP in boilers for exactly the same service. And the same holds true of the capacity of the stack, feed-pumps, steam-piping, water-piping, and, to a certain extent, even of the building, so that it is almost always poor economy to buy a cheap type of engine.

Many blunders are made by being too hasty in buying engines for electric service, and not sufficiently studying the problem. For uniform loads the selection of the engines can be made easily. For variable loads it requires great astuteness and experience, nor is it safe to argue from experience based on other kinds of variable service. No engines can be subject to greater variations of load than are met in marine engines driving a ship in a high sea. If the screw rises from the water the whole load is thrown off, and resumed again with terrible violence when the screw is submerged. Nevertheless an engine, which is so arranged as to perform well under these trying circumstances, might perform badly when put on electric railway or power service, not because of its inability to stand the far less severe changes of load, but for the reason that the average load would be much further from its full capacity than in the case of marine practice. For large railway and power service it is best to use direct connected units for the sake of compactness and economy. If a station is of sufficient magnitude to employ four or five 500 HP engines, direct connecting is advisable in nearly every case.

It has been said that such a plant has a lack of flexibility that is dangerous in case of sudden and great variations of load. This is not true if the engines have been intelligently proportioned for the work they have to do, although in some cases there has been trouble due to the fact that the engines were ill-fitted to operate successfully under the changes of load to which they were subjected. As a matter of economy

both in engines and dynamos, it is desirable to **work direct coupled plants** at a fairly high speed. There is no need of **exaggerating** the size of both engine and dynamo for the sake of running at 50 to 70 revolutions per minute, when equally good engines and dynamos of smaller size and less weight can be obtained by running at 100 or 120 revolutions or more. Much of the unwieldiness charged against large direct-coupled units has been the result of yielding to the importunities of some engine builder, who wanted to sell a very large machine, and putting in an engine and dynamo working at absurdly and unnecessarily low speed.

Electric power transmission, with a steam engine as the prime mover, is most likely to be developed in the direction of very large plants, to which these remarks apply most forcibly, particularly as in order to make transmission of power from a steam-operated station profitable, it is necessary to seek the very highest efficiency. Apart from the cost and inconvenience of very low speed units, it must be borne in mind that the

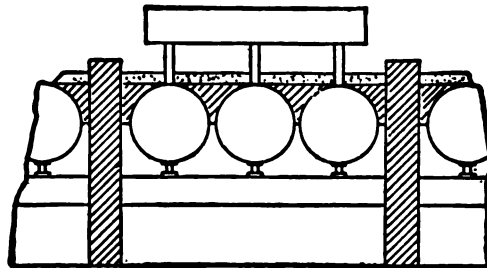

• FIG. 173.

mechanical efficiency of large low speed engines with heavy pistons and enormous fly-wheels is lower than that of those designed for more reasonable speeds, which gives added reason for moderation in planning direct-coupled units.

Throughout the design of a power station the probability of light loads must be considered. Not only does this have an important bearing on the economy of the engines, but it influences that of the boilers as well. The cost of operation depends on the coal consumption, and this in turn not only on the amount of steam that must be produced, but on the efficiency of its production.

There is, however, no classification of boilers on which one can safely rest in judging of their economy. There is much more difference in economy between a carefully fired and a

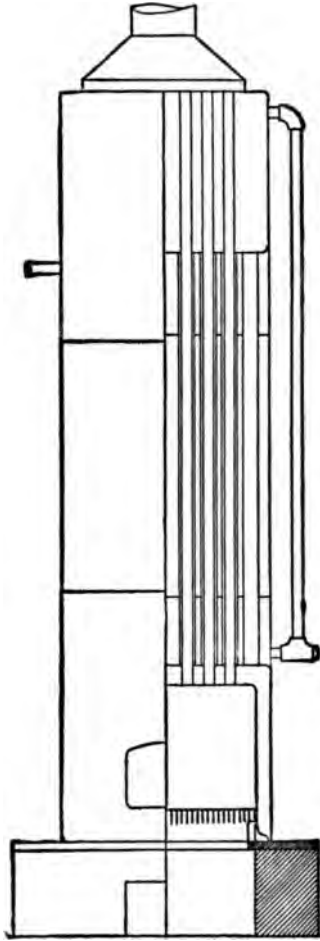


FIG. 174.

badly fired boiler of the same kind, than there is between the best and the worst type of boiler in ordinary use. Boilers may be generally divided into three classes: Shell boilers, in which the water is contained in a plain cylindrical tank heated on the outside; tubular boilers, in which there are one or

many tubes running lengthwise of the boiler shell, and serving as channels for the heated gases from the fire; and water-tube boilers, in which the water is contained in a group of metallic tubes, around which the heat of the fire freely plays. Fig. 173 shows a cross-section through the furnace of a bank of boilers of the first class. In this case, three shells were placed over each furnace, communicating with a common steam drum. Each shell was 30' in diameter and 30' long. Fig. 174 represents one of the many forms of tubular boiler. In this the structure is vertical, with a furnace at the bottom, and the

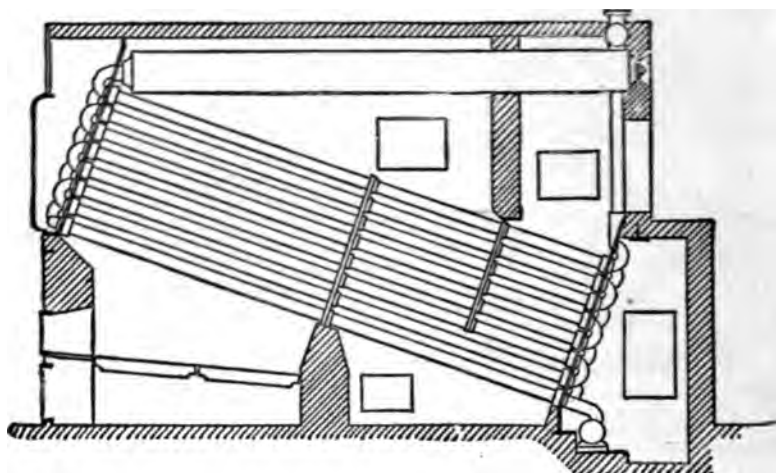


FIG. 175.

tubes are numerous and rather small, giving a large heating surface. Tubular boilers are very often arranged horizontally, and in one very excellent and common type (return tubular), the flame and heated gases pass horizontally under the boiler shell and then back through the tubes to the furnace end and thence upward into the stack. A typical water-tube boiler is shown in Fig. 175. Here the furnace is at the left of the cut and the stack at the right. The tubes are inclined as is usual in water-tube boilers, and steam space is secured by the drum above. Each class of boiler has nearly as many modifications as there are makers, most of them being with relation to the arrangement of the fire with respect to the boiler proper.

As to the merits of the different classes, opinions differ very widely. It is clear from experience that the simple shell boiler is decidedly inferior to either of the others in economy, in spite of its simplicity and cheapness. Of late years it has been the fashion to employ water-tube boilers under all sorts of conditions, on account of their supposed great efficiency as steam producers, safety and compactness. Purely experimental runs with such boilers often show phenomenal efficiency, but tests under working conditions sometimes result otherwise. It is important to note that not only does skill in firing produce a great improvement in boiler economy, but that by influencing the firing different kinds of coal give very different results quite independent of their theoretical value as fuel. The thermal value of coal, or other solid fuel, is almost directly as the proportion of carbon contained in it, and for comparative purposes boiler tests are generally reduced to evaporation of water from and at 212° F. per lb. of combustible used, *i. e.*, per lb. of carbon. However, the firing in different furnaces is differently affected by changes in fuel, so that it is impossible to predict by tests on one boiler what a similar one will do under other conditions.

Altogether, the subject of boiler efficiency is a difficult and tangled one, since the conditions are constantly changing, and the best guide is found in the general result of a long series of tests rather than in theories of combustion. Forcing the output of a boiler usually injures its efficiency by compelling the combustion of an abnormal amount of coal for the grate surface of the furnace. It follows that a boiler is apt to be more efficient at moderate loads than at very high ones. As this is the reverse of what happens in an engine, it might be supposed that the boiler could partially compensate for engine inefficiency, but on the contrary inefficient production of steam is anywhere and always a bad thing in itself, and only to be tolerated for some very good reason. In marine practice, boilers may sometimes have to be forced to a high output to save weight and space. In electric stations it is sometimes better to force the boilers at the hours of heavy load, than to keep a relay of boilers banked in readiness for use, but except for this, the boilers, like the rest of the plant, should be worked as near their maximum efficiency as possible.

The best fuel to use is not at all invariably that of the highest thermal value, in fact with the proper furnace a grade of coal only moderately good is very often the most economical. In starting a steam plant of any kind comparative tests of various coals should generally be made, and are more than likely to pay for themselves many times over. In absolute heating value various kinds of fuel compare about as follows:

KIND OF FUEL.	HEAT OF COMBUSTION.	EVAPORATION.
Best anthracite.....	15,250	15.8
Welsh steam coal	14,500	15.0
Pocahontas.....	14,375	14.9
Cumberland.....	13,750	14.2
Coke, ordinary.....	12,750	13.2
Cape Breton.....	12,500	13.0
Lignite.....	11,750	12.2
Peat, dry.....	9,650	10.0
Wood, dry.....	7,250	7.5

The heat of combustion is per lb. of fuel, and is given in thermal units, this unit being the heat required to raise 1 lb. of water 1° F.

The evaporation gives the pounds of water which can be evaporated from and at 212° F. by the complete utilization of the annexed heats of combustion. In other words no more than 15 lbs. of water can possibly be evaporated by 1 lb. of coal of the thermal value of 14,500. Extravagant claims are sometimes made for patented boilers of strange and unusual kinds, so it is well to bear these figures in mind and to remember that you cannot evaporate more water than the figures indicate, any more than you can draw a gallon out of a quart bottle. In practice coal is likely to fall perhaps 10 per cent. below the thermal values given above. Good boilers with careful firing will utilize from 70 to 75 per cent. of the thermal value of the coal. Occasional experimental runs may give slightly higher figures, but only under very exceptional circumstances.

Now as to actual tests under boilers. Examinations of more than a hundred carefully conducted tests by various authorities show from 8 to 13 lbs. of water evaporated from and at 212° per lb. of combustible. As average good

steam coal contains from 8 to 15 per cent. of ash and moisture, these results correspond to from 7 to $11\frac{3}{4}$ lbs of water per lb. of coal. Now and then a single test gives a result a few hundredths of a pound better than 13 lbs. per lb. of combustible, and an occasional poor boiler shows less than 8 lbs. Generally from 10 to 15 lbs. of coal are consumed per hour per square foot of grate surface. The following table gives a general idea of the results of boiler tests, good, bad, and indifferent.

KIND OF BOILER.	KIND OF COAL.	EVAPORATION.
Return tubular	Welsh steam	13.12
Water-tube	{ Bituminous, 3 parts } { pea and dust, 1 part }	13.01
Return tubular	Cumberland	12.47
Vertical "	"	12.20
Return "	"	12.07
" "	"	12.03
" "	Anthracite	11.63
Marine	Newcastle	11.44
Water-tube	Anthracite	11.31
" "	Cumberland	10.98
Plain tubular	Anthracite	10.88
Water-tube	Cumberland	10.79
Marine	Welsh steam	10.44
Return tubular	Anthracite	10.43
Locomotive	Coke	10.39
Water-tube	Anthracite	10.00
Return tubular	"	9.55
Cylinder	"	9.22
"	Cumberland	8.74
"	Anthracite	8.44

The evaporation is per lb. of combustible. The most striking feature of this table is the small difference in efficiency between the various kinds of boiler. Putting aside the cylindrical shell boilers, which are distinctly inferior to the others, it appears that as to the other types of boiler there is little to choose on the score of economy. The difference between the better and worse boilers of each class, due to difference of design, condition, and firing, is much greater than the difference between any two classes. Even the same boiler with different fuels, firing, or when in different condition, may give evaporative results varying by 30 per cent. Economy depends vastly more on careful firing and proper proportion-

ing of the grate and heating surfaces to the fuel used, than upon the kind of boiler. In fact, judging from all the available tests the differences between various types of boiler when properly proportioned are quite small.

The most that can be said is that plain shell boilers are somewhat inferior to the other forms, of which the horizontal return tubular and the water-tube have given slightly higher results than the others. Water-tube boilers are generally rather compact and stand forcing better than ordinary tubular boilers. They also are less likely to produce disastrous results if they explode. On the other hand, they are more expensive, and are as a class hard to keep in good condition, particularly if the water supply is not of good quality.

Probably under average conditions a well-designed horizontal return tubular boiler will give as great evaporative efficiency as can regularly be attained in service, and the choice between it and a water-tube boiler is chiefly in economy of space and capacity for forcing. There is no excuse for the explosion of any properly cared for boiler.

The actual evaporation secured per lb. of total fuel is something quite different from the figures in the table just given. In the first place allowance must be made for ash and fuel used for banking the fires. In the second place in regular running the firing is seldom as careful as in tests.

On account of these the evaporations per lb. of combustible given in the table must be reduced from 15 to 20 per cent. to correct the result to pounds of coal used in actual service.

Ten lbs. of water or over evaporated from and at 212° per lb. of total fuel may be regarded as exceptionally good practice in every-day work. Nine to 10 lbs. under the same conditions represents fine average results, and 8 to 9 lbs. is much more common. In fact 8 lbs. is an unpleasantly frequent figure, particularly in boilers operated under variable load, such as is generally found in electric plants of moderate size. All these facts point out the necessity of thorough and careful work in every part of a power plant. Bad design or careless operation anywhere plays havoc with economy. In most instances far too little attention is paid to the adaptation of the furnace to the particular fuel used. In case of attempting power transmission from cheap coal at or near the mines, the furnace and

firing problem is of fundamental importance. Most furnaces are constructed to meet the requirements of high-grade fuel and are quite likely to work badly with anything else. In transmitting power from cheap coal the grate surface, draft and so forth must be carefully arranged with reference to the grade of fuel to be used and not with reference to standard coals used elsewhere. The methods of firing, too, require careful attention.

At the present time mechanical stokers are in very extensive use in some parts of the country. The reports from them are of very varying nature, but the consensus of opinion seems to be that they are advantageous in working medium and low-grade coals, but of doubtful utility in the case of high-grade coals. They are somewhat expensive and require intelligent care now and then like all other machinery, but when it comes to firing large amounts of cheap fuel at a fairly regular rate they do most excellent work. When coal is dear careful hand firing is probably more economical than any mechanical method. With first-class coal and boilers one good fireman and a coal-passer can take care of 2000 KW in modern apparatus, so that the total cost of firing is not a very serious matter. A poor fireman is dear at any price, and quite as disadvantageous to the station as a poor engineer.

KIND OF ENGINE.	COAL PER IHP HOUR.	
	CONDENSING.	NON-CONDENSING.
Simple, dependent valve.....	2.77	3.66
“ independent valve	2.33	3.11
Compound, dependent valve.....	2.22	2.66
“ independent valve.....	2.00	2.44
Triple, dependent valve.....	1.88	
“ independent valve.....	1.66	
“ “ “ large.....	1.44	

Reverting now to engine performances, we may form a fairly definite idea of what may be expected in the way of coal consumption per indicated horse-power hour.

The foregoing table shows the coal consumption of the various kinds of engines, based on the burning of 1 lb. of coal for each 9 lbs. of feed water used. Although greater

evaporation can often be obtained, 9 lbs. of water per lb. of coal is a very good performance indeed, decidedly better than is found in general experience. It presupposes good boilers, good coal, and skillful firing, such as one has a right to expect in a large power plant.

The figures apply only to engines of several hundred HP, at or near their points of maximum economy and operated from a first-class boiler plant.

They can be and are reached in regular working, and are sometimes exceeded. A combination of great efficiency at the boilers and small steam consumption in the engine sometimes gives remarkable results. The best triple-expansion condensing engines worked under favorable conditions can be counted on to do a little better than 1.5 lbs. of coal per IHP hour, occasionally even in the neighborhood of 1.25 lbs. Even with compound condensing engines tests are now and then recorded, showing below 1.75 lbs. of coal per IHP hour. But these very low figures are the result of the concurrence of divers very favorable conditions, and those just tabulated are as good as one really has the right to expect. It must not be supposed that the weight of coal used per HP hour necessarily determines the economy of the plant. The cost of fuel of course varies greatly, and its price in the market is by no means proportional to its thermal value. As a rule the coals which give the best economic results are not those of the greatest intrinsic heating power. On the contrary, dollar for dollar, the best results are very frequently obtained from cheap coal, or mixtures of inferior coal with a portion of a better grade. Hence the boilers of a plant which is a model of economy may show an evaporation of only 7 or 8 lbs. of water per lb. of coal. Boiler tests with the conditions of economy in view are of great importance and are likely to pay for themselves tenfold in even a few months of operation.

A word here about fuel oil. Petroleum has, weight for weight, much greater heating power than coal. Its heat of combustion is about 20,000 to 21,000 thermal units, it costs little to handle and fire, leaves no ash and refuse to be taken care of, produces little smoke, and is generally cleanly and convenient.

It has been thoroughly tried by some of the largest electrical companies in this country, and at moderate prices, a dollar a barrel or less, is capable of competing on fairly even terms with coal. But experience has shown some curious facts about its performance. The amount of steam or equivalent power required to inject and vaporize the oil in one of the most skillfully handled plants in existence amounts to no less than $7\frac{1}{2}$ per cent. of the total steam produced. And curiously enough, the cost of oil for firing up a fresh boiler, and the time consumed, compare unfavorably with the results obtained from coal. In spite of the great amount of heat evolved from fuel oil, it appears to be less effective than coal in giving up this heat to the boiler by radiation and convection. There is good reason to believe that more than half the total heat of combustion of incandescent fuel is given off as radiant heat, and most of the remainder is of course transferred by convection both of heated particles of carbon and of molecules of gas.

It is not unlikely, therefore, that a petroleum fire with its small radiating power and comparative absence of incandescent particles, fails in economy through inability to give up its heat readily. This view of the case is borne out by the facts above cited and by the abnormally high temperature of the escaping gases often found in boiler tests with petroleum fuel. At all events it is clear from such tests that the evaporation obtained from fuel oil is not so great as would be expected from its immense heat of combustion, and unless at an exceptionally low price, its use is less economical than that of coal.

The most striking innovation of recent years in the generation of mechanical power by steam is the development of the steam turbine. Year by year during the past decade it has slowly grown from experiment to realization until at the present time it has reached a position that demands for it most serious consideration. It looks very much as if, for many purposes, the reciprocating steam engine would be hard pushed.

Strangely enough the steam turbine or impulse wheel is the earliest recorded form of steam engine, dating clear back to Hero of Alexandria, who flourished about 130 B. C. The engine

which Hero suggested was merely a philosophical toy, and it took nineteen centuries beyond his day to produce any engine that was not a toy, but now after two thousand years Hero's idea has borne fruit.

The fundamental principle of the steam turbine is just that of the water turbine—directing fluid pressure against a series of rotating buckets. The first practical steam turbine, devised by De Laval, is very closely akin to the Pelton water wheel and to the little water motors sometimes attached to faucets for furnishing a small amount of power. The essential features of his apparatus are well shown in Fig. 176. It consists

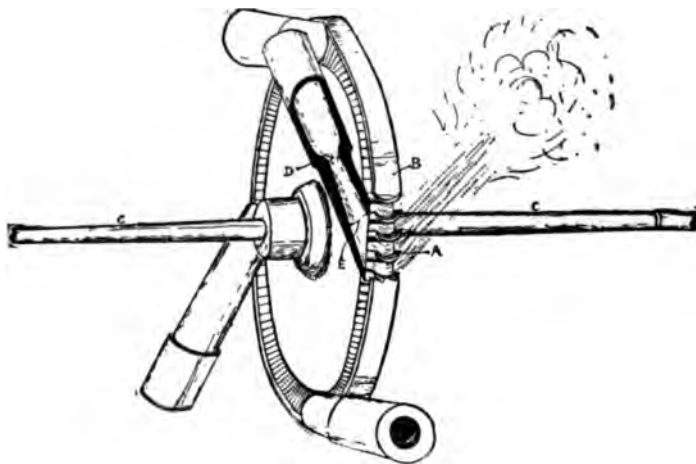


FIG. 176.

of a narrow wheel *A* with buckets around its periphery, revolving within a housing *B* and supported by a rather long and slender shaft. Bearing upon the buckets at an acute lateral angle is the steam jet *E*, in this case one of three equidistant jets playing on the same wheel. To obtain the most efficient working of the jet the steam nozzle is somewhat contracted at *D*, a little way back from the buckets. The steam is discharged on the other side of the wheel as shown. It strikes the buckets as a jet at great velocity, and should, if the conditions were just right, expend nearly all its energy in driving the wheel and should itself leave it at or near zero velocity. Of course this condition does not hold in practice, but still a steam turbine of

this De Laval construction is capable of doing marvelously well. The main objection to this form is the enormously high rotative speeds necessary for efficient running. Here as in hydraulic impulse wheels the peripheral velocity should be one-half the spouting velocity of the fluid. With high pressure steam this is, when one works the turbine condensing, 3000 to 5000 feet per second. In practice these De Laval wheels have usually been geared down to a driving shaft, but the wheel itself has run at 10,000 to 30,000 r.p.m., seldom below the former figure even in large sizes. But the economy reached has sometimes been very high, as in some tests about a year ago in France, when, with an initial pressure of 192 lbs., a 300 HP turbine showed a steam

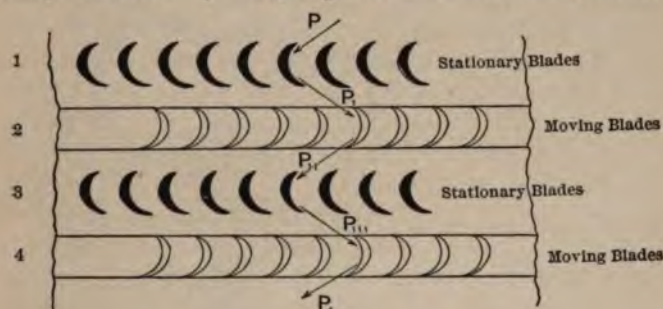


FIG. 177.

consumption of only 13.92 lbs. per *effective* HPH—a figure seldom reached even with triple-expansion engines. The governing is by throttling the steam supply in response to the movement of a fly-ball governor of the kind generally familiar.

The inconvenience of the very high rotative speed of such turbines has led to the development of forms working more along the lines of hydraulic turbines, of which by far the best known is the Parsons turbine, which has recently made so striking a record in marine work, having been applied to several British torpedo-boats. In this remarkable machine the passage of the steam is parallel to the axis of rotation instead of tangential, and its hydraulic prototype is the parallel-flow turbine, shown in diagram in Fig. 183. In fact the steam is passed successively through a large number of such parallel-flow turbines, gradually expanding and giving up its energy to the successive runners located, of course, on the same shaft. The course of the expanding steam is well shown in Fig. 177.

which gives in diagram its progression through four sets of vanes, two, 1 and 3, being rings of guide-blades, and the others,

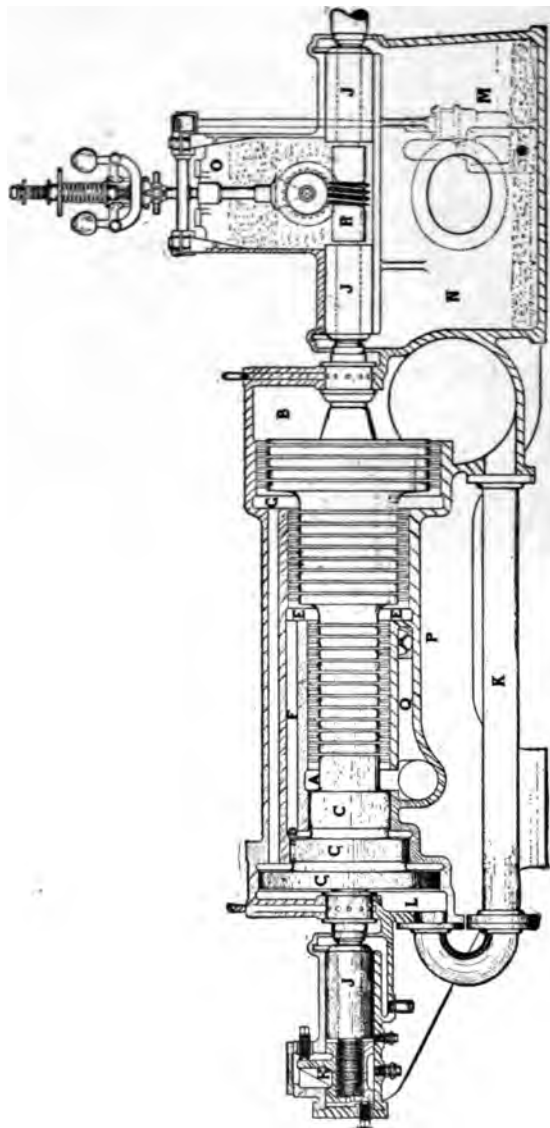


FIG. 178.

2 and 4, rings of runner blades. The steam, starting at pressure P , expands successively to P_b , P_{1b} , P_{2b} , P_{3b} , P_{4b} , expanding

sharply against the runner blades and giving them a reactive kick as it leaves. In this case the stream velocity against, say the runner blades 2, is not, as in the De Laval form, the full spouting velocity due to the initial head of steam, but merely that corresponding to the differential pressure $P-P_1$. This enables the peripheral speed of the runner to be kept within reasonable limits without violating the conditions of economy, but the turbine at best is not a slow-speed machine.

Fig. 178 is a longitudinal section through the Parsons type of steam turbine as developed in this country by the Westinghouse Machine Co. The steam enters from the supply pipe controlled by the governor and comes first into the annular chamber *A* at the extreme left-hand end of the runner. The runner blades are graduated in size so that the expanding steam may give nearly a uniform useful pressure per blade, and to this end the diameter of the runner hub is twice increased as the steam expands towards the exhaust chamber *B*. The endwise thrust of the steam entering the turbine from *A* is balanced by its equal pressure on the balancing piston *C*, which revolves with the runner. To the left of this is an annular steam space and a second balance piston *C*. Now when the expanding steam has passed the first section of the runner into the steam space *E* it can flow back through the channel *F* and the port *D* against this second balance piston. Still further to the left is a second steam space and a third piston *C*, which is similarly exposed to the pressure from *G*, where the third stage of expansion begins. The effect of this balancing system is to render the end thrust negligible whatever may be the ratio of expansion in the turbine. A thrust bearing at *H* keeps the working parts positioned and takes up the trivial thrusts which may incidentally be present. *J, J, J* are the bearings which are out of the ordinary in that within the gun-metal sleeve that forms the bearing proper are three concentric sleeves fitting loosely. The clearance between them fills with oil, cushioning the bearings. Now if the runner is not absolutely in balance there is a certain flexibility in the bearings so that the runner can rotate about its center of gravity instead of its geometrical center, thus stopping vibration. An equivalent expedient is found in the De Laval turbine, the shaft of which is deliberately made slightly flexible

so that it may take up rotation about its center of gravity. *K* is a pipe which again takes up the work of keeping the pressure balanced by connecting the exhaust chamber *B* with the steam space behind the last balance piston. At *M* is a simple oil pump taking oil from the drip tank *N* and lifting it to the tank *O*, whence it is distributed to the bearings. A by pass valve *P* turns high pressure steam directly into the steam space *E*, in case a very heavy load must be carried, or a condensing turbine temporarily run non-condensing. *R* is a

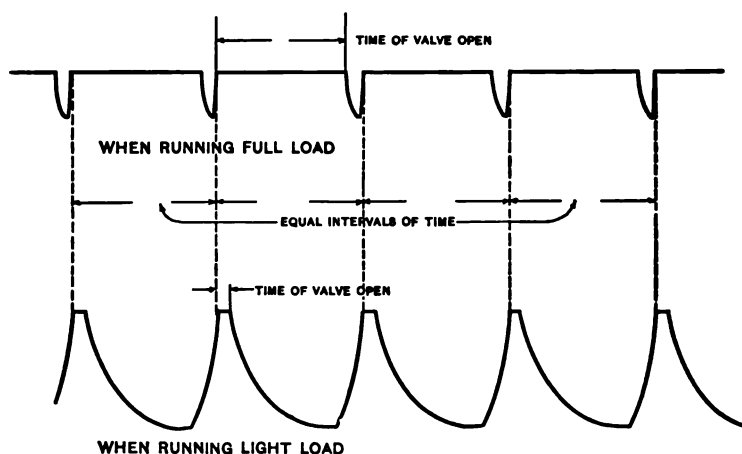


FIG. 179.

flexible coupling for the driving shaft, and at that point too is the worm gear that drives the governor. The governor in its operation is somewhat peculiar. Instead of throttling the steam supply so as to reduce the effective pressure, the steam is always sent to the turbine at full boiler pressure, but discontinuously. The main steam valve is controlled by a little steam relay valve which is given a regular oscillatory motion by a lever driven from an eccentric. The steam is thus admitted to the turbine in a series of periodic puffs. Now the fulcrum of this valve lever is movable and is positioned by the fly-ball governor, so that the position of the valve with relation to the port is varied without changing the rate or amplitude of the valve motion. Hence the length of the puffs is changed so that while at full load steam is on during most of the period, at light load it is on for only a small part of each

period. This is well shown graphically by Fig. 179, which is self-explanatory.

The governor balls are so arranged that they work both ways, their mid-position corresponding to full admission of steam, so that a violent overload can be made to shut off steam, and a break in the governor driving gear will do the same instead of letting the turbine run away.

These turbines are capable of operating with really remarkable efficiency. Fig. 180, from the makers' tests, gives the

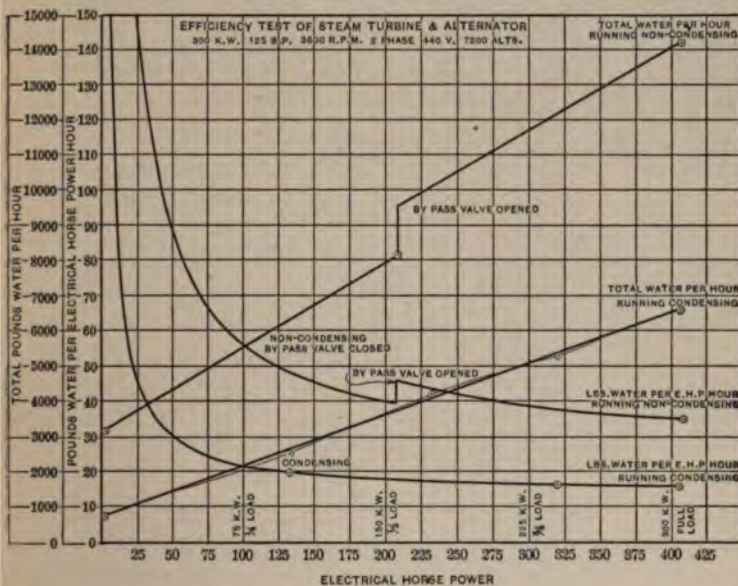


FIG. 180.

performance, both condensing and non-condensing, of a Westinghouse-Parsons turbine directly coupled to a 300 KW quarter-phase alternator giving 440 volts at 60~, the speed being 3600 r.p.m. Operated condensing, the steam consumption at full load falls to about 16.4 lbs. per *electrical* HPH, and is below 20 lbs. from 125 HP up. This extraordinary uniformity of performance at large and small loads is mainly due to the very small frictional losses in the turbine, although it is helped, perhaps, by the load curve of the generator. The results when working non-condensing are very much inferior to these, relatively worse than in an ordinary steam engine.

Altogether it is a wonderful showing for the steam turbine. The writer believes Fig. 180 to be entirely trustworthy, as it corresponds very closely with certain independent tests now in his possession, from another turbine of the same capacity and speed, in which tests the makers of the turbine had no part. The substance of the matter is that the modern steam turbine will work as efficiently as a first-class compound condensing engine, and can not only be more cheaply made, but takes up very much less room. In the same way, for electrical purposes a directly connected generating set with steam turbine is, or ought to be, much cheaper and smaller than those now in use, while retaining equally high efficiency. High rotative speed is by far the cheapest way of getting output, and when, as in this case, no heavy reciprocating parts are involved, there is no good reason for objecting to high speed. The present fashion for low-speed dynamos is largely a fad having its origin in direct coupling to Corliss engines, and with the modern stationary armature construction there is no reason why high rotative speed should not be used, at least in alternators.

In Plate IX is shown the first large turbine-driven generator installed for regular commercial service in this country. Smaller ones have been in use in isolated plants for some time, but this 1500 KW set, recently installed for the Hartford Electric Light Co. is the first important installation of this kind. The turbine is designed for a maximum output of 3000 H.P. at a speed of 1200 r.p.m., and the complete set, weighing only 175,000 lbs., takes a floor space of but 33' 3" x 8' 9". The generator is a quarter-phase machine at 60~ frequency. This outfit has not yet been in operation long enough for a thorough test under commercial conditions, but it should be capable of giving an efficiency rather better than that shown in Fig. 180—probably a little over 14 lbs. of steam per electrical H.P.H. at steady full load; in other words, it should do nearly or quite as well as a triple-expansion engine.

Alternators may be conveniently and cheaply built for the speed implied in steam turbine practice, but continuous current generators involve some difficulties. For power transmission work turbine generators have much to recommend them, and there is a good chance for their taking a very impor-


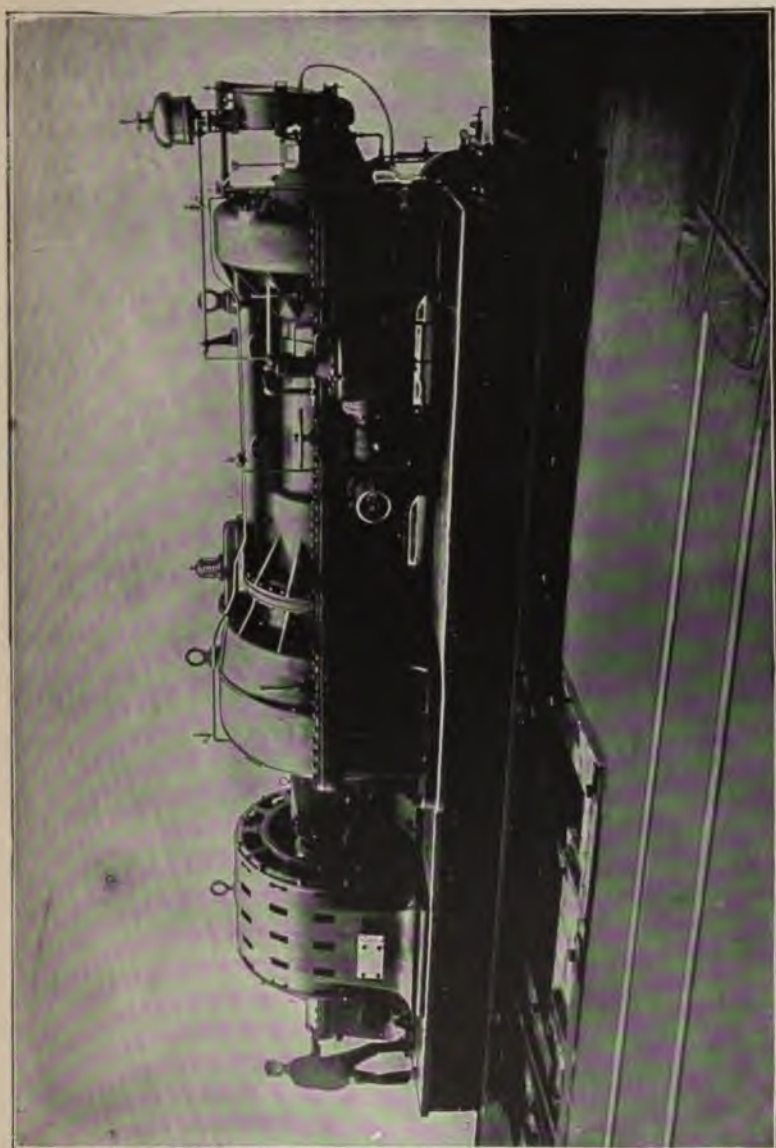


PLATE IX.

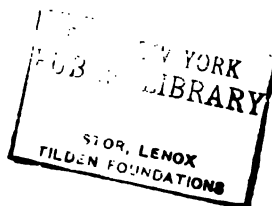

tant place in the development of the art. There has not yet been accumulated enough experience with them to enable a careful judgment of their practical properties to be formed, or to justify an unqualified indorsement. But they look exceedingly promising.

Considerable space has here been given to describing some of the details of such machines, in the belief that they are of

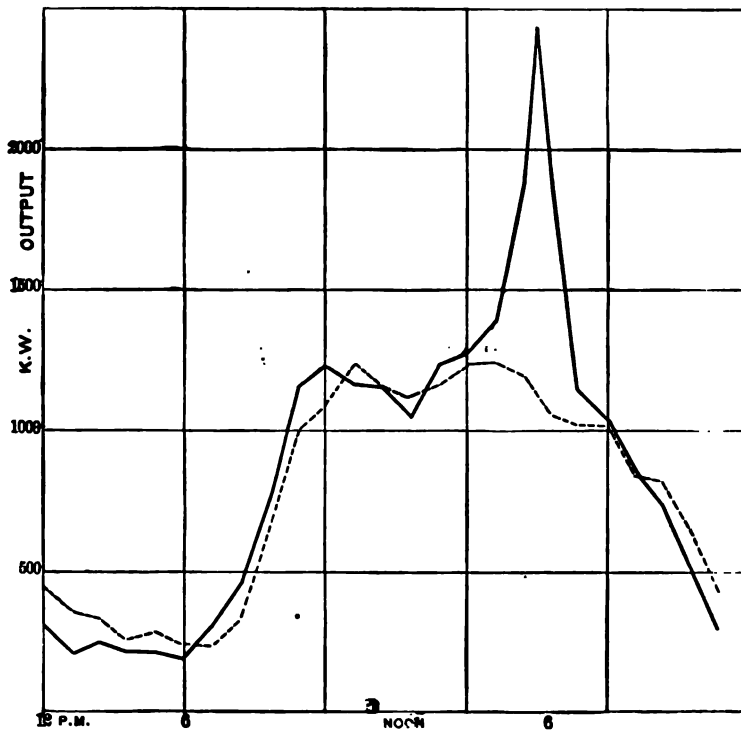


FIG. 181.

sufficient importance to warrant it. They certainly have already proved their right to a place, and the question is now merely that of the probable limitations of their usefulness, which only protracted experience can disclose.

For an electrical power station operated by steam power the vital economical question is the cost of fuel per kilowatt hour, rather than the performance of engines and boilers alone. This final result involves the performance of the station appa-

ratus under varying loads, too frequently rather light, and, implicitly, the skill of the operator in keeping his apparatus actually running as near its point of maximum economy as possible in spite of changes in the electrical output. This personal element forbids a reduction of the facts to general laws, but a concrete example will be of service in showing what may be expected in a well-designed and well-operated power plant. Fig. 181 shows a pair of "load lines," from a large and particularly well-operated power plant. The solid line shows the variations of load throughout a day in the latter end of January, and the broken line the variations of load during a day early in April.

The early darkness of a winter's day is very obvious in the

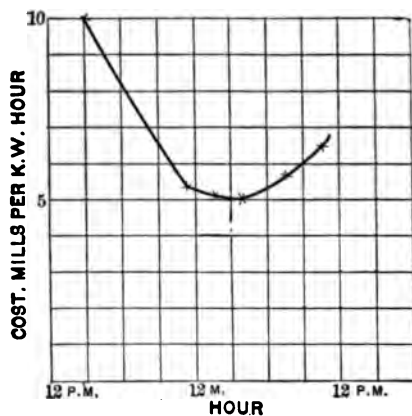


FIG. 182.

former line. The station carries in addition to lights a heavy motor service that keeps up a fairly uniform load throughout the day, until the sudden call for lights in the early evening. The load factor shown by the solid line is .35 (*i. e.*, this is the ratio between maximum and average load). The second load line gives a much better relation between these quantities, the load factor being .64, which is quite usual in this station during the spring and summer. Of course every effort is exerted to keep the machines which are in use as fully loaded as possible. In spite of this the small output during the early morning hours, coupled with the losses due to circulating pumps and other minor machinery, and the fuel used for

banking and starting fires, brings the cost of fuel during this period far above the average for the day. The curve in Fig. 182 shows roughly the variation in the cost of fuel per KW-hour throughout the day, taken from the average of a number of tests. As the fuel cost in a large central station is a considerable portion of the total expense, it is evident that the result is an excellent one. During all the hours of heavy load the cost of fuel is less than six-tenths of a cent per KW-hour, and the total cost of production but little more. This result will give an excellent idea of the cost of generating power on a large scale with cheap coal. It is, however, exceptionally good, and can only be equaled by a very well managed plant with the best modern equipment both electrical and mechanical.

Of course the expenses of distribution, administration and the like must be taken into account in considering the cost per KW-hour delivered. The general question of station expenses cannot be here investigated, but this brief digression gives some idea of the necessary relation between the character of the work and the commercial results in generating electric power on a large scale, so far as the use of steam engines as prime movers is concerned.

CHAPTER IX.

WATER WHEELS.

THE importance of the development of water powers for electrical purposes we have already come fully to realize. The lessons of the last few years have been exceedingly valuable ones, and it is safe to say that the utilization of water powers for electrical transmission will be kept up until every one which is capable of commercially successful development is worked to its utmost capacity. In spite of the length of time that water wheels of various sorts have been used, it is only very recently that these prime movers have been brought to a stage of development that renders them satisfactory for electrical purposes. The old water wheel was even more troublesome as a source of electrical power than the old slide valve steam engine.

The customary classification of water wheels for many years has been into overshot, undershot and breast wheels, and finally turbines. Various modifications of all these have, of course, been proposed and used. Of these classes, the first three may be passed over completely as having no importance whatever in electrical matters, save in certain modifications so different from the original wheels as to be scarcely recognizable. To all intents and purposes they are never used for the purpose of driving dynamos, although occasionally an isolated instance appears on a very small scale.

It is the turbine water wheel which has made modern hydraulic developments possible, and more particularly electrical developments. The turbine practically dates from 1827, when Fourneyron installed the first examples in France, although it is interesting to know that a United States patent of 1804 shows a wheel of somewhat similar description, never so far as is known used. The modern turbine consists of two distinct parts, the system of guide blades and the runner. The runner is the working part of the wheel, and consists of a

series of curved buckets so shaped as to receive the water with as little shock as practicable, and to reject it only after having utilized substantially all of its energy. These buckets are arranged in almost every imaginable way around the axis of the runner, but always symmetrically.

Sometimes the curvature of the buckets is such that the water after having passed through them leaves the wheel parallel to its axis; sometimes so that the water flows inward and is discharged at the center of the runner; sometimes so that it passes outward and is discharged at the periphery. More often the buckets have a double curvature so that the water flows along the axis and at the same time either inwardly or outwardly. It is not unusual moreover to have two sets of buckets on the same shaft for various purposes. The growth of the art of turbine building has made any classification of turbines depending on the direction of the flow of the water very uncertain, as in nearly every American turbine this flow

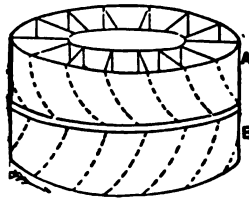


FIG. 183.

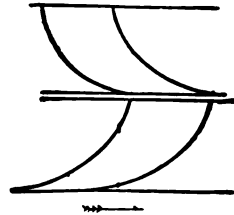


FIG. 184.

takes place in more than one general direction, usually inward and downward. Aside from the runner the essential feature of the modern turbine is the set of guide blades which surround the runner, and which are so curved as to deliver the water fairly to the buckets in such direction as will enable it to do the most good. Accordingly these blades are curved in all sorts of ways, according to the way in which the water is intended to be utilized.

Fig. 183, taken from Rankine, shows a species of idealized turbine which discloses the principles very clearly. In this figure *A* is the guide blade system and *B* the runner. The flow is entirely along the axis, forming the so-called parallel flow turbine, a form not in general use in America.

Fig. 184 shows the sort of curvature which is given to the

guide blades and to the buckets of the runner. The axis of this or any other kind of turbine may be horizontal or vertical, as convenience dictates. As may be judged from the illustration, the water acts on the runner with a steady pressure, and the buckets of the runner are always filled with the water which drives them forward. Working in this way by water pressure due to the weight of the water column, it is not necessary that the turbine should be placed at the extreme bottom of the fall, provided an air-tight casing is continued below the runner so as to take advantage of the solid water column below the turbine. Such an arrangement is called a draft tube, and may be of any length up to the full column which may be supported by atmospheric pressure, provided the body of water shall be continuous so that there shall be no loss of head due to the drop of the water from the wheel to the level of the water in the tail race. It is as if the column below were pulling and the column above pushing, the runner being in a solid stream extending from the highest to the lowest level of water used. As a matter of practice the draft tube is generally made considerably shorter than the column of water which might be supported by atmospheric pressure, generally less than 20 feet, depending somewhat on the size of the wheel. With longer tubes it is difficult to preserve a continuous column, which is necessary in order to utilize the full power of the water.

Nearly all American turbines are of this so-called "pressure" type. There is, however, another type of turbine wheel used somewhat extensively abroad, and occasionally manufactured in this country, which without any very great change in character of the structure operates on an entirely different principle. There are present, as before, guide blades delivering the water to the buckets of the runner, but the spaces between these blades are so shaped and contracted as to deliver the water to the runner as a powerful jet. The energy of water pressure is converted into the kinetic energy of the spouting jet, and the buckets of the runner are not filled solidly and smoothly with the water, but serve to absorb the kinetic energy of the jets, and discharge the water below at a very low velocity. Such turbines are known as impulse turbines, from the character of their action. In the pressure turbines the

full water pressure acts in the runner and in the space between the guides and the runner. In the pressure turbine each space between the guide blades acts so as to form a water jet, which impinges fairly on the bucket of the runner without causing a

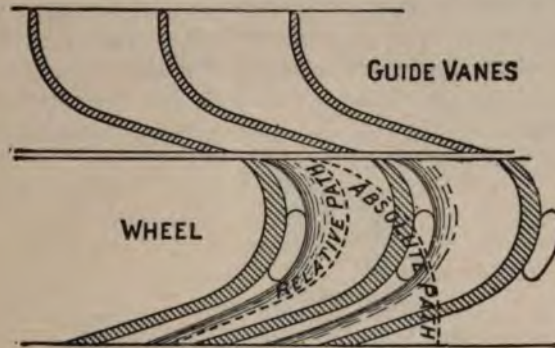


FIG. 185.

uniform pressure either throughout the bucket spaces or in the space between runner and guides. It is not intended that the passages of the wheel should be, as in the pressure turbine,


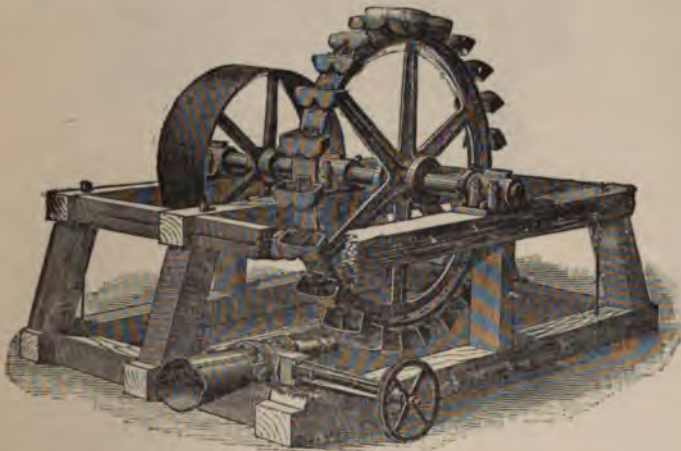


FIG. 186.

entirely filled with the water, nor is it best that they should be. Fig. 185 gives a sectional view from Unwin showing the arrangement of the guide blades and buckets of an impulse

turbine, in which the flow is, as in the pressure turbine previously shown, in general along the axis of the wheel. An impulse turbine necessarily loses all the head below the wheel and cannot be used with a draft tube.

Occasionally an attempt is made, in the so-called limit turbines, so to design the guides and buckets that the jets may completely fill the buckets, which are adapted exactly to the shape of the issuing stream. In such case the turbine works as an impulse wheel or as a pressure wheel, according as the draft tube is not or is used.

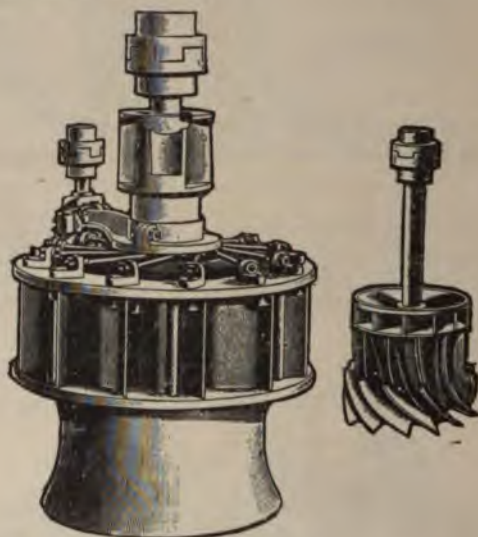

FIGS. 187 AND 188.

A modified impulse turbine, largely used for very high heads of water, is found in the Pelton and similar wheels, in which the impulse principle is used through a single nozzle acting in succession on the buckets of a wheel which revolves in the same plane with the issuing jet. Such a Pelton wheel is shown in Fig. 186. Occasionally two or more nozzles are used, delivering water to the same wheel. Impulse wheels of this class are exceedingly simple and efficient, and work admirably on high heads of water. They are moreover very flexible in the matter of obtaining efficiently various speeds of rotation from the same head of water, as the whole structure is so simple

and cheap that it can be modified easily to suit varying conditions.

It is obvious that the operation of such an impulse wheel is similar to that of a true impulse turbine, in which only one, or at the most three or four jets from the guide blades are utilized. Most of the hydraulic work done in this country is accomplished with pressure turbines, which are worthy, therefore, of some further description. A small but important portion is accomplished by Pelton and other impulse wheels, and



FIG. 189.

in a very few instances the impulse turbine proper has been used.

There are manufactured in this country more than a score of varieties of pressure turbines. They differ widely in design and general arrangement, but speaking broadly it is safe to say that most of them are of the mixed discharge type, in which the water passes away from the buckets of the runner inward and downward with reference to the axis of the wheel. It would be impossible to describe even a considerable part of them without making a long and useless cata-

logue. The essential points of difference are generally in the construction of the runner and in the mechanism of the guide blades. In a good many turbines regulation is accomplished by shifting the guide blades so as to deliver more or less water to the runner. A few types will serve to illustrate the general character of some of the best-known American wheels. Fig. 187 shows the so-called Samson turbine of James Leffel & Co., and Fig. 188, the runner belonging to it. This wheel is of



FIG. 190.

the class which regulates by shifting the guide blades, which are balanced and connected to the governor by the rods at the top of the casing shown. The water enters the guide blades inwardly, and the runner is provided as shown with two sets of buckets; the upper set discharging inwardly, the lower and larger set downwardly. The action of the wheel is almost equivalent to two wheels on the same shaft, the intention being to secure an unusually large power and speed from a given head of water on a single wheel structure. This result is, as might be anticipated, accomplished, and for a given dia-

meter the Samson turbine has a speed and power considerably greater for a given head than found in the usual standard single wheels. As before remarked, however, it is almost, mechanically speaking, equivalent to two wheels through its peculiar feature of double discharge through independent buckets.

Another very excellent and well-known wheel is the Victor turbine, shown in Fig. 189. In this wheel the gate is of the so-called cylinder type, which lengthens or shortens the apertures

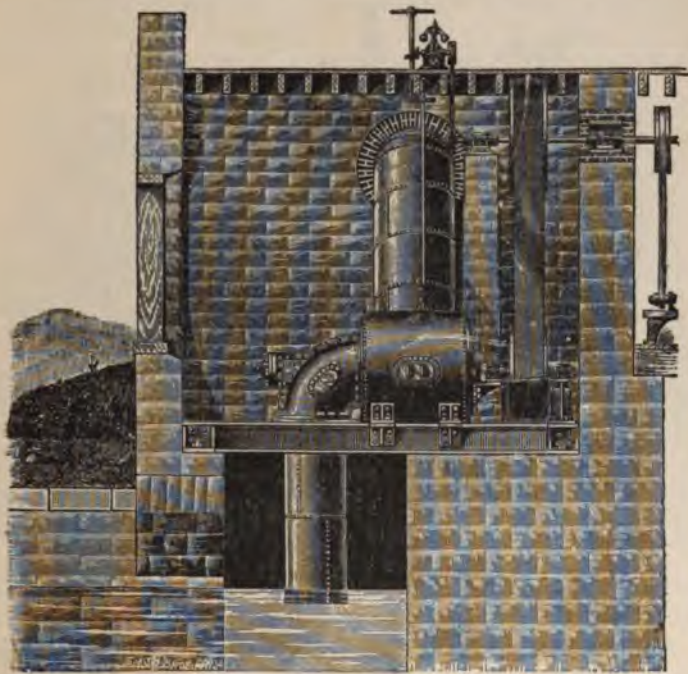


FIG. 191.

admitting water to the guide blades. The runner of this wheel is so shaped that the water is discharged inwardly and downwardly. The area of the runner blades exposed to the full water pressure is notably great. The cylinder form of gate is rather a favorite with American wheel manufacturers, and is intended to secure a somewhat uniform efficiency of the wheel, both at full and part load, although

how completely it does this is a matter which, of course, is still in dispute. The wheel shown, however, is an exceptionally good and efficient one, so far as can be judged from general practice. The same makers also manufacture a wheel with shifting guide blades.

Another excellent wheel of the cylinder gate type, the McCormick, is shown in Fig. 190. The runner of this wheel has its main discharge downward. It has a rather large power for its diameter, owing to the proportion of the runners, and is

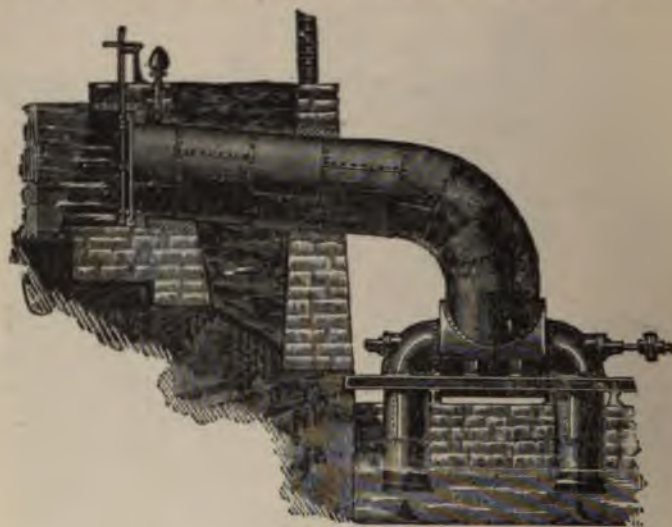


FIG. 192.

well known as a successful wheel considerably used in driving electrical machinery.

These turbines are typical of the construction and arrangement used by first-class American manufacturers. They are all arranged for either horizontal or vertical axes, and for purposes of driving electrical machinery are whenever possible used in the horizontal form. All of them, particularly the two first mentioned, have been widely used for electrical purposes. They are all practically pure pressure turbines and are installed usually with draft tubes of appropriate length. They are often, too, installed in pairs, two wheels being placed on the same shaft, fed from a common pipe but discharging through

separate draft tubes. The arrangement of these draft tubes is very various, as they can be placed in any position convenient for the particular work in hand. Fig. 191 shows a common arrangement where a single wheel is to be driven. The water enters through the penstock, passing into the wheel case, through the wheel, which has, as is generally the case except with very low heads, a horizontal axis, and thence passes into the tail race through the draft tube, shown in the lower part of the cut. The full head in the particular case shown is 43 feet, so that the draft tube is fairly long. Where double wheels are employed, there is no longer any necessity of taking up the longitudinal thrust of the wheel shaft, and an arrangement

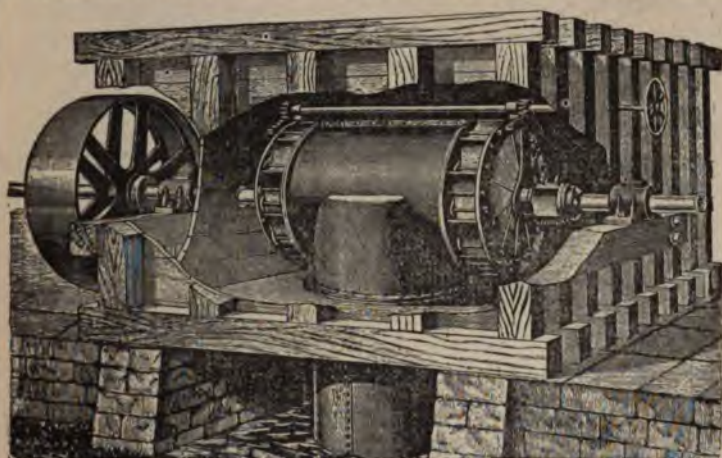


FIG. 193

frequently followed is shown in Fig. 192, which gives a very good idea of the general arrangement of the pair of horizontal turbines, which may be directly coupled to the load or, as in the case just mentioned, drive it through the medium of belts. In many instances it is found cheaper and simpler to mount the two wheels together in a single flume or wheelcase, so as to discharge into the same draft tube. Fig. 193 shows an arrangement which is thoroughly typical of this practice, applied in this case to a low head. The pair of wheels are here arranged so as to discharge into a common draft tube between them, while they receive their water from the timber

penstock in which they are inclosed. Such wooden penstocks are generally very much cheaper than iron ones and for low heads have been extensively used.

The central draft tube here shown need not go vertically downwards, but may take any direction that the arrangement of the tailrace requires. Whether the draft tube is single or double is determined mainly by convenience in arranging the wheel and its foundations, and the tailrace. The use of a pair of turbines coupled together is not only important in avoiding end thrust, but it also enables a fair rotative speed to be obtained from moderate heads, which is sometimes very important in driving electrical machinery.

For example, suppose one desired to drive a 500 KW generator by turbines from a 25 ft. head. Allowing a little margin for overload the turbine capacity should be in the neighborhood of 750 HP. Now turning to a wheel table applying, for instance, to the "Victor" wheel, one finds that a single 54" wheel would do the work, but at the inconveniently low speed of 128 r.p.m. But under the same head a pair of 39" wheels would give a little larger margin of power at 180 r.p.m., and hence would probably enable one to get his dynamo at lower cost, as well as to avoid a thrust bearing. Often such a change of plan will allow the use of a standard generator where a special one would otherwise be necessary.

Wherever possible it is highly desirable to employ these horizontal wheels for electrical purposes, inasmuch as power has, in most cases, to be transferred to a horizontal axis, and the use of a vertical shaft wheel necessitates some complication and loss of power in changing the direction of the motion. Occasionally a vertical shaft wheel is used for electrical purposes, driving a dynamo having a vertical armature shaft. This practice is not generally to be recommended, as it involves special dynamos, and a somewhat troublesome mechanical problem in supporting the weight of the armature, which is generally carried by hydraulic pressure. A fine example of this arrangement is to be found in the great Niagara Falls plant.

The use of pressure turbines for driving electrical machinery is exceedingly convenient on low or moderate heads, say up to 50 or 75 feet. With higher heads than this the rotative speed becomes inconveniently great: for example, under 100 feet

head, 150 HP can be obtained from a wheel a little more than 15 inches in diameter, at a speed of more than 1,000 revolutions per minute. At 200 feet head, the power for the same wheel will have risen to about 400 HP and the speed to nearly 1,300. This is a rather inconvenient speed for so large a power,

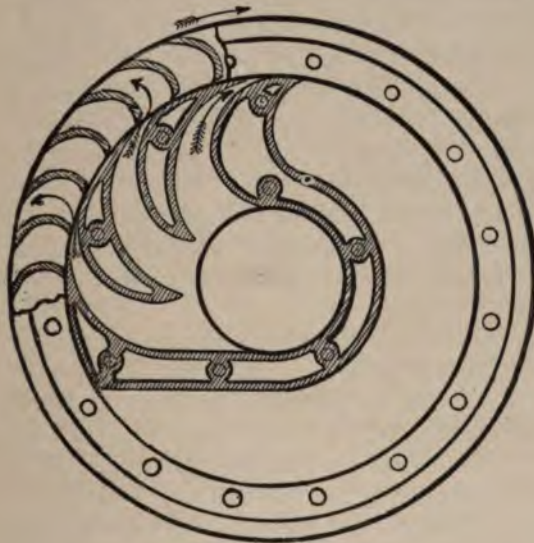


FIG. 194.

and it is necessitated by the fact that a pressure turbine to work under its best conditions as to efficiency, must run at a peripheral speed of very nearly three-quarters the full velocity of water due to the head in question. If, therefore, turbines are used for high heads, either the dynamos to which they are coupled must be of decidedly abnormal design, or the dynamo must be run at less speed than the wheels.

The former horn of the dilemma was taken in the Niagara plant, and involved some very embarrassing mechanical questions in the construction of the dynamos. Where belts are permissible the other practice is the more usual, of which a good example is found in the large lighting plant at Spokane Falls, Wash., where the wheels are belted to the dynamos for a reduction in speed instead of an increase, as is usually the case.

Impulse wheels are regularly made at present by only one American company, the Girard Water Wheel Co. of San Francisco, Cal. The wheel manufactured by them is one with a well-known foreign reputation. Its general arrangement is well shown by the diagram, Fig. 194. The Girard impulse turbine is of the outward flow type, a form rather rare in pressure turbines. The water enters the wheel centrally through a set of guide blades, which form a series of nozzles from which the water issues with its full spouting velocity and impinges on the buckets of the runner, which surrounds the guide blades. The discharge is virtually radially outward. Regulation is secured by a governor which either cuts off one or more of the nozzles or may be arranged by swinging guide blades to contract all or a part of the nozzles. In either case, there is no water wasted, and the wheel works efficiently at practically all loads.

Like others of the impulse type, the peripheral speed of the wheel when worked under its best conditions for efficiency is very nearly one-half the spouting velocity of the water as it issues from the nozzle. This produces for a wheel of given diameter a lower speed for the same head than in the case of pressure turbines, while the use of a larger number of nozzles working simultaneously on the runner gives a higher power for the same diameter than in the case of the Pelton or similar wheels, which use a few nozzles with jets applied tangentially; hence such impulse turbines occupy an exceedingly useful place in the matter of speed, aside from all questions of efficiency.

Under moderately high heads, from 100 up to 300 or 400 feet, they give a much greater power for a given rotative speed than impulse wheels employing only two or three nozzles. On the other hand they do not run inconveniently fast, as is the case with pressure turbines under such heads. At extremely high heads they give, unless operated with only one or a few nozzles, so great power as to be inconvenient for the high speed attained, so far at least as the operation of dynamos is concerned. At very low heads there is material loss from the fact that the wheel cannot be used with the draft tube, and consequently a certain amount of the head must be sacrificed to secure free space from the wheel to the tail water. These Girard turbines are made with both

vertical and horizontal axes, and are applicable to electrical work with the same general facility which applies to other types of wheel. Their strong point is economical and efficient regulation of the water supply, together with high efficiency at moderate loads.

The Pelton wheel, already shown in Fig. 186, may be regarded as an impulse turbine having a single nozzle, and that applied tangentially. These wheels have proved immensely effective for heads from several hundred up to a couple of thousand feet. Like the true impulse turbines, the peripheral speed should be half the spouting velocity of the water, hence by varying the dimensions of the wheel a wide range of speed can be obtained, which is exceedingly convenient in power transmission work, permitting direct coupling of the dynamos under all sorts of conditions. They are not infrequently made with two or three nozzles, which give, of course, correspondingly greater power for the same speed. At heads of only 100 or 200 feet these wheels with their few nozzles give an inconveniently low rotative speed for the power developed, and are at their best in this respect between 300 and 1,000 feet. The Pelton wheel is usually regulated by deflecting the nozzles away from the buckets of the wheel, a very effective but most inefficient method, so far as economy of water is concerned. The wheel has, however, under favorable conditions a very high efficiency, certainly as high as can be reached with any other form of hydraulic prime mover. The practical results given by this class of wheel, both of Pelton and other makes, are admirable under circumstances favorable to their use.

Another wheel of this class is the Leffel "Cascade" water wheel. Two complete rings of buckets are employed for this wheel, instead of the divided buckets of the Pelton form, and the wheels are arranged to be supplied from several nozzles, of which one or more are put into use according to the necessities of regulation. The Cascade wheel therefore occupies a place, as it were, between the Pelton wheel and the impulse turbine, resembling the former in the arrangement of its multiple jets, and the latter in the method of regulation by cutting off completely some of the nozzles.

From the foregoing it will be appreciated that each of the three general classes of wheels described, pressure turbines,

impulse turbines and tangential impulse wheels, has a sphere of usefulness in which it can hardly be approached by either of the others. It is worth while, therefore, to examine somewhat in detail the conditions of economy under various circumstances.

The pressure turbine has its best field under relatively low and uniform heads. By means of the draft tube no head is lost, as is the case with that portion of the head which lies between the turbine and the tail water in the use of impulse wheels of any description. Further, the pressure turbine under all heads gives a higher relative speed than the impulse wheels, whether of the tangential or turbine variety, and under low heads is apt to be of less bulk and cost and to give a more convenient speed for electric work; hence these pressure turbines have been more extensively used than any other variety of water wheels in the enormous hydraulic developments of the last quarter of a century. Furthermore, the pressure turbine has, under favorable conditions, as high efficiency as any known variety of water wheel. The losses of energy are mainly of four kinds:

1. Friction of bearings, usually small.
2. Friction and eddying in the wheel and guide passages.
3. Leakage, and
4. Unutilized energy of other kinds, largely owing to imperfect shaping of the working parts, or loss of head.

With the best construction these losses aggregate 15 to 20 per cent. Of them the shaft friction is the smallest and the loss from friction and eddies in the wheel the largest, probably fully half of the total loss, particularly under high heads. This efficiency is approximately true of the better class of turbines, whether of the pressure or impulse variety. Under low and uniform heads the pressure turbine probably is capable of a little better work than the impulse variety, but both suffer if the head varies. The curves, Fig. 195, show efficiency tests made with the greatest care on four first-class pressure turbines at the Holyoke testing flume, probably the best equipped place in the world for making such tests. It should be noted that the efficiency of all the wheels shown is good; over 80 per cent. at full admission of water; at partial admission the efficiencies vary more between the individual wheels. This

variation is largely due to the methods of regulating the flow employed. These are in general three:

1. Varying the number of guide passages in use.
2. Varying the area of these guide passages by moving the guide blades.
3. Varying the admission to the guide passages by a gate covering the entrance to all of them.

The first method is particularly bad, as the buckets are at one moment exposed to full water pressure and then come opposite a closed passage, setting up a good deal of unnecessary shock and eddying. It is a method that is scarcely ever used in this country. Between the other two it is not so easy to choose. Both have strong advocates among wheel makers; some com

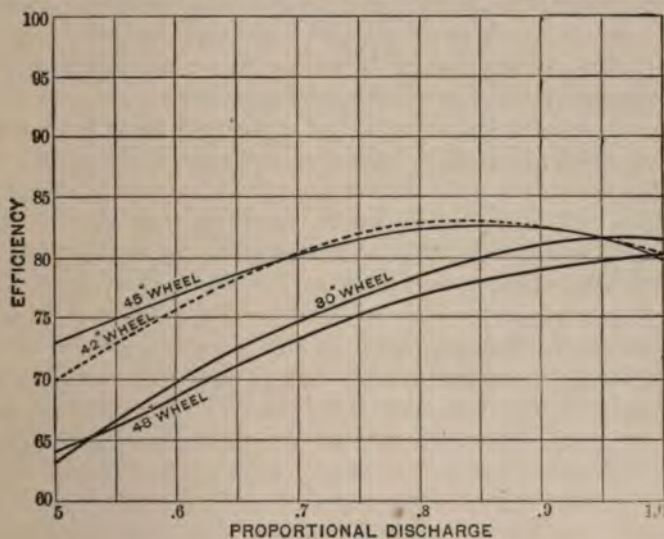


FIG. 193.

panies building both types, and the others only one of them. The curves shown represent both these methods of regulation.

The truth probably is that the relative efficiency of the two depends more on the design of the wheel with reference to its particular form of regulation, than on the intrinsic advantages of either form. Turbines are generally constructed so that the point of maximum efficiency is rather below the maximum output, as a little lee-way is desired for purposes of regu-

results as do the best impulse turbines, inasmuch as they regulate either by deflecting the nozzle away from the buckets, and hence wasting water, or by more or less throttling of one or more of the individual nozzles; hence using the water less effectively. In this latter method of regulation, there are disadvantages arising from the small number of nozzles, whereby it is impracticable to obtain a close regulation of speed by simply cutting off nozzles as in the impulse turbines. For very high heads, however, the tangential wheels are preferable to any turbines, as they give a better relation between power and speed, so far as driving electrical machinery is concerned, and their extreme simplicity is favorable to good continuous working under the enormous strains produced by the impact of water at great spouting velocities.

To summarize, pressure turbines are admirable for low and uniform heads, particularly where the load is steady. The impulse turbines give more efficient use of water at part load, and a more convenient speed on moderately high heads. The tangential impulse wheels do relatively the best work under very high heads, and where water does not have to be rigidly economized. Each of the three classes has decided advantages over the others in particular situations, and the full load efficiency of all three is approximately equal. The choice of either one of these types should be made in each individual case in accordance with the hydraulic conditions which are to be met. The choice between particular forms of each type is largely a commercial matter, in which price, guarantees, facility of getting at the makers in case of repairs, standard sizes fitting the particular case in hand and similar considerations are likely to determine the particular make employed, rather than any broad difference in construction or operation.

The success of a power transmission plant depends quite as much on careful hydraulic work as on proper electrical installation. The two should go hand in hand, and any attempt, such as is often made, to contract for the two parts of the plant independently of each other, or to engineer them independently, generally results in a combination of electrical and hydraulic machinery that is far from being the best possible under the conditions, and is quite likely to be anything but satisfactory.

[illegible][illegible][illegible]

arrange the wheels to operate normally at partial gate, then on the low heads to throw the gate wide open and obtain increased power. On the high heads the wheel is throttled still more. Such an arrangement works the dynamo in a fairly efficient fashion, but the wheel, as a rule, quite inefficiently a large portion of the time, as may be seen by reference to the efficiency curves of the wheels just given. It is a practice similar to that which one would find in working an engine at part load. For moderate variations of head not exceeding 10 per cent., the loss of efficiency is not so serious as to bar this very simple plan, but under conditions too frequently encountered, these variations of efficiency would be so great as to make the method exceedingly undesirable.

Hydraulic plants are occasionally operated without any reference to economy of water, and in such cases the practice of operating normally at part gate is frequently followed, but it must be remembered that as water powers are more and more developed, economy of water becomes more and more necessary, and in every case should be borne in mind even if it is not rendered necessary by conditions actually existing. In thoroughly developed streams it is generally important to waste no water.

Another method of overcoming the difficulties due to variations of head is the installation of two wheels on the same shaft, one intended to give normal power and speed at the ordinary head, the other at the emergency head. This practice is carried out in various forms. Sometimes two wheels may be mounted on the same horizontal or vertical axis, and one of them is disconnected or permitted to run idle except when actually needed. Another modification of the same general idea is the use of a duplex wheel with the runner and guides arranged in two or three concentric sets of buckets, which can be used singly or together according to the head which is available.

A fine example of this practice is found in the great power plant at Geneva, to which reference has already been made, where the head varies from $5\frac{1}{2}$ to 12 feet. Here the turbines have buckets arranged in three concentric rings, the outermost being used at the highest head and all three at the lowest head.

Under the latter condition the average radius at which the water acts upon the wheel is diminished and the speed is therefore increased, while the greater volume of water keeps up the power. The various combinations possible with the rings of buckets are so effective in keeping the speed uniform that the extreme variation of speed under the maximum variation of head is only about 10 per cent. Such a triplex turbine is of high first cost, but is decidedly economical of water at normal load. Still another variation of the double turbine idea consists of installing two turbines for each unit of power, one acting directly, the second through the medium of belts. The direct-acting turbine is intended for normal load, the belted turbine of larger dimensions for use during the periods of low head.

This arrangement is used in the large power transmission plant at Oregon City, Ore. It is economical of water, but is mechanically somewhat complicated. It is probably on the whole less desirable than the installation of two turbines on the same shaft, and much less desirable than the duplex or triplex arrangement just referred to. Where two turbines are operated on the same shaft, it is generally possible to arrange the turbine designed to operate on the lower head so as to run at a disproportionately high velocity with some loss of efficiency, and so to hold the speed fairly uniform.

Still another method of counteracting the variation of head is applicable only where the power is transmitted from the turbine by gears or belts. In this case it is always possible to operate the machinery under the reduced head with some loss of output, but still at or near the proper speed. Whatever way out of the difficulty is chosen, it should be borne in mind that the most desirable, on the whole, is the one which will work the wheels during the generally long period of fairly steady head at their best efficiency. If there is to be any sacrifice of efficiency, it should by all means be for as short a time as possible, and therefore should be at the periods of extreme low head. At such times water is generally plenty, while at the higher heads economy in its use is more necessary.

REGULATION OF WATER WHEELS.

For many years there have been bad water wheel governors and worse water wheel governors, but only recently have there appeared governors which may be classified as good from the standpoint of the electrical engineer. It has been necessary to go through the same tedious period of waiting and experimentation that was encountered before dynamo builders could find engines which would hold their speed at varying loads. Until the advent of electrical transmission work, water wheels were most generally employed for certain classes of manufacturing, such as textile mills, where the speed must be quite uniform, but where at the same time the load is almost uniform; or, on the other hand, for saw mills and the like, where constant speed is of no particular importance.

The action of water wheel governors as regards the way in which they vary the supply of water is very different; some merely act to open or close the head gates; others to work a cylinder gate immediately around the wheel, and still others to vary the area of the guide passages, as in the so-called register gate turbines.

In whatever way the governing action takes place, its result is too often unsatisfactory, due to the great difficulty that has to be encountered in the great inertia of the water and of the moving parts of the wheel. Both water and wheel are sluggish in their action, and as a result some time elapses after the governor has produced a change of gate before that change becomes effective. Meanwhile the speed has fallen or risen to a very considerable extent, and perhaps in addition the load has again changed so that by the time the speed of the wheel has been sensibly affected by the governor, the direction of the governing action may be exactly opposite to that which at the moment is desirable. Even if this is not the case the governing is usually carried too far, being continued up to the time at which the wheel is affected and reacts on the governing apparatus, hence another motion of the governor becomes necessary to counteract the excess of diligence on the part of the first action. In other words, the governor "hunts," causing a slow oscillation of the speed about the desired point, an oscillation of decreasing amplitude if the new load on the wheel be steady.

This sluggishness of reaction to changes indicated by the governor is the most formidable obstacle to the proper control of the water wheels. To overcome it, even in part, it is necessary that the movement of the gates be comparatively active, if the changes of load are frequent, and this entails still further difficulty by causing severe strains on the mechanism and the gates, particularly if the water is led to the turbine through a long penstock. In the latter case the variations in pressure produced by rapid governing are often dangerous, and have to be counteracted by air chambers, stand pipes or the like, and aside from all this there is a still further difficulty in the considerable weight of the gates and the pressure against which they have to be operated, so that the amount of mechanical power controlled by the governor must be very considerable.

A very large variety of governors have been designed to meet the very serious difficulties just set forth. Most of them have been abject failures, and those that may be really accounted of some considerable value for electrical work may be counted on the fingers of one hand.

Water wheel governors may be roughly divided into two classes. First come those regulators in which the wheel itself supplies power to the gate-shifting mechanism, which is controlled by a fly ball governor through more or less direct mechanical means. Second comes the relay class of governors, wherein all the work possible is taken off the centrifugal governor, and its function is reduced to throwing into action a mechanism for moving the gates which may be quite independent of any power transmitted from the wheel to the governing mechanism. The various classes of hydraulic, pneumatic and electric governors are worked in this way. Their general characteristic is that their sole function in governing is to work the devices which control the secondary mechanism, which consists, in various cases, of hydraulic cylinders operating the gates, pneumatic cylinders serving the same purpose, or electric motors which open or close the gates by power derived from the machines operated by the turbines.

A vast amount of ingenuity has been spent in trying to work out regulators of the first mentioned form. Almost every possible variety of mechanism has been employed

to enable the governor to apply the necessary power to the mechanism operating the gates. The general form of most of these governors is as follows: Power is taken from the wheel shaft by a belt to the governor mechanism, where it serves at once to drive the governor balls, and to work the gates when the governor connects the gate-controlling gears to the pulley which supplies the power. This is generally done by friction cones or their equivalent, thrown into action in one direction when the governor balls rise and in the other direction when they fall.

Sometimes this mechanism is varied by employing a pair of oscillating dogs, one or the other of which is thrown into appropriate gearing by the governors. There are many governors of this kind on the market, and where the load is fairly steady and no particular accuracy of regulation is necessary, they have given good satisfaction. The fault with all governors of this sort is that the centrifugal balls either lack sensitiveness or lack power. If the governor works at all rapidly in moving the gates, too heavy a load is thrown on the governor for any but a massive mechanism, and the centrifugal device becomes insensitive; or, on the other hand, if the gates are worked slowly, the governor in itself is sluggish and ineffectual.

In most cases the gates are made to move quite slowly. In the attempt to get sensitiveness, the friction wheels or dogs are often adjusted so closely that the governor is in a constant slight oscillatory motion, but when its action is really needed, as in the case of a sudden change of load, response generally does not come quickly enough. It is of course possible to construct a mechanical relay which would possess both power and sensitiveness, but nearly all the governors made on this principle lack one or the other, and sometimes both.

The second type of governor, as mentioned, is not open to the objections noted, if properly designed, inasmuch as it is a comparatively easy matter to make a balanced hydraulic or pneumatic valve which can be worked even by the most sensitive of governors, and yet can apply power enough to move heavy gates as rapidly as is consistent with safety. In addition, such governors can be made to work with a rapidity

depending on the amount of change in speed, so that if a heavy load is thrown on the wheel, the relay valve would be thrown wide open and consequently bring a great and immediate pressure to bear upon the gates. In the so-called electric governors, the function of the governor balls is merely to make in one direction or the other the electrical connections to a reversible motor which handles the gates. This relay class of governors has been recently worked out with considerable care, and is capable of giving surprisingly close regulation even under widely varying loads, results comparable even with those obtained from a steam engine governor.

A third type of water wheel governor is independent of any centrifugal device and operates by a differential speed mechanism, so that wherever the speed of the wheel varies from a certain fixed speed maintained by an independent motor, the gates are opened or closed as occasion demands. The difficulty here is to get a constant speed which will not be sensibly altered when the load of working the gates is thrown on the governor mechanism. Some species of relay device is almost necessary to the successful operation of a differential governor, but with such an adjunct very close regulation can be and is obtained.

Up to the past few years almost all hydraulic governing has been by mechanisms of the first class, and it is only recently that the relay idea has been worked out carefully, both for centrifugal and differential mechanisms, so as to obtain anything like satisfactory results for electrical work where close regulation of speed over a wide variation of load is very necessary.

For electrical purposes, several rather interesting governing mechanisms have been tried, which do not fall into any of these classes, inasmuch as their function is to keep the load constant and prevent variations of speed instead of checking these variations after they have been set up. Such governors (load governors they may properly be called) operate by electric means, throwing into circuit a heavy rheostat or a storage battery when the electrical load falls off, and cutting these devices out again when the load in the main circuit increases. These governors have in several instances been applied

with success to controlling the variable loads found in electric railway stations operated by water wheels. But they waste energy in a very objectionable manner, and at best can only be regarded as bad makeshifts, out of the question when there must be any regard for economy of water, and only to be tolerated in the lack of an efficient speed regulator.

Occasionally electric governors operated by the variations in the voltage of the circuit supplied have been tried, but these are open to two serious objections: In the first place they do not hold the voltage steady for the same reasons that most speed regulators do not hold the speed steady. Secondly, they regulate the wrong thing. In transmission plants, most of which are and will be operated by alternating currents, it is important that the cycles be kept uniform. If the voltage



FIG. 196.

is kept constant by varying the speed, the cycles are subject to enough variation to be very annoying in the operation of motors. Automatic voltage regulators working through variation of the field excitation of the generator belong in a different category and have come into considerable and successful use.

To pass from the general to the special, Fig. 196 shows a typical water wheel governor of the first class, that is, of the kind operated directly by the wheel through a system of dogs worked by a fly ball governor. There is here no attempt at delicate relay work, and the resulting mechanism, while quite good enough for rough-and-ready work, is of little use for any case where a variable load must be held to its

speed with even a fair degree of accuracy. The cut shows the construction well enough to render further description superfluous. Governors like these were practically the best available for many years, and proved to be cheap and durable, but they seldom governed much more than to keep the wheels from racing dangerously when the load was thrown off, or from slowing down permanently when it came on. It is not too much to say that they never should be used in connection with an electrical station, unless combined with intelligent hand regulation—which at a pinch is not to be despised.

Of the indirect acting and relay governors there are many species, most of which had better be consigned to the oblivion of the scrap heap. But out of the manifold inventions and experiments good has come, so that at the present time there are a few delicate relay governors capable of holding the wheel speed constant within a very narrow margin indeed. Others of similar excellence will probably be evolved, but just now three, the Lombard, Replogle, and the Faesch-Piccard, together with one or two electrical governors, give decidedly the best results. The first named has given very remarkable results in several transmission plants in which it has been employed—results quite comparable with those obtained from a well-governed steam engine. The second has given excellent results in the Oregon City transmission and elsewhere, while the last has been adopted for the great transmission at Niagara Falls and has done its work well. All three are somewhat complicated and expensive, but they actually do govern with considerable precision.

The Lombard governor, Fig. 197, is an hydraulic relay in principle. The gate-actuating mechanism is a rack gearing into a pinion, and driven to and fro by the piston of a pressure cylinder. The working fluid is thin oil, kept under a pressure of about 200 lbs. per square inch. This pressure is supplied by a pump driven by the pulley shown in the figure and operating to keep up a 200 lb. air pressure in the pressure chamber at the base of the governor, above the oil that partially fills it. This chamber is divided into two sections, the one holding the oil under pressure, the other being a vacuum space kept at reduced pressure by the pump system.

The circulation of oil is from the pressure chamber through

the piping system and valves to the working cylinder, and thence into the vacuum chamber, whence it is pumped back into the pressure chamber again. The governor proper consists of a sensitive pair of fly balls operating a balanced piston valve in the path of the pressure oil. A motion of $\frac{1}{84}$ of an inch at the valve is sufficient to put the piston into full action and open or close the gates. Sensitive as this mechanism is, it would not govern properly without the addition of an ingenious device, peculiar to this governor, to take account of the inertia of the system. The weakest point of all such governing mechanisms has been their helplessness in the matter of inertia. If a sensitive governor of the first class be set to regulate a

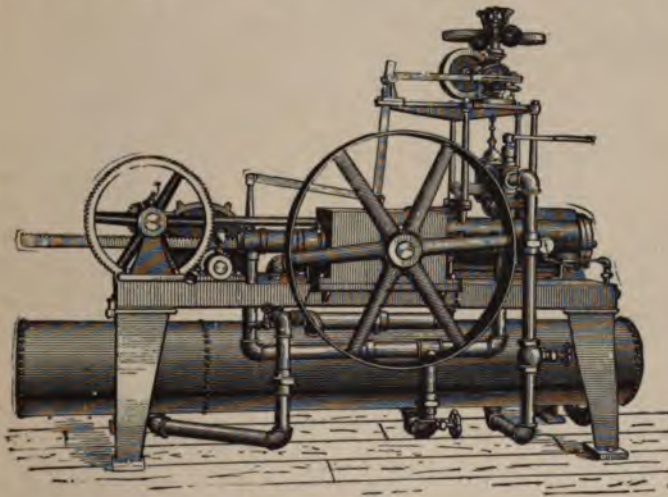


FIG. 197.

wheel, we encounter the following unpleasant dilemma: If the mechanism moves the gates quite slowly, it will not be able to follow the changes of load. If it moves them rapidly the governing overruns on account of the inertia of the whole wheel system, so that the apparatus "hunts," perhaps the worst vice a governor can have when dynamos are to be governed. Hence most governors have either been unable to follow a quickly varying load at all, or they have made matters worse by hunting.

In the Lombard governor special means are provided to

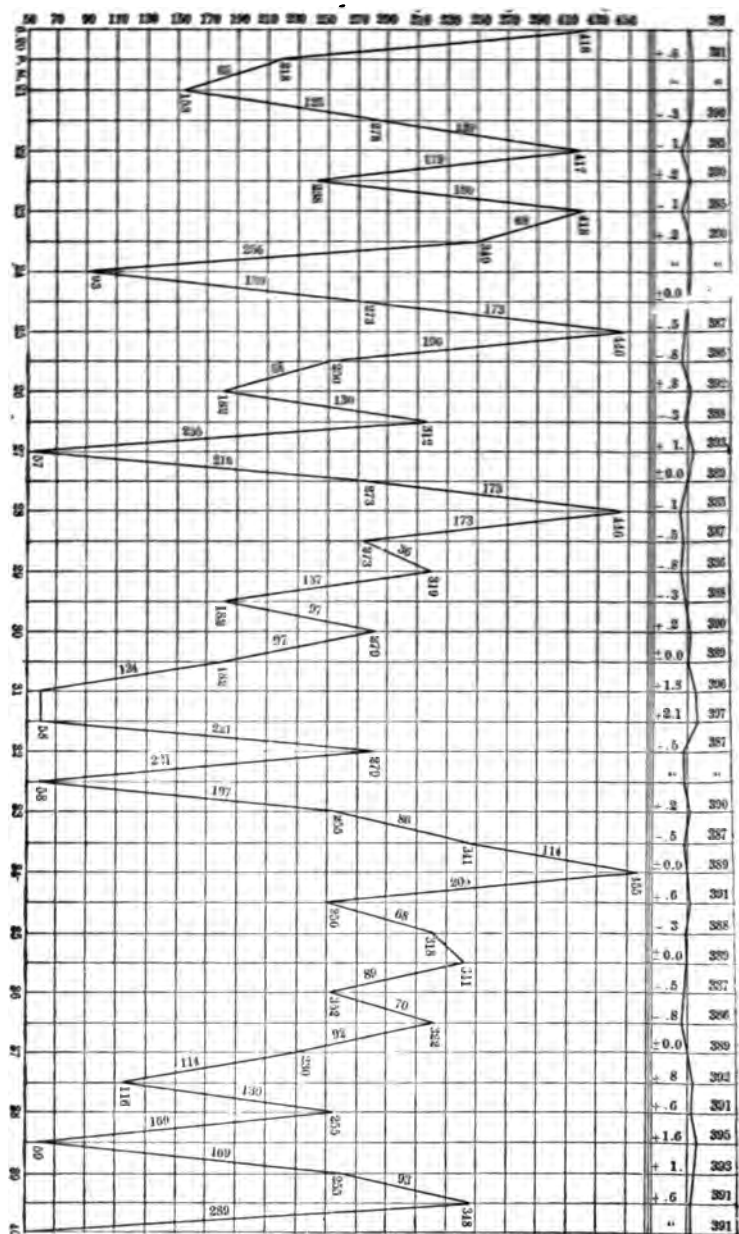


FIG. 198.

obviate hunting. The bell-crank lever seen in the background of Fig. 197 is actuated by the same movement that works the wheel gates, and moves the governor valve independently of the fly balls. Its office is promptly to close the valve far enough ahead of the termination of the regular gate movement to compensate for inertia. For example, if the speed falls and

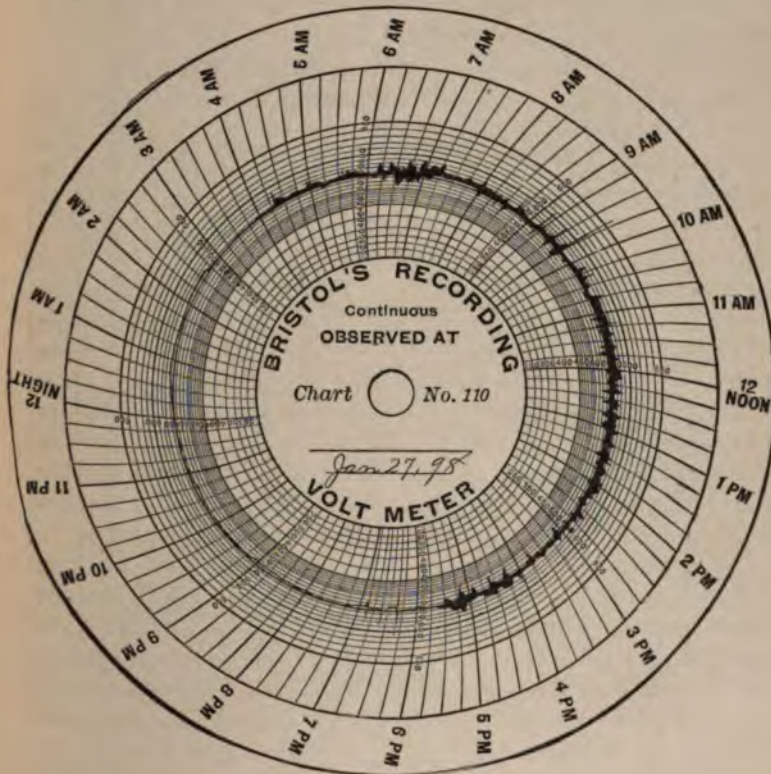


FIG. 198A.

the fly balls operate to open the gate wider, the lever in question closes the governor valve before the fly balls are quite back to speed, so that instead of overrunning and hunting, the governing is practically dead beat.

The result obtained with this governor is well seen in Fig. 198. This diagram is taken from a plant operating an electric street railway—perhaps the worst possible load in point of irregu-

larity. The diagram shows a maximum variation of 2.1 per cent. from normal speed, lasting less than one minute, under extreme variation of load. These results are entirely authentic, the readings having been taken jointly by the representatives of the governor company and the local company. Speed was taken by direct reading tachometer and load from the station instruments. A still more instructive exhibit of the performance of this remarkable governor is Fig. 198A, which is the regular working record of an electric railway station for twenty-four hours. The road was one where the variations of load are more than usually severe, and the day was in mid-winter with more or less troubles on the line, the card showing no less than four short-circuits of considerable severity. But in spite of all disturbing influences the voltage was held remarkably well. Even the heavy short-circuits produced only a momentary effect, and, as the card shows both the variations in voltage due to speed and to compounding, the efficacy of the governing is obvious. Few stations of similar output driven by steam would show a better result.

A gate gauge is generally attached to the bed plate of the Lombard governor, so that the excursions of the piston plainly show the exact extent of gate opening. The mechanism of the governor is decidedly complicated, but it is extremely well made and fitted, so that it seldom gets out of order. It permits readily of all sorts of adjustment with respect to the speed, but for power transmission work one needs constant speed only, except when varying speed temporarily in synchronizing a generator. The invariable rule therefore should be to adjust the governor carefully for the exact speed required, and thereafter to LET ITS ADJUSTMENTS ALONE as long as it continues to hold that speed. In power transmission work and in railway plants this governor is at present used probably more than all others combined, but neither it nor any other governor can give first-class results unless the hydraulic equipment generally is designed with some degree of intelligence.

The Laesch & Piccard governor has taken several forms, the idea of a sensitive relay mechanism being carried through all of them. An electric relay has been successfully employed abroad. It does the function of the fly balls is reduced

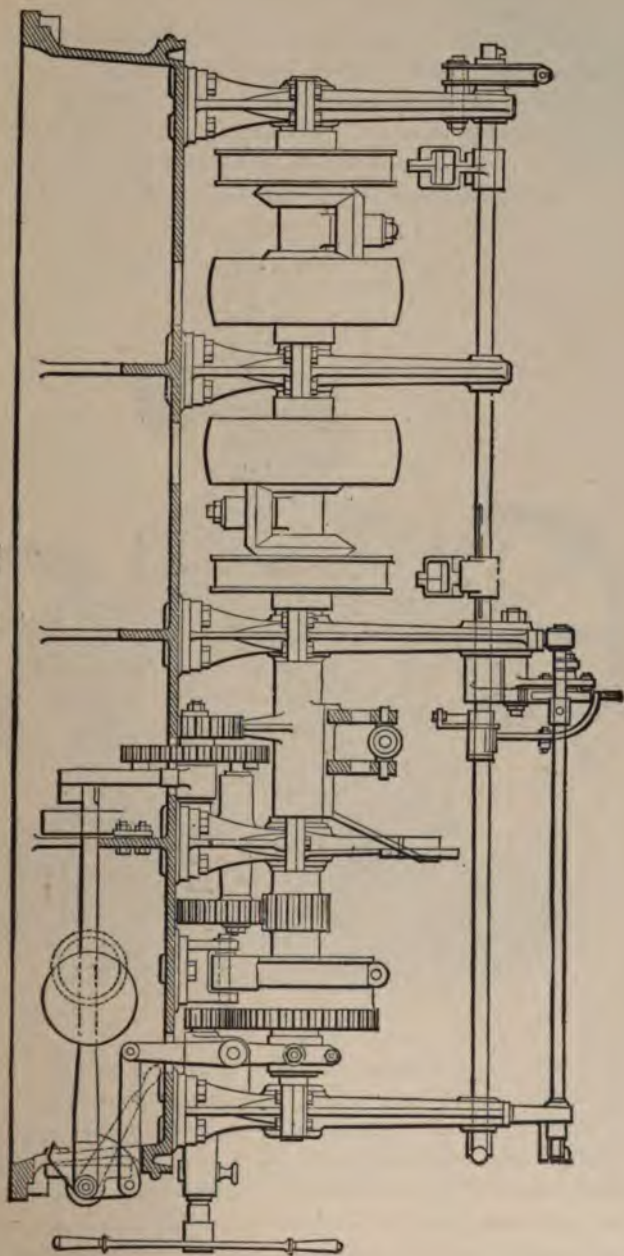


FIG. 199.

to moving a balanced valve controlling hydraulic power derived from the natural head, or from a pressure cylinder. There is no mechanical provision against hunting, but the speed of governing is adjusted as nearly as possible to the requirements of the load, and the results are generally good. In the great Niagara plant the governor is situated on the floor

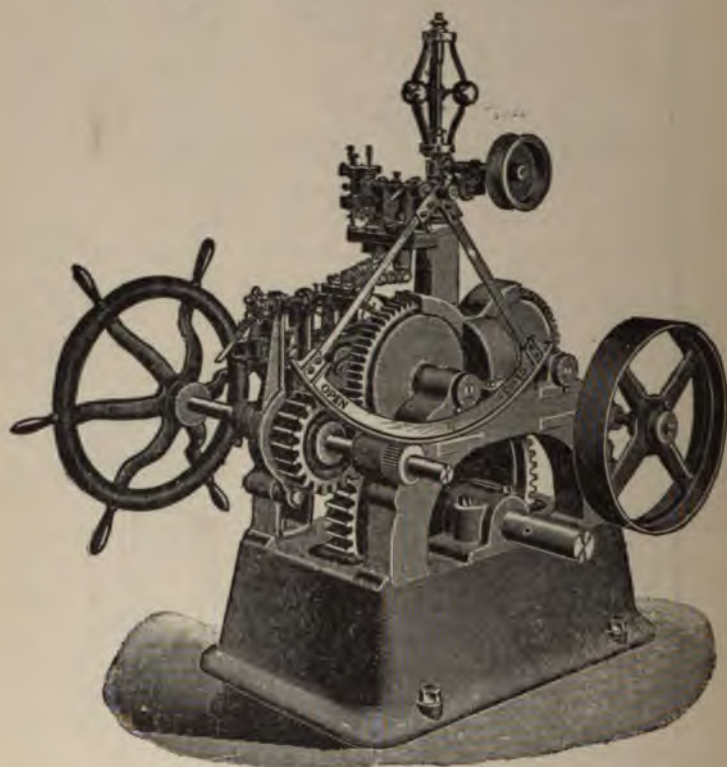


FIG. 200.

of the power house, nearly 140 feet above the wheel. It is a very sensitive mechanical relay, in which the motion of a pair of fast running fly balls puts into operation through a system of oscillating dogs a brake-tightening mechanism which in its turn permits power to be transferred from pulleys driven from the turbine shaft through a pair of dynamometer gears to the system of gearing that works the balanced gate at the end of the lever

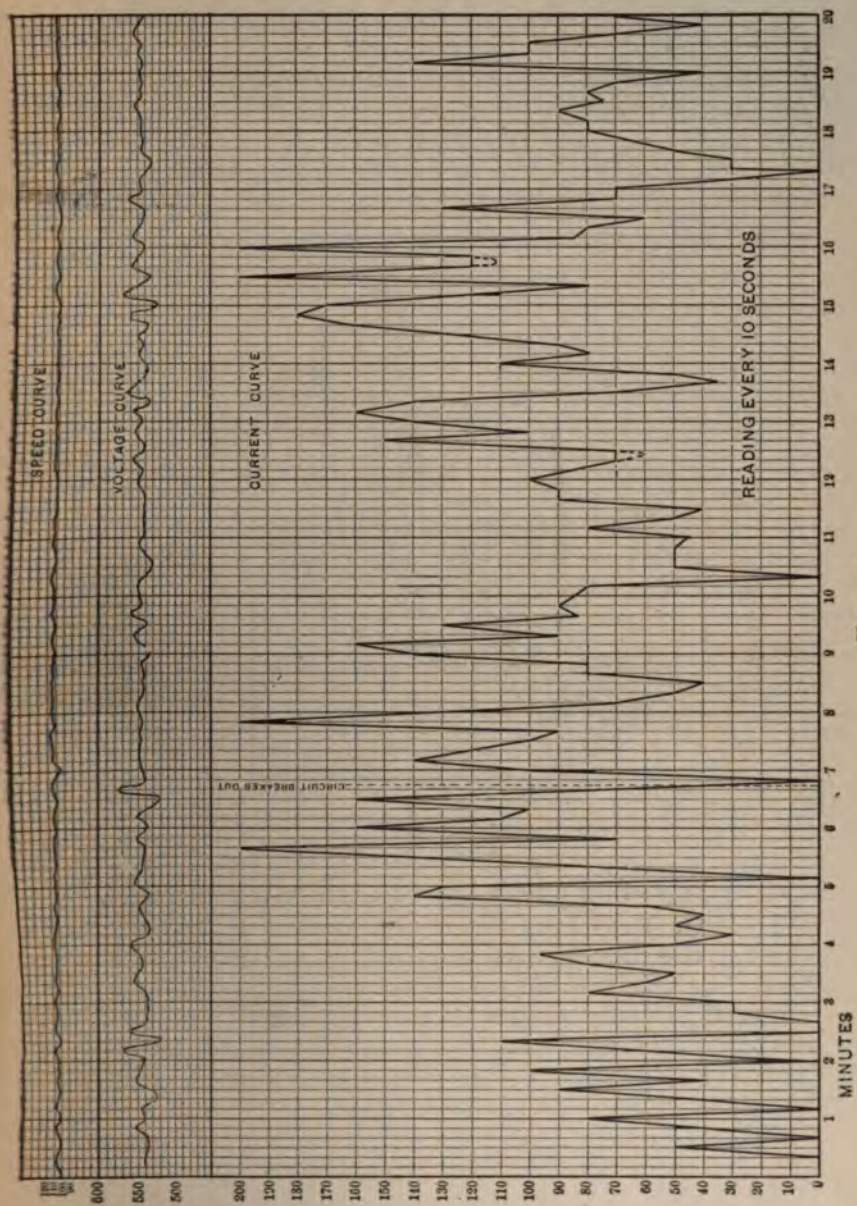


FIG. 201.

Fig. 199 shows an electric governor. This governor was guaranteed to maintain constant speed over any load under ordinary conditions and had no limit to speed variation to 4 per cent. It was also independent of load conditions. *Fig. 199 gives a perspective view of the mechanism of this apparatus, which is a very simple one.* The electric governor is an electro-mechanical device. *Fig. 200 shows a general arrangement of the governor.* The governor is made of two parts



Fig. 199

Fig. 201 shows the mechanism which is both sensitive and powerful. *Fig. 202 shows a mechanism for governing a railway load under conditions of unusual severity.* As in *Fig. 198*, 20 minutes of operation are plotted and the maximum variation from the normal speed, is less than 10 revolutions, and that variation lasted less than 20 seconds and was due to the opening of the circuit-breaker. Such work is quite good enough to meet all ordinary conditions.

To a very different type of mechanism belongs the differential governor shown in *Fig. 203*. It has been applied widely to the governing of Pelton impulse wheels, with very excellent results. The principle involved is very simple. Two bevel

gears, each carrying on its shaft a pulley, are connected by a pair of bevel gears on a crosswise shaft, forming a species of dynamometer gearing. Normally the main gears are driven in opposite directions, the one at a constant speed by a special source of power, the other from the shaft to be governed. So long as the speeds of these wheels are exactly equal and opposite, the transverse shaft remains stationary in space and the gate moving mechanism attached to it is at rest. When, however, the working shaft changes speed under the influence of a change in load, the transverse shaft necessarily moves in one direction or the other and keeps on moving until the working shaft gets back to speed.

In practice the main difficulty is to hold the constant speed necessary for one of the bevel gears, and the governor works admirably or badly as this constancy is or is not maintained. A heavy fly wheel on the constant speed side is desirable, and its motive power should be quite independent of the main drive. Perhaps the best result is obtained by using a second, small, differential governor to hold the speed uniform at the main governor. With the high heads and balanced deflecting nozzles usual in Pelton wheel practice, this form of governor is very sensitive and does not hunt noticeably, owing to the small inertia of the moving parts. It gives good regulation under all conditions except extreme variations of load, where the wheel is loaded beyond the power of the jet to enforce prompt recovery of speed, and is singularly well suited to the conditions under which Pelton wheels are generally used.

The greatest difficulty in hydraulic governing is that of hydraulic inertia. Water moves sluggishly through long and level pipes, and its velocity does not change promptly enough for good governing unless the waterways are planned with that in view. If a wheel is at the end of a long and gently sloping penstock it takes a certain definite amount of time to get that water column under way or checked in response to the movement of the gates. And the longer this time constant of the water column the more difficult it is to get accurate governing, however good the governing mechanism may be. For by the time the water gets fairly into action the load conditions may have changed and the governor may be again actively at work trying to readjust the speed.


In order to get accurate governing it is absolutely necessary to keep the time constant of the water ways as small as possible. To accomplish this the regulating gate should obviously be right at the wheel and the penstock should be as short and as nearly vertical as possible. The most favorable condition for governing is when the wheel is practically in an open flume. If steel penstocks are used they should pitch as sharply down upon the wheels as conditions permit, something after the manner of Fig. 192. If long head pipes must be used governing will become difficult, although much help can be obtained from an open vertical standpipe connected with the penstock close to the wheel. The contents of this pipe serve as a pressure column if the gate is suddenly opened and as a relief valve if the gate suddenly closes, averting the sometimes serious pressure due to the violently checked stream. Plate X shows such a standpipe in action just after a heavy electric load had been thrown off. The water normally stands very near the top of the pipe, which begins to overflow with a slight increase of the hydraulic pressure.

Under high heads such a standpipe is of course impracticable, and although some forms of relief valve are of use, the problem of governing is not easy until one comes to the Pelton wheel with its deflecting nozzle.

Not all water wheels are governed with equal ease. If the gates are properly balanced a comparatively small amount of power will manage them promptly and the wheel is governed without trouble. But there are some wheels on the market with gates under so much unbalanced pressure that proper governing is difficult or impossible. There is no excuse for the existence of such wheels, for they do not have compensating advantages, and they should be shunned. All the typical wheels which have been described in this chapter govern easily, however, as do many others. It is worth while to remember that good governing is absolutely indispensable for good service, and although one finds cases in which the load is so steady that the wheels can almost go without governing, such are rare exceptions to the general rule.



PLATE X.

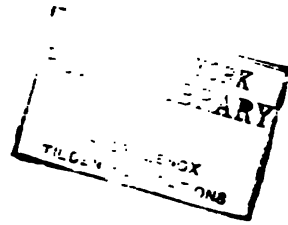

...

CHAPTER X.

HYDRAULIC DEVELOPMENT.

So much electrical transmission work depends on the utilization of water powers that it is worth while briefly to consider the subject of developing natural falls for such use. The subject is a large one, quite enough to fill a volume by itself, and the most that can be done here is to point out the salient facts and put the reader in possession of such information as will enable him to avoid serious blunders and to take up the subject intelligently.

Natural water powers of course vary enormously in their characteristics. In our own country, where water power is very widely distributed, we find three general classes of powers, often running into each other but still sufficiently distinct to cause the methods of developing them to be quite well defined.

By far the best known class of powers are those derived from the swift rivers that are found in New England and other regions in which the general level of the country changes rather rapidly. They flow through a country of rocky and hilly character, and large or small, are still swift, powerful streams, with frequent rapids and now and then a cascade. Such rivers are generally fed to no small extent by springs and lakes far up toward the mountains, and catch in addition the aggregated drainage of the irregular hill country through which they flow. Types of this class are the Merrimac and the Androscoggin among the New England rivers, the upper Hudson, and many others. Another and quite different class of powers are those derived from the slow streams that flow through a flat or rolling alluvial country—the Mississippi valley and the lowlands of the Southern Atlantic States. Although possessed of many tributaries that spring from among the mountains, the great basins which they drain form the main reliance of rivers of this kind—immense areas of fertile country the aggregated rainfall of which supports the streams.

Finally, there are many fine water powers that come from mountain streams, fed from little mountain springs, from the melting of the winter snows and the drainage of heights which the snow never deserts, and from the rain gathered by mountain gorges.

These mountain rivers often furnish magnificent powers, easy and cheap to develop, but very variable. In summer the stream may dwindle to a mere brook, while in spring, from the combined effect of rains and melting snow, it will suddenly increase even many thousand fold, becoming a tremendous torrent that no works built by man can withstand. The available heads are often prodigious, from a few hundred to more than a thousand feet, and the volume of water may seem at first sight absurdly small, but when, as in the Fresno (Cal.) plant to be described later, each cubic foot flowing per second means 140 mechanical HP delivered by the wheels, large volume is needless.

Upland rivers like those common in New England seldom give opportunity for securing high heads. Most of the powers developed show available falls ranging from 20 to 40 feet. Unless the stream has considerable volume, such low heads do not yield power enough to serve anything but trivial purposes—only two or three HP per cubic foot per second. Upland rivers, however, furnish the great bulk of the water power now utilized, for they furnish fairly steady and cheap power under favorable conditions. Although subject to considerable, sometimes formidable, freshets when the snow is melting or during heavy rains, they are generally controllable without serious difficulty.

Lowland streams seldom offer anything better than very low heads, rarely more than 10 to 15 feet, and consequently demand an immense flow to produce any considerable power. They are, however, as a class rather reliable. The size and character of the drainage basin makes extremely low or extremely high water rare, and only to be caused by very great extremes in the rainfall. Such streams furnish a vast number of very useful powers of moderate size, forming a large aggregate but seldom giving opportunity for any striking feats of hydraulic engineering, at least in our own country, where fuel is generally cheap.

In taking up any hydraulic work with reference to electrical power transmission, or any other purpose, in fact, the first necessary step is to make a sort of *reconnaissance*, to ascertain the general topography of the region, the available head, and the probable flow. The first two points are generally easy to determine from existing surveys or by a brief series of levels, the last named requires a combination of educated judgment and careful engineering. The facts are not really very difficult to get at, but guesswork is emphatically out of order and hearsay evidence even more worthless than usual. The author has seen more than one mighty torrent dwindle into a trout brook when looked at through untinted spectacles.

The only way to find out how much flow is available is to measure it carefully, if it has not already been measured in a thorough and trustworthy manner—not once or twice or a dozen times, but weekly or, better, daily for an entire season at least; the more thoroughly the better. A knowledge of the absolute flow at one particular time is interesting, but of little value compared with a knowledge of the variations of flow from month to month, or year to year.

Such a series of measurements tells two very important things—first, the minimum flow, which represents the maximum power available continuously without artificial storage of water; and second, the aggregate flow during any specified period, which shows the possibilities of eking out the water supply by storage.

The methods of measurement are comparatively simple. For small streams the easiest way is to construct a weir across the stream and measure the flow over a notch of known dimensions in this weir. Such a temporary dam should be tight and firmly set, and high enough to back up the water into a quiet pool free from noticeable flow except close to the edge of the weir. There should be sufficient fall below the bottom of the notch in the weir to give a clear and free fall for the issuing water—say two or three times the depth of the flow over the weir itself.

Fig. 203 shows clearly the general arrangement of a measuring weir. Here *A* shows the end supports of the weir, here composed of a single plank, while *B* is the lower edge of the notch through which the water flows. This edge *B*, as well as

the sides of the notch, should be chamfered away to a rather sharp edge on the upstream side, which must be vertical. Back some feet from the weir so as to be in still water should be set firmly a post *E*, the top of which is on exactly the same level as the bottom of the weir notch *B*. *D* shows this level, while the line *C* shows the level of the still water. The quantities to be exactly measured are the length of the notch *B* and the height from the level of the edge of *B* to the normal



FIG. 203.

level surface of the water in the pool. This can be done generally with sufficient accuracy by holding or fixing a scale on the top of the post *E*. If we call the breadth of the notch *b*, and this height *h*, both measured in feet, the flow in cubic feet per minute is

$$Q = 40 \epsilon b h \sqrt{2 g h}$$

Here *g* is 32.2 and ϵ is the "coefficient of contraction," which defines the ratio of the actual minimum area of the flowing jet to the nominal area *b h*.

This coefficient varies slightly with the width of the notch as compared with the whole width of the weir dam. Calling this *w*, the value of ϵ is approximately

$$\epsilon = 0.57 + 10 \frac{b}{w}.$$

This gives $c = .62$ for a notch half the width of the weir and $c = .67$ for the full width of the weir. For notches below one-quarter the width of the weir the values of c become somewhat uncertain, and as a rule b should be over half of w . Further, the notch should not be so wide as to reduce the water flowing over it to a very thin sheet. It is best to arrange the notch so that the depth of water h may be anywhere a tenth to a half of b . For purposes of approximation weir tables are sometimes convenient. These give usually the flow in cubic feet per minute corresponding to each inch in width b , for various values of h . Such a table, condensed from one used by one of the prominent turbine makers, is given below. Where quite exact measurement is required the constant c should be determined from the actual dimensions and a working table deduced from it.

TABLE FOR WEIRS.

INCHES AND FRACTIONS DEPTH ON WEIR.	0	$\frac{1}{4}$	$\frac{1}{2}$	$\frac{3}{4}$
1.....	0.40	0.56	0.74	0.97
2.....	1.14	1.36	1.59	1.84
3.....	2.09	2.36	2.64	2.93
4.....	3.22	3.53	3.85	4.17
5.....	4.51	4.85	5.25	5.56
6.....	5.92	6.30	6.68	7.07
7.....	7.46	7.87	8.28	8.70
8.....	9.12	9.55	9.99	10.43
9.....	10.88	11.34	11.80	12.27
10.....	12.75	13.23	13.72	14.21
11.....	14.71	15.21	15.72	16.24
12.....	16.76	17.28	17.82	18.35
13.....	18.89	19.44	20.00	20.56
14.....	21.12	21.68	22.26	22.83
15.....	23.42	24.01	24.60	25.19
16.....	25.80	26.41	27.02	27.63
17.....	28.26	28.88	29.51	30.14
18.....	30.78	31.43	32.07	32.73

Cubic feet per minute per inch of width.

West of the Rocky Mountains a special system of measuring water by "miner's inches" has come into very extensive use. It originated in the artificial distribution of water for mining and irrigating purposes, and has since extended to a conventional measurement for streams. The miner's inch is a unit

Flow of water is regulated somewhat from State to State, its measurement being regulated by statute in various States. It is, however, a common custom for a certain square under a specified head, generally 2 inches, to be the method of measurement known as a miner's inch. The water is contained in a measuring box, the aperture of which is controlled by a slide. The box is 24 inches long, 24 inches wide, and the aperture is 2 inches

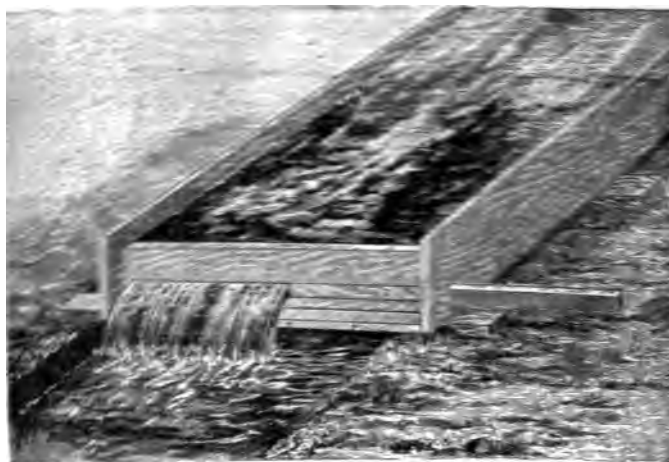


FIG. 264.

wide, its bottom is 2 inches above the bottom of the box, and its centre 6 inches below the level of the water. Each inch of length of the aperture then represents 2 miner's inches. Under these conditions the flow is 1.55 cubic feet per minute for each miner's inch. Under a $1\frac{1}{2}$ inch effective head, which is extensively used in Southern California and the adjacent regions, the miner's inch is about 1.2 cubic feet (9 gallons) per minute.

For streams too large to be readily measured by the means already described, a method of approximation is applied as follows:

Select a place where the bed of the stream is fairly regular and take a set of soundings at equal intervals, *a*, *b*, *c*, *d*, Fig. 265, perpendicular to the direction of flow, using a staff rather than a sounding line, as it can more easily be kept perpendicu-

lar. Ascertain thus the area of flow. Then establish two lines across the stream say 100 feet apart and nearly equidistant from the line of soundings. Then throw floats into the stream near the centre and time their passage across the two reference lines. This establishes the velocity of the flow across the measured cross section. As the water at the bottom and sides of the channel is somewhat retarded, the average velocity is generally assumed to be 80 per cent. of that measured as above in the middle of the stream.

The more complete the data on variations of flow, the better. The most important point to be fixed is the flow at

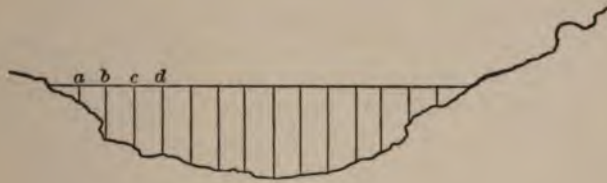


FIG. 205.

extreme low water, both in ordinary seasons and seasons of unusual drought. Except on very well-known streams previous data on this point are generally not available. The flow should therefore be measured carefully through the usual period of low water during at least one season. From the minimum flow thus obtained there are various ways of judging the minimum flow in a very dry year. Sometimes certain riparian marks are known to have been uncovered in some particular year, and the relative flow can be computed from the difference thus established. Again, the records of a series of years may be obtained from a neighboring stream of similar character, and the ratio between ordinary and extraordinary minima assumed to be the same for both. This assumption must be made cautiously, for neighboring streams often are fed from sources of very different stability.

Failing in these more direct methods, recourse may be taken to rainfall observations. For this purpose the rainfall in the basin of the stream should be measured during the continuance of the observations on flow. By noting the effect of

known rainfall on the flow of the stream, one can make a fairly close estimate of the flow in a very dry year in which the rainfall is known by months, or for an assumed minimum rainfall. In a similar way can be ascertained the probable high water mark, record of which is often left by *debris* on the banks.

In a fairly well-known country the conditions of flow can be approximated by reference to rainfall alone. The area drained by the stream down to the point of utilization can be closely estimated. If rainfall observations in this district are available, or can be closely estimated from the results at neighboring stations, one may proceed as follows: The total water falling into the basin is 2,323,200 cubic feet per square mile for each inch of rainfall. Only a portion of this finds its way into the streams, most of it being taken up by seepage, evaporation, and so forth. The proportion reaching the streams varies greatly, but is usually from .3 to .6 of the whole. If this proportion is known from observations on closely similar basins and streams the total yearly flow can be approximated, and if the distribution of flow on a similar stream is known, one can make a tolerable estimate of the amount and conditions of flow in the stream under investigation.

This process is far from exact, since the proportion of the total water which is found in the streams varies greatly from place to place, and with the total rainfall in any given week or day. The sources of loss do not increase with the total precipitation, and the only really safe guide is regular observation of the rainfall and the flow during the same period.

A good idea of the uncertainties of hydraulic power can be gathered from the recorded facts as regards the Merrimac, one of the most completely and carefully utilized American streams, which has been under close observation for half a century. The area of its watershed above Lowell, Mass., is 4,093 square miles and the mean annual rainfall of the region is about 42 inches. The observations of many years indicate that the maximum, minimum, and mean flows are on approximately the following basis:

(Spring),	.	.	Maximum, 90 cu. ft. per min. per sq. m.
(June),	.	.	Mean, 55 " " " "
(Aug., Sept.),	.	.	Minimum, 30 " " " "

The annual rainfall, if it all could be reckoned as in the stream and uniformly distributed, would amount to very nearly 180 cubic feet per minute per square mile of watershed. In fact, this flow is reached or passed only on occasional days of heavy freshets during the spring rains, when the snow is melting rapidly. The normal maximum flow is just 50 per cent. of the conventional average, while the real average falls to about 30 per cent. and the minimum to less than 17 per cent. Of late years this minimum has sometimes been still smaller, barely 15 per cent. instead of 17, a state of things attributed to the destruction of the forests on the upper watershed. In a heavily wooded country the rainfall is long retained and finds its way to the streams slowly and gradually. When the forests are cut off the water runs quickly to the streams, and the result is heavy seasons of freshets when the snow is melting—all the more rapidly because of lack of forest shade—and extreme low water during the dry months. In a bare country the variations of flow are often prodigious, and without storage one can safely reckon only upon the minimum flow of the driest year. As the denudation of forests goes on hydraulic development will steadily grow more expensive.

In some streams, generally in hot climates, no small part of the flow is during the dry season in the strata underlying the apparent bed of the stream, and can be in part, at least, captured by carrying down the foundations of the permanent works.

When the flow has been ascertained the available HP is easily computed. The practicable head can be easily determined by a little leveling. If H is this head in feet and Q the flow in cubic feet per minute then the theoretical HP of the stream is

$$HP = \frac{62.4 H Q}{33,000}$$

The mechanical HP obtained by utilizing the stream in water wheels is this total amount multiplied by the efficiency of the wheels, usually between .75 and .85. At 80 per cent. efficiency the preceding formula reduces to

$$HP = \frac{H Q}{650},$$

which gives the available mechanical horsepower directly. In many streams the available head is limited by the permissible overflow of the banks as determined by the rights of other owners, or by danger of backing up the stream to the detriment of powers higher up. These conditions must be determined by a careful survey.

Before taking up seriously the development of a water power it is advisable to enter into an examination of the legal status of the matter, which is sometimes involved. The general principle of property in streams is that the water belongs in common to the riparian owners, and cannot be employed by one to the detriment of another. But each State has a set of statutes of its own governing the use of water for power and other purposes, often of a very complicated character, involved with special charters to storage and irrigation companies and other ancient rights, so that the real rights of the purchaser of a water privilege are often limited in curious and troublesome ways, especially when the stream has been long utilized elsewhere.

Generally the riparian owners have full rights to the natural flow of the stream, which is often by no means easy to determine. The laws of various States regarding the matter of flowage vary widely, and altogether the intending purchaser will find it desirable to investigate carefully not only the title to the property, but the limitations of the rights which he would acquire.

In streams of small volume carried through pipe lines the effective head is diminished by friction in the pipes. This loss has already been discussed in Chapter II.

It often happens that there is so great a difference between the normal flow of the stream during most of the year and its minimum flow during a few weeks as to make it highly desirable to store water by impounding it, so as to help out the sometimes scanty natural supply. With mountain streams under high head this is frequently quite easy. Even when it is impracticable to impound enough to help out during the whole low water period it is sometimes very useful to impound enough to last for a day or two in case of necessary repairs.

A certain reservoir capacity is quite necessary so as to permit the storage of water at times of light load for utilization

at times of heavy load. This process is carried out on a vast scale on the New England rivers, where the water, used during the day in textile manufacturing, is stored in the ponds at night as far as possible. While electric transmission plants do not offer the same facilities for storage, since they generally run day and night, the application of the same process would often greatly increase their working capacity and greatly lower the fixed charges per hydraulic HP. Such storage is especially valuable in cases where the water supply is limited, as it often is in plants working under high heads. Every cubic foot of water is then valuable and should be saved whenever possible. Regulation by deflecting nozzles, which is very generally employed in this class of plants, is particularly objectionable on the score of economy, and ought to be replaced by some more efficient method.

As an example of what can be done with storage under high heads, it happens that at 650 feet effective head one mechanical HP requires almost exactly one cubic foot of water per minute at 80 per cent. wheel efficiency. For a 500 HP plant, then, the water required is 30,000 cubic feet per hour.

One can store 43,560 cubic feet per acre per foot of depth, so that a single acre 10 feet deep would store water enough to operate the plant at full load for $14\frac{1}{2}$ hours, or under ordinary conditions of load for a full day. If the flow in the stream were only 15,000 cubic feet per hour in time of drought, the acre would yield two days supply and 15 acres would carry the plant for a month. Such storage is common enough in irrigation work, and is capable of enormously increasing the working capacity of a transmission plant, even at a head much less than that mentioned.

With only 100 feet available head it is comparatively easy to impound water enough to assist very materially in tiding over times of heavy load and in increasing the available capacity. A survey with storage capacity in view should be made whenever storage is possible, and the approximate cost of storage determined. A little calculation will show in how far storage will pay.

In general the utilization of a water power consists in leading the whole or a part of a stream into an artificial channel, conducting it in this channel to a convenient point of

utilization, and then dropping it back through the water wheels into the channel again, usually via a tail race of greater or less length.

Except where there is a very rapid natural fall a substantial dam is necessary, which backs up the water into a pond, usually gaining thus a certain amount of head, whence the water is led in an open canal to some favorable spot from which it can be dropped back into the channel at a lower level. The canal may vary in length from a few rods to several miles,



FIG. 206.

according to the topography of the country. The tail race leading the water from the wheels back to the stream is short, except in rare instances like the great Niagara plant. In this case, shown somewhat roughly in Fig. 206, the usual construction was reversed. To obtain ample clear space for manufacturing sites and the like, the water was utilized by constructing above the cataract an artificial fall at the bottom of which the wheels were placed. From the bottom of this huge shaft, cut 178 feet deep into the solid rock, the water is taken back into the river through a tunnel 7,000 feet long, which constitutes the tail race. The water is taken directly from the river into the canal without even a deflecting dam.

In the case of mountain streams having a very rapid fall the dam is often quite insignificant, serving merely to back up the water into a pool from which it may be conveniently drawn, or even to deflect a portion of the water for the same purpose. In such cases the water is usually carried in an iron or steel pipe, following any convenient grade to the bottom of the fall chosen, at which point its full pressure becomes available.

In ordinary practice at moderate heads the volume of water has to be so considerable for any large power as to make a long canal very expensive. Further, it usually happens that the topography of the country is such as to make it very difficult to gain much head by extending the canal. Thus the points chosen for power development must be those where there is a rather rapid descent for a short distance—falls or considerable rapids. Then a dam of moderate height gives a fair head by simply carrying the canal to a point where the water can be readily returned to the stream below the natural fall. The more considerable this fall the less need for an elaborate dam, which may become simply a means of regulating the flow of water without noticeably raising the head.

A fine example of this sort of practice is shown in Fig. 207, which shows a plan of the hydraulic development of the falls of the Willamette River at Oregon City, Ore. The river at this point gives an estimated available HP of 50,000 under 40

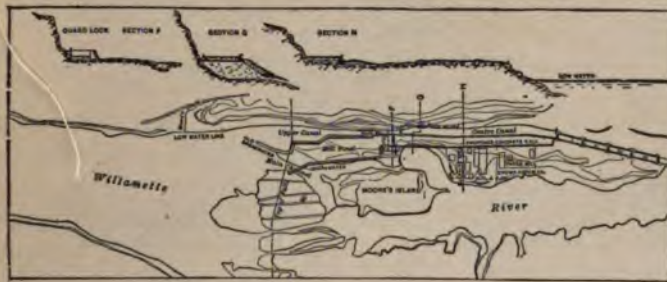


FIG 207.

feet head. The stream plunges downward over a precipitous slope of rough basalt, and the low dam which follows the somewhat irregular shape of the natural fall is hardly more than an artificial crest to guide the water toward the canal on the west bank of the stream. This canal has recently been widened, and both constructions are shown in the figure. The fine three-phase transmission plant of the Portland General Electric Company now faces on the new canal wall near the section G. At the end of the canal downstream a series of locks lead down to the lower river, making the falls passable for river craft. Only a small part of the available power is as yet used.

Almost every river presents peculiarities of its own to the

hydraulic engineer. Generally the dam is a far more prominent part of the work than at Oregon City, and adds very materially to the head. Choosing a proper site for the dam, and erecting a suitable structure, requires the best skill of the hydraulic engineer. Bearing in mind that the function of a dam is to merely retain and back up the flowing water, it is evident that it may be composed of a vast variety of materials put together in all sorts of ways. Stone, logs, steel, all come into play combined with each other and with earth.

The character of the river bed which furnishes the foundation is a very important factor in determining the material and shape of the dam used. When the bed is of rock or that hard packed rubble that is almost as solid, a well-built stone dam is the best, as it is also the costliest construction. For such work the way is cleared by a coffer dam and the masonry is laid, if possible, directly upon the bedrock. When the bottom

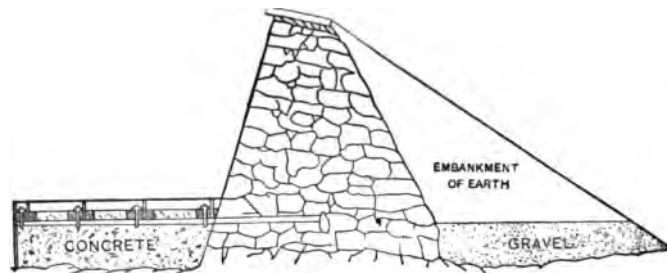


FIG. 208.

is hard pan a deep foundation for the masonry is almost as good as the ledge itself, while on a gravel bottom sheet piling is sometimes driven and the stone work built around it. The ground plan is very frequently convex upstream, giving the effect of an arch in resisting the pressure of the water. Fig. 208 shows a section of a typical masonry dam, built over sheet piling in heavy gravel. This particular dam is 22' 6" high and nearly 300 yards long. The coping is of solid granite slabs a foot thick. Below the dam lies the usual apron of timber and concrete, with timber sills anchored into the dam itself. The flooring of the apron, of 12" \times 12" timbers laid side by side, is bolted to the foundation timbers laid in the concrete. The purpose of this apron, as of such structures in

general, is to prevent undermining of the dam by the eddies below the fall.

A still finer example of the masonry dam is shown in Fig. 209—the great dam of the Folsom Water Power Company across the American River at Folsom, Cal. It is built of hewn granite quarried on the spot, and is founded on the same ledge from which the material was taken. The abutments likewise are built into the same ledge. On the crest of the

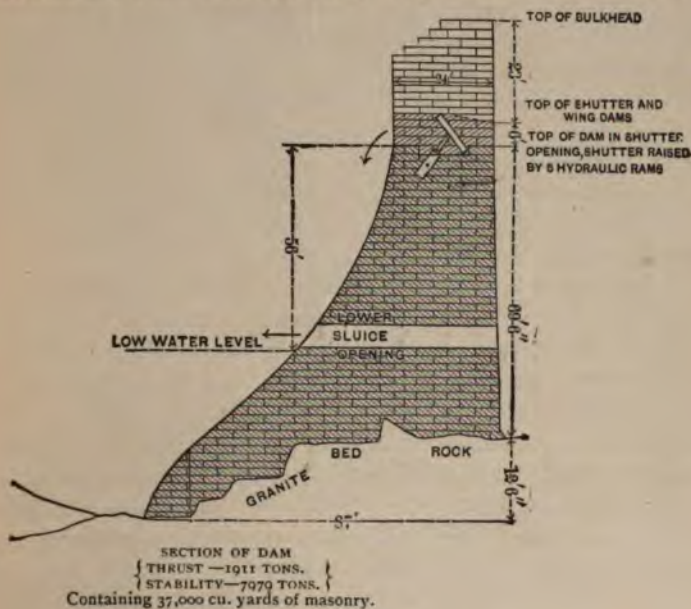


FIG. 209.

dam proper is a huge shutter or flash board, 185 feet long, capable of being swung upward into place by hydraulic power. When thus raised it gives an added storage capacity of over 13,000,000 cubic yards of water in the basin above. This dam furnishes power for the great Folsom-Sacramento transmission, and it ranks as one of the finest examples of hydraulic engineering in existence. Including the abutments it is 470 feet long, and the crest of the abutments towers nearly 100 feet above the foundation stones. Its magnificent solidity is not extravagance, for the American River carries during the rainy season an enormous volume of water, filling the channel far

over the crest of the dam when at its maximum flow. There are few streams where greater strains would be met.

While these masonry dams are splendidly strong and enduring, they are also very expensive, and hence unless actually demanded for some great permanent work are less used than cheaper forms of construction. In many situations these are not only cheaper in first cost, but even including depreciation. There are many forms of timber dam which have given good service for many years at comparatively small expense. Of such dams, timber cribs ballasted with stone are probably under average conditions the best substitute for solid masonry. These crib dams when well built of good materials are very durable and need few and infrequent repairs. Some such dams, replaced after twenty-five or thirty years in the course of changing the general hydraulic conditions, have shown timbers as solid as the day they were put down, and capable of many years' further service.

A fine example of such construction is the dam of the Concord (N. H.) Land & Water Power Company at Sewall's Falls on the Merrimac. A section of this structure is shown in Fig. 210. The foundation is in the main gravel, in which the dam is made secure by sheet piling and stone ballast. The structure is essentially a very solid timber crib with a very long apron. The total head is 23 feet, of which more than half is due to the dam, as shown in the levels. The apron is armored with five-sixteenths inch steel plate, the better to withstand the bombardment of stray logs to which it is sometimes subjected. The abutments are of granite. It has proved very serviceable, having successfully withstood several tremendous freshets with no damage save some undermining of one of the abutments, which has been repaired with crib work. Considering the character of the river bed, this dam is probably as reliable as one of masonry, and its cost was little over half that of a masonry dam.

For small streams these ballasted timber dams are admirable, and little more is needed in most cases.

The canals leading the water to the wheels are of construction as varied as the dams, depending largely on the nature of the ground. Sometimes they are merely earthwork, oftener they are lined with timber, concrete, or masonry. Canal con-

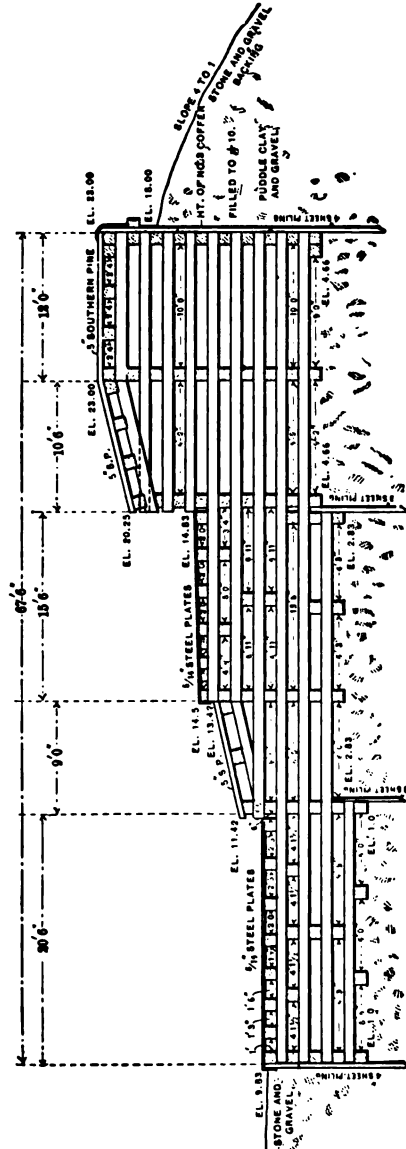


FIG. 210.

struction is a matter to be decided on its merits by the hydraulic engineer, and very little general advice can be given. For low heads wooden pipes made of staves like a barrel

and hooped with iron every 3 or 4 feet are sometimes used. In many situations this construction is cheaper than steel pipe and answers admirably. Such wooden pipes are considerably employed in the West, the material being generally redwood, and have proved remarkably durable, some having been in use for more than twenty years. Open timber flumes are also widely used.

For very high heads, canals and flumes are almost univer-



FIG. 211.

sally replaced by iron or steel riveted pipe taken by the nearest route to the wheels below. This practice has been general on the Pacific coast and has given admirable results. The pipes are asphalted inside and out to prevent corrosion, and some pipe lines have been in service for a quarter of a century without marked deterioration. Large pipes and those for very heavy pressures are usually made of mild steel. The pipes are customarily made in sections for shipment, from 20 to 30 feet long, and the slip joints are riveted or packed on the ground. For transportation over very rough country and for very large pipes, the sections may be no more than 2 or

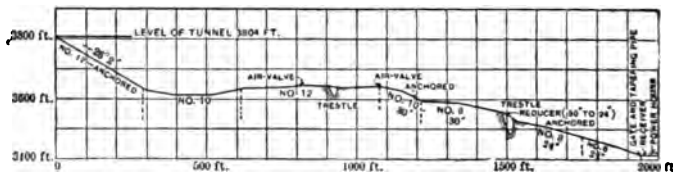


FIG. 212.

3 feet long. The joints are then asphalted on the ground. Fig. 211 shows several of these short sections joined together, exhibiting the nature of the riveting and the terminal slip joint.

In running such a pipe line it is usually taken in as straight a course as possible, and is laid over, on, or under the ground as occasion requires, usually on the surface, conforming to its general contour. In long lines the upper end is usually larger and

thinner than the lower, which has to withstand the heavy pressure. Fig. 212, which is a profile to scale of the pipe line of the noted San Antonio Cañon plant in southern California, gives an excellent idea of good modern practice in this sort of work. There is here a total fall of about 400 feet in a distance of 2,000 feet. The main pipe is 30" in diameter, and the steel is of the gauges indicated on the various sections. At the crests of two undulations, air valves are placed to ensure a

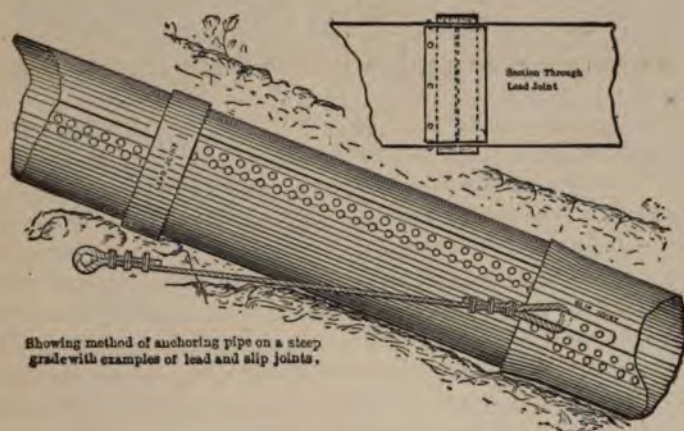


FIG. 213.

solid and continuous column of water in the pipe. The last 540 feet of pipe is reduced to 24" and the gauge of steel is somewhat heavier. The total length of the pipe line is 2,370 feet. To protect the pipe against great changes of temperature it was loosely covered with earth, rock, and brush whenever possible. At two sharp declivities the pipe was anchored to the rock.

The general method of anchoring on a steep incline is shown in Fig. 213. In this case the slip-joint is simply calked, and where consecutive sections are at an angle, a short sleeve is fitted over the joint and lead is run in as shown in the cut. Often a packed slip joint is used very freely, thereby gaining in flexibility, and riveted joints may be only used occasionally. The line is generally started from the lower end and the joints or the whole interiors of the sections asphalted as they are laid.

The following table gives the properties of steel hydraulic pipe of the sizes in common use, and double riveted:

Diameter in inches.....	10	12	14	16	18	20	24	30	36	42
Area in square inches...	78	113	153	201	254	314	452	706	1,017	1,385
Cubic feet per minute at three feet per second...	100	142	200	255	320	400	570	890	1,300	1,760
Weight in pounds per foot.....	19.25	22.75	26	29.5	34	36.5	43.5	54	67	74.5
Safe head in feet.....	900	750	650	560	500	450	375	300	150	135
Change in safe head for each gauge number...	100	90	80	70	60	55	45	35	20	20

The pipe is assumed to be of No. 10 gauge steel, and the changes in safe head are of course approximate only, but hold with sufficient exactness for a variation of four or five gauge numbers. It is better to use a pipe too thick than one too thin, and to use extra heavy pipe at bends. Where the ground permits, the water can often be carried to advantage in a flume or ditch, and then dropped through a comparatively short pipe line. For heads approaching or surpassing 1,000 feet it is probably safer to use lap-welded tube for the lower portion of the run. In every case suspended sand must be kept out of the water, else it will cut the wheels and nozzles like a sand blast. When one remembers that under 400 feet head the spouting velocity of the water is about 160 feet per second, the need of this precaution is evident. A large settling tank is usually provided at the head works, spacious and deep enough to let the pipe draw from the clear surface water. At its lower end the pipe line terminates in a receiver—a heavy cylindrical steel tank of considerably larger diameter than the pipe proper, from which water is distributed to the wheels.

On very high heads a relief valve is attached at or near the receiver to avert danger from a sudden increase in pressure in the pipe, such as might be caused by some sudden obstruction at the gate.

This pipe line method of supply is considerably used for turbines of moderate size on heads as low as 75 to 100 feet, in cases where the natural fall of the stream is rather sudden. It really amounts to a considerable elongation of the iron penstock which is in common use. Whenever there is a sharp

declivity in difficult country, piping is often easier and cheaper than constructing a sinuous flume or canal. In such situations the pipes may be 5 or 6 feet in diameter or even more, and being under very moderate pressure, may be comparatively light and cheap.

In cold climates ice is one of the difficulties most to be dreaded in hydraulic work. In high pressure pipe lines there is little to fear, for fast-running water does not freeze easily and the pipes can generally be readily covered, as in the San Antonio Cañon plant, enough to prevent freezing. Large canals simply freeze over and the interior water is thus protected. But in cold climates there is considerable danger of the so-called anchor-ice. This is, in extremely cold weather, formed on the bed and banks of rapid and shallow streams. The surface does not freeze, but the water is continually on the point of freezing and flows surcharged with fine fragments of ice that pack and freeze into a solid mass with the freezing water rapidly solidifying about it. When in this condition it rapidly clogs the racks that protect the penstocks, and even the wheel passages themselves. In extremely cold climates under similar circumstances the water becomes charged with spicular ice crystals known as *frasil* in Canada, far worse to contend with than ordinary anchor ice.

The best protection against ice is a deep, quiet pond above the dam, in which no anchor ice can form, and which will attach to its own icy covering any fragments that drift down from above. In case of trouble from anchor ice, about the only thing to do is to keep men working at the racks with long rakes, preserving a clear passage for the water. If the wheel passages begin to clog there is no effective remedy.

The most dangerous foe of hydraulic work is flood. The precautions that can be taken are, first, to have the dam and head-works very solid, and second, so to locate them if possible as to have an adequate spillway over which even a very large amount of surplus water can flow without endangering the main works. If a pipe line is used it must be laid above high water mark, else the first freshet will probably carry it away. The power station must likewise be out of reach even of the highest water.

Closely connected with the subject of floods is that of varia-

ble head, which in many streams is a constant source of difficulty. In times of flood the extra height of the water above the dam is generally useless, while the tail water rises and backs up into the wheels, cutting down their power and speed, often very seriously. This matter has already been discussed in Chapter IX., in so far as it is connected with the arrangement of the turbines. At very high heads this trouble vanishes, as no possible variation of the water level can be a considerable fraction of the total head.

The most delicate questions involved in hydraulic development are those connected with variable water supply. Having ascertained as nearly as possible the minimum flow, the minimum natural continuous supply of power is fixed, but it remains to be determined how the water in excess of this shall be utilized, if at all.

Three courses are open for increasing the available merchantable power. First, water can be stored to tide over the times of small natural supply. Second, a plant can be installed to utilize what water is available for most of the year and can be curtailed in its operation during the season of low water. Third, the service can be made continuous by an auxiliary steam plant in the power station. Storage of water can obviously be used in connection with either of the other methods.

Under very high heads storage is generally worth the while if the lay of the land is favorable. This of course means a dam, but not necessarily a very high or costly one. If possible the storage reservoir should be a little off the main flow of the stream so as to escape damage from freshets. Reverting to our previous example of storage, suppose we have 500 HP available easily for nine months of the year, but a strong probability of not over 250 HP for the remaining three months. We have already seen that under these circumstances 15 acres flooded 10 feet deep will keep up the full supply for a month. If say 50 acres can be thus flooded, the all-the-year-round capacity of the plant will be doubled. In the mountainous localities where such heads are to be found, land has usually only a nominal value, and impounding the equivalent of this amount of water is frequently practicable. If it can be done at say a cost of \$75,000, the annual charge per HP stored,

counting interest and sinking fund at 10 per cent., will be \$30, and the investment would generally be a profitable one. If the storage cost \$100,000, the annual charge would be \$40, and this would not infrequently be well worth the while, when power could be sold for a good price.

At lower heads the annual charge per HP stored would be considerably greater for the same total expenditure. Sometimes, however, storage capacity can be much more cheaply gained for both high and low heads, at for instance not more than half the charge just mentioned. The matter is always worth investigating thoroughly when there is doubt about supplying the power market with the natural flow. The points to be looked into are the nature and extent of the low water period, and the cost of developing various amounts of storage capacity. Sometimes the period of extreme low water is much shorter than that assumed, and storage is correspondingly cheaper.

There are some cases in which it is possible to supply customers with power for nine or ten months in the year, falling back on the individual steam plants in the interim. When transmitted power can be cheaply had, it is worth while for the power user who is paying, say \$100 per HP per year for steam power to take electric power at \$50 per HP per year for nine months, and to use steam the other three months. Certain industries, too, are likely to be comparatively inactive in mid-summer, or may find it worth while to force their output during the months when cheap power is obtainable, and shut down or run at reduced capacity when the power is unavailable. This is a matter very dependent on local conditions, and while the demand for such partial power supply is generally limited, there are many cases in which it would be advantageous for all parties concerned. In some mountainous regions, winter is the season of low water owing to freezing, and various industries are suspended which may be profitably supplied with power when the winter unlocks its gates.

Eking out the water supply by an auxiliary steam power station is likewise not of general applicability, but sometimes may prove advantageous. It is most likely to prove useful in localities where a steam power plant would pay by virtue of the economy due to production on a large scale and distribu-

tion to small users. Cheap water power a large part of the year then abundantly justifies adjunct steam power when necessary. The moral effect of continuous power supply is valuable in securing a market. Whether such a supply is profitable depends on the ratio between the cost of water power and the cost of steam power. And it must not be forgotten that steam power for two or three months in the year is relatively much more costly than continuous power.

The general charges are the same, although labor, coal, and miscellaneous supplies decrease nearly as the period of operation. Consequently, since there is this large fixed item, amounting to from 20 to 40 per cent. of the total annual cost, the cost of power in a plant operated only three months will be relatively at least 50 per cent. greater than if it were in constant operation. There must be a large margin in favor of water power to justify this auxiliary use of steam, unless the latter would pay on its own account, as for instance in a plant used largely for lighting, which would be the most profitable kind of electric service were there a sufficiently large market. Moreover a large proportion of lighting automatically relieves the load in midsummer, the most usual time of low water.

The actual economics of such a question can only be determined after a thorough examination of local costs, since the costs of both steam and water power have a wide range.

Steam power on a 12 hour basis at steady full load varies according to the size and kind of plant, cost of fuel, and so forth, from a little under \$20 per HP year to \$125 or more, with an increase of one-third to one-half in case of variable loads. Water power fully developed rents for from \$5 to \$50 or more per HP year, and may cost to develop anywhere from \$20 to \$150 per HP. At the former price it is cheaper than steam under any circumstances, at the latter it is dearer than steam unless the fuel cost is abnormally high.

If the cost of hydraulic development can be kept below \$100 per HP, water power can nearly always drive steam power out of business.

With respect to the prime movers to be employed in a hydraulic development one must be governed largely by circumstances. The choice in general lies between turbines and impulse wheels, the properties of which have been fully dis-

cussed in Chapter IX. Without attempting to draw any hard and fast lines, turbines are preferable up to about 100 feet head, unless very low rotative speed is desirable, or very little power is to be developed. Above that, the impulse wheels grow more and more desirable, and at 200 feet head the whole field is practically their own. It is generally practicable and desirable to use wheels with a horizontal axis. Only in a few instances is it necessary to resort to a vertical axis, as when there is considerable danger of the tail water rising clear up to the wheels or when, as at Niagara, a very deep wheel pit is employed.

The line of operations in developing a water power subsequent to the *reconnaissance* has already been indicated. After the more general considerations have been determined, comes the question of utilization.

It may seem needless to suggest that the first thing necessary is an actually available market, but the author has more than once had imparted to him, under pledge of solemn secrecy, the location of "magnificent" water powers which could be developed for a mere song, located a hundred miles from nowhere—out of effective range even of electrical transmission.

Having a possible market, the next thing is to investigate it thoroughly. The actual amount of steam power must be found, together with its approximate cost in large and in small units. This information ought to be extended to at least an approximate list of every engine used and the nature of its use, whether for constant or variable load, whether in use throughout the year or only at certain seasons. These more minute data are not immediately necessary, but are immensely useful later. If it is proposed to include electric lighting in the scheme an estimate of the probable demand for lights should be carefully made. A fair guess at this can be made from the number of inhabitants in the city or town supplied. Where there is competition only with gas, experience shows that the total number of incandescent lights installed is likely to be, roughly, from one-fourth to one-sixth of the population, occasionally as many as one-third, or as few as one-eighth. In cities of moderate size it is usually found that even with competition from gas the annual sales of electricity for all purposes can with proper exploitation be brought up to from \$1.50 to \$2.00 *per capita*. This amount may be increased by 50 per cent. under favorable conditions.

From the data thus obtained one can estimate the general size of the market, and hence the approximate possible demand for electrical energy. With this in mind further plans for the hydraulic development can be made. It may be that the water power is obviously too small to fill the market, if so, it should be developed completely. If not, much judgment is necessary in determining the desirable extent of the development. Probable growth must be taken into account, but it cannot safely be counted upon. If steam power is very expensive most of the engines can probably be replaced by motors. The replacement of one-half of them is, under average circumstances, a sufficiently good tentative estimate.

With this as a basis approximate estimates of the hydraulic development can be made. This should be done by a competent hydraulic engineer. If the development is easy it is well to make estimates for a liberal surplus power also. At this stage it is best to have the hydraulic and the electrical engineer work hand in hand to estimate on the delivery of the assumed amount of power. From these estimates the general outlook for returns can be reckoned.

Before actually beginning work it is advisable to make a pretty thorough preliminary canvass of the market to see what can be done immediately in the sale of power and light. With the certain and the probable consumption ascertained, the hydraulic and electrical engineers can work their plans into final shape and prepare final estimates.

All this preliminary work may at first sight seem rather unnecessarily exhaustive, but mistakes on paper are corrected more easily than any others, and the investigation is likely to save many times its cost in the final result.

Whatever is done should be done thoroughly. Poor work seldom pays anywhere, least of all in a permanent installation, and it should be conscientiously avoided.

Above all, continuity of service has a commercial value that cannot be estimated from price lists. If it anywhere pays to be extravagant, it is in taking extreme precautions against breakdowns and in facilities for quick and easy repairs in case of unavoidable accident. This applies alike to the hydraulic and the electrical work. If the first severe freshet demoralizes the hydraulic arrangements, or the plant runs short of

water at the first severe drought, a damage is done that it takes long to repair in the public mind. On the other hand careful, thorough work, coupled with intelligent foresight, insures that complete reliability that is the mint mark of honest and substantial enterprises.

CHAPTER V

THE TRANSITION OF A POWER STATION

When the engineer is concerned in planning a power station he has to consider various factors which may be the motive power, the nature of the resistance with respect to the supply of coal and water. In many cases the position of the station will be determined by the connection with the hydraulic development. The place of the working fall is the natural site, but in some cases, as in mountain regions, it may be quite unavailable. In such cases, if there is no available space, unsuitable ground may be cleared by the possibility, or more often danger of flood. In some cases, where a pipe line is used, one has a considerable distance to travel in determining the site, since the pipe line is extended and laid around to convenient locations and is not the straight line of more than \$3 or \$4 per foot. The use of a pipe line, if the stream bed may enable one to

...the since the
... .. change of level

[illegible]

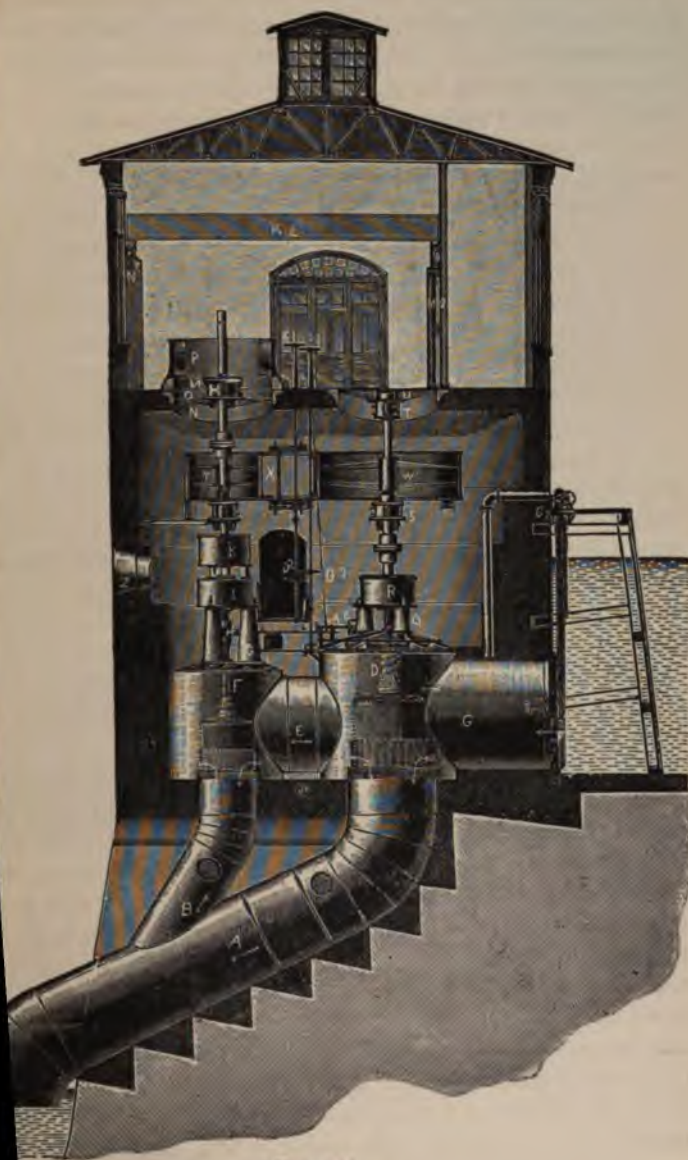


FIG. 214.

are supplied by the penstocks *C* and *E*. *F* contains the regular service turbine, a 42" Victor wheel coupled direct to the generator at *P*. On the pedestals *G* above this wheel is a ring thrust bearing at *I* and an hydraulic thrust bearing *K*. Above this is a pulley *Y*, 6 feet in diameter, and still above this the upper bearing support, the bearings *N* and *O*, the coupling *M* and pedestals *Q*.

The wheel case *D* contains a 60" wheel with bearings, pulley, and so forth, *R*, *S*, *W*, *T*, *U*. The function of this wheel and its attachments is to supply power at the seasons of very high water, sometimes several years apart. When the tail water backs up so far that the smaller wheel is no longer equal to the work the generator shaft is arranged to be uncoupled just above the wheel. Then the belt tightener *X* can be brought into use, the large wheel started, and the generator driven by the horizontal belt. The belt tightener is operated by hand wheels at *E*₁ and *D*₁, while similar hand wheels at *C*₁ and *B*₁ enable the wheels to be regulated by hand when desirable. The governing is normally accomplished by the automatic regulator *A*₁. *F*₁ is one of the main race gates, lifted by the mechanism at *G*₁. The wheelroom is lighted by water-tight heavy glass bulls eyes at *Z*, each three feet in diameter. The dynamo room is lighted by side windows and monitor roof and is fitted with a twelve ton travelling crane *K*₁, carried on the supporting column *M*₁ and *N*₁. The penstocks pass through the heavy cement floor of the wheelroom, *J*₁, with water-tight joints. The main point of interest in this station for our present purpose is not the somewhat complicated and cumbersome hydraulic plant but the structure of the wheelroom, which forms a massive permanent coffer dam securing the motive power against all direct interference by even the fiercest floods. Such a construction is somewhat inconvenient, but in some instances is almost absolutely necessary. The design of this plant is unique, in some respects uniquely bad from the standpoint of general practice, but most of its peculiarities are the result of its situation and of unusual conditions of water supply which forced the use of uncommon remedies. Generally such extreme measures need not be taken, although since it is usually desirable to have the dynamos on a level with the wheels, and coupled to them, a water-tight wall between the

dynamo room and the wheelroom is rather common. Quite as often, however, full reliance is placed on the strength and tightness of the penstocks and wheel cases, and wheels and dynamos are placed in the same room. A plant so arranged is cheap and simple, and where there is no unusual danger

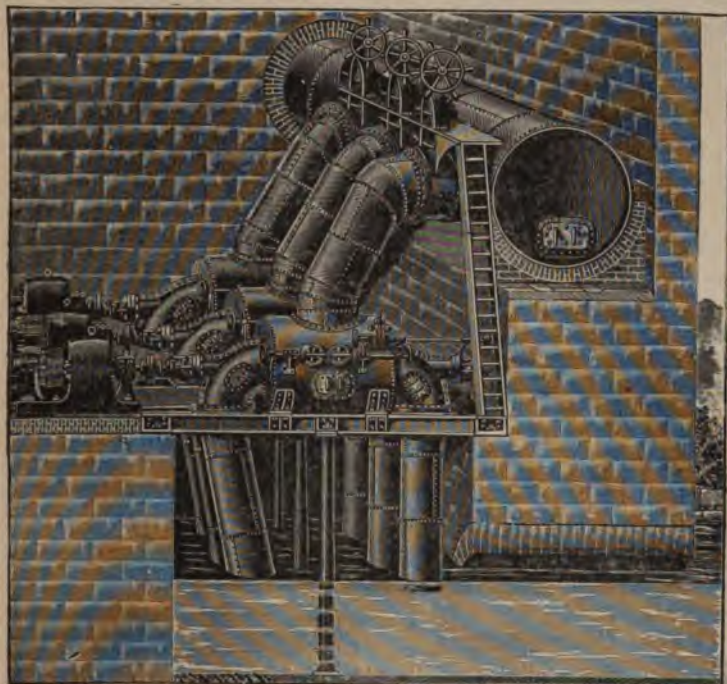


FIG. 215.

of flood is sufficiently secure. Fig. 215 shows a good typical plant of this sort, consisting of three double horizontal turbines under 50 feet head, each directly coupled to its generator. Each pair of wheels gives 560 HP at about 430 revolutions per minute. This represents construction as straightforward and simple as that of Fig. 214 was difficult and intricate. It is specially interesting for the arrangement of several wheels to discharge into a common tailrace, instead of into several costly arched tailraces extending under the dynamo room, a construction sometimes unnecessarily employed.

The hydraulic conditions may drive the engineer to all sorts

of expedients, but the main points are security against being drowned out, and good foundations. If the dynamos and wheels can be given direct foundations of masonry and concrete, such as the former have in Fig. 215 and the latter in Fig. 214, so much the better. If moving machinery must be carried on beams, support these beams as in Fig. 215, directly under the load, by iron pillars or masonry piers. For direct coupling it is preferable to have foundations entirely secure from vibration.

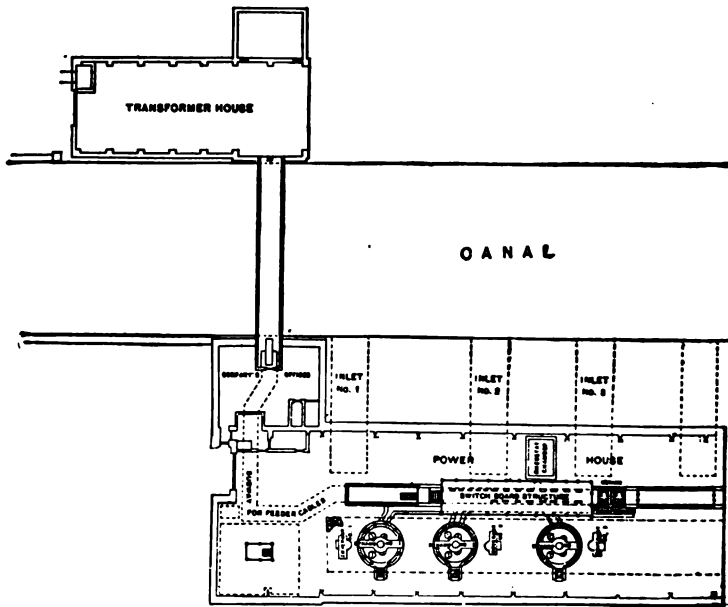


FIG. 216.

If such cannot be had one may resort successfully to a flexible coupling, but more often rope or belt driving is advisable.

The proper site having been selected the next consideration is the form of the structure itself. As a rule, whatever the nature of the power units, they are most conveniently put, in a water power plant, side by side in a single row with their shafts parallel. This placing enables the hydraulic plant to be simply and conveniently arranged, and enables the operator to take in the whole plant at a glance and watch all the apparatus simultaneously. Fig. 216 shows the original ground plan of the great Niagara station, well exemplifying this arrangement.

In stations employing horizontal turbines such a distribution of units has even greater advantage in avoiding long and crooked penstocks. Fig. 215 forcibly suggests the difficulty of setting the generators otherwise than in a single row.

In general the building erected for a power station should be light, dry, fireproof, and well ventilated. Dynamos usually run hot enough, without boxing them up in a close room. There should be plenty of space back of the row of dynamos so that if machinery has to be moved there will be ample room. On the other hand the row of dynamos should be fairly compact, as a needless amount of scattering of the machines makes them hard to look after. In very many cases one story in height is quite sufficient, and in all cases it is preferable to more, so far as working apparatus is concerned. Sometimes a second story can be well utilized for store rooms, transformer room, and quarters for the operating force, but as a rule a single story allows more complete accessibility—one of the most important features in station design. As land is seldom dear around a station for power transmission ample floor space is easily obtained, except in occasional cramped localities. A brick structure with iron roof is perhaps the most satisfactory kind of station, although for small work a frame building often answers the purpose. Window space should be large and arranged so as to avoid leaving dark corners around the apparatus. There should be, too, ample door space to facilitate replacing apparatus—nothing is more annoying than to be short of elbow room when moving heavy machinery.

For the same reason a good permanent road should be built to the power station if one is not already in existence. In mountainous regions this is sometimes impracticable, but money spent in improving the road is better invested than when put into special sectionalized apparatus. It is quite possible so to sectionalize a generator of several hundred KW that the parts can all be carried on mule back, but the expense is considerably increased, and the great advantage of having a standard type of apparatus has to be abandoned. Hence, unless the cost of improving the road to admit of transporting ordinary apparatus is decidedly greater than the difference in cost between regular and sectionalized machinery, the former procedure is advisable. Of course when it comes to a

question of long mountain trails, sectionalized machinery has to be employed. The armature of a polyphase machine for use with transformers can very easily be sectionalized, but if for high voltage or of very large size it is better to send in core plates and other material in bundles and wind the armature on the spot.

Having determined the general location and nature of the power station, one may take up further arrangements as follows:

- I. Motive Power.
- II. Dynamos.
- III. Transformers.
- IV. Accessories.

The fundamental question is the proper size and character of power units. In direct coupled work prime mover and generator must be considered together. In steam driven stations for power transmission the boiler plant may be determined by itself, but dynamos and engines should be taken up conjointly.

There is at present rather too strong a general inclination to use direct coupled units at any cost. Direct driving is beautifully simple and efficient when conditions are favorable, but belt and rope driving gives singularly little trouble, and when well engineered wastes very little energy—not over 3 to 5 per cent. for a single direct drive, which can almost invariably be used. It is very easy to lose far more than this in using a dynamo designed for a speed unsuited for its output, or wheels working under disadvantageous conditions. Cases of such misfit combinations are not uncommon, and while the workmanship and results are often good the engineering is faulty. A very characteristic example is shown in Fig. 217, from the power plant of a synchronous single phase transmission for mining purposes. The generator selected was a 120 KW Westinghouse machine of standard form and excellently adapted for its purpose. Its speed was 860 revolutions per minute, and to obtain this from a working head of 340 feet a battery of four 21 inch Pelton wheels was required. Now the Pelton wheel under favorable conditions is unexcelled as a prime mover in convenience and efficiency, but these conditions were distinctly unfavorable. The same work could have been

done by a single wheel four or five feet in diameter at not over one-third the initial expense for wheels and fittings, and at enough higher efficiency to more than compensate for the slight loss of energy in a simple belt drive. In this case wheel efficiency was sacrificed to the speed of the generator. An error quite as common is to sacrifice generator efficiency to the speed of the prime mover.

The most flagrant case of this kind that has come to the author's notice was a polyphase machine of less than a hundred KW output direct coupled to a vertical shaft turbine at 20 revolutions per minute. This was of course a low frequency machine, but an instance nearly as bad may be found in the case of a 75 KW alternator for 15,000 alternations per minute direct-coupled to an engine at a little less than 100 revolutions per minute. These are extreme examples, of course, such machines costing several times more than normal generators of the same capacity, and having probably fully 10 per cent. less efficiency. It is, however, not rare to find costly direct coupled units which gain no efficiency over belted combinations, have little to recommend them save appearance, and pay dearly for that.

The best way to avoid such mistakes is to put aside prejudice and let the makers of generators and prime movers put their heads together in consultation and work out the problem together. Both are usually anxious to do good work, and will arrive at a judicious conclusion.

Alternating work is sometimes difficult in this respect on account of the requirements of frequency, but at the present time all the large makers of hydraulic and electrical machinery have a sufficient line of patterns to meet most cases easily without involving special work to any considerable extent.

In deciding on the number of units to be employed several things must be taken into account. The number should not be so small that the temporary crippling of a single unit will interfere seriously with the work of the plant. This determines the maximum permissible size of each unit. The nearer one can come to this without involving difficulties in the way of proper speed or serious specialization, the better. It is seldom advisable to install less than three units, while in some cases a considerably larger number must be used to suit the hydraulic conditions.

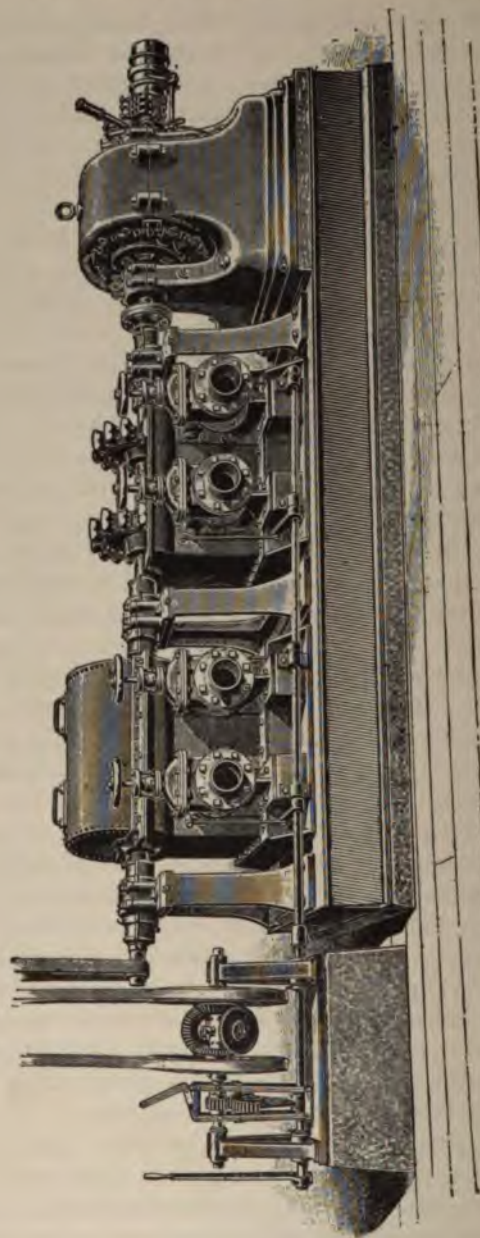


FIG. 217

To illustrate this point, suppose we are considering a transmission of 3,000 KW from a water power with 16 feet available head. One would naturally like to install three 1,000 KW generators or four of 750 KW. But trouble is encountered at once in the wheels. The 1,000 KW machine should have say 1,500 HP available at the wheel, and the 750 KW about 1,100. Even assuming at once the use of double turbines the highest available speed for an output of 1,500 HP would be about 75 to 80 revolutions per minute, too low for advantageous direct coupling at any ordinary frequency; 1,100 HP can be obtained at a speed perhaps 10 revolutions per minute higher—not enough to be of much service. It is a choice between evils at best, either generators of speed so low as to be both expensive and difficult to get up to normal efficiency, or belting, when one would much prefer to couple direct. At lower heads, say 12 feet, one would be driven from direct connection; at 30 to 40 feet head it would be comparatively easy. In the case in hand we are near the dividing line, and it would require very close figuring to get at the real facts, figuring which would have to be guided by local conditions. The chances are that rope driven generators of perhaps 750 KW would give the best combination of efficiency and cost. As an alternative one might use six 500 KW generators at about 125 r.p.m., which would not be bad. Each case of this kind has to be worked out on its merits. Since the dynamos cost far more than water wheels for the same capacity, if there is any specializing to be done it is cheaper to do it at the wheels. If, however, it proves convenient to change the dynamo speed a trifle, most generators can be varied 10 per cent. either way without encountering any difficulties.

Now and then it becomes necessary to plan for vertical wheel shafts. This, unhappily, is apt to confront one at very low heads, and leads to immediate difficulty. Direct coupling is usually impracticable since the speed is very low, double wheels being out of the question, and even if the dynamo could be economically built the support of the revolving element would be very troublesome. The usual arrangement is to use bevel gears, and this is generally the only practicable course. At high heads, when the speed is favorable for direct coupling, an hydraulic step can generally be relied on to carry the necessary weight.

It is desirable in any case to operate each dynamo by its own special wheels, to avoid complication. Hence the considerations which determine the number of dynamos also define the number of wheels. It is very seldom expedient to

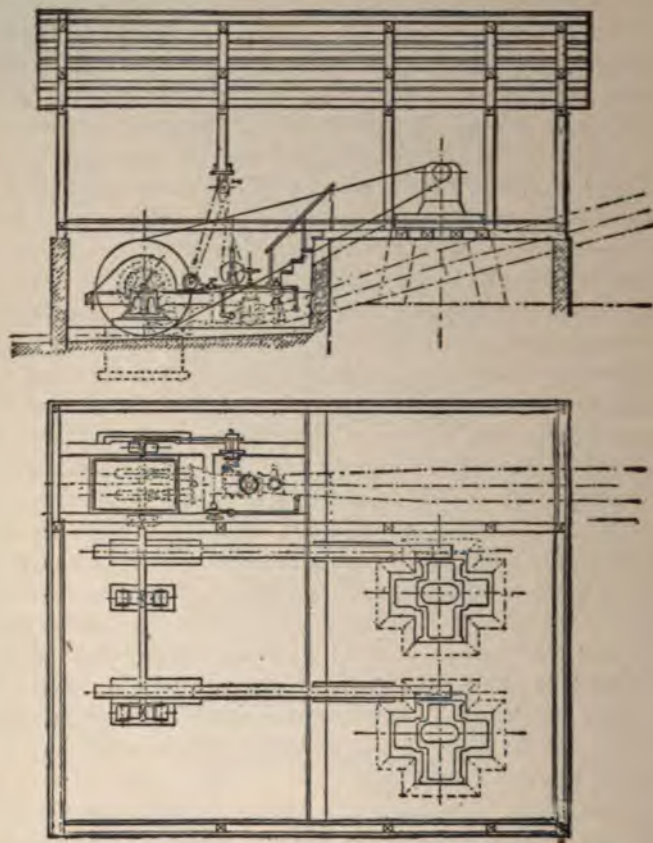


FIG. 218.

use more than a single pair of wheels for driving a single generator, on account of difficulties in alignment and regulation and consequent tendency to work inharmoniously. This tendency is stronger in impulse wheels than in turbines on account of the very small volume of water generally employed, and consequent hypersensitiveness to small changes in the amount, pressure, and direction of the stream. So, usually, a

single wheel or pair of wheels, equal to the task of handling a single generator, may be taken as the hydraulic unit.

For simplicity and economy one should keep down the number of generators to the limit already imposed, except as special cases may call for an increase. If the plant is to feed several transmission lines it is sometimes best to assign separate dynamos to each line for one purpose or another, and this may make it necessary to increase the total number. The requisite security from accident can be in such cases obtained by one or two spare units, or by shifting a generator from a lightly loaded line to a heavily loaded one. In point of fact the modern generator is a wonderfully reliable machine, and it is not unusual to find a machine that has run day and night, save for a few hours in the week, for many months without any reserve behind it. The author saw recently a small incandescent machine which had run some hours per day in an isolated plant for fourteen consecutive years without a failure of any kind. During that time the armature had been out of its bearings but once, to have the commutator turned down.

In steam driven plants, as in water power works, the most convenient arrangement of generators is generally side by side in a single line. So placed they are easy to take care of, and the spare room is more available than when it is irregularly disposed. In case water wheels are the prime movers a watertight bulkhead is generally placed between them and the dynamos, so that leaks or overflows will be confined to the wheel pit, where they can do no harm. Through this bulkhead the shafts should pass if the units are directly coupled. In case of a belt or rope drive it is frequently convenient to place wheels and dynamos on different levels, thus obtaining similar security. Fig. 218 shows a well-arranged small plant of this sort, driven by a pair of Pelton wheels. The plant is so small that both dynamos can be conveniently driven by pulleys on a very short extension of the wheel shaft.

In a larger plant each wheel unit would drive a single dynamo, and the receiver and wheels with their fittings would occupy one half of the station while the dynamos would be placed in the other half, following the same general plan shown in Fig. 218. The main point is to get good foundations for the dynamos while keeping them out of reach of stray water.



In an alternating current station it is advisable to drive the exciters from special prime movers, so that a change of speed, even momentary, in the main machine may not change the exciter voltage and thus make a bad matter worse. This is particularly necessary in water power plants, where the governing is apt to be none too close or prompt. It is a good thing also to have plenty of reserve capacity in the exciters, so as never to be caught with insufficient exciting power even in case of accident to one exciter.

Both wheels and dynamos should be thoroughly accessible, and wheel and dynamo rooms must be well lighted, naturally and artificially. A dark and slippery wheel pit, without sufficient space around the wheels, is sure to prove a source of annoyance and sometimes of serious delays. It should be possible to get at every wheel and its fittings and to work around them freely when all the other wheels are in full use. Sometimes it is useful to separate wheels by bulkheads, preferably movable, and there should always be floor space enough to stand and work on without putting up temporary stagings and loose boards. There should always be electric lights ready for use around all the working machinery, arc lamps or incandescents as may be most convenient, but plenty of them. Around the wheels it may sometimes be necessary to use incandescents in marine globes to protect them from the water, and to install waterproof flexible cable for the movable lights.

As an example of good practice in a plant for heavy power transmission, operated by turbines under a moderate head, the Folsom, Cal., installation shown in Plate XI is worth studying. Fig. 1 shows the general character of the power house and its relation to the forebay, penstocks, and tail race. The forebay itself is double, being divided lengthwise by a wall, on each side of which are the gates and penstocks for two double turbines. The tail races are four masonry arches under the power house, uniting then into a single channel. The tubular steel penstocks are 8 feet in diameter, and the relief pipes above them, 4 feet in diameter. The gates are handled by hydraulic cylinders, like the head gates at the dam. It will be observed that the wheel pit is not in the power house, but in the clear space between the rear wall of



PLATE XI.

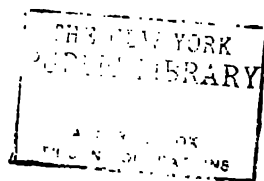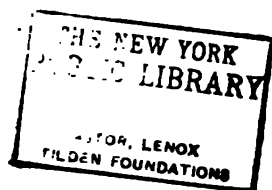

the power house and the end wall of the forebay, which like the other masonry work in this plant is of granite blocks. The power house itself is a spacious two-story brick structure on granite foundations. The lower floor is the dynamo room while the upper floor contains the transformer room, storage space, and so forth, together with the high tension switchboard, the lines from which are shown running out from the end of the building. The wheels are 30" double horizontal turbines of the McCormick type, giving about 1,250 HP per pair at 300 revolutions per minute under the available normal head of 55 feet. There are, besides, two small single horizontal wheels for driving the exciters. Each of the main wheel units carries on its shaft a 15,000 lb. flywheel to steady its operation under varying loads.

The arrangement of the wheels and generators is admirably shown in Fig. 2, Plate XI, from a photograph taken during the process of construction.

This gives a view of one complete unit: generator, coupling, governor, turbines and flywheel, and includes also an exciter and its wheel, not yet aligned and coupled. Four such main units and the two exciters, all placed side by side in a single row, make up the plant.

The generators are three-phase machines, of 750 KW capacity, at 60 ~. Each has 24 poles, runs at 300 revolutions per minute, and weighs about 30 tons. They are of very low inductance, with polyodontal bar-wound armatures designed to give normally 800 volts between lines, and to produce a very close approximation to a true sinusoidal wave form. They are normally intended to run in parallel, although there is actually a complete circuit per machine available when wanted. The wheels were originally installed with Faesch-Piccard governors, which functioned fairly well but were not strong enough for the heavy service, and have now been replaced.

When the heavy apparatus was all in place and connected, the arched spaces shown in Fig. 2 were walled up except for shaft holes, and the wheel pit permanently separated from the dynamo room. From the dynamos the current is taken to the low tension switchboard facing the row of generators. Thence it passes to the transformer room on the second floor of the station. Here is a bank of twelve raising transformers



of the air blast substation type largely used in the practice of the General Electric Company. These raise the working pressure to 11,000 volts. At this potential the current passes to the high tension switchboard and thence to the line. A second switchboard in the transformer room serves to distribute the low tension current received from the dynamos.

The line consists of four complete three-phase circuits each of No. 6 B. & S. wire. There are two independent pole lines running side by side a few rods apart, constructed of red-wood poles 40 feet long. Each pole line carries two circuits symmetrically arranged on two cross arms, one circuit being on each side of the pole, the wires arranged so as to form an equilateral triangle, with an angle downward. One of the pole lines carries an extra cross arm a few feet below the main circuits, to accommodate the telephone circuit. All wires are transposed at frequent intervals to lessen induction. The pole line is on the southern side of the American River and follows in the main the county roads clear into Sacramento, the two lines being on opposite sides of the road. The route thus followed is a trifle longer than the actual linear distance, but the gain in accessibility more than counterbalances the extra mile or so of line. The high tension line is carried along the river through the northern edge of the city fairly into the district of load, and is then terminated in a handsome brick substation containing the transformer and dynamo rooms and the offices of the company. The distribution system is mixed in character owing to the operation of the existing railway and lighting loads. The dynamo room contains three 300 HP three-phase synchronous motors coupled to a line shaft, from which are driven the railway generators and the arc machines for the city and commercial circuits. These motors receive current at 500 volts from the reducing transformers in the second story.

The main distribution circuit is a three-phase four-wire circuit worked at 125 volts between the active wires and the neutral. This gives an admirable network for lighting and motor work, very economical of copper, easy to wire and to operate. All the transformers in the substation are arranged for a secondary voltage of 125, 250, or 500 as may be desired, so as to be ready for any kind of service.



PLATE XII.

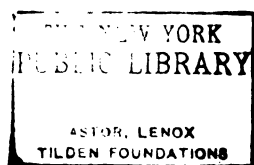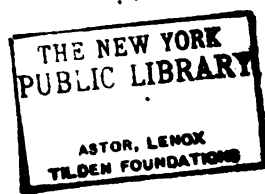

This plant first went into operation in July, 1895, and has since then been in continuous service day and night. No serious trouble has been encountered, the high voltage line has performed admirably, and there has been no difficulty due to inductance, lack of balance, resonance, or any of the other things that used to be feared in connection with long distance polyphase work. Furthermore the plant is a success financially as well as electrically. Apart from Niagara, which even now is only beginning long distance work, it is one of the most striking and typical transmission plants yet installed in this country.

Another fine example of three-phase work, of especial interest as being operated under the highest head yet attempted on so large a scale, is the plant utilized at Fresno, Cal. Fresno is a flourishing city of 15,000 inhabitants at the head of the magnificent San Joaquin valley in central California. Like other Californian cities it has been hampered in its development by the very high cost of coal—\$8 to \$10 per ton in carload lots, and some of its active citizens cast about for an available water power to develop electrically. Such an one was found on the north fork of the San Joaquin River very nearly 35 miles from the city. At a point where this stream flows through a narrow cañon it was diverted, and the stream was carried in a series of flumes and canals winding along the hillsides for seven miles to a point where it could be dropped back into the river bed 1,600 feet below.

At this point an emergency reservoir was formed in a natural basin which by an expenditure of less than \$3,000 was developed into a pond capable of holding enough reserve water for several days' run at full load.

The minimum flow of the stream is 3,000 cubic feet per minute, capable of giving between 6,000 and 7,000 HP off the shafts of the water wheels when fully utilized. In the initial plant only a small portion of this power is employed. From the head works at the reservoir a pipe line is taken down the hillside to the power house. The pipe is 4,100 feet long. At the upper end for 400 feet a 24 inch riveted steel pipe is used, then lap-welded steel pipe is employed diminishing in diameter and increasing in thickness toward the lower end, where it is 18 inches in diameter, of five-eighths inch mild steel, and

terminating in a tubular receiver 30 inches in diameter, of three-fourths inch steel. The vertical head is 1,410 feet. This corresponds to a pressure of 613 lbs. per square inch, while the emergent jet has a spouting velocity of 300 feet per second.

To withstand and utilize this tremendous velocity unusual precautions were necessary. The main Pelton wheels, designed for 500 HP at 600 revolutions per minute, have solid steel plate centres with hard bronze buckets. Each carries on its shaft a steel flywheel weighing 3 tons and 5 feet in diameter. With their enormous peripheral speed of over 9,000 feet per minute, these have a powerful steadying effect on the speed of the generators. There are three of these wheels, each directly coupled to a 350 KW General Electric three-phase generator, giving 700 volts at 60~. There are also two 20 HP Pelton wheels, each 20 inches in diameter, and each direct coupled to a multipolar exciter. All the wheels are controlled independently by Pelton differential governors.

On the main floor of the power house opposite the generators is the bank of raising transformers. These are six in number, of 125 KW capacity each, of the ordinary air blast type. Space is provided for three more when the load demands them.



These transformers raise the pressure to 11,200 volts between lines and from the high tension section of the switch-board the current passes to the transmission line. This consists of two complete three-phase circuits which can be worked together or independently. They are of No. 00 bare copper wire carried on special double petticoat porcelain insulators, all tested at 27,000 volts alternating pressure.

The pole line is of 35 foot squared redwood poles set 6 feet deep. Each pole carries four cross arms. Three of these at the top of the pole are for the transmission circuits. These are at present confined to the two upper cross arms, leaving space for additional circuits below. A fourth short cross arm about 4 feet below the others carries the telephone wires.

Plate XII gives a good idea of the general arrangement of the Fresno plant. Fig. 1 gives a glimpse of the storage reservoir at the upper end of the pipe line. Fig. 2 shows the situation of the power house below, which is built of native granite on a solid rock foundation, with a wooden roof. It is



PLATE XIII.

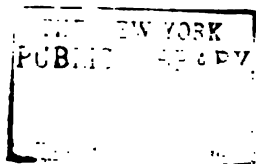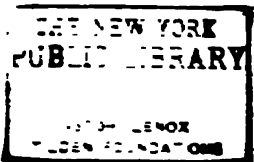

75 X 30 feet in size. The wheel pit is seen running along one side of the station just outside the wall, through which pass the wheel shafts driving the dynamos inside. In the foreground appears the beginning of the transmission line.

Fig. 3 shows the interior of the power house with the dynamos and transformers in place and the switchboard at the further end of the room.

In the city of Fresno the transmission lines are taken to a substantial brick substation in the centre of the city. Here are situated the reducing transformers and accessory apparatus, including two 80-light arc dynamos direct coupled to 60 HP induction motors.

The distribution system is threefold. In the central district of the city a three-phase four-wire network is employed, supplied from three 125 KW reducing transformers, and worked at 115 volts between active wires and neutral. For the outlying residence region three 75 KW transformers supply current at 1,000 volts for use with secondary transformers. Finally, for reaching neighboring towns, three 40 KW transformers feed a 3,000 volt sub-transmission system. The operation of this plant, like that of the Folsom plant, has been highly successful from the start, and the electrical troubles that have often been feared on long lines at high voltage have been conspicuous by their absence.

Both these plants represent the best modern practice in general equipment and arrangement, and while differing conditions bring their own necessary modifications, these examples may be regarded as thoroughly typical. They have incidentally demonstrated the thorough practicability of general distribution of energy for lighting and power by polyphase currents under large commercial conditions, and at distances great enough to involve all the electrical difficulties likely to be met at the voltage employed. A more recent plant of peculiar interest in some of its engineering features is that of the Truckee River General Electric Company near Floriston, Cal., shown in Plates XIII and XIV. This plant was erected to supply power to the mines of the famous Comstock Lode, where it is used for mining hoists, milling and pumping, which had formerly been done almost entirely by steam provided by burning pine at \$8.50 to \$15 per cord.

The source of the water power is the Truckee River, an unusually steady stream rising among the snows of the Sierra Nevada. At the head works is a timber crib dam about 50 yards long and only 7 feet in height, serving mainly to back the water into a wide, slow running canal a couple of hundred yards long, which serves also as a settling pond. Thence the water passes through the racks into a timber flume, 10' deep and 6'8" wide inside, the entrance being widened to 28' at the racks and tapered to the normal width in a run of 40'.

This timber flume, a portion of which is well shown in Plate XIII, Fig. 1, winds along the hillsides for a distance of a little more than a mile and a half. It carries 300 cubic feet of water per second at a depth of 6' in the flume, the corresponding velocity being 7.5 feet per second. This flume is carried on heavy timber frames 16' between centres, with two intermediate sets of four posts each. Along the line of the flume are two spill gates each in the side of a sand box dropped below the bottom of the flume.

This flume terminates in a timber penstock 36' long and 21' wide furnished with a central bulkhead and strongly stayed with iron rods. Back of the penstock a spill flume is carried for 200' alongside the main flume. From the penstock two pipes, taking their water through head gates, run to the wheels.

These pipes are of redwood staves, hooped with $\frac{5}{8}$ " round steel, 6' in diameter inside, and 160' long. The working head is 84.5 feet, and a few feet from the power house the wooden pipes are wedged into the steel pipes that lead to the wheel cases. Plate XIII, Fig. 2, shows the power house, penstock, pipes and tailraces. The power house itself is 88' x 31', of brick, with roof of corrugated galvanized iron, and has concrete foundations.

Plate XIV shows the arrangement of the wheels and generators. The wheel plant consists of two pairs of 27" McCormick horizontal turbines, each pair giving 1,400 HP at 400 r.p.m. Each pair discharges into a central cast iron draught box continued by a 20' draught tube. Each pair of wheels is directly coupled to a 750 KW, 500 volt three-phase Westinghouse generator. But instead of the arrangement shown in Plates XI and XII the shafts of both sets of wheels and of the generators are in one straight line, with the wheels at its extremities


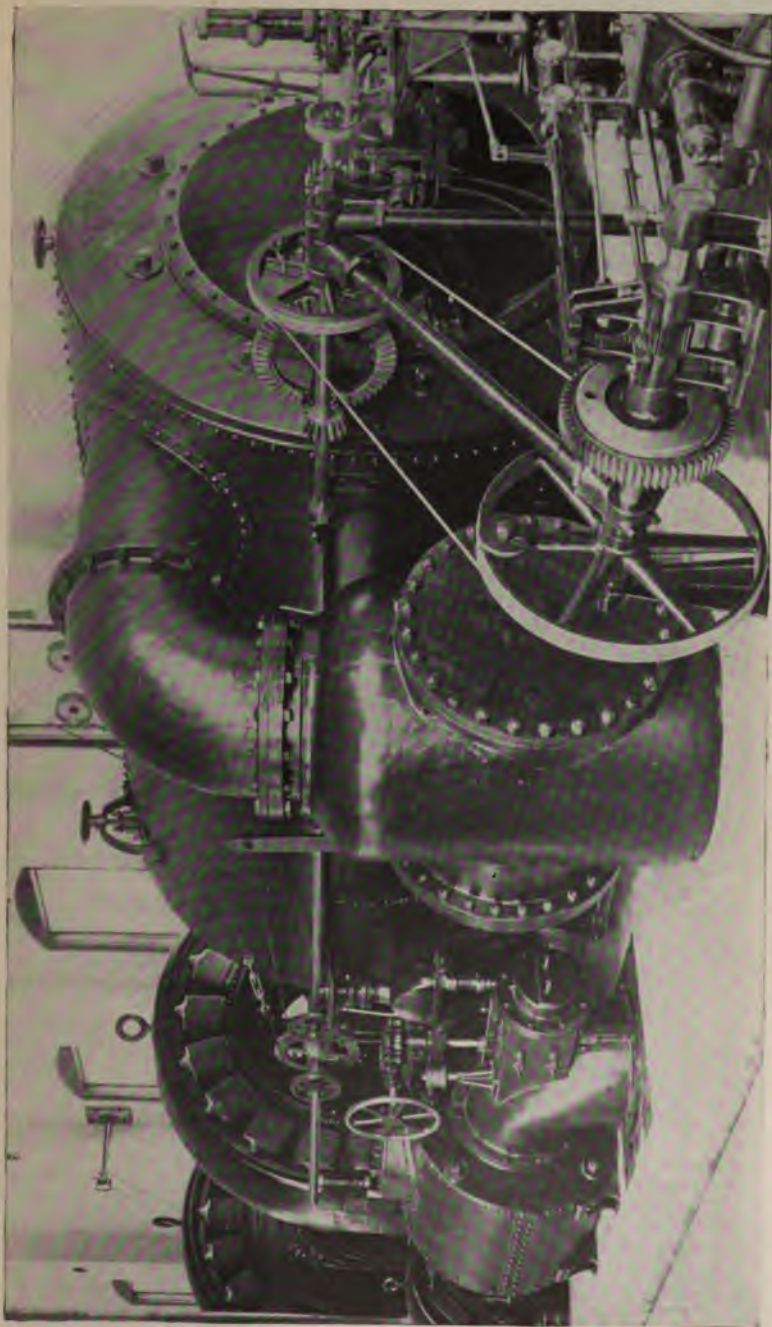


PLATE XIV.

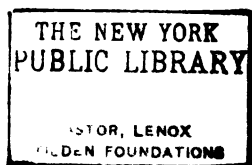

This gives space for a very solid foundation for the generators between the arched tailraces, and if need be the generators can be directly coupled together so as to run both from a single wheel or as a single unit. Each generator has a separate multipolar exciter driven by a small separate turbine, and each of these receives the water from the case of its main wheel and discharges into the corresponding tailrace. Each exciter is of sufficient capacity for both generators.

Each main pair of wheels is regulated by a Lombard governor, one of which appears in the foreground. But to ensure close regulation an unusual device is installed in connection with the governors. The supply pipes are too long and the head too high to permit the installation of efficient relief pipes, as in the Folsom plant, and the enormous inertia of the water in the supply pipes was consequently both an inconvenience and a menace. Hence relief was provided by a huge balanced Ludlow valve connected with the wheel case and the tailrace. This valve is operated by wire ropes and sheaves so connected with the gate shaft of the wheel that when the governor closes the wheel gate it opens the relief valve and *vice versa*, thus keeping the velocity of the water nearly constant. The effect is closely similar to that obtained with the deflecting nozzle used with Pelton wheels, and while it wastes water, that is of small moment compared with the necessity for regulation.

The 500 volt current from the generators is raised by oil insulated transformers to 22,000 volts for the 33-mile transmission to Virginia City, Nev., which is the centre of utilization. The pole line is of square sawed redwood poles 30' long, 11" square at the butt and 7" square at the top. These poles carry two cross arms on which the two three-phase circuits of bare No. 4 B. & S. wire are arranged as usual, forming an equilateral triangle on each side of the poles. The insulators are porcelain on oil-treated eucalyptus pins. The poles are spaced about 40 to the mile, and carry a couple of brackets for the telephone line below the cross arms. The three-phase lines are transposed every 144 poles.

The distribution in Virginia City is at 2,250 volts three-phase over a maximum radius of about 2 miles. This plant is a good example of recent practice in dealing with moderately

high heads. The timber flume in particular strikes Eastern engineers unfavorably at first, but the irrigation companies of the Pacific slope have had many years of experience in that sort of construction, and have learned that it is easy, cheap, and durable when properly cared for. There are hundreds of miles of it used for various purposes in California, and in many instances it is the only practicable means of water delivery. Altogether this particular plant teaches a useful lesson in hydraulic construction, and like those just described is a very good example of modern engineering.

At present long distance plants are rather the exception, and in the natural course of events there must be developed a great number of power transmissions at quite moderate distances, under ten miles or so. Such plants as regards general organization do not possess any special peculiarities. The dynamos, however, may often be wound for exceptionally high voltage. Dynamos for use with raising transformers should be of moderate voltage, seldom over 1,000 volts unless the units are of immense size, or must furnish local power in addition to their regular function.

At moderate voltage the generators gain in cost per unit of output, in simplicity, and in comparative immunity from accidents. They are also likely to be designed for lower armature reaction. Nevertheless, there are many cases in which generators for 5,000 to 12,000 volts may be properly employed for the sake of economy and simplicity of plant. As already indicated such generators should preferably have stationary armatures, and should have extraordinarily good insulation. When installed they should be insulated from the foundations with scrupulous care, and when direct-coupled should be provided with insulating couplings. Small high-voltage machines are sometimes supported on porcelain insulators. Large generators may be carried on hardwood timbers thoroughly treated with insulating material, and bolted to the foundation cap stone; or, at higher voltages, on polished dense stone blocks set in sulphur and surrounded with oil grooves like those on a high voltage insulator, and in divers kindred ways which will suggest themselves to the constructor. It is desirable to surround such machines with an insulated platform a few inches above the floor, and to protect the leads

with vulcanite tubes. It is well also to shield the terminals so that only one can be manipulated at a time when the machine is in action.

In all plants employing more than a single generator, and this means nearly all power transmission plants of every kind, the generators should be arranged to run in parallel, and in most instances should be so operated regularly. Now and then generators may advantageously be operated on separate lines, as when these lines must be run under different conditions of regulation, or when a line must be isolated for the purpose of carrying a very severe fluctuating load, but for the vast majority of plants these expedients are totally unnecessary, and only complicate the operation of the system without any material compensating advantage.

Plants operated for lighting alone can get along after a fashion by shifting load quickly from one machine to another, an operation quite familiar to most people who have been customers of such a system; but for the general distribution of lights and power this procedure is inadmissible, for it usually means stopping some or all of the motors. Moreover it is a clumsy method at best, abandoned long ago by continuous current stations, and without any excuse for existence save villainously bad generator equipment or incompetence in the operation of the station.

All modern generators of good design are capable of running in parallel without the slightest difficulty, provided they have somewhere nearly similar magnetic characteristics and are intelligently operated.

It is inadvisable to attempt running a smooth-core and an iron-clad armature in parallel, or two machines which are very different in regulation or which give very different wave shape, but on the other hand such machines ought not to be installed together on general principles. The nearer alike the machines the better they will run in parallel.

No subject has been oftener a topic of fruitless discussion than the paralleling of alternators. As a matter of fact any two similar alternators will go into parallel and stay there with very little difficulty, at least if driven from water wheels, as is nearly always the case in transmission plants.

High inductance machines have been supposed to be some-

what easier to put and work in parallel than those of low inductance. They certainly can be thrown together carelessly with less likelihood of a large synchronizing current flowing between them, but with low inductance machines a little more care, or an inductance temporarily inserted between the machines, leads to the same end.

In throwing two alternators of any kind in parallel, they should be in the same phase, running at the same speed and at approximately the same voltage. The more nearly these conditions are fulfilled the less synchronizing current will flow between the machines, and hence the more smoothly will they drop together.

The ordinary arrangement of phase lamps shows the relation of both speed and phase with ample exactness. When the indicator lamp is pulsating at the rate of one period in four or five seconds, it is evident that the relative speeds of the machines are very nearly right, and it is quite easy to cut in the new machine when its phase is very nearly right. One soon gets the swing of the slow pulsations, and can catch the middle point of the interval of darkness with great accuracy. The pulsations can in fact be easily reduced to a ten-second period or even longer. It is on the whole best to reverse the phase lamp connections so that concordance of phase will be marked by the lighting up of the phase lamps. The lamps should be of such voltage that they will come merely to a bright red when the machines are in phase. This arrangement averts the possibility of a lamp burning out during phasing and giving apparent concordance of phase. This accident has actually happened—with spectacular results.

It is obviously necessary that the speeds of the two machines should be normally alike, and that the speeds should have a certain slight flexibility. When belt driven from the same shaft the various generators to be put in parallel must be run very accurately at the same speed, else one of the belts will constantly slip and there will be considerable synchronizing current. When properly adjusted the machines should be so closely at speed that the phase lamps will have a period of from 20 to 30 seconds. This is not a difficult matter when driving from the same shaft. In direct-coupled units, or in general those driven from independent prime movers, it is best

to let one governor do the fine adjustment of speed, the others being a little more insensitive. Otherwise the governors are likely to fight among themselves and be perpetually see-sawing.

With respect to equality of voltage, the better the regulation of the generators in themselves the more necessary it is to have them closely at the same voltage when put into, or when running in, parallel. Two generators with bad inherent regulation will divide the load with approximate equality, even if put in parallel with a noticeable difference in voltage, since the machine that tends to take the heavier current will promptly have its voltage battered down and the tendency corrected—at the expense, however, of accurate regulation in the plant.

With machines of low inductance and good regulation, the voltages should be very closely the same before putting into parallel, to avoid a heavy synchronizing current, and they will then divide the load correctly with a very slight adjustment of the voltage. If the characteristics of the machines are known, as they should be, the voltages can be arranged so that they will fall together as accurately as if the added machine had been put on an artificial load before parallelizing.

If these precautions are observed no difficulty will be experienced in parallel running, and machines in stations many miles apart will work together in perfect harmony. This is sometimes necessary in large central station work, when a portion of the power is transmitted from a distance and a portion generated on the spot. It sometimes happens, too, that to obtain the amount of water power that is desired it must be taken from a group of falls.

The magnitude of the transformer units, when transformers are used, should be determined by the same considerations that apply to generators, except that questions of speed do not have to be considered. The smallest number of transformers that it is desirable to use is that number which will permit the disuse of a single unit without inconvenience. Above this number one must be guided by convenience, but in general the fewer units the better, since transformers such as are used in large transmission work vary very little in efficiency under varying load, and hence there is no considerable gain in using small units so as to keep them fully loaded. When using large transformers the difference in efficiency between

full load and half load should be no more than two or three-tenths of a per cent., and as a rule the general efficiency cannot be sensibly improved by using smaller units.

In polyphase transmission the transformer unit must be taken to include all the phases, so that this unit will usually consist of two or three allied transformers. In three-phase work the circuit can be operated either with two or three transformers, so that in a measure each transformer group contains a reserve of capacity, since if a transformer fails the remaining pair can be connected to do nearly two-thirds of the work. It is inadvisable, however, to try the resultant mesh on a large scale save as an emergency expedient, and the raising and reducing transformers should regularly be in groups of three for three-phase work, connected star or mesh as occasion requires. For very high voltage each phase may have several transformers in series.

It is advisable in arranging the transformer plant to bear this in mind. A spare transformer or two is a good form of insurance. In the station raising transformers alone are concerned. These are likely to be of large capacity and high voltage. The individual transformers will very seldom be as small as 50 KW, and the voltage is sure to be from 5,000 volts upward to 10,000, 15,000, or 20,000 volts, and sometimes even more.

Such transformers should be treated with the respect that their voltage demands. It is always best to install them in a separate room or otherwise to isolate them so that they shall be accessible only to those persons directly concerned with them.

They should be very thoroughly insulated from the ground. As good a way as any is to carry them on porcelain blocks upon a floor of dry wood covered or saturated with insulating compound. A good precaution is to carry around them a floor of treated wood supported on porcelain insulators and of such width that anyone touching the transformers must have stepped upon the insulated platform. The transformers should not be crowded and the high voltage leads should be taken out in plain sight and carried on porcelain insulators. Each transformer should have independent means for cutting it into and out of service. Such switches should be insulated with extraordinary care. It is best to have no exposed metal

on the high tension switches, and long insulated handles, and one should locate all the high tension apparatus together on a special switchboard guarded by an insulated platform. Switches working in oil are very satisfactory for high voltage work, but one must guard against the temptation of making them too compact. All leads to and from this board ought to be run in as straightforward a way as possible, so that each wire can be traced without the slightest effort, and all the connections at the back of the board should be simply arranged with ample space between them. The fundamental rule for all high voltage wiring should be to keep the wires well apart and in plain view from the generators or transformers to their exit from the building. Finally, the transformers and all their connections should always be treated as dangerous in spite of all precautions.

These directions may seem at first sight over-cautious, but it must be remembered, first, that the raising transformers and their connections carry the highest voltage that conditions permit, and second, that such voltage is highly formidable; 10,000 volts even, now to be regarded as an ordinary voltage for transmission work, has little respect for anything but extraordinary insulation and plenty of it, while at higher voltages the striking distance rapidly increases. The static effects of these pressures are prodigious, and neighboring wires, even if disconnected, must be handled with caution.

In small stations it may be convenient to install all the apparatus in a single room, but even then the transformer plant should be carefully guarded.

In many cases large transformers are artificially cooled and must be installed with that in view, but air blasts or circulating pumps do not involve any special considerations except that spare parts must be at hand in case of accident.

It should of course be understood that transformers in power transmission work can be, and very often are, worked in parallel with the greatest facility. Transformers to be so used must have closely similar magnetic characteristics, and particularly must regulate alike under varying loads. They must also have independent fuses or other safety devices, so that each can take care of itself. In all cases it is highly desirable to have one or more spare transformers ready

needed for repairs, and in such case may save much valuable time.

It is very important to have at least one man about the plant who is a good practical mechanic, and to provide a work-room and tool equipment enough to enable small repairs to be made on the spot. In most cases material and tools for minor electrical repairs are necessary and they are always desirable, for they make it possible to forestall further repairs and often will tide over an emergency, even if outside help has finally to be called in. The more isolated the station the more necessary it is to make such provisions, and the more spare parts must be at hand. Of line material there should always be plenty in stock to repair breaks, and this stock should never be allowed to get low.

Finally, as regards attendance, incompetent men are dear at any price. It pays to employ skilled men and to make it worth their while to settle down to permanent work. They are valuable all the time, and can be depended upon in an emergency when less competent ones would fail. In this as in other things avoid the fault stigmatized in the vernacular as "saving at the tap and spilling at the bung-hole."

CHAPTER XII.

THE LINE.

THE line is a very important part of a power transmission system, for on its integrity depends the continuity of service without which even the most perfect apparatus is commercially useless. In most cases the customer who uses electrical power neither knows the efficiency of his motor nor cares much about it, so long as the machine goes steadily along without the annoyance and expense of frequent repairs. But if the service frequently fails, suspending the operation of all his machinery while repairs are being executed, the electric motor, so far as he is concerned, is a commercial failure, and a nuisance to boot, and no representations of cheap power can be of much avail when a single stoppage may cause more loss than could be recompensed by free power for a month.

Modern dynamos and motors of almost every class are reasonably efficient and reliable, so that as a rule the line is the weakest portion of the system. More particularly is this the case when the distance of transmission is great and many miles of line must be guarded, inspected, and kept in perfect working order. In such long lines not only is the actual labor of maintenance great but the principal engineering difficulties will there be encountered. With apparatus of the character even now available, the future of electrical power transmission depends in very large measure on the development that takes place in the construction, insulation, and maintenance of the line, together with the solution of certain electrical problems that arise as the line grows longer. It is therefore important to go into the matter very carefully, as regards not only the general arrangements and the electrical details of the work, but with respect to methods of construction.

We may then with advantage divide our consideration of the line into three heads. First, the line in its general relations to the plant, considering it merely as a conductor. Second,

the line as a special problem in engineering. Third, the line as a mechanical structure. Of these heads the first has to do with such questions as the proper proportioning of the line as a part of the system, its function as a distributing conductor, and its bearing on the general efficiency of the plant of which it is a part. Next come up for examination the electrical difficulties that appear in the line, and finally the materials of construction and the methods of applying them.

One of the first questions that arises in designing a plant for the transmission of power is the character and dimensions of the conducting system in their relation to the rest of the plant. Efficiency is generally the first thing thought of—cost comes as a gloomy afterthought; and between these two good service is only too frequently neglected. In taking up a transmission problem the layman's first query generally is, "How much power will be lost in the line?" and when the engineer answers, "As much or as little as you please," the subject of line design is opened up in its broadest aspect.

Whenever an electrical current traverses a conductor there is a necessary loss of energy due to the fact that all substances have an electrical resistance which has to be overcome. The energy so lost is substantially all transformed into heat, which goes to raising the temperature of the conductor, and indirectly that of surrounding bodies. The facts in the case are put in their clearest and most compact form by Ohm's law, $C = \frac{E}{R}$. This states that the current is numerically equal to the electromotive force between the points where the current flows, divided by the resistance. Hence, this E. M. F. equals the current multiplied by the resistance between these points.

$$E = CR.$$

This tells us at once the loss in E. M. F. between the ends of any line provided we know the current flowing and the resistance of the line. And inasmuch as the energy transmitted by the same current varies directly with the working E. M. F., a comparison of the loss in volts determined as above, with the initial E. M. F. applied to the circuit, shows the percentage of energy lost in the line. Obviously its

absolute amount in watts is equal to the E. M. F. lost, multiplied by the current, *i. e.*, $C E$, or from the last equation, $C^2 R$, if we prefer to reckon in terms of the resistance.

Ohm's law is the basis of all computations regarding the line, and lies behind all the formulæ used for this purpose. The most obvious way of applying it would be to find the resistance of the whole line corresponding to any required current and loss of volts, and then to look up in a wire table the wire which when taken of the required length would give this resistance. As a matter of convenience in computation a large number of formulæ have been devised, which include the distance; loss, expressed either in volts or percentage lost; energy transmitted, in watts, horse-power and the like; and various other factors, which may be convenient for particular applications. Some of the formulæ give the total weight of copper required, and others the area of the conductor expressed in various ways.

Of these formulæ, all modified from Ohm's law to suit various conditions, the most generally convenient are those which give the area of the required conductors in "circular mils" (*i. e.*, circles one one-thousandth of an inch in diameter), a barbarous unit familiar in all tables of wire sizes, which unfortunately has obtained too firm a hold on electrical practice to be readily shaken off.

Of these "circular mil" formulæ one is subjoined which has been found by the author to be most convenient on account of its simplicity. It is derived from Ohm's law as follows: $R = \frac{E}{C}$. Now for any length of wire $R =$

$$\frac{\text{Total length in ft.} \times \text{resistance of 1 ft. wire 1 mil in section}}{\text{Area in circular mils.}}$$

Taking the total length of wire as twice the distance of transmission in feet, since this distance is particularly in mind, and noting that the resistance of one "mil-foot" of commercial copper wire is quite nearly 11 ohms, we have

$$R = \frac{2 D \times 11}{c. m.}$$

Substituting this value of R in the expression of Ohm's law just noted, and solving for the value of $c. m.$ we have,

$$c. m. = \frac{2 D \times 11 \times C}{E}.$$

In this expression E is the number of volts lost, and 11 is taken as the "mil-foot" constant, since it is large enough to take account of variations in diameter of wire, bad joints, flaws, and the like. The theoretical value is nearer 10.8, but experience has shown the wisdom of making the above allowance.

Having found in any case the area of the required wire in circular mils, its size and weight per thousand feet can be looked up in any wire table.

Since it chanced that a wire of 1,000 $c. m.$ weighs very nearly 3 lbs. per thousand feet, we can obtain a very simple formula giving directly the weight in pounds of wire per thousand feet. Taking D in thousands of feet, and expressing this fact by writing it D_m , we have:

$$W_m = \frac{2 D_m \times 33 \times C}{E};$$

or for the total weight of wire

$$W = \frac{4 D_m^2 \times 33 \times C}{E}.$$

As a matter of convenience, the following table is inserted, giving, for the sizes of wire most used in power transmission work, the area in circular mils, the diameter, resistance per thousand feet, and weight per thousand feet, both bare and with insulation of the so-called "weather-proof" grade, which is well adapted for ordinary line work. Diameters are here given to the nearest mil, areas to the nearest 10 $c. m.$, and

Circular Mils.	Gauge No. B. & S.	Diameter in Mils.	Resistance in ohms per M feet.	Wt. per M feet Bare.	Wt. per M ft. We' th'r proof.
211,600	0000	460	.04904	640	725
167,800	000	410	.06184	508	580
133,100	00	365	.07797	403	480
105,600	0	325	.09827	320	375
83,690	1	289	.12398	253	307
66,370	2	258	.15633	201	245
52,630	3	229	.19714	159	195
41,740	4	204	.24858	126	147
33,100	5	182	.31346	100	121
26,250	6	162	.39528	79	99

weights to the nearest pound. The table is not continued beyond the size given, because anything larger than No. .0000 is exceedingly troublesome to string, and when called for is better replaced with two smaller wires. On the other hand, wire smaller than No. 6 is seldom indicated by the conditions, and produces a mechanically weak line.

These formulæ and table give one sufficient data for computing the general character of a transmission line provided the loss in volts is determined. In actually working out the amount of copper needed in any given case, certain details require to be taken into account which will be discussed later.

A glance at the formulæ shows that the voltage employed is the determining factor in the cost of the lines. For a fixed percentage of loss doubling the working voltage will evidently divide the amount of copper required by four, since the current for a given amount of energy will be reduced by one-half, while the volts lost will be doubled.

So in general the amount of copper required for transmitting a given amount of energy a given distance at a fixed efficiency will vary inversely as the square of the voltage.

If the distance of transmission is doubled, the area of the conductor will evidently have to be doubled also; consequently, since the length is doubled, the weight of copper will be increased four times. That is, for the same energy transmitted at the same per cent. efficiency and the same voltage, the weight of copper will increase directly as the square of the distance. The advantage and, indeed, necessity of employing high voltages for transmissions over any considerable distance is obvious. In fact, it will be seen that by increasing the voltage in direct proportion to the distance, the weight of copper required for a given percentage of loss will be made a constant quantity independent of the distance.

If one were free to go on increasing the voltage indefinitely without enormously enhancing the electrical difficulties, power transmission would be a simple task, but unfortunately such is not the case. With very high voltages we meet difficulties both in establishing and maintaining the insulation of the line, and in utilizing the power after it is successfully transmitted. The specific character of these limitations will be discussed later, but enough has been said to render it evident that in establishing a power transmission system, both the working

voltage and the volts lost in the line must be determined with great judgment.

In the matter of economy in the line, high voltage is desirable—first, last and always. In systems where the voltage undergoes no transformation its magnitude is somewhat arbitrarily fixed by the practicable voltage which can be employed in the various translating devices, motors, lamps and the like. For example, in a system at constant potential wherein incandescent lamps are an important item, 125 volts or 250 volts worked on the three-wire system would be the highest pressure advisable for the receiving system in the present state of the art, or in certain cases where cheap power can be had these voltages might be doubled, and 220 to 250 volt lamps used. For a direct-current-motor system the corresponding figure would be 500 to 600 volts or 1,000 to 1,200 worked three-wire. Similar limitations indicated elsewhere will hold for other classes of apparatus.

When there is a transformation of voltage in the system, whether direct or alternating current, so that the line voltage is not fixed by that of the translating devices, it is advisable to raise the voltage of transmission as high as the existing state of the art permits. It must be borne in mind, however, that this general rule is subject to modification by circumstances. It would be bad economy, for instance, to use very high pressures and costly insulation for a transmission of moderate length and trifling magnitude. Such practice would result in sending perhaps 100 KW over a line or through a conduit which could as easily serve for ten times the power without great additional cost for copper. It is well, however, not to stop at half-way measures, but if transforming devices are to be used at all, to go boldly to the highest voltage which experience has shown to be safe on the line, or in the generators, if only reducing transformers are used.

For example, in most cases of alternating current work, 1,000 volts is entirely obsolete; if the line voltage has to be reduced at all it is better to get the advantage of 2,000 to 5,000 volts on the line; if raising and reducing transformers are employed the latter figure might as well be increased to 10,000 or 20,000, unless climatic or other special conditions are unfavorable.

It will be seen that quite aside from engineering details,

divers really commercial factors must enter into any final decision regarding the voltage to be used. And these commercial factors are the final arbiters as to the working voltage, and even more completely as to the proportion of energy which it is desirable to lose in the line. Power transmission systems are installed to earn money, not to establish engineering theses.

It is evident, to start with, that whatever the voltage, high efficiency of the line and low first cost are in a measure mutually exclusive. The former means large conductors, the latter small ones; the former delivers a large percentage of salable energy, with a high charge for interest on line investment; the latter a smaller amount of energy, with a lessened interest account against it. At first sight it would seem easy to establish a relation between the cost of energy lost on the line and the investment in copper which would be required to save it, so that one could comfortably figure out the conditions of maximum economy.

In 1881 Lord Kelvin, then Sir William Thomson, attacked the problem and propounded a law, known often by his name, which put the general principles of the matter in a very clear light, but which indirectly has been responsible for not a little downright bad engineering.

He stated, in effect, that the most economical area of conductor will be that for which the annual interest charge equals the annual cost of energy lost in it.

While it is true that for a given current and line Kelvin's law correctly indicates the condition of minimum cost in transmitting said current, this law has often caused trouble when misapplied to concrete cases of power transmission, in that it omits many of the practical considerations. It involves neither the absolute value of the working voltage nor the distance of transmission, and for long transmissions at moderate voltage often gives absurd values for the energy lost. Indeed, as it deals directly only with the most economical condition for *transmitting* energy, it quite neglects the amount of energy delivered. In fact, one may apply Kelvin's law rigidly to a concrete and not impossible case, and find that no energy to speak of will be obtained at the end of the line.

In other words, Kelvin's law, while a beautifully correct solution of a particular problem, is in its original form totally inapplicable to most power transmission work.

Various investigators, notably Forbes, Kapp, and Perrine, have made careful and praiseworthy attempts so to modify Kelvin's law as to take account of all the facts; indeed, nearly every writer on power transmission has had a shy at the problem.

Perhaps the commonest attempt at improvement is to follow the general line of the original law, but to equate the interest charge on copper to the annual *value* of the power lost; in other words, to proportion the line by increasing the copper until the annual net value of a horse power saved in the line would be balanced by the interest charge on the copper required to save it. This proposition sounds specious enough at first hearing. Practically, it produces a line of far greater first cost than is usually justified. It is evident that the possession of a little extra power thus saved brings no profit unless it can be sold, and in very few cases is a plant worked close enough to its maximum capacity during the earlier years of its existence to render a trifling increase in output of any commercial value, especially in the case of transmission from water power. When the plant is worked at a very high cost for power, or soon reaches its full capacity, a few horse power saved in the line will be valuable; but far oftener, particularly in water-power plants, it would be cheaper to let the additional copper wait until the necessity for it actually arises. Furthermore, it evidently does not pay to so increase the line investment that the last increment of efficiency will bring no profit.

As an example, let us suppose the case of a 1,000 HP transmission so constituted that the line copper costs \$10,000 with 10 per cent. loss of energy in the line, and suppose in addition that the net value of 1 HP at the receiving end is \$50 per annum. It is evident that by decreasing the loss in the line to $2\frac{1}{2}$ per cent. there would be available 75 additional HP worth \$3,750 per annum. The cost of this addition to the line would be \$30,000, on which interest at 6 per cent. would be \$1,800. So long as the plant is not worked up to 90 per cent. of its maximum capacity of 1,000 HP there will be a steady charge of \$1,800 plus depreciation if the additional copper be installed at the start. A few months' loss at this rate would more than cover the labor of reinforcing the line when needed, even supposing that installing the additional

copper at the start would not have involved extra labor in construction.

Various formulæ for designing the line so as to secure the minimum cost of transmission have been published, derived more or less directly from Kélvín's law and attempting to take into account all the various factors involved in line efficiency. They all contain quantities of very uncertain value, and hence are likely to give correspondingly inexact results. More than this, they are founded on two serious misconceptions.

First, they generally give the minimum cost of transmission, which is not at all the same thing as the maximum earning power on the total investment. Second, however fully they take account of existing conditions, the data on which they are founded refer to a particular epoch, and are very unreliable guides in designing a permanent plant.

A few years or even months may and often do so change the conditions as to lead to a totally different result. In the vast majority of cases it is impossible to predict with any accuracy the average load on a proposed plant, the average price to be obtained for power, or the average efficiency of the translating devices which will be used. So probable and natural a thing as competition from any cause, or adverse legislation, will totally change the conditions of economy.

For these reasons neither Kelvin's law nor any modification thereof is a safe general guide in determining the proper allowance for loss of energy in the line. Only in some specific cases is such a law conveniently applicable. Each plant has to be considered on its merits, and very various conditions are likely to determine the line loss in different cases. The commonest cases which arise are as follows, arranged in order of their frequency as occurring in American practice. Each case requires a somewhat different treatment in the matter of line loss, and the whole classification is the result not of *a priori* reasoning, but of the study of a very large number of concrete cases, embracing a wide range of circumstances and covering a large proportion of all the power transmission work that has been accomplished or proposed in this country.

CASE I. General distribution of power and light from water power. This includes something like two-thirds of all the power transmission enterprises. The cases which have been investi-

gated by the author have ranged from 100 to 10,000 HP, to be transmitted all the way from one to one hundred and fifty miles. The market for power and light is usually uncertain, the proportion of power to light unknown within wide limits, and the total amount required only to be determined by future conditions. The average load defies even approximate estimation, and as a rule even when the general character of the market is most carefully investigated little certainty is gained.

For one without the gift of prophecy the attempt to figure the line for such a transmission by following any canonical rules for maximum economy is merely the wildest sort of guesswork. The safest process is as follows: Assume an amount of power to be transmitted which can certainly be disposed of. Figure the line for an assumed loss of energy at full load small enough to insure good and easy regulation, which determines the quality of the service, and hence, in large measure, its growth. Arrange both power station and line with reference to subsequent increase if needed. The exact line loss assumed is more a result of trained judgment than of formal calculation. It will be in general between 5 and 15 per cent., for which losses generators can be conveniently over compounded. If raising and reducing transformers are used the losses of energy in them should be included in the estimate for total loss in the line. In this case the loss in the line proper should seldom exceed 10 per cent. A loss of less than 5 per cent. is seldom advisable.

It should not be forgotten that in an alternating circuit two small conductors are generally better than one large one, so that the labor of installation often will not be increased by waiting for developments before adding to the line. It frequently happens, too, that it is very necessary to keep down the first cost of installation, to lessen the financial burden during the early stages of a plant's development.

CASE II. Delivery of a known amount of power from ample water power. This condition frequently arises in connection with manufacturing establishments. A water power is bought or leased *in toto*, and the problem consists of transmitting sufficient power for the comparatively fixed needs of the works. The total amount is generally not large, seldom more than a few hundred horse power. Under these circumstances the

plant should be designed for minimum first cost, and any loss in the line is permissible that does not lower the efficiency enough to force the use of larger sizes of dynamos and water wheels. These sizes almost invariably are near enough together to involve no trouble in regulation if the line be thus designed. The operating expense becomes practically a fixed charge, so that the first cost only need be considered.

Such plants are increasingly common. A brief trial calculation will show at once the conditions of economy and the way to meet them.

CASE III. Delivery of a known power from a closely limited source. This case resembles the last, except that there is a definite limit set for the losses in the system. Instead, then, of fixing a loss in the line based on regulation and first cost alone, the first necessity is to deliver the required power. This may call for a line more expensive than would be indicated by any of the formulæ for maximum economy, since it is far more important to avoid a supplementary steam plant entirely than to escape a considerable increase in cost of line. The data to be seriously considered are the cost of maintaining such a supplementary plant properly capitalized, and the price of the additional copper that will render it unnecessary. Maximum efficiency is here the governing factor. In cases where the motive power is rented or derived from steam, formulæ like Kelvin's may sometimes be convenient. Losses in the line will often be as low as 5 per cent., sometimes only 2 or 3.

CASE IV. Distribution of power in known amount and units, with or without long-distance transmission, with motive power which, like steam or rented water power, costs a certain amount per horse-power. Here the desideratum is minimum cost per HP, and design for this purpose may be carried out with fair accuracy. Small line loss is generally desirable unless the system is complicated by a long transmission. Such problems usually or often appear as distributions only. Where electric motors are in competition with distribution by shafting, rope transmission, and the like, 2 to 5 per cent. line loss may advantageously be used in a trial computation.

The problem of power transmission may arise in still other forms than those just mentioned. Those are, however, the commonest types, and are instanced to show how completely

the point of view has to change when designing plants under various circumstances. The controlling element may be minimum first cost, maximum efficiency, minimum cost of transmission or combinations of any one of these, with locally fixed requirements as to one or more of the others, or as to special conditions quite apart from any of them.

In very many cases it is absolutely necessary to keep down the initial cost, even at a considerable sacrifice in other respects. Or economy in a certain direction must be sought, even at a considerable expense in some other direction. For these reasons no rigid system can be followed, and there is constant necessity for individual skill and judgment. It is no uncommon thing to find two plants for transmitting equal powers over the same distance under very similar conditions, which must, however, be installed on totally different plans in order to best meet the requirements.

As regards the general character of transmission lines the most usual arrangement is to employ bare copper wire supported on wooden or iron poles by suitable insulators. Now and then underground construction becomes necessary owing to special conditions. Not infrequently an aerial transmission line must be coupled with underground distribution owing to municipal regulations. Occasionally insulated line wire is used. It is frequently employed in cases where the transmission lines are continued for purposes of distribution through the streets of a town, in fact, is usually required. As such lines are generally of moderate voltage, very seldom exceeding 3,000 volts, good standard insulation may often be effective in lessening the danger to life in case of accidental contacts, and in reducing the trouble from crossing of the lines with other lines, branches of trees, and the like. In case of really high voltages, 5,000 to 10,000 and upward, no practicable insulation can be trusted for the former purpose, and may in fact create a false sense of security, while it is far better practice to endeavor to avert the danger of short circuits than to take extraordinary precautions to mitigate their momentary severity. Hence bare copper is to be preferred both on the score of safety and of economy. Now and then at some particular point a high grade of insulation may minimize local difficulties.

Much can be said in favor of placing a transmission line underground, but there are also very strong reasons against it. Such a line is eminently safe, and free from danger of accidental injury. At the same time it is very difficult to insulate properly, and if trouble does arise it is exceedingly hard to locate and difficult to remedy. In addition, there are serious electrical difficulties to be encountered, which often can be reduced only by very costly construction. The chief objection aside from these is the expense, which in very many cases would be simply prohibitive.

In cities there is an increasing tendency on the part of the authorities to demand underground construction. Overhead wires are objectionable on account of their appearance, danger to persons and property, and their great inconvenience in cases of fire, and these objections apply with almost equal total force to all such wires, whether used for electric light or power, or for telegraphic and telephonic purposes, the latter more than making up by their number for any intrinsic advantage in the matter of safety. The future city will have its electric service completely underground, at least in the more densely inhabited portions. It must be said, however, that it is far more important for a city to have electric light and power than to insist on having it in a particular way, and unless the service is very dense, so as to abundantly justify the very great added cost of underground work, private capital will hesitate to embark in an enterprise so financially overloaded.

Fortunately, for city distribution moderate voltages must be employed on account of the intrinsic limits of direct current circuits employed for general distribution, and the undesirability of distributing transformers of moderate size on very high pressure alternating circuits. More than 2,000 to 2,500 volts, save on arc circuits, can seldom be used advantageously in general distribution, and such voltages can be and are successfully insulated without prohibitive expense. They work well in practice, and have stood the test of considerable experience. Moreover, with proper care the cables employed as conductors, when thoroughly protected and inspected, probably have a slightly less rate of depreciation than overhead insulated lines, and are much less liable to interruption. As the district

within which underground service is necessary is usually of no great extent, the electrical difficulties that are to be dreaded in attempting long underground transmissions are not here of so serious magnitude.

For this limited service, then, in districts where both population and service are dense, there is no serious objection to underground lines, and many who have used them are decided in commending them as on the whole more convenient and reliable than aerial lines. Besides, a large proportion of underground work is done at low voltages, less than 250 volts, with which the difficulties of insulation except at joints are really trivial. Such work does not belong so much to power transmission proper as to distribution from centers after the transmission is accomplished.

With high voltages and long distances the case is very different. Not only are the difficulties of insulation great, but electrical troubles are introduced of so severe a character as to make success very problematical, even in cases where the cost alone is not prohibitive. The feat of cable insulation for pressures as great as 10,000 volts has been accomplished, and this limit could probably be exceeded, but the cost of such work is necessarily extremely high, and the location and repair of faults is troublesome. An overhead line is so much easier to insulate and to maintain that nearly all power transmission will probably continue to be carried on by this method for some time to come, until, indeed, there are revolutionary changes in underground work of which we now have no suggestion. The possibility of a long interruption of service while a fault is found and repaired is too unpleasant a contingency to be incurred. Duplicate lines are a natural recourse in such case, effective, but very costly. Aerial lines are much cheaper to duplicate, and the labor of finding and repairing faults is comparatively light. Finally when it comes to the question of really high voltages like those now coming into frequent use, say 30,000 to 60,000 volts, it must be admitted that in the present state of the art of insulation underground cables, if possible at all, are absolutely prohibitive in cost.

For these reasons underground transmission lines should be avoided, certainly until we have had a long experience with high voltages overhead.

Throughout the foregoing it has been assumed that the conducting line is composed of the best quality of commercial copper wire. Inasmuch as other materials are occasionally proposed, it is worth while saying something about the relative properties of certain metals and alloys as conductors. Aside from silver, pure copper is intrinsically the best conductor among the metals. In fact, it is hard to say that it is not the equal of silver. Commercial copper wire is of somewhat variable conductivity, since this property is profoundly affected by very small proportions of certain other substances. It used to be a most difficult matter to procure commercial wire of good quality, and in the early days of telegraphy much annoyance was experienced on this score. At present the best grades of standard copper wire have a conductivity of fully 98 per cent. that of the chemically pure metal, and even this figure is not infrequently exceeded. On account of the comparatively low tensile strength of copper, ordinarily about 35,000 lbs. per square inch, very vigorous efforts have been made to exploit

MATERIAL.	CONDUCTIVITY.	STRENGTH, LBS.
Commercial copper wire.....	98-99	35,000
Good hard-drawn copper....	96-97	60,000-65,000
(1) Silicon bronze.....	97	63,200
(2) Silicon bronze.....	80	76,000
Aluminium.....	59-60	32,900
(3) Silicon bronze.....	45	110,000
Phosphor bronze.....	26	101,000
Iron annealed wire.....	14	55,000
High carbon steel wire.....	10-12	120,000-130,000

various alloys of copper on the theory that their greater strength would more than overbalance the lessened conductivity and increased cost, by enabling less frequent supports to be employed. Aluminium bronze, silicon bronze and phosphor bronze have been tried, together with some other alloys of a similar character exploited under various trade names. The whole matter of high conductivity bronzes has been so saturated with humbug that it is very hard indeed to get at the facts in the case. Copper which is hard-drawn probably has greater tensile strength than any so-called bronze of similar

conductivity, from 60,000 to 70,000 lbs. per square inch, with a resistance less than 5 per cent. in excess of that of ordinary copper. The foregoing table gives the conductivities and tensile strengths of some of the various materials used or proposed for line wire, pure copper being taken as the standard at 100 per cent. conductivity.

It is sufficiently evident from this table that where the best combination of strength and conductivity is wanted, hard-drawn copper is unexcelled. For all ordinary line work good annealed copper wire is amply strong, and is, besides, easier to manipulate than wire of greater hardness. Occasionally, where it is desirable to use extra long spans, or excessive wind pressure is to be encountered, the hard-drawn wire is preferable. Now and then, in crossing rivers or ravines, spans of great length are desirable,—several hundred yards,—and in these cases one may advantageously employ silicon or other bronze of great tensile strength, or as an alternative a bearer wire, preferably a steel wire cable, carrying the copper conducting wire or itself serving as the conductor. Where mechanical strains are frequent and severe, bronzes are somewhat more reliable than hard-drawn copper of equal tensile strength, since they are homogeneous, while the hard-drawn copper owes much of its increase in tenacity to a hard exterior shell, the core of it being substantially like ordinary copper.

Compound wires have now and then been used, consisting of a steel core with a copper covering, but these are costly and no better than hard-drawn copper for line use. Iron alone replaces copper to any extent. It is cheaper for equal conductivity, but in wire is far less durable, and in rods cannot be strung overhead conveniently, while, even were this possible, the difficulty of making and maintaining joints is most serious. Very recently aluminium has been successfully used as a line conductor. At present prices (1901) it is materially cheaper than copper for equal conductivity, but its bulk and the difficulty of making joints are objectionable. Aluminium has about six-tenths the conductivity of copper, the resistance of one *mil-foot* of pure aluminium wire being 17.6 ohms at 25° C. Owing to its very low specific gravity its conductivity is very high when compared on the basis of weight. It has just one-half the weight of copper for the same conductivity, so that as

a conductor aluminium wire at 30 cents per pound is as cheap as copper wire at 15 cents per pound. The tensile strength of the aluminium is slightly less than that of copper, being a little less than 33,000 lbs. per square inch, while soft-drawn copper is about 2,000 lbs. higher. Like copper, the aluminium wire takes permanent set very easily, having a very low elastic limit, and at about half its ultimate strength is apt to stretch seriously. Comparing wires of equal conductivity the aluminium has absolutely greater strength, since its cross-section is about 1.64 times that of the corresponding copper wire. If, however, the copper be hard drawn, the aluminium wire of the same conductivity is only about $\frac{5}{8}$ as strong.

Being somewhat larger, the aluminium wire has a trifle greater inductance and capacity than the copper and is more exposed to the effect of storms. It has about 1.4 times the linear coefficient of expansion of copper, so that there is more tendency to sag in hot weather and to draw dangerously taut in cold weather. This property has caused some practical trouble in aluminium lines, and has to be met by great attention to temperature and uniform tension in stringing the wire.

Joints in aluminium wire are, as already indicated, a very serious problem. In contact with other metals aluminium is attacked electrolytically by almost everything, even zinc. A successful soldered joint for aluminium has not yet been produced, and in line construction recourse has to be taken to mechanical joints. One of the most successful of these is that used in several California lines. It consists of an oval aluminium sleeve, large enough to slip in the two wire ends side by side, and for No. 1 wires about 9" long. In making the joint the ends of the wires were filed rough, the wires were slipped side by side through the sleeve, and then by a special tool sleeve and wires were twisted through two or three complete turns. The result was a joint practically as strong as the original wire, and electrically good. There is considerable danger of electrolytic corrosion in any such mechanical joint, and lines exposed to salt fogs would probably suffer rather severely in this way, but with care in making, and regular inspection, these joints serve the purpose well. Very recently a process of cold welding a sleeve joint under great pressure has given excellent results.

Altogether it seems likely that aluminium may serve as

a most useful substitute for copper for transmission lines, and it will certainly be used extensively if copper holds to a price of 17 to 19 cents per pound for bare wire. Not only is the aluminium cheaper in first cost, but its lesser weight means a great decrease in cost of freights as well. It certainly makes an excellent line when carefully put up, and there is no good reason why it should not be freely used whenever the price of copper throws the balance of economy in favor of aluminium. There have been attempts to improve the strength of aluminium wire by alloying it, but as in the case of bronzes the gain in strength is at the expense of conductivity. Such alloy wire should be very cautiously investigated before use.

Before taking up the practical task of line calculation it is necessary to consider somewhat at length the electrical difficulties that must be encountered, and which impose limitations on our practically achieving many things that in themselves are desirable and useful. We have seen already that the secret of long distance transmission lies in the successful employment of very high voltages, and whatever the character of the current employed, the difficulties of insulation constantly confront us. These are of various sorts, for the most part, however, those that have to do with supporting the conducting line so that there may not be a serious loss of current *via* the earth. Next in practical importance come those involved in insulating the conductor as a whole against, first, direct earth connections or short circuits in underground service, and second, grounds or short circuits, if the line is an aerial one.

In a very large number of cases no attempt is made to insulate the wire itself by a continuous covering, and reliance is placed entirely on well-insulated supports. In most high voltage lines this is the method employed, partly for economy but chiefly because there is well grounded distrust in the durability of any practicable continuous covering under varying climatic conditions and the constant strain imposed by high voltage currents.

So far as supports go, it is evident that while the individual resistance of any particular one may be very great, the total resistance of all those throughout the extent of a long line to which they are connected in parallel to the earth, may be low enough to entail a very considerable total loss of energy. The

possibility of such loss increases directly with the number of supports throughout the line. The most obvious way of reducing such losses would be to considerably increase the distance between supports. This process evidently cannot go on indefinitely, from mechanical considerations, and hence the greatest advance can be made in reducing the chance of loss in individual supports.

Most of the present practice consists merely of an extension of the methods that were devised for telegraphic work. These were quite sufficient for the purpose intended, but are inadequate when applied to modern high voltage work.

The ordinary line consists, then, of poles, bearing on pins of wood or metal secured to cross arms, bell-shaped glass or porcelain insulators. To grooves on or near the top of these the line wire is secured by binding wire. Loss of current to earth in a line so constituted takes place in two ways. First, the current may pass over the outer surface of the insulator, up over the interior surface, thence to the supporting pin and so to earth. Second, it may actually puncture the substance of the insulator and pass directly to the supporting structure.

The first source of trouble is the commoner, and depends on the nature and extent of the insulating surface, and even more on climatic conditions. The second depends on the thickness and quality of the insulating wall which separates the wire from the pin. To avoid leakage an insulator should be so designed that, first, the extent of surface shall be as long and narrow as possible; second, that this surface shall be both initially and continuously highly insulating. The first condition is met by making the insulator of comparatively small diameter, and adding to the length of the path over which leakage must take place by placing within the outer bell of the insulator one or more similar bells (usually called petticoats). These not only help in the way mentioned, but they are likely to stay tolerably dry even when the exterior surface is wet, and thus help to maintain the insulation.

A good glass or porcelain insulator made on these general lines gives excellent results with ordinarily moderate voltages, say up to 5,000 volts. When the insulators are new and clean they will quite prevent perceptible leakage, and for the voltages mentioned are satisfactory under all ordinary conditions.

When higher voltages are employed the results may be at first good, but they are unlikely to stay so unless the climatic conditions are exceptionally favorable. Most glass permits a certain amount of surface leakage, even when new, although generally not enough to be of practical importance, but even the best glass weathers when exposed to the elements, so that in time the surface becomes slightly roughened and retains a film of dirt and moisture that is a very tolerable conductor. Even while perfectly free from this deterioration at first, it is generally hygroscopic, because it is in a trifling degree soluble even in rain water, and tends to retain a slight amount of moisture. Thus in damp climates glass is likely to give trouble when used on a high voltage line. As regards temporary fall in insulating properties, a searching fog or drizzling rain is worse in its effects on insulators than a sharp shower or even a heavy rain, which tends to wash the outer surface free of dirt, and affects the comparatively clean interior but little.

Much cheap porcelain is also hygroscopic owing to the poor quality of the glaze, and it has the considerable added disadvantage of depending on this glaze for much of its insulating value.* Glass is homogeneous throughout its thickness, while porcelain inside the glaze is often porous and practically without insulating value. Nevertheless porcelain which is thoroughly vitrified, the ordinary glaze being replaced by an actual fusing of the surface of the material itself, is decidedly preferable to glass, being tough and strong, quite non-hygroscopic, and of very high insulating properties. The surface does not weather, and the insulation is well kept up under all sorts of conditions. If the vitrification extends, as it should, considerably below the surface, the insulator will resist not only leakage, but puncture, better than any glass. The process of making this quality of porcelain is somewhat costly, since the baking has to be at an enormous temperature and long continued, but the result is the most efficient insulating substance in use. Glass, however, is better than ordinary grades of porcelain.

Surface leakage is more to be feared than puncture at all

* Much American porcelain will absorb 1 to 2 per cent. of its weight of water, a sign of poor insulating properties. The best porcelain should absorb no water and should show a brilliant vitreous fracture which will take no flowing stain from ink.

voltages, since the absolute insulation strength of the material can be made high enough, by careful attention to quality and sufficient thickness, to withstand any practical voltage continuously, barring mechanical injury. But leakage is a function of moisture, drifting dust, and things meteorological generally, besides which, it may take place in serious amount at voltages which otherwise would be very easy to work with.

As the result of all recent experiments, it may be confidently stated that danger from actual breaking down of the insulation by puncture need not be at all feared up to certainly 25,000 volts with any good modern high voltage insulator. With the best insulators at present attainable the voltage just mentioned can easily be doubled without serious danger of breaking through the material.

At such high electrical pressures, however, the difficulty of surface leakage becomes formidable, especially in bad weather. Glass insulators become troublesome, and only the best glass or porcelain is to be trusted—even this with some reservations. To reinforce the insulation of the surface it has been sometimes deemed advisable to take recourse to the insulating properties of heavy mineral oil. Imagine the lower edge of the outer bell of any insulator folded inward so as to form a deep groove opening upward all around the insulator. Fill this hollow with oil, and it is evident that if leakage takes place at all it must be across the surface of this oil.

Such an oil insulator is quite free from surface leakage so long as the oil surface is kept clean and in good condition. This is, however, very difficult to do and there is great danger that the oil surface, from the combined action of dirt and moisture, will degenerate into a species of conducting slime. Where dust is very prevalent the oil is specially likely to give trouble; it is far better able to cope with moisture alone than with moisture *plus* dust. For this reason the use of oil insulators has been now practically abandoned. From what has been said it is clear that line insulation is largely a matter of climate. Where it is uniformly warm and dry almost any kind of insulator will suffice, provided the material has tolerable insulation strength and the insulator is of passably good design. With a climate foggy in summer and sleety in winter, even

the best porcelain insulators will be severely tried at high voltages.

The record of what has actually been done in the transmission of electrical energy at high voltages is comparatively short, but has now given invaluable data for the important work over long distances that must be done in the next few years. The experience with arc light circuits at 5,000 volts or above, working over lines from 20 to 40 miles long, has been accumulating for ten years. Seventy-five to 150 light dynamos are now common, the latter giving in the vicinity of 10,000 volts, and this from open-coil armatures of which the maximum voltage is roughly equal to that of an alternator of the same nominal voltage. The lines are usually—almost always—of wire having no very high insulating properties, supported on common glass insulators, often without more than a single interior petticoat. One hundred and fifty light generators are in occasional use, and now and then two machines of 75 lights capacity or more are operated in series for considerable periods. This practice is commoner than is generally supposed.

Alternating circuits of 5,000 volts or more are now very common here and abroad. Scores of them have been in operation long enough to be thoroughly tested. An 18-mile transmission at a little over 5,000 volts to Guadalajara, Mexico; an 11-mile 6,000 volt line to Hartford, Conn., and the Tivoli-Rome plant, 18 miles at 5,000 volts, have now been in steady and successful operation for nearly a decade. A number of others, probably a score in all, of less prominence, owing to shorter length of lines and smaller capacity, have been for several years in regular operation at 5,000 to 6,000 volts. Most of the lines are of bare copper wire supported on plain insulators of glass or porcelain. They have been uniformly free from all serious trouble.

In the vicinity of 10,000 volts the installations are now numerous and entirely conclusive. Probably a hundred commercial plants are to-day actually operated at such pressures. One is the well-known Ferranti station, working a 10,000-volt main from Deptford to London, about 11 miles, and using a concentric underground cable. The plant has experienced various

vicissitudes and has not been regularly operated, but the troubles are not generally chargeable to the mains, which have, however, been a little uncertain in their performance. Another early case is the lighting plant in San Antonio Cañon, California. This consists of a pair of alternating generators of 150 KW at 1,000 volts. Raising transformers establish a line pressure of 10,000 volts, at which current is transmitted to Pomona, 16 miles distant, and to San Bernardino, 28 miles. At each of these places is a sub-station with reducing transformers, and regulating apparatus. The current is used exclusively for lighting, and the plant has been in thoroughly successful operation for about eight years. The line is of bare copper supported on good-sized, double-petticoat glass insulators without oil. There has been practically no trouble from leakage, even during the winter, when rains are of almost daily occurrence, no insulators have been punctured, and the only trouble on the line has been of a very trifling character, and due to accidental causes, such as a tree branch, an occasional insulator broken by a charge of shot and the like. The line has been worked long enough to develop any probable trouble, and is itself a sufficient demonstration of the entire practicability of 10,000-volt transmission of energy. A third case is the Folsom Sacramento plant in California, which has now operated at 11,000 volts for the last six years without material trouble. Other plants at Niagara Falls, Fresno, Cal., Salt Lake City, Pachuca, Mexico, and a few other points have run successfully at 10,000 to 11,000 volts for five years or more.

Of systems operated at much more than 10,000 volts there are at present a good many, and experiments have been frequent and generally successful. The most noted of these is the Lauffen-Frankfort line, 108 miles long (three-phase), worked somewhat irregularly during the latter part of the summer of 1891. Operations were generally at 13,800 volts, though on a few occasions this was temporarily doubled. There was no noticeable leakage, but an insulator was now and then punctured even at the lower pressure, producing a tiny, irregular hole clear through from the neck of the insulator to the supporting pin. The insulators which supported the bare copper line were of porcelain with oil grooves. The line worked

well in all sorts of weather, but the total period of operation was too short to give this brilliant experiment much value as a precedent. A three-phase transmission at 14,000 volts, 14 miles to the works of the Oerlikon Company near Zurich, has been in successful operation for the past nine years.

Most of the large electrical manufacturing companies have during the last few years carried on experiments on high-voltage transmission, mostly with short lines near their factories. The range of voltages has varied from 10,000 to 25,000 or even 50,000, and the general experience has been that at the lower pressure mentioned successful working can be attained under almost any circumstances. At 15,000 volts indications are still very favorable, but at pressures of about 20,000 insulation begins to involve difficulties, both from extensive leakage in bad weather and occasional puncture. Here porcelain shows its marked superiority, and special insulators of this material can be depended on to keep down leakage and resist puncture at more than 20,000 volts under ordinary circumstances. There has not yet been long enough experience at these higher limits to determine the probable effects of time and bad weather. The most striking experiments in this line were carried out during the past few years at Telluride, Col., under the direction of the Westinghouse Company. A line mostly composed of common telegraph wire, and about 3.5 miles long, has been worked successfully for considerable periods at pressures up to 55,000 volts, transmitting a little less than 100 HP to a synchronous monophase motor. Within the past year the Telluride experiments have been extended to operation for several weeks at a time at a pressure of the enormous magnitude of 110,000 volts! Various kinds of insulators have been tried, including several makes of porcelain and glass. The best results have been obtained from highly vitrified porcelain and from special glass insulators. Poor porcelain appears to be inferior to common Western Union glass insulators. At 55,000 volts the line wires are luminous at night with a pale blue haze, and the tie wire forms a halo about each insulator. The static strain can be plainly felt in riding under the line, producing the customary bristling effect

on the hair. The loss of energy from leakage is trifling, however, under ordinary conditions,* and throughout these experiments it has plainly appeared that the difficulties of working at such voltages, while considerable, are yet much less formidable than had previously been supposed.

Let us now sum up our present knowledge of the transmission of electrical energy over high voltage lines. From a considerable amount of experience, we are sure that there is no real difficulty whatever in establishing and maintaining adequate insulation of either direct or alternating currents up to an effective pressure of 10,000 volts. Above this the experiments are less numerous, but it is quite certain that satisfactory results can regularly be reached up to 25,000 without very extraordinary precautions. With good climatic conditions 30,000 or 40,000 may be considered entirely practicable, with reasonable precautions.

At still higher voltages the difficulties are likely to multiply rapidly, and a point will ultimately be reached at which the cost of insulating devices will overbalance the saving of copper due to increased voltage. This point is at present indeterminate, and will always depend on the amount of power to be transmitted, the permissible loss in the line and unknown variables involving repairs and depreciation, cost and depreciation of transformers and so on. It is quite impossible from present data to set such a limit even approximately, for we know as yet nothing of the relative difficulty of insulating voltages considerably above the range of our experience. The next few years will show great progress in this direction. In Chapter XVII. will be found a full account of the present state of high voltage transmission.

In cases where continuous insulation is employed, it is for one of two purposes, chiefly to prevent interference with the circuit by such accidents as twigs or wires falling across the line, and either short circuiting the lines or grounding them. Aside from this, the only other object in insulation is to lessen the danger to persons accidentally touching the wires and to prevent the current straying to other circuits.

* About three per cent. in most of these tests.

With moderate voltages both these ends can be reached with a fair degree of success. With high voltages it is very difficult, and in many cases well-nigh impossible.

Nearly all materials which are available for insulation deteriorate to a very marked extent when exposed to the weather. Those substances which are the best insulators, such as porcelain, glass, mica, and the like, cannot be used for continuous insulation, and, in fact, our best insulators are mechanically so bad as to be impracticable. There is a large class of insulators complicated in chemical constitution, but mechanically excellent; these are the plastic or semi-plastic substances like gutta-percha, India rubber, bitumen, paraffin and the like. All of these are subject to more or less decomposition, more particularly those which are, through good mechanical qualities, desirable for insulation. All which have been mentioned are sufficiently good insulators to answer every practical requirement, if they do not deteriorate.

Gutta-percha and India rubber are decidedly the best of these; but gutta-percha is too plastic at anything excepting low temperatures to be mechanically good. Gutta-percha fills, however, an unique place on account of its remarkable ability to withstand the action of salt water, and it is the most reliable insulator for submarine work. For overhead work it is nearly useless, as the heat of the sun softens it so as to endanger its continuity, and even a moderate increase in temperature may decrease its specific resistance to a tenth of its ordinary value.

India rubber is, by all odds, the best all around insulator for overhead lines. In its pure state it deteriorates with very great rapidity; but when vulcanized by the addition of a small amount of sulphur, its chemical character is so changed as to resist both spontaneous changes and those due to the atmosphere to a very considerable extent, without injury to its insulating properties. It is, however, costly, and is eventually effected by the weather. To cheapen the manufacture of insulated wire a large variety of rubber compounds are employed, consisting of mixtures of rubber with various other substances intended to give the material good mechanical and insulating qualities at less expense. These rubber compounds

are much inferior to pure vulcanized rubber in point of specific resistance, but make a good and substantial covering for ordinary purposes. They are very generally employed for commercial work.

Insulated wires for overhead work may be divided into two classes. First, those which are so prepared as to withstand the weather to a considerable extent and to retain high insulating properties even in bad weather. Such wires are usually covered with compound fairly rich in vulcanized rubber, commonly protected outside with a braiding of cotton saturated with some insulating compound, and serving to protect the main insulation from mechanical injury.

The second class of wires includes those in which no solid insulating material is used, but which are thoroughly protected by a covering of fibrous material saturated with compounds of rubber, bitumen, or the like. These wires are most extensively used; the insulation is good in dry weather, and fair under most ordinary circumstances, but generally greatly inferior to those wires which are given a coating of rubber.

So far as protection of the wire from accidental contacts is concerned, either class of insulation is tolerably effective at moderate voltages until the covering becomes worn or weathered by long or hard usage.

As regards danger in touching such wires, at moderate voltages both kinds of insulation afford a fair degree of protection. At high voltages neither can be trusted, in spite of the apparently high insulation resistance. There is good reason to believe that any insulation employed on wires is greatly affected by the strain of high voltage. Tests made with the ordinary Wheatstone bridge give us no useful information as to the action of the same insulation under stresses of 5,000 or 10,000 volts. Tests made with pressures ranging up to even 500 volts show generally a noticeable, although very irregular, falling off in resistance, and the higher the voltage is carried the more likelihood of complete breaking down of the insulation and the more irregular the results.

It is improbable that even the most careful insulation with vulcanized rubber of any reasonable thickness would give a wire which, under a pressure of 10,000 volts, could be depended on to remove all danger to persons from accidental contact.

Even if entirely safe at first, it would be unlikely to remain so for any great length of time. So serious is the difficulty of continuous insulation of high pressures, that it is probably best not to place dependence upon it; but either to fall back upon bare wire with very complete insulation at the supports, or, if insulated wire be employed, to use an insulation intended only to lessen the danger of short circuits from falling objects, and to treat the line, so far as personal contact goes, precisely as though it were bare wire.

Information regarding the insulation of lines, whether of bare or insulated wire, under high voltage, is very scarce; but all such lines should be treated at all times as if they were grounded, in spite of any tests of the insulation that may have been made. Theoretically, one should be able to touch a completely insulated circuit without danger save from static charge; but, practically, it is unsafe so to treat any high voltage circuit.

The writer calls to mind one case in which a man was instantly killed, while standing on a dry concrete floor, by contact with a 10,000 volt circuit. He probably touched a bare portion of the wire, but so far from the general insulation of the circuit saving him, the current which he received was sufficient to burn into the concrete floor the print of the nails in one of his shoes. The ordinary tests on the line made shortly afterward showed no particular ground, nor was there any reason to believe that one existed at the time of the accident. Other accidents, under similar conditions, have occurred with arc light circuits of lesser voltage, on which there was a similar absence of perceptible ground. It is advisable, therefore, that all high voltage circuits should be treated as uninsulated, so far as contact is concerned, at all times, and if insulation tests are to be made upon them to determine the resistance to grounds, these tests should be made with, at least, the full voltage of the circuit. It is quite as well not to place too much reliance on insulation of any kind; but to regard a high voltage electrical circuit as dangerous, and to be treated with the same respect as is due to other useful, but dangerous, agents, like high pressure steam and dynamite, neither of which is likely to be abandoned on account of the danger that comes from careless use. The precautions taken, either with these or with high voltage cur-

rents, should be in the direction of preventing such carelessness as might result disastrously.

An electrical circuit should be so installed that no material risk will be run by any person who is not indulging in willful interference with the line, and in such case, if an accident occurs, the victim is deserving of no more sympathy than one who deliberately stands in front of an express train.

If the circuit is of bare wire, there can be no doubt in the mind of anyone as to its dangerous character, whereas, if insulated wire is employed, there is likely to be established a certain false sense of security. There is no good reason, therefore, for advising the extensive use of insulated wire for high voltage lines.

The ideal overhead circuit is one in which the conductor is thoroughly insulated as regards leakage, carefully protected from danger of wires or branches falling across it, and placed out of the reach of anything except deliberate interference of human beings. There may be places at various points along the line where insulation would be desirable, in order to avoid extensive cutting away of trees, branches of which might fall upon the line, or where local regulations require the use of insulated wire. Except under these circumstances continuous insulation increases the cost and maintenance of the line without giving any adequate returns in security. On rare occasions, portions of the high voltage circuit may have to be placed underground. Here only the very best quality of insulation should be employed, preferably high grade rubber-covered cable thoroughly protected by an outside sheathing of lead against the effects of moisture, and installed in smooth, clean, dry, and accessible conduits. The character and amount of the precautions to be taken depend on the voltage of the circuit, and there has not yet been enough experience, at pressures above those which must be classified as moderate (that is, from 1,000 to 3,000 volts), to get sufficient data to enable one to say absolutely what are sufficient precautions. The best course to follow is, knowing the voltage at which the transmission is to be made, to select a cable which cannot be experimentally broken down by twice the voltage in question, and to install it with every precaution against deterioration. If any great work is to be accomplished,

the necessary expense is so considerable as to make it well worth while to enter into a careful investigation as to the particular voltage in hand.

Wherever underground cables are employed, they should be subjected to a daily insulation test, and the greatest care should be taken with the joints, which are, in almost every case, the weakest point in the insulation.

From what has been said, it should be understood that while the problem of installing high voltage lines is unquestionably a difficult one, we have not yet had sufficient experience to be able to say definitely how difficult it may be. It is very certain that much more can be done than has been accomplished. It seems probable that so far as overhead work is concerned, it will be practical to employ voltages considerably greater than those now in use. Before any limit can be set to the progress in this direction, we need ample experimental data, not only on the behavior of insulation at a very high pressure, but on the maximum voltage which is likely to be encountered when a certain effective voltage is to be employed. This opens up a wide field for investigation, involving conditions of unknown seriousness, connected especially with the electrical peculiarities of alternating currents, which there is every reason to believe will be employed almost exclusively on high voltage work.


The special difficulties to be met in working with alternating currents are two—inductance in the line and apparatus, and electrostatic capacity, accompanied by the very serious phenomena of electrical resonance. In addition to these, whatever the character of the current used for transmission purposes, there is danger of getting accidentally upon the line a voltage much higher than the normal. Inductance is met with to a very considerable extent in all alternating circuits; resonance in a small degree is probably much commoner than is generally supposed, and abnormal voltage, due to the generators themselves, must always be guarded against.

Passing at once to the practical side of the question, we find that when an alternating current is sent through any conductor, it has to deal not only with the electrical resistance of that wire, but with a virtual resistance due to the fact that the electromagnetic stresses set up at any point of the conductor set up electromotive forces at other points

in the same conductor, which oppose and retard the passage of the current.

These matters have been fully discussed theoretically in Chapter IV., and hence will be here but briefly mentioned.

For example, if a wire be bent into a couple of spiral coils like Fig. 219, the electromagnetic field of one coil will affect the

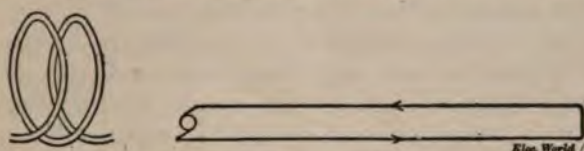

FIGS. 219 AND 220.

other, just as we have induction from one separate ring to another in Fig. 4, page 12. If such a spiral has an iron core, this *self-inductance* will be much increased. Even if only a straight wire be concerned in the carrying of current, there will be a similar inductive relation between the inner and outer portions of the wire at any point, since the electromagnetic stresses exist inside the wire as well as outside.

Let Fig. 220 represent a circuit carrying an alternating current, which at a given moment is flowing as shown by the arrows. The electromagnetic field set up by this current in the loop has a direction perpendicular to the plane of the paper, and sets up an E. M. F. opposing that of the wire. The greater the area of the loop, *i. e.*, the farther apart the two wires, the greater proportion of the electromagnetic field will pass *within* the loop and produce self-induction.

Similarly, the larger the wires for a given distance between them, the less effective field within the loop to set up inductance. In fact, the amount of inductance in the circuit depends directly on the ratio between the radii of the wires and the distance between them. So if the diameter of the wire is decreased to one-half the original amount, the wires must be strung only half as far apart in order to produce the same inductance.

The practical effect of inductance in the line is to necessitate the use of an initial E. M. F. large enough to overcome the inductive loss of voltage, as well as that due to resistance, and so keep the E. M. F. at the receiving end of the line up

to its proper value. The simplest way to take account of inductance in figuring a line is to treat it as an additional resistance, which, while it does not materially increase the energy lost in the line, must be taken into one's calculation of the E. M. F. to be delivered by the generator. Its effect

is to require a little greater generator capacity, *i. e.*, a machine giving, say, 1,050 volts, must be used when the effective voltage wanted is only 1,000. The combined resistance and inductance of a line is called its impedance, and this may be readily tabulated for common cases, giving the *impedance factor*—that is, the relation of the total impedance to the real line resistance. This is the easiest way of considering inductance in the line computation.

The following table gives the impedance factors for wires from 0000 to 6 B. & S., for 120 and 60 cycles per second, and for a uniform distance between wires of 18 inches. The impedance factor increases with the size of wire because the resistance decreases rapidly for larger wires; and the question of length of wire does not enter, because both inductance and resistance increase directly with the length, so that they are always proportional. The E. M. F. of inductance increases with the cycles since the field in the loop changes more rapidly, and, therefore, gives a greater induced E. M. F.

NO. WIRES.	IMPEDANCE FACTOR.	
	60 PERIODS.	120 PERIODS.
0000	2.3	4.3
000	2.0	3.7
00	1.79	3.08
0	1.53	2.54
1	1.39	2.16
2	1.28	1.85
3	1.19	1.61
4	1.12	1.42
5	1.08	1.30
6	1.05	1.21

The figures in the table are for a complete metallic circuit, consisting of two parallel copper wires, and the impedance factors may be applied at once either to determine the virtual

resistance of a given wire, or the total drop of voltage that will take place on a given circuit. Suppose, for example, that we have an alternating circuit composed of No. 1 wire, delivering 1,000 volts at the receiving station. Suppose the volts lost due to resistance alone at full load current are 90, and the plant is working at 60 cycles. Then the total loss in volts will be $90 \times 1.39 = 125.1$, and the voltage of the generator must be 1,125.1 in order to give 1,000 volts at the end of the line; and so on for any load on any size of wire. It is apparent that it is undesirable to use very large wires for high frequency alternating currents, and in some cases it is better to divide the circuit, using two No. 1 wires, for instance, instead of one No. 000.

It must not be forgotten that one of the effects of inductance is to cause the current to lag behind the E. M. F., so that for the delivery of a given amount of energy at the receiving end, a current larger than the watts divided by the E. M. F. must be delivered by the generator, which must be of corresponding capacity. This increase may amount to 10 or 15 per cent., according to the character of the load, often less, and sometimes more.

Intimately connected with this is the fact that in finding the voltage at any part of the system account must be taken of all the impedances in circuit, for they are not generally in the same phase, so that their geometrical sum is almost always less than their algebraic sum. Hence, while the impedance factor applied to the line will give correctly, neglecting line capacity, the drop produced in each line wire, the voltage across the terminals of the line will usually be different from that figured from the impedance factor applied to the line alone. This difference is, generally, not great unless there is capacity at the receiving end. All these considerations complicate the exact computation of a system, and unless its character is thoroughly predetermined, no exact computation can be made.

Practically these complications can be for the most part brushed aside in designing a plant. In very few cases will the impedance factor of a line be over 2, which means generally that the whole matter can be take care of by an increase in generator voltage of less than 10 per cent.

It should be noted that the impedance factors given can be applied at once to three-phase circuits, in which the wires are equidistant. The impedance factor of such a system is the same as that of any pair of the wires. Really the most serious practical difficulties in an ordinary alternating plant are those in which the generator is involved by inductances in the system. These are of far greater moment than the impedance factor of the line. An inductance in the system produces two effects on the generator—first, as just noted, it demands a larger current to deliver the same energy; second, it tends to beat down the E. M. F. of the machine. This effect is analogous to that produced by shifting the brushes of a continuous current generator away from the position of maximum E. M. F. (See Chapter V.)

This reaction of the armature is serious in that it not only demands a considerable increase in the exciting current, but causes a severe strain on the insulation when it suddenly ceases. It is not uncommon to find an alternator that requires on a heavy inductive load double the light-load excitation of the field. For instance, if the voltage be 2,000 on open circuit, the excitation may have to be increased on inductive load to a point that on open circuit would give 4,000 volts. If, now, this load is cut off, or the line is broken, the insulation will be exposed, momentarily, at least, to double the normal voltage.

Such generators should not be used on inductive loads or in any case where the extra strain on the insulation is important. It is perfectly easy to build a generator which requires only 10 to 25 per cent. more excitation at full and inductive load than at no load, and such machines should be used in all cases where a steady voltage under all working conditions is needed. The other type has its uses, but the general work of power transmission is not one of them. With a properly designed machine, inductive load is little to be feared.

Another possible source of danger is that under certain conditions of inductive load the reaction of the load on the generator, without materially lowering its effective voltage, may so change the shape of the E. M. F. wave as to give to it an abnormally high maximum, and thereby greatly to increase the strain on the insulation. This effect may readily occur,

but usually in so small a degree as to be of little moment. Occasionally, owing to a combination of severe inductive load and badly designed generator, the results may be somewhat formidable, the more so as the change takes place under heavy load and not, as in the case just treated, only on open circuit or a sudden light load. The rise in pressure thus produced may amount to several times the nominal voltage. The same sound principles of design that insure good regulation under changes of load will obviate any danger of this kind. In fact, most of the possible disturbing factors in alternating current work become negligible in an installation carried out with regard for the general principles of good engineering.

These abnormalities of voltage lead naturally to the consideration of another far more serious, due to the static capacity of the system. Of course, the fact that under certain circumstances capacity in the system will cause a lessening of the apparent "drop" on the line, or even overcome it altogether and show a higher voltage at the receiving end than at the generator, is already well known to the reader. This is, however, but a special, and, save for its convenience in connection with synchronous motors, a trivial case of the phenomenon known as *electrical resonance*. (See p. 150.)

The practical importance of this has been but recently realized, although the thing itself is strictly analogous to very familiar occurrences. Suspend a heavy weight by a string a yard long or so, and then begin tapping the weight lightly with the finger. So long as the taps are irregular or bear no particular relation to the time of oscillation of the weight considered as a pendulum, the only effect will be slightly jerky vibrations. As soon, however, as the taps are so timed as to coincide with the swinging period of the weight, it will slowly get under way, and presently work up an oscillation of considerable amplitude. Each tap catches the weight at the end of the double swing started by the previous tap and augments its motion.

Every system capable of oscillation is similarly affected by impulses coinciding with its natural period, which is determined by its physical properties. This rapid growth of amplitude through synchronous impulses is generally known as resonance from the very marked way in which the phenom-

enon appears in a sounding system such as that composed of a tuning fork and the box (resonator) to which it is generally affixed.

Every electrical system has a definite period of oscillation determined by its particular properties. If we could apply an instantaneous electromotive stress to any point of it, the effect would be that the resulting strain would travel back and forth with a definite frequency until its energy would be completely exhausted by doing work on various parts of the system. The action resembles that which takes place when we strike the end of a long rod with a hammer. An impulse is sent out at a rate depending on elasticity, density, and so forth, travels to the end of the rod, is reflected, and so goes on swinging back and forth until the energy is frittered away. This corresponds to electric oscillations on open circuit.

The two properties of an electrical system which determine its vibration period are its self-induction, which is analogous to inertia, and its capacity, which resembles elasticity in the dielectric, capable of taking up and returning energy. Resistance, like intermolecular friction in the rod just referred to, determines the rate at which the vibrations will die out by yielding up their energy to the system, but has ordinarily a negligible effect on the vibration period.

This period in an electric circuit is to a close degree of approximation given by the following formula:

$$T = .00629 \sqrt{LC} = \frac{2\pi}{1,000} \sqrt{LC}.$$

In this T is the natural time period of the circuit expressed in seconds, L is the coefficient of self-induction in henrys,




FIG. 221.

and C the capacity in microfarads. For example, suppose we are dealing with a circuit of which the capacity is two microfarads and the self-induction one henry. Let it be arranged as in Fig. 221. For simplicity the inductance and capacity are shown localized and in series as would happen if a line ran

through a group of series transformers and thence into a cable. If the line were open-circuited beyond the cable, we might find a very severe strain on the cable insulation. The period of this line would be .00887 second—about 113 cycles per second. If this should chance to be the frequency of the generator it would be in resonance with the line, and each wave of E. M. F. sent out by the generator would add itself to another wave just starting out in the same direction. A period later these two added E. M. Fs. would be reinforced by the next generator wave, and so on indefinitely.

The only thing which prevents the resultant voltage from rising indefinitely is the effect of energy losses in causing each wave to die out gradually as it continues its oscillations, so that only a limited number of waves can add materially to the resultant E. M. F. across the terminals of the capacity.

In a given circuit the relation between the initial voltage and the voltage of resonance can be easily determined to a fair degree of approximation. It is, neglecting minor reactions, as we have already seen,

$$E' = \frac{\pi L}{R} E.$$

In this equation E' is the E. M. F. of resonance, π the frequency, L the self-induction in henrys, R the ohmic resistance, and E the initial voltage. Applying this formula to the case just discussed, and assuming the resistance of the line to be 15 ohms and the initial voltage to be 2,000, we find

$$E' = \frac{113 \times \pi \times 2,000}{15} = 15,066 \text{ volts.}$$

A very moderate line voltage may thus, in a resonant line, give rise to a pressure quite capable of rupturing any ordinary cable, or causing serious trouble on an overhead line, to say nothing of greatly increasing the danger to persons and property. If the working pressure were 10,000 or 15,000 volts, the E. M. F. of resonance might rise to an appalling amount.

Fortunately this theoretical value is in practice generally much reduced by hysteretic losses and Foucault currents in any iron-cored coils in circuit, waste of energy in the dielectric, and other minor causes of damping the electrical oscillations,

even when resonance is complete. Still, dangerous rises in voltage are very possible. When the frequency of the applied E. M. F. differs somewhat from the natural period of the line, resonant effects can evidently still take place, but in a rapidly lessening degree; when the oscillations are strongly damped by the presence of iron, the total resonant rise is considerably diminished, but it varies less rapidly as the resonant frequency is departed from.

A resonance curve for various capacities shows that the rise of voltage extends over quite a wide range of variation of capacity, but is large over but a small range. The shape of such a curve necessarily varies widely, as the resonance is more or less damped by resistance, iron-cored coils and so forth; but we may be quite sure that the maximum resonance will occur at not far from the point indicated by our equation for the vibration period of the circuit, and that the maximum E. M. F. of resonance will usually be considerably less than that given by the theoretical equation.

In practical alternating circuits the current wave is never truly sinusoidal, but consists of a main or fundamental wave with the odd (*i. e.*, 3d, 5th, 7th, etc.) harmonics of various amplitudes superimposed upon it. In nearly every case the third harmonic is the most prominent and is quite capable of causing resonance, even to a dangerous degree, if it happens to fall in with the frequency of the system. The extent of the rise in voltage, however, is very much less than that produced by resonance with the fundamental frequency. The point at which resonance occurs and the rise of E. M. F. are found for the harmonics by the formulæ already given.

So far as the line is concerned, the facts regarding resonance can be easily computed with tolerable accuracy. From well established data it is evident that the line capacities are generally so small as to make the oscillation period so short as not to correspond with the frequencies in ordinary use except in the upper harmonics, which are generally of small moment, although one case of severe resonance from a higher harmonic (probably the 7th) has come to the author's notice.

To facilitate computation the following table is given, showing the inductance and capacity of ordinary overhead lines per mile in millihenrys and microfarads respectively. The wires

are supposed to be of copper and to be suspended as a parallel pair at a distance of 18 inches, as in the case of the table of impedance factors. Within the range of ordinary practice varying the height above the ground makes no sensible difference in inductance or capacity.

SIZE NO.	INDUCTANCE.	CAPACITY.
0000	1.48	.0102
000	1.52	.0099
00	1.56	.0097
0	1.59	.0095
1	1.63	.0093
2	1.67	.0090
3	1.71	.0088
4	1.74	.0086
5	1.78	.0084
6	1.82	.0083

It must be remembered that not only the line capacity, but the capacity of the receiving apparatus, must be considered. The former is but small, except in the case of underground or submarine cables, for which the capacities are likely to be from $\frac{1}{4}$ to $\frac{1}{2}$ microfarad per mile, as ordinarily manufactured. High voltage translating devices, like synchronous motors and transformers, often may have static capacities of several tenths of a microfarad.

As a matter of fact, experience seems to show that one is not likely to stumble upon very serious resonance in overhead lines, although in cables it is easily possible. On the other hand, it is more than likely that resonance of a minor kind, mostly from harmonics, is far commoner than is generally supposed. High pressure alternating currents often show a tendency to jump across air spaces and insulation that is hard to account for otherwise. This tendency must not be confused with the occasional displays of atmospheric electricity on overhead lines. It is not uncommon to get somewhat severe shocks from an aerial line entirely disconnected from any machinery.

The most obvious way of avoiding trouble from resonance, when it exists or is threatened, is to vary the frequency, inductance or capacity so as to throw the oscillation period of the system and the frequency of the current far apart. The fre-

quency is usually fixed by other considerations, but inductance and capacity are varied with the utmost ease. In fact, they are never constant in practice.

The readiest way of getting a clear idea of the inductance of a system is from its power factor, *i. e.*, the ratio between the apparent energy as found from voltmeter and ammeter readings and the real energy as given by a wattmeter. This not only gives the current which must be carried for a given amount of energy, but measures the angle of lag between current and *E. M. F.* In fact,

$$\frac{\text{Energy}}{\text{Volt-amperes}} = \cos \phi,$$

which gives the angle of lag at once. But in general

$$\tan \phi = \frac{2 \pi n L}{R}.$$

So that knowing the ohmic resistance of a circuit and its "power factor," we can get a tolerable approximation to its coefficient of self-induction, *R* being reckoned in ohms and *L* in henrys. As, however, the lag is influenced by both inductance and capacity, the formula is principally of use in connection with individual pieces of apparatus.

From a practical standpoint it is quite out of the question to compute the total inductance of a proposed system on which any resonance effects depend, with anything like accuracy, since the character and amount of the apparatus is indeterminate. One can, however, gain from experience a tolerable idea of the probable lag in a mixed system, which will at least tell whether there is imminent danger of resonance. There is really little danger save from harmonics at ordinary frequencies unless the static capacity involved is large—several microfarads at least.

One other phenomenon in connection with alternating current work deserves notice here. Several years ago Lord Kelvin pointed out that the ohmic resistance of a copper wire was greater for alternating than for direct currents. This is for the reason that the current density through the cross section of the conductor is not uniform when the current is an alternating one. The instantaneous propagation of any current

is mainly along the surface of the conductor, and only after a measurable, though short, time is the condition of steady flow reached.

When the current rapidly alternates in direction the interior of the conductor is thus comparatively unutilized, for before the flow has settled into uniformity its direction is changed, and the original surface flow is resumed. The larger the wire and the greater the frequency the more marked this effect. Fortunately, with the common sizes of wire and the frequencies ordinarily employed for power transmission work, it is quite negligible. At 60 periods the increase of resistance due to this cause, in a conductor even half an inch in diameter, is less than one-half of 1 per cent. Any line wire that is allowable on the score of its impedance factor will be unobjectionable on this account as well. Only occasionally, as in bus bars for low voltage switchboards, is it worth considering, and in such cases the use of flat bars, half an inch or less thick, or tubular conductors, will obviate the difficulty.

We have now investigated all the important factors that enter into the design of a transmission line, whether for direct or alternating currents. Let us review them with the idea of seeing how they enter into practical cases. First comes the all-important question of initial voltage, involving the choice between the direct generation of the working pressure or its derivation from transformers, if alternating currents are used. We have already seen the practical limitations of voltage for direct currents. With alternators the commutator troubles are absent, and the limitations are those imposed by generator design. The higher the voltage of a dynamo the more space on the armature must be allowed for insulation, thereby cutting down the output of the machine. Hence the practicable voltage depends on the size of the generator.

In a general discussion it is difficult to make exact statements as to what can or cannot be done, but experience seems to show that at present 10,000 to 13,000 volts are the greatest pressures that can economically be derived from the generator, even in very large units, while in units of 100 or 200 KW it is seldom advisable to go above 3,000 to 5,000. Higher voltage than this has been attempted, but there is good reason to believe that except in large machines the re-

duced output and increased cost of construction lead to a higher cost per KW output than if low voltage generators with transformers were employed.

For present purposes, then, we may assume that in a large number of cases the voltage of the generator will not be materially above 3,000 volts. With raising transformers 10,000 or 20,000 volts is known to be a practicable pressure. At some particular distance, then, in each case, the annual interest and depreciation charge against, say a 3,000 volt line, will equal the interest and depreciation charge against, say a 10,000 volt line, and its raising and reducing transformers. For a fair comparison two things must be noted—first, that 3,000 volts is an available pressure on a working circuit, so that it has the advantage over 10,000 volts, of both sets of transformers—second, that the systems must be of the same efficiency: *i. e.*, the line loss in the first case should be equal to the losses in both line and transformers in the second case.

The exact distance at which the costs by the two methods become equal must be computed from the data above outlined in each individual case on account of the variations introduced by size of units, cost of copper and transformers delivered, differing conditions of depreciation, and so on. The distance, however, is generally longer than would be at first sight supposed. Assuming an equal rate of interest and depreciation in each case, a few hundred HP as the amount transmitted and current prices of copper and large transformers, we arrive at the following approximate result: At about 6 miles 3,000 volts from the generator and 10,000 volts with raising and reducing transformers become equal in cost. This distance rises to between 9 and 10 miles if 5,000 volts only are derived from the transformers. Generators wound for above 3,000 volts generally will require reducing transformers for the working circuit, so that they have the advantage of the raising and reducing system by only one set of transformers.

In most cases it is desirable either to generate a voltage which can be used on the working circuit or to use from 10,000 to 20,000 volts derived from transformers or in large units from the generator itself. So much for the selection of a proper line voltage.

As to loss in the line much has been said already, and the

best advice that can be given is to make a few trial computations along the general lines indicated. Almost every case will require special treatment in certain particulars, depending on the conditions of service. For example, a common complication is the supply of power or light, or both, at a point perhaps halfway along the line. Then, according to the amount and kind of service, it may be desirable simply to tap the line, to tap the line for power and use a motor generator for lights, to establish a substation with regulating apparatus, to compound the generator for the point in question and use either of the above methods at the end of the line, to install rotary transformers, or to run a separate line with regulators at the generating station. Such details will be treated at length in Chapter XIV.

The line structure should preferably be of bare copper wire carried on strong wooden poles. Do not put it underground unless you have to do so. It may be necessary to insulate portions of the wire, but it is best not to put much faith in an insulating covering. Instead, it is desirable to make a very thorough job of insulation at the supports, and provide for the easy inspection of the line.

In using alternating currents inductance in the line must always be considered. Practically it means raising the voltage of the generator or raising transformers by a few per cent., unless a fair part of the load is in synchronous motors which can be employed to counteract the inductive drop. In nearly every case its real importance is small, in spite of its scaring the uninitiated now and then.

So, too, with the inductive load. Its real effect is merely to increase the current in the line by a small amount, usually less than 15 per cent., and to demand increase of excitation at the dynamo. If this is so designed as to regulate badly, an inductive load will render it difficult or impossible to keep a uniform voltage. On the other hand, a generator capable of holding its voltage from no load to a full and inductive load with an increase of only 15 or 20 per cent. in the exciting current will usually give no trouble whatever with reasonable attention to the regulators.

The total net result of inductance in line and load is to call for a well-designed generator with good inherent regula-

tion and a reasonable margin of capacity. One who knowingly installs anything else deserves all the troubles that inductance can produce.

Rise in voltage, on throwing off the load or through distortion of the current wave by an inductive load, can be reduced to insignificance by employing a proper generator as just noted. Aside from this, a mixed load, particularly if it consists in part of synchronous motors, seldom has a bad power factor or great and sudden changes in its amount. Exception must here be made with respect to the constant current transformer systems exploited of late in connection with series alternating arc lamps. These unless fully loaded give a severely inductive load, and must be thrown upon the circuit very carefully to avoid serious fluctuations of voltage.

As regards static disturbances, few overhead systems have capacity enough to give cause for alarm. Difficulties are to be looked for chiefly on very long lines, longer than any now in use, and those composed in part of underground or submarine cables. In these cases one may sometimes know the conditions well enough to calculate the actual result in rise of voltage. More often the data are incomplete, and the simplest way out of the difficulty is to try the effect of varying the capacity of the system before it goes into regular operation. If the addition of a condenser, say of one-third microfarad, makes a sharp variation in the voltage, look out for resonance and investigate the capacity of the system, step by step. A change of capacity or inductance can be made sufficient to avert any serious danger of resonance under ordinary conditions. Resonance chargeable to the variation of harmonics under changes of load and to changes in inductance and capacity due to apparatus used on the system is hard to foresee and must be treated symptomatically when it chances to appear.

We may now pass to the practical calculation of a line.

CASE I.—The simplest possible case is the transmission of direct current over a short distance. Let it be required to deliver 200 HP to a machine shop for operating machinery and a small tramway over a distance of one mile and a half, power to be about equally divided between small motors and tramway. Source of power—water power—owned outright by the

company, and ample in amount. Load on small motors steady, on tramway very variable. In a case of this kind the use of direct current is advantageous, since with plenty of power considerable drop can be permitted, and the use of any alternating system would involve changing to direct current for the tramway. For use in a machine shop the speed of the motors need not be very uniform, so that there will be no especial difficulties of regulation. On account of size of motors 500 to 600 volts will be the highest permissible voltage.

There are several courses open in determining the drop. The easiest is to assume for the final voltage such a value as will give the greatest drop compatible with convenient regulation, and for the initial voltage that delivered by a standard railway generator. A special generator is objectionable on account of both first cost and difficulty of repairs. The generator can be counted on for 600 volts maximum. If, therefore, we run it at a normal no-load voltage of 550, and over compound about 10 per cent., we shall get no more than about 550 volts at the motors. During the time that the tramway is working we can let the voltage fall to 500, for which the tramway motors give their normal output, without interfering materially with the regulation of the other motors. We take the maximum drop, then, at 100 volts. The amount of power to be delivered at full load is 200 HP.

Taking the average commercial efficiency of the motors at 80 per cent., the electrical HP to be delivered is 250, which equals very nearly 187,500 watts at 500 volts. The current, therefore, is 375 amperes. To allow for sag, joints and accidental variations, we should take the mile as about 5,400 ft. instead of 5,280. We are now ready to determine the cross section of the wire by the formula already given. We then have

$$\text{cm} = \frac{16,200 \times 11 \times 375}{100} = 668,250.$$

Looking now in our wire table, we find that the nearest convenient approach to this cross section is three 0000 wires, each of 211,600 cm. We might reinforce these by a No. 5 wire and get almost exactly the amount required, but the game is hardly worth the candle, since we are working for minimum

first cost, and a very trifling increase of drop is not worth considering, particularly as the maximum load will be for only a few minutes at a time. A nominal 200 KW generator will serve our purpose if built, as standard railway generators are, to stand small and temporary overloads at any time. The cost of the copper for such a circuit is considerable; 48,600 ft. of No. 0000 will be required, weighing, when insulated, as it generally would be in running into a town, about 750 lbs. per 1000 ft. The total weight would then be 36,450 lbs., costing, at 15 cts. per lb., \$5,467, quite nearly \$22 per HP delivered. Occasionally it would be advisable to allow greater drop than that here assumed.

CASE II. A cotton mill is operated by steam, coal costing about \$5 per ton, the actual brake horse-power required to drive the machinery being 660. Speed must be constant, load is very uniform, and any reduction of available horse-power cuts down the output, all of which is badly needed to fill contracts. A cheap water power, distant 22,000 ft., is acquired by the mill owners. Sixteen thousand cubic ft. of water per minute is available, and the greatest head that can be utilized is 30 ft. At the existing price for coal electrical transmission will certainly pay. The full 660 HP must be delivered, or the power will have to be supplemented by steam, unless part of the looms are shut down.

The given amount of water will produce, when utilized in first-class turbines, almost exactly 800 mechanical HP. Two turbines are used for security against breakdown, and each runs 150 revolutions per minute. The commercial efficiency of the plant

must then be at least $\frac{660}{800} = 82.5$ per cent. Taking 300 KW

units for generators and motors we can be sure of a commercial efficiency of .93 in each machine. This limits the efficiency of the line to not less than 95.4. It is evident at once that direct coupled generators must be used, since the 2 or 3 per cent. lost in belting would be quite inadmissible.

As to voltage, it is evident that the highest available in a 300 KW unit should be used. Without going into special windings, the voltage would be, say, 4,000 over compounded about 5 per cent., giving 4,200 at the brushes. At the assumed efficiency of the motors there must be delivered to them

529 KW. At 4.6 per cent. drop in the line 132 amperes must be the current. All question of inductive drop may be neglected, since the motor field can be adjusted to compensate for it. Taking the actual length of circuit at 45,000 ft., and employing the formula as in Case I., the cross section of conductor comes out as 355,100 cm.

This is very nearly met by three No. 00 B. G. W. wires. Wire drawn to this British wire gauge can be readily obtained without increased cost. The combined section of the three is but a little over 2 per cent. more than that required, hence will serve excellently. Supposing bare wire to be used, the weight of each conductor per thousand feet is 369 lbs. The total weight of copper is then 49,815 lbs., costing, at 15 cents per lb., \$7,472. Any increase in the loss in the line will cause a failure to deliver the required power and necessitate the operation of a subsidiary steam plant, or the shutting down of nearly a score of looms for each per cent. decrease in efficiency. Doubling the line loss would save \$3,736, but at a cost and trouble of a 40 HP steam plant, or the loss of the output of 75 or 80 looms. In a case of this kind the easiest way of reducing the cost of line would be to use the three-phase synchronous system, which would save a quarter of the above copper at the same efficiency. Generators and motors of more than 4,000 volts would give even better results if thoroughly reliable, as they now would be for units of the size in question. Using 10,000 volt three-phase generators and motors, of course of the stationary armature type, one could keep the total loss in the line down to 2.5 per cent. at a cost for copper of a little less than \$2,000, at the price assumed for copper in this example.

CASE III. It is desired to deliver for general service in a city 1,000 KW from an ample water power 20 miles distant. Power is to be used for arc and incandescent lighting, and a motor service of unknown amount, possibly as great as 500 HP; 3,000 to 4,000 HP can be obtained at the power station; and allowance must be made for extensions.

On account of reduced cost of line the three-phase system is desirable, effecting the distribution by secondary mains at about 220 volts between wires, using a balance wire for lamps. This requires a little less than 30 per cent. of the copper

needed on the two-wire system with the same voltage at lamps. Evidently raising and reducing transformers should be used, and we may allow, to keep within quite conservative bounds, 10,000 volts on the line. We should first decide on the generators. Four hundred KW is a convenient size, three being used for the total plant. The voltage should be moderate; say, 500 volts. With this preliminary, let us figure the line. We can conveniently lose about 10 per cent. of the energy, say, 5 per cent. in the two banks of transformers and 5 per cent. loss in the line. The voltage at the receiving end will be 9,500, with 10,000 at the raising transformers. As to regulation, the distributing system is worked from a sub-station where the regulating is done.

Since the copper required is three-fourths of that needed for a two-wire system at the same voltage, each of the three wires will have one-half the cross section of either wire on the two-wire system. We may, therefore, use our previous formula if we take account of this factor one-half. The simplest way of doing it is to take the single distance of transmission instead of the double distance. As to the current in the formula, it must be the equivalent single-phase current. If we write

$$\frac{W}{V}$$

instead of C , we shall avoid all confusion on this score. Our formula then becomes

$$c. m = \frac{D \times 11 \times \frac{W}{V}}{V_1},$$

wherein D is the distance of transmission, W the watts delivered or received, V the voltage of delivery or reception, and V_1 the volts lost in the line. In our case $D = 108,000$ (the mile being taken as 5,400 ft.), $V = 9,500$, $V_1 = 500$, $W = 1,000,000$. Then $c. m. = 250,000$ (nearly).

But we must remember that our load is a mixed one of lights, and probably both synchronous and induction motors. Hence it will have an inductance. Hence a current somewhat larger than that given by

$$\frac{W}{V}$$

must be taken. With fairly good luck in our proportion of lights and synchronous motors, 5 per cent. increase will be enough to allow. At worst it could hardly be greater than 10 per cent., which would mean a very small increase in ohmic drop. Taking it at 5 per cent., we add that amount to our cross section and obtain 262,500 c. m. The nearest approach to this with standard wires is two No. 00 = 266,000 c. m.

Now as to inductive drop. At worst the impedance factor of the line will not be greater than 1.79, with 60 periods and wires strung 18" apart. Therefore, a rise of less than 4 per cent. in our generator voltage will take care of the inductance in the line. As to capacity, each pair of wires will have a capacity of less than $\frac{1}{100}$ microfarad per mile, so that we need not borrow trouble on the score of resonance. The effect of total inductance on the generator is small, since the power factor of the system is likely to be as great as .95, and if the generator is even tolerably well designed, a few per cent. increase in excitation will compensate for this. Now computing the total amount of copper we find it to be 261,144 lbs., costing, at 15 cents per lb. for bare wire, \$39,171. Except under unfavorable climatic conditions one would be likely to go to 15,000 or 20,000 volts if raising transformers were to be used at all. These would require respectively 44.4 per cent. and 25 per cent. of the total weight of copper indicated for 10,000 volts. The computation of the line would be precisely similar to that just explained.

A very simple and accurate formula for giving the total weight of a three-phase circuit directly, neglecting inductance, is

$$W = \frac{100 D_m^2 \overline{V}}{V},$$

D_m being the distance of transmission reckoned in thousands of feet.

We now have a working line laid out, and feel sure that no contingencies we are likely to meet will cause the drop to vary much from 5 per cent., since within the probable range of power factor that can be found in a mixed plant both line and generators are well able to take care of the variations. The net result of inductance has been to increase our allowance of

copper by 5 per cent., and to require 10 or 15 per cent. margin of excitation and current capacity in our generator.

This may seem a rough and ready process for figuring a transmission line, but it gives a safe and conservative result as nearly exact as the data generally available for a new plant permit. If the capacities and inductances of the future system could be predetermined, we could take their vector sum and compute a small correction to our factor of safety in the generator. If the future load were exactly known we might wish to change the drop slightly. No exact data are available under ordinary circumstances, hence we must rely on our judgment in selecting the drop and factor of safety in the generator, which, unless it be downright bad in design, will have margin enough to meet any reasonable requirements.

A convenient formula giving cost directly is

$$P = \frac{\rho D^2 W}{V},$$

wherein P is the total cost of the conductors in dollars and ρ the current price of bare wire in cents per lb. Since an aluminium line has almost exactly half the weight of a copper line of equal conductivity, this formula and the preceding one may be used for computing an aluminium line by simply writing the factor 2 in the denominator.

CHAPTER XIII.

LINE CONSTRUCTION.

THE first consideration is the general question of location. Other things being equal it is obvious that a direct line is the best, but as a matter of fact it is seldom altogether practicable. A line must above all things be secure against interruptions, and with this in view both the location and the constructional features should be determined.

In smooth and easy country a nearly straight line can usually be laid out. For large plants carrying large amounts of power at high voltages it is often desirable to buy the right of way outright. Such has mainly been the policy pursued in the transmission from Niagara to Buffalo, and, while expensive, it gives an absolute command of the situation. In some States electric light and power companies are given the right of eminent domain to make such ownership possible.

In cases wherein the purchase of such a location is impracticable or would, as often happens, involve very serious expense the best thing is to secure right of way along the public roads, so far as they can be conveniently utilized, and right of way for the pole line through such private property as may be in the contemplated route. Rights along the public roads are very desirable, as giving capital facilities for line inspection and repair without expense. Right of way merely for the line across private lands, with proper facilities for access, can generally be cheaply secured. Many owners are public-spirited enough to give it for the asking, or for very reasonable compensation when a strip of land has to be taken for a roadway.

In small transmissions the public roads are most desirable as a route, using private lands only for occasional short cuts.

Since a good road along the pole line is highly desirable, the route should be taken through clear and accessible country, so far as is possible.

Places to be avoided when possible, even by a detour, are

marshes, where poles are always hard to set and maintain and roads are difficult to construct; heavily wooded country, where there is constant danger to the line from falling branches and the like; and rough rocky slopes, where construction is difficult and the line, when constructed, is highly inaccessible. Sometimes the topographical conditions are such that these difficulties have to be met, but they are always serious.

In a wooded region the only proper plan is to secure right of way broad enough to permit clearing away the trees so that they cannot interfere with the line wires, even were branches to be blown off in a storm. Nothing short of a hurricane sufficient to blow down large trees should possibly be able to cause trouble, and when the neighboring trees are dangerously high careful watch should be kept and any weak or decaying tree at once cut down. The right of way may be somewhat expensive, but the service must not be liable to interruption by so probable a thing as the breaking of a branch. It must be remembered that in high voltage transmissions a twig as big as a lead-pencil may by falling across the line start an arc that will shut down the plant. Sometimes the use of extra long poles may enable one to carry the wires clear of possible obstructions of this sort.

In mountainous regions poles may have to be set in very bad locations, and sometimes for long stretches every hole may have to be blasted at a cost of \$5 to \$10 per hole, but such contingencies are not very common and may often be avoided by a moderate detour. It is better to go around a mountain than over it, unless the distance is considerably greater. When these questions arise they should be answered by preliminary estimates. The country should be carefully inspected and the relative costs of various routes looked into. For a uniform country the cost of poles and construction is directly as the distance, and the cost of copper directly as the square of the distance.

In case the direct line leads into difficult country—over, for example, a rocky hill where the poles would be hard to place and much blasting would have to be done—a detour often may cheapen construction. A brief computation will give the facts. Suppose a 10-mile transmission of about 500 KW at

10,000 volts, for simplicity assumed to be on the monophase system. The line would have to be about No. 6 wire for say 6 per cent. loss, and the total weight of copper would be about 33,000 lbs. Suppose the average cost of poles and insulators in position to be \$5 in the open country, but that the direct route lies for a mile over a rough hill, where holes would have to be blasted and poles would be difficult to place. The extra cost of this mile might readily be \$500 to \$600. Now if a deviation of a mile would clear this hill, it would probably pay to abandon the direct route. By taking the shortest available course the actual increase in the length of the route would probably not exceed half a mile. This would increase the weight of copper for the same loss by about 10 per cent., \$495 at 15c. per lb., and would increase the cost of the pole line by about \$250 more. In such a case the increased accessibility of the line, and the lessened cost of providing a road for inspection and repairs, would more than compensate for the small difference in expense.

The same reasoning holds with respect to avoiding other obstacles by making detours. It often pays to go somewhat out of the way to utilize the public roads, to cross rivers on existing bridges, and so forth. A few experiments on the route constructed on paper, after careful inspection of the country, will usually show the most advantageous line to follow. The old and simple process of sticking pins in the map and following up the line with thread is generally the easiest way of getting the approximate distances.

In mountainous country a direct line is often out of the question, and the line has to conform to existing trails with such short cuts as may be possible. An occasional long span will sometimes lessen the cost of the line materially. Rivers and lakes often form very serious obstacles to line construction and call for much skillful engineering. The former can often be crossed on existing bridges or by long spans, which will be discussed later, but the latter usually have to be gone around, although sometimes cables may have to be carried under water. If the lake is close to either end of the line, so that it can be crossed by a cable at moderate voltage, it is sometimes advisable to do so. In two important cases that have come to the author's notice this was the only practicable escape from the watery barrier.

Nearly all long lines have to encounter more or less serious obstacles of the sorts mentioned, and as a rule they cause considerable deflections from a straight course. Sometimes deviations are desirable merely as the cheapest way of reaching *en route* localities where power is to be distributed.

LINE WIRE.

As already mentioned, copper is the best and most usual material for conductors; soft-drawn copper under ordinary circumstances, hard-drawn when extra strength is desirable. No other material gives so advantageous a combination of conductivity and tensile strength for nearly all purposes. The tensile strength of the copper is raised by hard drawing from about 34,000 to 35,000 lbs. per square inch to 60,000 or even 70,000, and the resistance is only raised 2 to 4 per cent., the latter amount only in small sizes. Sometimes a medium hard-drawn wire is used having a tensile strength of say 45,000 to 50,000 lbs. per square inch. Such wire is materially stronger than the annealed wire and yet is much easier to handle than such hard-drawn wire as is used for trolley wires.

For line copper the wire should be free from scale, flaws, seams, and other mechanical imperfections. It should be very close to its nominal gauge, variations of 1 to 2 mils being the largest which should be tolerated, and should be within 2 per

GAUGE B. & S.	DIAMETER MILS.	AREA CIRCULAR MILS.	WT., LBS., PER 1,000 FEET.	RESISTANCE AT 75° F. PER 1,000 FT. OHMS.	TENSILE STRENGTH (ULTIMATE) BASED ON 34,000 LBS. PER SQ. IN.
0000	460.000	211,600	640.73	.04904	5,640
000	409.640	167,805	508.12	.06184	4,480
00	364.800	133,079	402.97	.07797	3,553
0	324.950	105,592	319.74	.09827	2,819
1	289.300	83,684	253.43	.12398	2,235
2	257.630	66,373	200.88	.15633	1,772
3	229.420	52,633	159.38	.19714	1,405
4	204.310	41,742	126.40	.24858	1,114
5	181.940	33,102	100.23	.31346	884
6	162.020	26,250	79.49	.39528	700
7	144.280	20,816	63.03	.49845	556
8	128.490	16,509	49.99	.62849	440

cent. or less of standard conductivity, as given for pure copper in tables of wire.

The foregoing table gives the standard electrical and mechanical constants of the sizes of wire used in power transmission work.

The various constants should none of them fall short of these tabulated values by more than 2 per cent. Specially, the resistances should not be in excess of those given by more than this amount.

For hard-drawn copper wire the resistance never ought to exceed the tabular values by more than 5 per cent. and the tensile strength should not fall short of 1.75 times the values given for annealed wire.

When in use, wire is subject to serious mechanical strains, due in the first place to its weight and normal tension, second to variations in tension by change of temperature, and third to extraneous loads like ice and wind pressure, separately or combined. These last-mentioned strains are sometimes formidable and must be carefully taken into account, particularly in cold climates.

When a wire is suspended freely between supports it takes a curve known technically as the catenary. The exact solution of its properties is very difficult, but for the case in hand the catenary comes very close to the parabola, a much simpler curve to compute; and based on this approximation the following simple deductions can be made: If a wire be stretched




FIG. 221.

between the points *A* and *B*, Fig. 221, it assumes the curve *A D B*. The thing to be determined is the relation between the length *A B* (which we may call *L*, the length of span), the vertical deflection *d*, at the middle point of the span, and the tension on the wire at *A* or *B* as a function of its weight. This relation is as follows:

$$T = \frac{L^2 w}{8 d}, \dots\dots\dots (1)$$

or transposing,

$$d = \frac{L^2 w}{8 T} \dots\dots\dots (2)$$

Here L is the length of the span in feet, d the central deflection in feet, w the weight of the wire in pounds per foot, and T the maximum tension on the wire in pounds.

These equations show that with a given wire the tension varies inversely as the deflection for a given span, and that for a given tension and wire, the deflection must increase with the square of the span. Obviously, shortening the span and increasing the deflection eases the strain on the wire and renders the construction more secure, but shortening the span adds considerably to the cost, and increasing the deflection increases the danger of the wires swinging in the wind and touching each other. To prevent this the deflection should not much exceed twice the horizontal distance between wires.

The application of the formulæ can best be shown by an example. Suppose we are stringing No. 00 wire on poles 100 feet apart. What is the least deflection allowable with a factor of safety of 4? This means that T must not exceed one-fourth the breaking strain of the wire, which fraction from the table is 888 lbs. The weight per foot from the table is .4 lb. Substituting in equation (2) we have:

$$d = \frac{(100)^2 \times .4}{8 \times 888} = .57 \text{ foot} = 6.8 \text{ inches.}$$

This minimum deflection should not be exceeded in this case, and hence must be applicable to the lowest temperature to which the line is to be exposed. At whatever temperature the wire is strung, enough deflection should be allowed so that, as the wire contracts in cold weather, the above minimum should not be passed.

The total length of wire in the catenary is approximately

$$L' = L + \frac{8 d^2}{3 L} \dots\dots\dots(3)$$

or transposing for the value of d ,

$$d = \sqrt{\frac{3 L (L' - L)}{8}} \dots\dots\dots(4)$$

Wherein L' is the actual length of wire, and L the span.

From these formulæ we can figure d for any temperature.

The coefficient of expansion of copper is .0000095 of its length per degree Fahrenheit, so that we can get at once the length for any temperature.

If the wire we are considering is strung at 75° F. and is to encounter a minimum temperature of -5° F., enough deflection must be allowed at the former temperature to bring the deflection at -5° F. to the value just obtained. The length of wire at the lower temperature is from (3),

$$L' = 100 + \frac{8 (.57)^2}{300} = 100.0096.$$

At 75° F. this length would be increased by $100.0086 \times .0000095 \times 80$ feet, and hence the new value of L' would be 100.076 feet. The deflection corresponding to this is found from (4) as follows:

$$d = \sqrt{\frac{300 \times .076}{8}} = 1.69 \text{ ft.} = 20.28 \text{ inches.}$$

A large allowance in deflection must therefore be made for such variations in temperature as are likely to be encountered in northern climates.

The changes in deflection due to changes of temperature are found in practice to be somewhat lessened by the fact that the wire as strung is under tension due to its weight, which modifies its expansion and contraction.

This matter of temperature is unfortunately not all that must be looked out for. We have fully taken care of the weight of the wire itself, but it is exposed to other and sometimes dangerous forces in the weight of the ice coating that is to be feared in winter and the strain of wind pressure on the wire either bare or ice-coated.

Taking up these in order, let us suppose the wire to become coated with ice to the thickness of half an inch, quite a possible contingency in severe winter storms. A layer of ice of this thickness would weigh 0.54 lb. per linear foot, thus loading the wire with more than its own weight. Assuming this load at the minimum temperature of -5° for which the assumed deflection was 0.57 foot, the tension of the ice-loaded wire becomes from (1),

$$T = \frac{(100)^2 \times .94}{8 \times .57} = 2,051 \text{ lbs.}$$

This is dangerously large, far beyond the elastic limit of the wire, and more than likely to bring down weak joints.

And beyond this the wind pressure must be considered. This may be taken as acting at right angles to the weight of the wire and adding materially to the resulting total stress. The total pressure P on a wire is, per foot, approximately $P = .05 p D$, where p is the normal pressure of the wind per square foot and D is the diameter of the wire in inches. p varies from a few ounces per square foot in light breezes to 40 or 50 pounds in a hurricane.

Assuming 40 lbs. as the greatest pressure likely to be encountered, we can at once find its effect on the line under consideration. For our No. 00 wire

$$P = .05 \times 40 \times .364 = .728 \text{ lbs.}$$

This pressure is combined with the weight of the wire as a force acting at right angles, hence the resultant stress, which we may call W , is

$$W = \sqrt{w^2 + P^2} = \sqrt{.94^2 + (.728)^2} = 1.2$$

This, from the example given, is obviously a dangerous strain on the wire. But the combination of even half the normal wind pressure just assumed with an ice-coated wire would be disastrous. Taking the ice as half an inch thick as before,

$$D = 1.36, P = .05 \times 20 \times 1.36 = 1.36,$$

and

$$W = \sqrt{(.94)^2 + (1.36)^2} = 1.65$$

Substituting in (1)

$$T = \frac{(100)^2 \times 1.65}{8 \times .57} = 3,618 \text{ lbs.}$$

This is over the breaking weight of the wire, which must consequently give way, and would almost infallibly wreck the line in so doing. This means that the factor of safety of 4, assumed at the start, is too small for due security. It is sufficient for a moderate climate, where high winds are rare, but 5 is generally preferable, while 7 or 8 should be used in cold and exposed regions. It must be remembered that joints are weak points in the wire; a carefully soldered Western Union joint has only about 85 per cent. the strength of the wire.

The same process that served to take account of an ice coat-

ing, *i. e.*, adding the distributed load to the weight of the wire, can be readily applied to finding conditions of safety in the use of bearer wires carrying the conductor suspended from them.

An interesting corollary to these computations is finding the maximum length of span which can safely be used in an emergency such as crossing a river or cañon. Suppose we use simply hard-drawn copper wire of the same size as before. Its ultimate tenacity is about 6,270 lbs. Using it with a factor of safety of 6, the permissible value of T becomes 1,045 lbs. W is as before 0.4 lb. and we will assume that for the purpose in hand the wires are spread and the deflection is permitted to be 10 feet. From (1) we have for the permissible length of span

$$L = \sqrt{\frac{8 T d}{W}} \dots\dots\dots(5)$$

Substituting the above values of the known quantities, we have

$$L = \sqrt{\frac{8 \times 1045 \times 10}{.4}} = 457 + \text{feet.}$$

10, however, is a preferable factor of safety, which corresponds to a length of span of 354 feet. In extreme cases a bearer of steel cable may be used, of the highest available tenacity, and carrying the copper line wire to secure the requisite conductivity, or a steel or silicon bronze wire may be used alone: the conductivity being made up elsewhere in the line to the desired general average. The steel is rather the more reliable of the two, but is more likely to deteriorate through rusting. An ultimate tenacity of 150,000 lbs. per sq. in. is the limit for either material, with factor of safety of 10 for practical working.

Now assuming No. 00 silicon bronze or its equivalent in steel cable and the same factor of safety as before, the working tension rises to 2,612 lbs., and allowing 20 feet deflection, the possible length of span is

$$L = \sqrt{\frac{8 \times 2612 \times 20}{.4}} = 1,022 + \text{feet.}$$

Spans of even this length can be managed without any very elaborate terminal supports. When the line wires are heavy and numerous, or longer spans must be used, it may be necessary

to use stout bearer cables, arranged like a rudimentary suspension bridge with a footpath, to facilitate inspection and care of the conductors. The expense of such a structure is sometimes justified by enabling one to avoid long and expensive detours. When a simple long span of conductors is used, the support of the ends and the proper insulation of the tense wires require care. A timber truss well guyed will answer in most cases, and the strain may be distributed among several stout insulators. The conductors should always be in duplicate across such a span. In the 140 mile transmission of the Bay Counties Power Co. to Oakland, Cal., an extremely long span became necessary in crossing the Straits of Carquinez. Steel towers were erected on high ground on each side of the straits, and the conductors are four $\frac{3}{4}$ inch steel cables (one being in reserve) spanning a distance of 4427 feet. These cables have ultimately to take current at 60,000 volts and are carried by porcelain and micanite insulators, the latter being used for supporting the direct pull at the anchorages. (See chapter XVII.)

When bodies of water too wide for a suspended structure must be crossed, there is trouble ahead. In marshy shallows a timber trestle is perhaps the best way out of the difficulty, but in deeper water cables may occasionally have to be used, although rarely in view of the possibilities of very long spans like the one just mentioned.

Cables can be obtained that will stand 2,000 to 3,000 volts alternating current with a fair factor of safety. Above this pressure success is problematical. Near the ends of the line before the raising or after the reducing transformers, cables may be successfully used, but when the obstacle is in the middle of a long line the choice is between evils, reducing the pressure locally by an extra transformation or going the long way around. Either expedient is costly and to be avoided if possible. It is almost needless to say that when cables are used they should be in duplicate.

POLES.

As a rule all aerial lines in this country are carried on wooden poles. Iron poles are used much for railroad work,

and abroad considerably for miscellaneous work, including power transmission. They are, however, not to be recommended for high voltage transmission work, as they give altogether too good an opportunity for troublesome and dangerous grounds. The ordinary wooden cross arm is of very little value as an insulator at high voltages, particularly after it has weathered for some time and is dirty. Its resistance in damp weather may amount to only two or three thousand ohms from end to end, and such a cross arm, while allowing severe leakage in case of more than one insulator on the same cross arm breaking, would permit a highly dangerous ground on an iron pole in case of a fault in a single insulator. An iron pole with iron cross arm is infinitely worse. Moreover, iron poles cost so much more than wooden ones that the difference in expense, capitalized, will generally much more than meet the depreciation of a properly built wooden pole line, even if the iron poles were to have an infinitely long life.

TOTAL LENGTH IN FEET.	DIAMETER AT TOP— INCHES.	DIAMETER 6' FROM BUTT. IN INCHES.	DEPTH OF SETTING.	APPROXI- MATE WEIGHT, IN POUNDS.	NUMBER THAT CAN BE LOADED ON A PAIR OF CARS.
35	7	12½	5' 6"	650	90
40	7	13	6'	900	75
45	7½	14	6' 6"	1,000	65
50	7½	16	7'	1,300	50

In the eastern and central parts of the United States white Northern cedar, chestnut, and Northern pine are the most desirable woods for poles, in the order named. West of the Rocky Mountains redwood is rather a favorite and stands even ahead of cedar in estimation. Abroad, Norway fir is highly valued.

For power transmission work the poles should be both long and strong—long to carry the wires well out of reach and often above other circuits; strong to stand the pressure of the often heavy wires and the wind. In open country the length is less important, and it is sometimes well to use rather stubby poles, say not over 35', but extra stout. The poles should be

straight and free from knots, of sound, live wood, and the bark should be peeled and the poles trimmed and shaved.

The foregoing table gives the size and other characteristics of the poles most likely to be used on power transmission work. This is based on cedar poles, and the dimensions given are the minimum to be permitted in first-class line construction. Pine and redwood poles are of about the weight given, chestnut is nearly half again as heavy.

It will be noted that poles of these lengths have generally to be carried on two cars, one being too short. Various preservative processes are used to increase the life of wooden poles. Of these "creosoting" is generally preferred. The process consists of stowing the poles in an air-tight iron retort, exhausting the air, and with it withdrawing the sap and moisture, treating with dry steam for several hours, and then forcing in the preservative fluid, often crude petroleum, under heavy hydraulic pressure.

When not specially treated, the poles should be coated heavily with pitch, tar, or asphalt on the portion to be buried up to and fairly above the ground level.

The pole top is usually wedgeshaped or pyramidal, and this roof should be painted or tarred. Before the pole is erected the gains for the cross arms are cut and the cross arms themselves should be bolted in place and the pins set for the insulators. The upper cross arm centre should be 10 to 18 inches below the extreme apex of the pole and the lower cross arms 18 to 36 inches further down. In power transmission work employing heavy wires the spacing of the cross arms should be guided by the arrangement of the circuits, there being no standard practice.

The cross arms themselves are of wood having the same characteristics of strength and durability as the poles; hard yellow pine being rather a favorite. They are of course of such length as the work demands; in power work, generally from 4 to 8 feet. There are two sectional dimensions in common use, $4\frac{1}{4} \times 3\frac{1}{4}$, and $4\frac{3}{4} \times 3\frac{3}{4}$. The latter should be used for the longer cross arms and those carrying heavy cables or the like, while the former serves for 4' or 5' arms not heavily loaded. The cross arms are best secured in their gains by a strong iron bolt passing through both the pole and the cross

arms in a hole bored to fit and set up hard with wide washers under head and nut. This construction makes a cleaner job than the practice of fastening the cross arm with two lag screws, and permits of easier changes and repairs. The bolt should be about three-quarters of an inch in diameter, and the gain is from 1" to 2" deep, according to the size of the pole. Lag screws are cheaper, however, and are as a rule employed in ordinary work. Cross arms 6' long or more should be braced with diagonal iron straps.

In ordinary transmission circuits about 50 poles per mile should be used, 110 feet apart, or 48 per mile, being a common spacing. The setting should be carefully done. The earth should not be disturbed more than enough to make easy room for the pole, and the earth and gravel filled in around the pole should be heavily tamped. When setting poles in soft ground it is sometimes impossible to give them stability enough merely by tamping, and the best procedure is to fill in concrete about the pole, using one part of Portland cement to three or four parts of sand and heavy gravel or broken stone.

The stresses to which a pole line is exposed may be classified as follows: 1. The direct weight of the wire and the downward component of the wire tension. 2. Bending moment due to the pull of the wires at turns in the line. 3. Wind pressure on poles and wires. 4. Wind pressure plus ice.

1. In power transmission lines built as has been indicated the crushing stress is completely negligible. The ultimate resistance against crushing amounts in the woods used for poles to at least 5,000 lbs. per square inch. The ordinary pole therefore has a factor of safety of several hundred, and the danger of crushing, even from tense and ice-laden wires, has no real existence.

2. Bending moment is more serious, since the forces acting have a long lever arm. The ultimate effect of this stress is to break the pole, generally near to the surface of the ground, by crushing the fibers on the side next the stress and pulling apart those on the other side. The pull or push necessary to break a round pole by bending is approximately

$$P = \frac{A S R}{4 D}, \dots\dots\dots(6)$$

where A is the area of the pole section at the ground, S the

strength per unit area, R the radius at the ground, and D the distance between the ground and the centre of pressure.

For example, take a 40' pole, 13" in diameter at the ground. Taking $S = 7,500$ lbs. per square inch and the centre of pressure as 32' above the ground, (6) becomes

$$P = \frac{13^2 \times 7,500 \times 6.5}{4 \times 12 \times 32} = 4,189 \text{ lbs.}$$

The factor of safety allowed should be approximately 5. Practically, poles at angles should always be guyed, like terminal poles. This is best done with a steel rope one-quarter to one-half an inch in diameter, taken from as near the centre of the stress on the pole top as the position of the circuits permits. The guy rope should extend downward at an angle of from 45° to 60° with the pole, directly back from the direction of the pull on the pole, and should be drawn taut and securely fastened to a tree or a firmly set post. Where there are three or four cross arms what is known as a *Y* guy is often used, consisting of a guy rope attached near the pole top and another just below the cross arms. These divide the tension and are moored by a single guy rope in the ordinary manner. This arrangement is not commonly needed in transmission work save when the circuits are numerous or the strain exceptionally severe, and in any case great care should be taken to keep the guy wires well clear of the high voltage lines. Sometimes two or more light guys in different directions are valuable in securing a pole, when proper setting is very difficult, and may save expensive blasting.

The bending moment due to an angle is normally $2 T \cos \frac{\alpha}{2}$ where T is the tension as already determined and α is the angle made between the wires at the turn. For the simple circuit of No. 00 wire already discussed and a turn with 120° between the wires, taking a factor of safety of 7 on the wire, the tension per wire is 507 lbs. The total pull for the two wires forming the circuit is then $2,028 \text{ lbs.} \times \cos 60^\circ = 1,014 \text{ lbs.}$, a pressure rather greater than would be permissible without guying.

3. The wind pressure on the wires has already been computed, and the same formula serves for figuring the pressure

on the poles, using the mean diameter in inches, and for the total pressure multiplying by the feet of pole exposed. For example, assuming a pole of 34' out of ground, 7" diameter at the top and 13" at the ground, the average diameter is 10", and for a storm giving a normal wind pressure of 40 lbs. per square foot,

$$P = .05 \times 40 \times 10 \times 34 = 680 \text{ lbs.}$$

This acts virtually at the middle point of the pole, hence it is equivalent to 340 lbs. at the pole top, to which must be added the pressure on the wire itself, which for the circuit in question amounts to about 145 lbs. more, making a total of 485 lbs. This is well within the safety limit, and would remain so even if there were half a dozen wires instead of two. As 40 lbs. per square foot is an extreme wind pressure, never met in most localities at all, it is safe to say that a well-set line of the poles assumed, loaded with any power transmission circuit likely to be met in practice, is perfectly secure so far as wind pressure alone is concerned, unless the line is literally struck by a cyclone.

4. The most dangerous stresses on an aerial line come from sleet storms that load the wires with ice, increasing the weight and the lateral thrust due to wind pressure. On rare occasions ice may be formed on wires to the depth of a couple of inches. Such a coating on a No. 00 wire would weigh about 5.9 lbs. per lineal foot. The mere weight of this would produce a tension, assuming $d = 2'$, and No. 00 wire as before,

$$T = \frac{(100)^2 \times 6.3}{8 \times 2} = 4,000 \text{ (very nearly),}$$

which is well above the tensile strength of the wire if soft-drawn. Allowing a wind pressure of 20 lbs. per square foot, the pressure on a single span of 100 feet would be

$$P = .05 \times 20 \times 4 \times 100 = 400 \text{ lbs.}$$

Adding to this 170 lbs. pressure on the pole itself, the total for a single circuit of 2 wires would be 970 lbs. total thrust, which, while high, is not likely to carry down the pole. Even 6 No. 00 wires would give a total thrust of only 2,570 lbs., which is still below the ultimate strength of the pole. The pole

line is therefore stronger than the wires. If a line is to stand such extreme stresses, which are far beyond really practical requirements, the only safe plan would be to string hard-drawn wire, shorten the poles and increase the diameter, and guy frequently. As a matter of fact the insulators and their pins are quite sure to give way before the wires or poles under these extreme stresses, and in most transmission lines are the greatest source of anxiety.

The insulators themselves can be made strong enough to stand the greatest stresses to which they will be subjected, but it is not easy to so support them as to give ample strength without endangering the insulation. The ordinary wooden pin answers well if the circuits are not very heavy or likely to be weighted with ice.

By common consent locust is the material best suited for pins, which for general line work are about 12' long and 2" in extreme diameter at the shoulder, below which the pin is cylindrical and $1\frac{1}{2}$ " in diameter. This fits a hole bored in the cross arm and is secured by a nail driven through arm and pin. The top of the pin is threaded for the insulator to be used. Under extreme forces these pins are liable to break at the shoulder; and for transmission circuits carrying very heavy wire, for long spans and for cases where special insulators demand extra long pins, a variation of this construction is desirable. On the Pacific coast excellent results have been obtained from encalyptus pins, which are even tougher and stronger than locust, but unfortunately not readily obtainable in the East. Lacking both locust and eucalyptus, a fair pin may be made from seasoned oak.

Iron or steel pins have been tried, but while they have ample strength they are an element of weakness in insulating very high voltages, tending to work and grind the interior of the insulator and furnishing an interior conductor which much enhances the danger of puncture.

A better device is to make a heavy pin with a base 2" or more square and clamp it to the cross arm with an offset iron strap the full depth of the cross arm.

In ordinary line work the pins are set 12" to 14" between centres. With heavy wires this distance may advantageously be increased to 18" to 24". At very high voltage these dis-

tances must be increased farther, perhaps up to 36" or even 60", in dealing with voltages in the uncertain region beyond 50,000 volts.

When the lines have to be transposed, as in long parallel alternating power circuits, this transposition involves some careful work, for the wires must be kept well clear of each other. Heavy strain pins clamped as described will generally answer the purpose and allow the transposition to be safely made. Such transposition should not be made at an angle or elsewhere where the tension on the insulators is unusually great.

A good example of line construction for heavy transmission work is found in the line constructed a few years ago for the Niagara-Buffalo power circuit. Fig. 222 shows the pole head. The cedar poles, intended ultimately to carry 12 cables each of 350,000 c. m., are extra heavy, varying from 35 to 50 feet in length with tops 9" and 10" in diameter. The two main cross arms are of yellow pine, 12' long and 4" \times 6" in section, fastened to the pole with long lag screws, and braced by an angle iron diagonal $\frac{1}{4}$ " \times 2 $\frac{1}{2}$ ", bolted to the pole and to the bottom of the cross arm at each side. Each side of each arm is bored for three pins spaced 18" apart. The transmission is three-phase and one complete circuit is on each side of each cross arm. The cross arms themselves are 2' apart.

The pins and insulators, Fig. 223, are special, the pins being much heavier than usual and the insulators of dense porcelain formed in the usual double petticoat design. They have one peculiar feature: a gutter is formed on the external surface, leading to diametrically opposite lips so placed as to shed dripping water clear of the cross arm, thus lessening the danger of ice formations. Each of the main circuits is designed to transmit 5,000 HP. A short cross arm below the others carries a private telephone line. The right of way is in part owned by the operating company and fenced in, and in part along the Erie canal. The line is elaborately transposed every five poles to annul induction. So frequent transposition is unusual and generally needless. Transposition every 20 to 40 poles is ample for ordinary cases and on long lines in open country it is enough to transpose once in a couple of miles.

This line is admirably constructed, but it is a grave question

out stations to facilitate the execution of repairs, and so forth. Whatever the general construction, two things in particular must be kept constantly in mind: The insulation of the line must be kept up, and must be constantly watched and tested.

Ordinary methods of testing insulation are nearly useless on high voltage lines, since a line may show practically perfect insulation with a testing battery and be practically grounded when used at 10,000 volts. Experience shows that high volt-

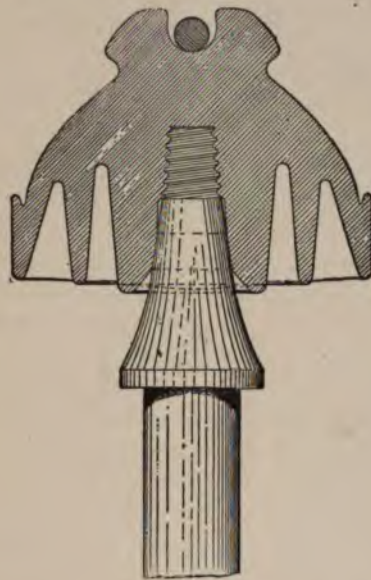


FIG. 223.

age lines must quite generally be considered as grounded, even aside from the apparent grounding due to capacity. On high voltage systems means should be provided for testing the insulation at or near the working voltage. This involves some trouble, but is well worth it, since, if the insulation is faulty, it is apt to go rapidly from bad to worse and to end in an interruption of service. It is not a difficult matter to construct a high resistance bridge, using tubes of Hittorf's cadmium iodide solution, and whether the bridge or any other of the familiar methods of measuring very high resistances be used, it is not a hard task to make a testing battery even for high voltage,

using storage cells made out of test tubes and U-shaped bits of lead wire, or better, to test with alternating current.

Lines should be tested as often as the opportunity offers, and any signs of weakness in the insulation followed up closely. High voltage lines are likely to develop faults very quickly indeed if there is incipient weakness in the insulation.

Another matter of most grave importance is the installation and maintenance of proper defenses against the effects of lightning. Now and then a plant may be located so that it is practically safe from lightning, but in most localities thunderstorms are not rare during a portion of the year and may be the source of frequent disaster.

There are two distinct classes of lightning strokes which may affect aerial circuits. The first is a direct stroke from the flash itself, taking the line as the last minute portion of its terrific leap to earth. The other is secondary, being the induced current due to the enormous energy of the primary discharge, quite apart from the line and perhaps striking from cloud to cloud. When these tremendous electrostatic stresses suddenly change by a discharge, the induced discharges along conductors may be very formidable.

Akin to this phenomenon are the sometimes very great potential differences between line and earth produced by the readjustment of the charges on earth and clouds raising the potential of the insulated line. The line and earth will normally be at about the same potential with respect to a heavily charged cloud, but when the clouds and earth are mutually discharged the insulated line may assume a very high potential with respect to the earth and produce a violent disruptive discharge, quite akin to lightning. This kind of static discharge may be produced when there is no storm and no indication of anything unusual in the atmospheric conditions. It may be trivial, only enough to give small sparks or a smart shock, or it may be highly dangerous and very serious in its results.

The direct lightning stroke is at once the most formidable and the least common of these forms. It may strike the line fairly or merely give it a branch discharge of greater or less magnitude. Next in frequency and severity comes the secondary lightning flash, which is far more common and is the variety

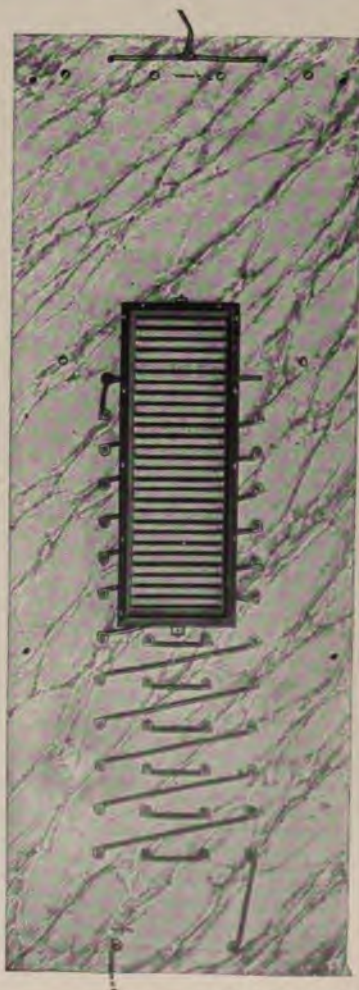
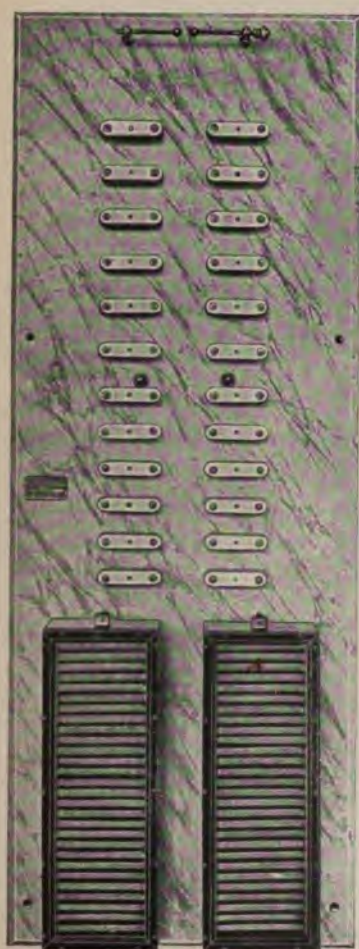
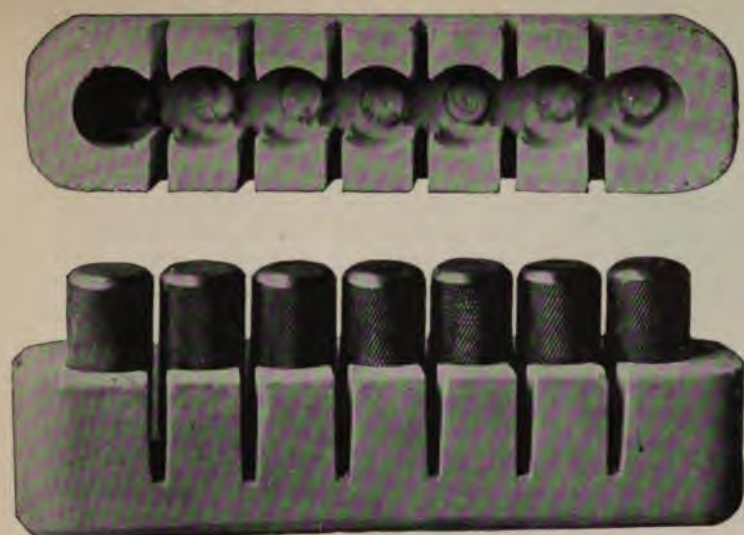


PLATE XV.

THE NEW YORK
PUBLIC LIBRARY
ASTOR, LENOX
TILDEN FOUNDATIONS

THE NEW YORK
PUBLIC LIBRARY
ASTOR, LENOX
TILDEN FOUNDATIONS

most generally observed during thunderstorms. The static flashes last mentioned are somewhat difficult to distinguish from the secondary flashes and are probably even more common. They make up the bulk of the line disturbances in clear weather or coincident with distant storms, and as a class are less to be feared than the direct and secondary strokes. Lightning arresters, so called, are in the main short spark gaps between the line and a grounded conductor, furnishing the discharge an easier path to ground than going *via* the power-house machinery or an insulator and pole. In connection with this spark gap device is some means for preventing the dynamo current from following in the wake of the lightning and producing a short circuit.

One of the best known lightning arresters for high voltage alternating circuits is that due to Mr. Wurts, and very generally used in the practice of the Westinghouse Co. The unit arrester of this system is shown in Plate XV, Fig. 1. It consists of seven cylinders of the so-called "non-arcing" alloy, having finely knurled surfaces. They are set usually about $\frac{1}{32}$ " apart in a porcelain block with a cover, as shown in the cut. There are thus six spark gaps in series in each unit, a degree of subdivision which tends to discourage the maintenance of an arc. The lightning can jump these gaps easily, but the arc which follows is choked and broken by the whiff of non-conducting oxide thrown off in its passage, and generally without even scarring the cylinders.

On long high voltage power transmission lines the very extent of wire gives an added chance for lightning strokes, and the normally high voltage requires spark gaps aggregating a considerable space to prevent a discharge to earth merely from the working voltage. It therefore becomes necessary to put several unit arresters in series, and to provide some means for sending the lightning to earth. As lightning is really a very rapid and oscillatory discharge it is blocked by an inductance to a far greater extent than the slowly periodic line current. Hence, if a "choke-coil" is put in circuit between the lightning arrester and the generator the tendency is to check an entering lightning discharge and divert it into the arrester while only slightly impeding the working current.

This combination of arrester and choke-coil is the one gen-

erally used on high voltage lines. The choke-coil ordinarily employed in connection with the Wurts arrester is the flat spiral form similar to Fig. 224, which impedes the lightning more, and the working current less, than the more familiar shapes. In default of this, a coil can be readily extemporized from rubber covered wire, 25 or 30 turns being wound up in a coil of say 18" diameter and firmly taped together. For further protection it has sometimes been found desirable to use several sets of arresters in parallel separated by choke-coils, so that the lightning will have to force a way through several choke-coils with a chance to go to earth at each coil.

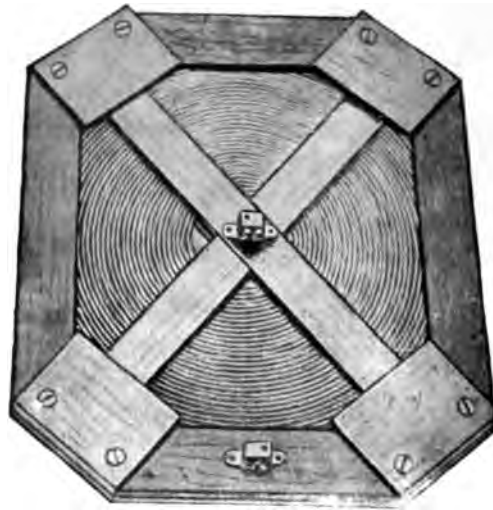


FIG. 224.

This arrangement of lightning arresters is for the most part pretty effective. The weak point in the protection of high voltage alternating circuits from lightning lies in the very considerable striking distance of the working voltage itself and the increase of this distance by static phenomena, minor resonance and other causes occurring normally and frequently on the circuits, quite apart from lightning discharges. If the aggregate spark gap of the arresters is large enough to prevent frequent discharges due to these ordinary causes, there is an unpleasantly good opportunity for heavy sparks due to inductive

lightning discharges to get through the arresters in spite of the choking-coils and do mischief in the station. It is one thing to provide paths to earth for the lightning, and quite another to make it follow them. If the spark gaps are so far reduced as to let through with considerable certainty any lightning discharge of serious magnitude, they are also likely

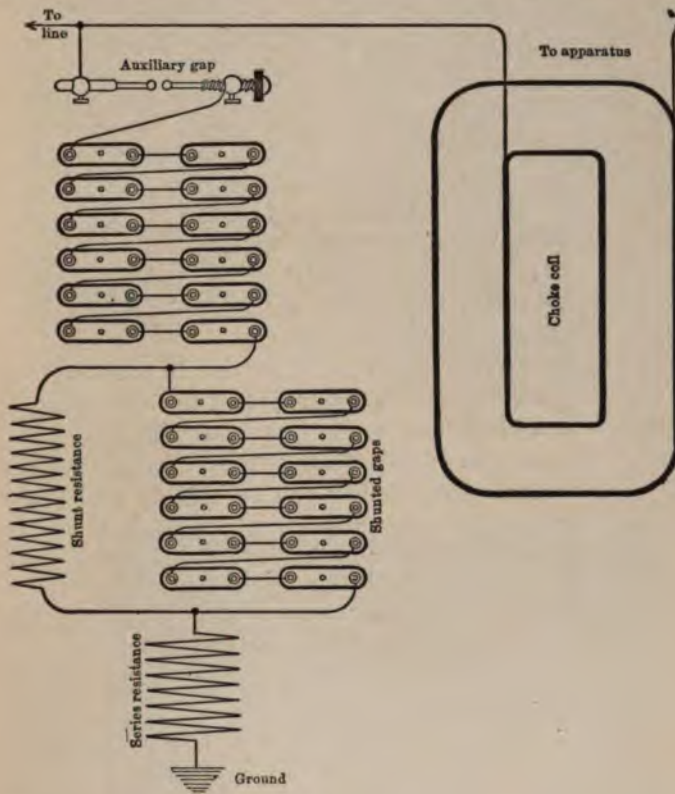


FIG. 225.

to frequently let through casual discharges followed by arcs sufficient to injure in time the arresters and even to interfere with the service.

To avoid these difficulties the Westinghouse Co. has recently adopted as its standard the arrangement shown in Fig. 225, as arranged for a 25,000 volt circuit. It consists of twenty

ty-four of the unit arresters in series, connected to the line by an adjustable auxiliary gap and earthed through a moderate resistance. It is installed as usual with a choke-coil between it and the machines. The peculiarity of this arrester lies in the high shunt resistance around about half the series of arrester units. This makes the arrester more sensitive, so that moderate increase of potential will throw a discharge to earth through the series gaps and the high resistance.

It is claimed that a really heavy discharge, as from lightning, will be sufficiently checked by the shunt resistance to drive it across the shunted gaps, thus giving the full arc breaking power of all the gaps in case of need. Such selective action if regularly effected in practice should be very useful in preventing constant action of the arresters on too small provocation, while providing sufficient gaps to take care of severe discharges. The series resistance shown next the earth is merely to moderate the violence of the ground when the arc tries to follow the lightning discharge.

The auxiliary gap is of considerable service in enabling the spark gap resistance to be carefully adjusted to the voltage of the line so that a small increase of potential will be at once relieved. As one turn of the adjusting head changes the gap by $\frac{1}{32}$ ", the necessary regulation can be quickly and easily effected. Of course one such arrester group as is shown in Fig. 225 must be installed for each wire of the circuit to be protected.

For convenience these composite arresting devices are made up into compact panels ready to be attached to the line and to earth. Fig. 2, Plate XV, shows the front and back of the panel corresponding to the arrangement of Fig. 225, one such panel being connected in each line of the 25,000 volt circuit.

Arresters, however carefully arranged, do not always work properly, sometimes failing to protect the machines and sometimes causing tremendous momentary grounding of the lines through them. If the aggregate spark gap is kept as it should be down to a point where a moderate increase over the full line voltage will break through to earth, it is generally good policy not to make the path to earth of so low resistance as to cause a formidable short-circuit if the arc following a discharge is not broken promptly, as sometimes

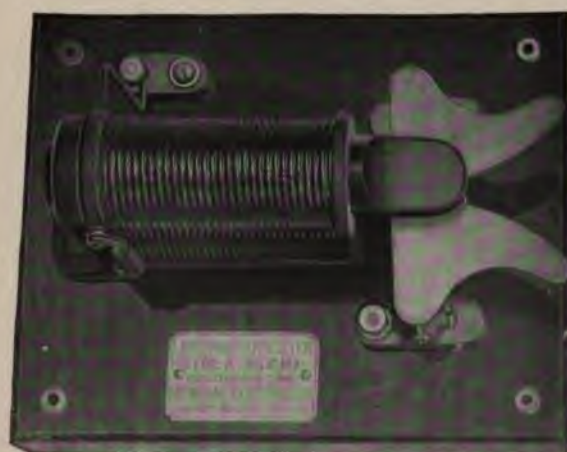


PLATE XVI.



THE NEW YORK
PUBLIC LIBRARY
ASTOR LENOX
TILDEN FOUNDATIONS

happens. Particularly in case of three-phase lines it is inadvisable to use a common earth connection for the three lines unprotected by resistance, since if an arc starts there ensues a short-circuit between two phase-wires which may be very destructive. Such accidents occur even with the most carefully installed arresters.

The amount of resistance needed depends somewhat on the size of the machines to be protected, and more on the voltage of the lines. If too great it tends to lessen the value of the apparatus for diverting dangerous lightning discharges, if too small it gives altogether too good a chance for starting an arc on a scale that the arc-extinguishing powers of the arrester can-

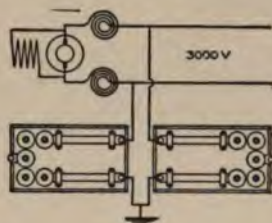


FIG. 226.

not cope with. Roughly, there should be in a 10,000 volt plant several hundred ohms between phase and phase if the conditions are such that discharges are likely to be frequent.

The whole matter needs investigation. Sometimes a plant protected by arresters having no resistance at all in series with the spark gaps, will experience no trouble from the cause mentioned, while in another similar plant there will be incessant difficulty from it.

In the lightning arresters developed by the General Electric Co. the other horn of the dilemma is taken, *i.e.*, resistance to a considerable amount is in series with the spark gaps of each arrester unit. The unit arrester for high voltage alternating lines is shown in Fig. 1, Plate XVI, and the same cased for outdoor use in Fig. 2. It consists of three brass cylinders about $1\frac{1}{2}$ " in diameter spaced from $\frac{1}{32}$ " to $\frac{1}{16}$ " apart, and connected in series with them a pair of carbon resistance rods, each of a resistance varying according to the case for which it is to be used, from less than 100 to several hundred ohms.

One arrester unit is customarily used for each 2,000 volts. They are customarily installed with choking coils between them and the machines as already explained. Typical connections for a 3,000 volt single-phase line are shown in Fig. 226. For a 10,000 volt line four or five of the units shown would be put in series for each high voltage line, as shown in Fig. 227, and several groups in series separated by choking coils should preferably be used. As between these arresters and those previously described there is no great choice. The writer has known numerous instances in which each form has succeeded and each has failed, and instances, too, in which each has succeeded after the other had been tried and had failed dismally.

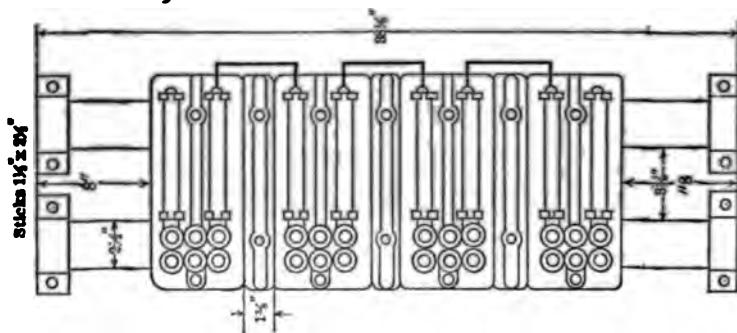


FIG. 227.

The carbon rods used for resistance are sometimes shivered by a severe discharge, and those of liberal cross section and very moderate resistance are to be preferred. The tendency here is to use rather too high resistance, just as contrariwise in the Wurts arresters there sometimes proves to be altogether too little resistance. The general arrangement and liberal use of choking coils in the latter is, however, hard to improve upon.

For continuous current circuits the Thomson magnetic blow-out arresters have proved remarkably effective. The form ordinarily used for arc circuits is shown in Fig. 3, Plate XVI. It consists of a pair of curved metallic horns located between the poles of a small but heavily wound electromagnet energized by the main circuit. The line is connected to one horn, and the ground wire to the other. If a lightning discharge leaps

the gap, the following arc is at once repelled to the tips of the horns and blown out. Choking coils may be advantageously used in connection with these arresters, although the reactance of the fields of an arc machine generally kicks a lightning discharge to ground without any injurious results. The connections of these arresters to an ordinary arc circuit are shown in Fig. 228.

Whatever arresters are used, they must be installed where they are easily accessible, so that they may be kept clean and inspected. They should never be put in a wire-tower, or similar place, and had better be just outside the dynamo room than in it. When in place they should be tested and adjusted to fit their conditions. The number of spark gaps should be

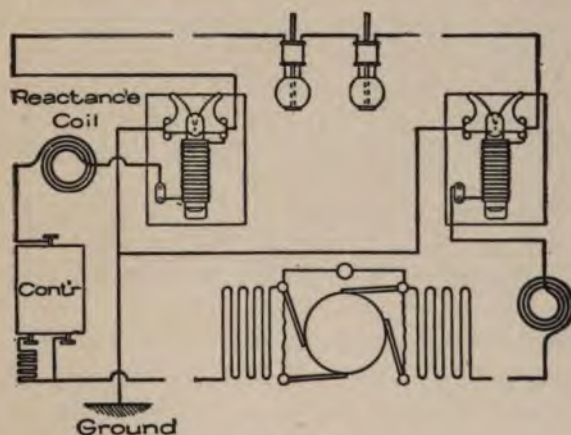


FIG. 228.

reduced experimentally until the line voltage under the ordinary working conditions of the circuit will just fail to provoke a discharge. Then there should be enough resistance inserted to prevent mischief if the arc follows a discharge. A few tests with light fuses in series with the gaps will generally put one on the right track. The arresters themselves should be overhauled to see that the gaps are what they purport to be, and an approximately correct adjustment can be made by reference to the sparking distances of the voltage employed. The Committee on Standardization of the American Institute of Electrical Engineers reported a table of standard sparking

distances between needle points which is shown in very convenient graphical form in Fig. 229. As cylinders should show materially smaller sparking distances for the same voltages than points, this table will serve as an approximate guide in adjusting the lightning arresters. If the circuit shows sparking distances at the arresters greater than those of the table, keep an attentive eye out for resonance.

Lightning arresters are sometimes used as electrical safety valves to keep excessive voltages off the circuits, especially where there are cables to be protected. For example they

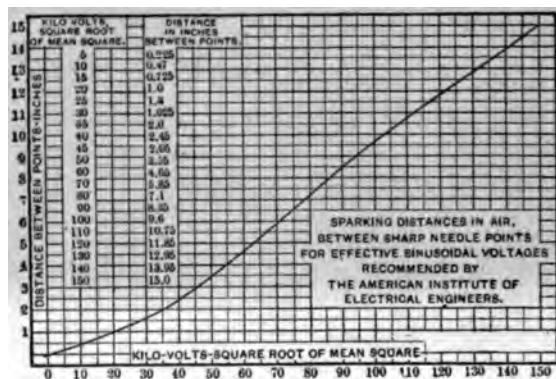


FIG. 229.

are sometimes connected across the terminals of a constant current alternating transformer for series arcs and in similar situations where extraordinary voltage might be for any cause feared. Their use in such cases should be guided by the same principles as in installing them for lightning protection.

Inductance coils must, however, be used with caution on an alternating circuit, since they add to a general inductance already too much in evidence and, if sufficient to deflect lightning across the arresters to earth, may, when used too frequently, seriously increase the line inductance.

One of the commonest devices to lessen the danger from lightning is a line, usually of barbed fence wire, carried on the pole top and grounded at frequent intervals. In the Niagara-Buffalo circuit, shown in Fig. 222, such lines, grounded at every fifth pole, are carried on the guard irons at each end of the upper cross arms.

In certain cases these guard lines have worked well; elsewhere they have proved totally useless. A line of barbed wire strung above the main line certainly has a considerable tendency to keep the atmospheric potential equalized in its immediate neighborhood, and thus may check minor static phenomena. It also may catch certain branch discharges from a nearby lightning stroke, and ameliorate minor secondary discharges, but there is little reason to expect much more than this.

The guard line would have to be carried well above the other wires to be of much use as a lightning rod in case of a direct stroke, and is powerless to prevent secondary strokes or static discharges between wire and earth, although it may mitigate their severity. In regions where the danger of direct lightning strokes is not very great and the discharges mostly weak such a guard line well grounded is of material assistance, but where protection is needed most such a line must be regarded merely as a precaution of possible utility, but of little value unless reinforced by the best lightning arresters that can be procured.

So far as the station is concerned the best procedure is to install a bank of lightning arresters, coupled with inductance coils as already described, preferably putting the arresters outside the station and always grounding them thoroughly. This station protection must be kept in the best of order, for on long power circuits it is no very unusual thing to see the arresters flash several hundred times in a single storm or for them to be almost continuously in action for some minutes at a time, and with all this use the arresters must not break down.

As regards the line there is no complete protection available, and with the utmost precautions there is still a chance for a lightning discharge sufficient to break down the insulation of a high voltage line. About the most that can be done is to use a guard line, grounded say every thousand feet, and to protect danger points with special lightning arresters like those at the station. Such danger points may be found on high ridges and other places where observation shows lightning strokes to be frequent, and particularly the terminals of any underground or submarine cables, banks of transformers

and other apparatus along the line. If the line is in sections with section boxes for testing, cutting out, and similar work at each section end, these are the places for lightning arresters. The author most emphatically does not believe in the general scattering of lightning arresters along the line at every few poles. If the line is at 10,000 or more volts the arresters are likely to operate on very small provocation, and numerous arresters mean a great number of grounds unless they are kept in the best of order. Therefore the arresters must be put where they can have frequent examination and testing, which is impracticable if they are scattered promiscuously along the line. It must not be forgotten that secondary distribution systems if of any considerable extent are very liable to trouble from lightning, and must have adequate protection. The system must be protected as a whole to preserve continuity of service.

Barring cyclones and earthquakes, an aerial line, carefully designed and constructed, is exceedingly durable and reliable. If the poles are creosoted or similarly treated they should last easily twenty or twenty-five years, and the rest of the structure is nearly as durable, while bare wire does not deteriorate sensibly.

A poorly set line of cheap material, on the other hand, may be unserviceable in less than half this time. Here, as everywhere else, good work pays.

A well-nigh indispensable accessory of every power transmission line is a private telephone line connecting the power house with the sub-stations and with intermediate points. Such a line is usually carried on side brackets attached to the poles six or eight feet below the power wires. This line is most often a metallic circuit of galvanized iron wire about No. 12 in size, carried on ordinary glass insulators and transposed every twenty poles or so. Such lines can be made to give fair service, but the transposition of the wires has to be very carefully adjusted to suppress induction. The lengths of wire under induction must agree, not within a few poles merely, but within a few feet, to avoid annoying singing. The two sets of insulators should be kept at a uniform distance from the main line and the wires should be drawn uniformly tight and so transposed that taking the line from end to end,

each wire shall have just half its length on the upper and half on the lower bracket, or on the right and left insulators if a short cross arm is used.

The wires, too, must be kept clear of grounds, from foliage and other interference, in order to keep the inductive balance perfect. With care in stringing, the line can easily be kept

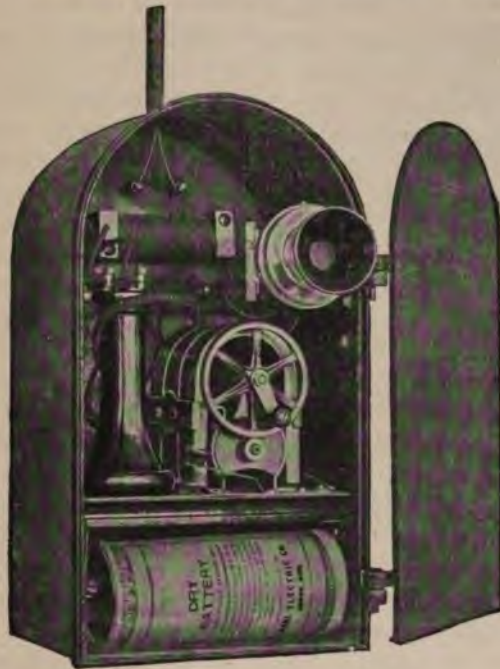


FIG. 230.

in good operative condition, but is seldom free from some residual induction.

A far better although considerably more expensive line is obtained by using the twin-wire insulated cable made for telephonic purposes.

On long lines it is good policy to make provision, say every five miles or so, for getting at the high voltage line for repairs. If the line is in duplicate it should be so arranged that at these junctions jumpers can easily be put on between wires in the same phase and a section of one of the lines cut loose

so that it can be readily handled. At such points there should be opportunity for cutting in a portable instrument on the telephone line. Telephone boxes, Fig. 230, much like the ordinary police signal box can be obtained, and may advantageously be permanently installed at the ends of these line sections. These are good points, too, for installing line lightning arresters and making provisions for testing.

The commonest accidents on high voltage lines are short circuits from branches of trees and broken insulators. The effect of the first is to start an arc that is likely to burn down the line if the branch is more than a mere twig. There are great fluctuations of current and voltage, and the character of the accident is generally evident. Broken insulators may in dry weather produce no sensible effect at all, but if the cross arms are damp there may be serious leakage between line and line that sometimes ends by burning up the cross arm or even the pole top. Broken insulators can be replaced if necessary while the line is "alive," even when carrying pressures as high as 15,000 or even 20,000 volts. The line affected can be pulled or pushed clear of the cross arm and held clear while the lineman puts on a new insulator, preferably one with a top groove for ease of manipulation. Then the line can be pulled back into position and an insulated tie wire put in place, if needful, with long rubber-handled pliers. It takes a skillful and cautious lineman to do the job, but it can be done if necessary. It is best not to trust to rubber gloves alone, as they are seldom in good condition and there is nearly always enough leakage around the pole top to give a powerful shock. Sometimes, when working at such a job, a nail is driven into the pole well below the workman and a temporary jumper thrown from it over the wire under repair so that the lineman will be less likely to get leakage shocks, or the cross arm is temporarily grounded by a wire for the same purpose.

Duplicate lines are much easier to repair, since one can then work on dead wires, and for very high voltages duplicate pole lines are better still, but, with care, it is far safer and easier to work on high voltage lines than is generally supposed.

CHAPTER XIV.

CENTRES OF DISTRIBUTION.

IN many cases of power transmission the primary object is the supply of power and light in various proportions throughout a more or less extended region. Therefore the question of methods of distributing electric energy, after it has been received from the transmission line, must often be carefully considered. The subject may conveniently be treated in three divisions: First, distribution direct from the transmission circuit without the use of special reducing transformers or sub-stations. Second, distribution from scattered sub-stations. Third, distribution from a main reducing station. These divisions do not have rigid boundaries and often overlap, but they involve three quite diverse sets of conditions.

Into the class first mentioned fall all the ordinary electrical installations wherein the power station is separated from its load by a transmission line. This line is usually of moderate length, for otherwise the voltage used would need to be reduced for the working circuit, and the region supplied is generally a town or city of moderate size. Such cases are common enough and generally arise from the existence of a convenient water power half a dozen miles, more or less, from a town that needs light and power, or that has already a central station which from motives of economy it is desirable to operate by water power. The power is therefore developed and new distribution lines are erected, or the old ones reorganized. The whole condition of things is closely similar to ordinary central station practice, save that the load is all at a considerable distance from the station. Only the use of alternating current need be considered, since this current alone is practically employed for general purposes at distances above a mile or two.

The rudimentary map, Fig. 231, gives a case typical of many. The power station is at *A*, with a line across country to the

town which is to be supplied with light and power. The distance to the town, *AB*, is perhaps four miles. Now the problem is to distribute the energy derived from *A* over the town in the best and most economical way. Since much lighting as well as motor service is to be done, good regulation is essential, while abundance of water makes small variations in efficiency of little moment. The town is scattered, with a main business street, *C*, running lengthwise through it.

There is here little object in a sub-station, for the distances are too great for convenient distribution at low voltage, and the short transmission makes it desirable to avoid raising and reducing transformers. The choice of a system is the first consideration. This is not a question of such vital importance as the average salesman hastens to proclaim. The skillful organization of the installation will make much more differ-

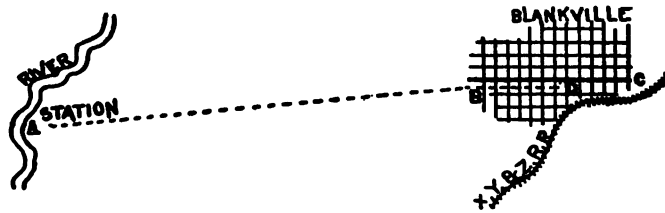


FIG. 231.

ence in the general success of the plant, than the particular species of apparatus used. This should, however, be determined with due regard to the local conditions.

Any alternating system except plain monophase can be made to do excellent service, and monophase is inapplicable only in default of suitable small motors, which are not at the present time available in this country, at least in any form which warrants their use in cases where motors are to form anything more than a trivial portion of the total load. Something depends on the character and amount of the motor service. If it be very considerable and in all sorts of service, general experience both in this country and abroad indicates some advantages in triphase apparatus. This advantage, however, depends more on the ease and economy with which a triphase distribution can be carried out, when motors and

lights are to be served in the same territory, than on any intrinsic advantages in the motors. When made with equal care and skill all polyphase motors are substantially alike in their properties. Details of the various systems of distribution will be given in treating sub-station work. Where the motor service consists of a few large units, even the monophase system with synchronous motors is entirely practicable, although seldom advisable. Diphase and triphase systems can be advantageously applied to any case that is likely to arise; and which one will best fit it is a matter that only a trained engineer with full knowledge of the local conditions can properly decide.

Of far more importance are the general methods employed in carrying out the electrical distribution, and these are applicable with almost equal force to any sort of alternating system.

First in importance is the maintenance of a uniform voltage on the primary service lines. This voltage should as far as possible be the same at every transformer and should be constant, save as it may be raised to compensate for the loss in the secondaries.

The first step toward obtaining this uniformity is to assume a fictitious centre of distribution as at *D*, Fig. 231. This should be chosen at or near the centre of load, generally in the business centre of the city. If the office of the operating company is conveniently situated it should be used as a habitation for the centre of distribution, at which supplies can be kept and measurements made. *D* is taken as the termination of the transmission line proper and acts in the capacity of a central station toward the primary service wires. As a preliminary toward a more exact regulation, there must be means for keeping the voltage at this point *D* up to the normal under all conditions of load. The most obvious suggestion is overcompounding the generators for constant voltage at *D*, and this is often advisable, though it must be remembered that compound winding is by no means the only and not always the best means of securing constant voltage at a point distant from the generator.

When the circuit is nearly non-inductive, and the current therefore very nearly in phase with the E. M. F., or when the power factor can be kept very nearly constant, compounding

works admirably, and so is readily applicable to cases where lighting is the main work to be done or where synchronous motors keep up the power factor of the system.

If, however, the load is largely of induction motors, running at all sorts of loads, or is otherwise of strongly inductive character, compound winding alone will not suffice to keep constant voltage at the point *D*. It will fail in proportion to the amount of compounding necessary to be employed and for two reasons: first, because of the direct effect of the lagging current on the excitation necessary; and second, because, as has already been pointed out in Chapter VI., the lagging in phase of the current disturbs the functions of the commutator. It is, therefore, desirable to bring "pressure wires" back from *D* to show at the station exactly the condition of things at the load, so that the voltage may be maintained by hand regulation, if necessary. This is of course a temporary expedient with a compound-wound machine, but it may avert frequent bad service. The pressure wires may come either from the primary circuit at the centre of distribution or from some point of the secondary system which is chosen to represent average conditions of load. The latter is the preferable method, if there is a fairly complete system of secondary mains. The pressure wires may be taken as a guide for close hand regulation or may operate some form of automatic control of the field rheostat. Neither hand nor automatic control is very satisfactory, if the generator requires great change of excitation under change of load. For the class of power transmission under consideration it is therefore better to use a generator of moderate inductance and armature reaction, whether it be compounded or otherwise regulated.

For the pressure wires may be substituted a compensated voltmeter, arranged to take account of the drop in the line and show at the station the real voltage at the centre of distribution.

Granted now that means are taken to regulate the voltage at *D* as it would be regulated if the generator were at that point, the distribution problem is the same as that in an ordinary central station. Most alternating stations, however, are far from well organized in this respect. Nothing is at present commoner than to find an alternating station which receives

pay for not more than one-half of the energy delivered to the lines, and sometimes this low figure falls to one-third or even a quarter. This unhappy state of things is due mainly to badly planned secondary circuits and to the indiscriminate use and abuse of small transformers. The alternating current transformer is a marvellously efficient and trustworthy piece of apparatus, and, perhaps in part for this very reason, it has been often the victim of wholesale misuse. Without going in detail into the case of sub-station *vs.* house-to-house distribution, it is sufficient to say that the essential thing for efficiency is to keep the transformers in use well loaded and hence at their best efficiency, and that for this purpose a few large

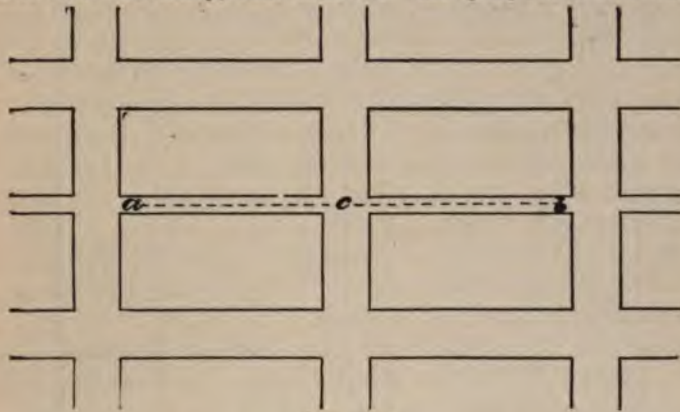


FIG. 232.

transformers are, on the whole, much better than many small ones. The reason for this may be best shown by taking the following practical example:

A given region requires, let us say, 250 incandescent lamps or thereabouts, together with fan motors and perhaps an occasional large motor. These are distributed among a score of customers scattered over a couple of blocks, Fig. 232. The blocks are say 200 feet long, with alleys cutting them in two. Now these customers may be supplied from individual transformers, or all may be supplied from one transformer. In either case the lines should be carried in the alley. In the former case 20 transformers would be connected to service wires attached to the primary service main *a b*. These transformers would average say 12 lights capacity each (600

watts). In the latter case *a b* would be a secondary main supplied from a single transformer of 12,000 watts capacity. Now assuming a load such as would be met in ordinary practice, let us examine the transformer losses in each case. The day may conveniently be divided into three periods in considering load: 7 A. M. to 5 P. M. forms the day load of motors and a few lights; 5 P. M. to 12 night, the evening load; and 12 to 7 A. M., the morning load. During the first period we may assume 15 transformers to be quite unloaded, 2 to be three-quarters loaded on motor work except during the noon hour, and 3 transformers to be one-quarter loaded on day lights.

During the second period we will assume the motors to be

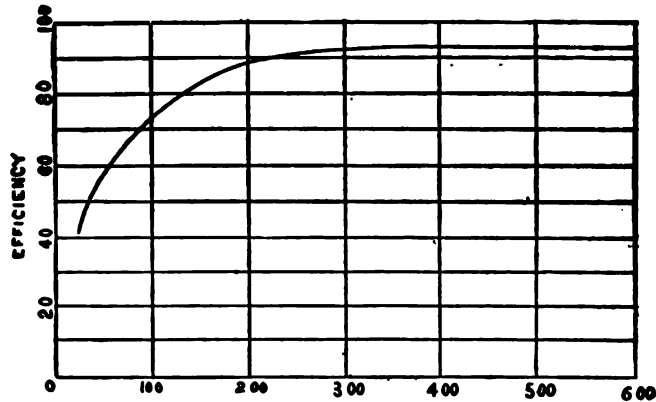


FIG. 233.

off, 8 transformers to be three-quarters loaded on the average from 5 until 7 P. M., and the rest one-quarter loaded from 5 until midnight.

For the third period it is safe to assume 15 transformers to be unloaded and the other 5 one-sixth loaded from midnight until 7.

Now the efficiency curve of a 500 or 600 watt transformer at various loads is approximately as shown in Fig. 233, derived from a consideration of several transformers of different makes. The constant loss, when the transformer is run unloaded, is about 30 watts.

On the above assumptions and knowing the efficiency of the

transformer at various loads, it is easy to calculate for each period the total energy supplied and the transformer output which is delivered and paid for. The result of this calculation is as follows:

	1st Period.	2d Period.	3d Period.	Total.
Energy Supplied in Watt Hours,	18,480	20,420	10,050	48,950
Energy Delivered " "	10,450	17,700	3,500	31,650

Therefore barely six-tenths of the energy supplied to the transformers is delivered by them to the consumers. And this is a condition of things more favorable than is usually found in stations of moderate size using, as many of them do, small transformers.

The other method of distribution is to use a single large transformer in place of the small ones and distribute to all the district by secondary mains.

Now the efficiency of a 10-12 KW transformer is very closely that shown in Fig 234. Moreover the energy consumed when running without load is hardly more than 150 watts, so that the transformer, when absolutely unloaded, wastes only one-fifth of the energy wasted by the small transformers of the same total capacity. Taking the output for the same periods as before, a much better result is reached, as follows:

	1st Period.	2d Period.	3d Period.	Total.
Energy Supplied, Watt Hours,	11,800	19,660	5,830	37,290
Energy Delivered, " "	10,450	17,700	3,500	31,650

With the single large transformer more than 80 per cent. of the energy supplied to it is delivered on the customers' circuits. This means that for a given amount of energy supplied from the station one-third more revenue will be obtained if the distribution be accomplished by a large transformer as against quite small ones. Such a difference is important, even in a plant driven by cheap water power. Besides, for a given amount of energy delivered to the customers, high plant efficiency means smaller first cost of plant. With distribution by secondary mains not only will smaller dynamos at the power station suffice for the work, but the cost of the transformer capacity necessary is enormously reduced. In the house-to-house distribution it is quite possible for any transformer to be loaded with all the lights connected to it. When twenty customers are supplied from a single transformer the

chance of such an occurrence is almost *nil*. In the hypothetical case just discussed certain of the transformers would be called on for full output almost daily, while all of them would be subject to such a demand. The largest total regular output, however, would be not much over one-half the aggregate transformer capacity. So, instead of using a 12 KW trans-

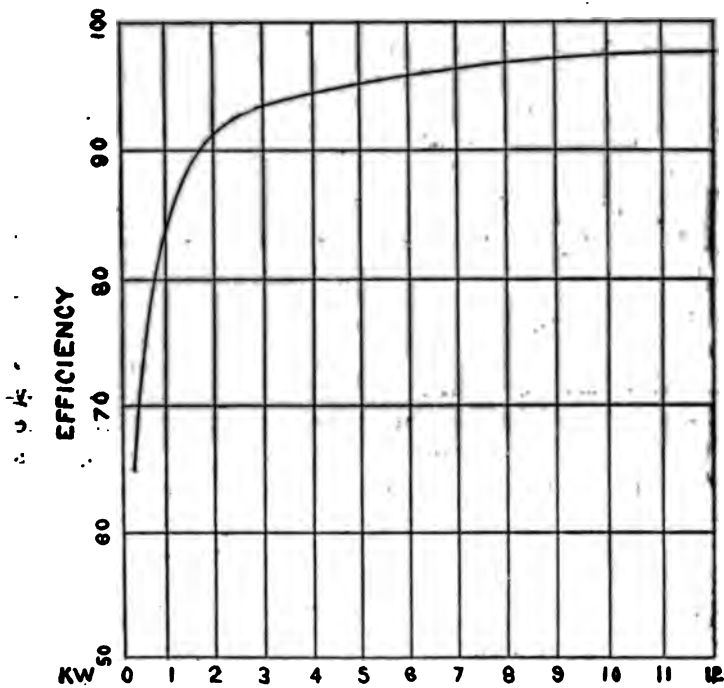


FIG. 234.

former to replace 20 small ones, in reality a smaller one, say one of 10 KW, would be ample.

In point of cost the single transformer would have the advantage by not less than \$250, enough in most cases to pay for the secondary mains. In regulation, too, the single transformer has the advantage, for the load is less liable to sudden fluctuations, and the transformer itself regulates more closely.

In practice it is best to go a step further than shown in Fig. 232 and connect the secondary mains at *a* and *b* to the next

section of secondary just across the street, and also c with the main in the next alley, so as to form, at least in the region of dense load, a complete secondary network. Thus each transformer can help out its neighbor, in case of need. The secondary mains should, in so far as is practicable, be designed for the same loss of voltage, and the compounding and other regulation applied to the generator should be arranged to compensate for the loss of voltage in the transformers, and to hold the voltage as steady as possible in their secondary mains. The perfection of such regulating arrangements depends of course on the uniformity of the distribution of load, but with a little tact in arranging the circuits variations in voltage at the lamps can often be kept within 2 per cent. of the normal pressure. In large systems, as will be presently shown, even better work can be done.

An essential point in the use of secondary mains is the employment of fairly high voltage. The general law, that the amount of copper necessary in a given distribution varies inversely as the square of the voltage, applies here with great force.

In the early stages of alternating work, when small transformers were nearly always used and regulation was generally bad, the favorite voltage for incandescent lamps was about 50 volts. The main reason for continuing this practice was the fact that it is not difficult to make a 50 volt lamp that will stand much abuse in the way of varying voltage. With good regulation this pressure can now be more than doubled with equal security from breakage and great advantage to the distributing system. Not less than 110 volts should be used, and a pressure of 115 to 120 volts is better, as it gives equally good service with a quarter less weight of copper. From the present outlook even higher voltage is becoming practicable.

It is not always advisable to do all the work of distribution by secondary mains. In districts where the service is scattered a few small transformers of various sizes can be very advantageously used, but should be generally employed as a temporary expedient only, and shifted to another field of usefulness when the service grows heavy enough or stable enough to justify installing secondary mains.

Recurring now to Fig. 231, we have found that the best pro-

cedure is to use an alternating system, compounded or otherwise regulated so as to hold the voltage as nearly as possible constant at the secondary terminals of the transformers. These should be large enough to do all the work within a distance of 200 feet more or less and should feed secondary mains at a pressure of say 115 volts. When these mains are more than usually long it is best not to feed current directly into them but to employ feeders connecting for instance *c*, Fig. 232 with points midway between *c* and *a*, and *c* and *b*, respectively. Neighboring secondaries may often be interconnected with great advantage.

As to the primary distribution we have assumed a centre at *D*, Fig. 231. From this point feeders should extend to primary mains connecting the transformers more or less completely, preserving nearly equal drop in voltage from *D* to each transformer. The degree of elaboration in this primary network is a matter to be determined by local conditions. If, for example, the plant is of rather small size and the drop from *B* to *C*, Fig. 230 is not above 1 or 2 per cent., the transformers may be connected to short branch lines crossing *B D C* at various points, without any further complications, or the main line may be branched at *B*, each branch having short cross feeders, while with other distributions of load the primary lines may be quite completely netted, with regular feeders from *D*.

The motor service may often require special treatment. It often happens that it is best to feed large single motors or groups of motors from special transformers, which will generally be large enough to avoid the objections adduced against a general house-to-house transformer system. Such special transformers avoid throwing a large and varying load on the secondary lighting mains during the hours of "lap-load" when it might be objectionable, and thereby avoid needlessly heavy mains and annoying variations of voltage.

It must be remembered that Ohm's law is a very stubborn fact. Any apparatus that takes a large and variable current is liable to interfere with regulation. There is no such thing as a motor either for continuous or alternating currents which will not affect the lighting service. The nearest approach to such a motor is obtained by arranging the distributing system

so that the largest current taken by the motor will be insufficient noticeably to disturb the regulation of the lamps.

This means that care should be taken, in arranging the distribution, to avoid overloading the lighting mains with motors. It is an easy matter to determine the effect of the motor current by calculation if the current is continuous, and by experiment or calculation for alternating current. In the latter case the easiest way is to connect the motor with any convenient main and put on load with a brake—even a plank held against the pulley will do. Put an ammeter in circuit, and if at the rated amperage of the motor the fall in volts at the transformer is enough to endanger regulation, the motor should be put on transformers of its own. Generally the likelihood of trouble can be judged from the size of the motor and the load on the mains, without experiment. One of the advantages of regulation by secondary pressure wires is the easier handling of an inductive load of which compounding alone generally takes no account.

One of the nice questions to be decided, in such a plant as is under discussion, is arc lighting. The most obvious method of arc lighting from a transmission plant is to use alternating motors to drive arc dynamos, either belted or directly-coupled. This method is in use in a good many plants, and works admirably, although the efficiency is not all that could be desired, being probably about 75 per cent. at full load, reckoning from the energy received by the motor to that delivered at the lamps under the most favorable commercial conditions. That is, for the operation of each 450 watt (nominal 2000 c. p.) continuous current arc, about 600 watts would have to be delivered to the motor. In working commercial circuits, on which the number of lights varies greatly, the efficiency at light loads would be greatly reduced, and might easily fall to between 50 and 60 per cent.

This is not a cheerful showing, and much ingenuity has been spent in attempting to remedy such a state of things. For street lighting the scheme is reasonably good, but it breaks down in commercial lighting.

In cases where plants operate low tension direct current systems *via* motor-generator or rotary converters, the solution of the difficulty is simple, since all the commercial arcs

can readily be worked at constant potential, using preferably enclosed arc lamps taking from 5 to 7 amperes. The efficiency of the rotaries is high and the loss in the mains is not great, so that by this means the only circuits that need be worked on the series system are the street lights, which form a nearly constant full load. When the distributing system is alternating, one can still use constant potential lamps for the commercial circuits with fairly good results.

Alternating constant potential enclosed arc lamps have at the present time been brought to a state that justifies their extensive use, and yet it must be admitted that they are somewhat less satisfactory than the direct current arcs. Taking lamps as they are found commercially, and comparing direct current with alternating current enclosed constant potential arc lamps, the following results were obtained by a committee of the National Electric Light Association appointed to deal with arc photometry:

	Current.	Total Watts.	MEAN SPHERICAL C. P.		WATTS PER M. & C. P.		
			Opal Globe.	Clear Globe.	Opal Globe.	Clear Globe.	
Direct,	4.90	529	155	182	3.41	2.90	Average of 8 lamps.
Alternating,	6.29	417	114	140	3.66	2.98	Average of 7 lamps.

These figures show that even considering the energy absolutely wasted in dead resistance in the direct current constant potential lamp, it still has a slight advantage in efficiency over the alternating lamp, not enough, however, to compensate in addition for the loss of energy incurred in changing from alternating to direct current.

The alternating lamp is at a slight further disadvantage in that it requires rather the more careful handling, and a rather better grade of carbons. It also is liable to give trouble from noise, although the best recent lamps are comparatively free from this defect, which has in the past been a serious objection to this type of lamp. Some noisy lamps are still to be found on the market, and a hard carbon will make almost any lamp sing. Most of the noise originates in the arc itself, and

it is considerably reduced by enclosing the arc and using a non-resonant gasket on the outer globe. Good lamps carefully operated are capable of giving very excellent service, and are entirely adequate for commercial circuits under ordinary circumstances.

It would appear at the first glance at the table just given that enclosed arcs of either type are little, if at all, more efficient than good incandescent lamps.

The difference between them is in fact not very great, but incandescent lamps are generally rated on horizontal candle power and on their initial, not their average, efficiency. With due allowance for this, the efficiency of the best commercial incandescent lamps per mean spherical candle power ranges from 4 to 4.5 watts per candle power, so that the arcs have still a fair margin of advantage, increased by the better color of their light. In using alternating arcs for commercial work their performance is bettered by pushing the current up to about 7.5 amperes, at which point the lamp is more efficient, more powerful, and, if properly adjusted, steadier.

In street lighting the best results have so far been obtained by operating alternating arcs in series on the constant current system. This requires special lamp mechanism and special devices for changing the constant potential alternating current of the transmission line to a constant alternating current of voltage automatically varying with the requirements of the circuit.

Such constant current regulators vary considerably in detail, but the underlying principle of all of them is as follows: A heavy laminated iron core is surrounded by a movable, counterbalanced coil, through which the current to be regulated flows. Any change in the position of this coil changes the reactance of the combination, and hence varies the current. The coil is counterbalanced, until, when the normal current is flowing, the coil floats in equilibrium, the opposing forces being gravity and the attraction or repulsion between the coil and the magnetized core. Then any change of current due to varying conditions in the external circuit establishes a new position of equilibrium for the coil in which the changed reactance brings the current back to its normal amount. Sometimes the regulator is combined with a transformer which

receives current from the transmission system at any convenient voltage, while the floating coil acts as a secondary and delivers constant current to the lighting circuits.

This is the arrangement of the constant current transformer system as operated by the General Electric Company. Fig. 1, Pl. XVII, shows the internal arrangements of the transformer. It has two fixed primary coils at the top and bottom of the structure, receiving current from the main line, and two floating secondary coils counterbalanced against the repulsion of the primaries, and balanced against each other by the double system of rocker arms visible at the top of the cut, which are supported on knife edges. The short balance lever in the foreground is attached to the rocker arms by a chain and is likewise pivoted on knife edges, while it carries on its longer sector, suspended by a chain, the adjustable counterbalance weights. The current can be adjusted at will within reasonable limits merely by adding or taking off counterbalance weights. The whole apparatus is enclosed in a deeply fluted cylindrical cast iron case filled with paraffin oil, which serves the double purpose of giving high insulation and also damping the oscillations of the floating coils. Hence the system has been jocularly dubbed the "tub" system, and the name has every appearance of sticking. Transformers of this type are built for as large a load as 100 series arc lights, in which instance they are usually arranged on the multi-circuit plan, with two 50-light circuits. Some of these big tubs have four primaries and four secondaries, while the smallest sizes have but one of each.

The diagram, Fig. 235, gives a very clear idea of the circuits of this simpler form of the apparatus, and of the shifting of the secondary coil under changing load. The secondary is shifted by hand into the short circuit position and a plug short circuiting switch inserted just prior to starting up, and when the primary current is on the short circuiting switch is withdrawn, throwing the current upon the lamps.

These transformers regulate promptly and steadily, and hold the current quite accurately constant from full load down to as low as one-quarter load. Their efficiency as transformers of energy is high in spite of a rather unfavorable form of the magnetic circuit, being 95-96 per-cent. at full load in the



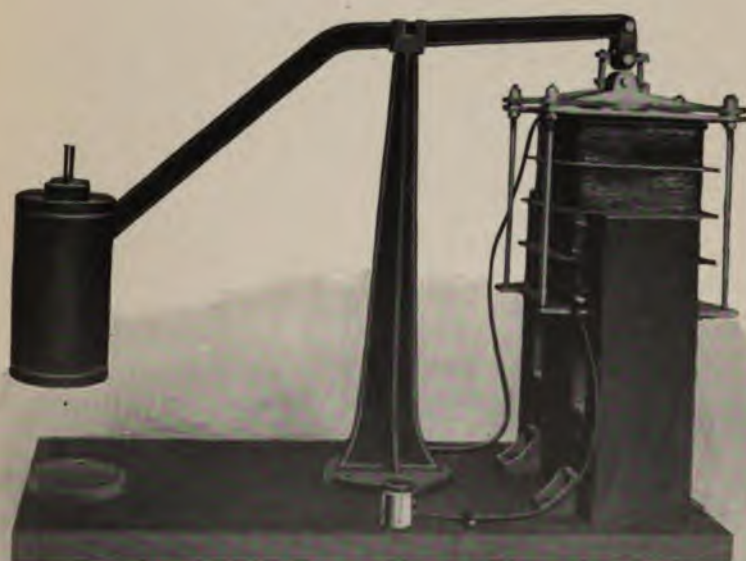


PLATE 77

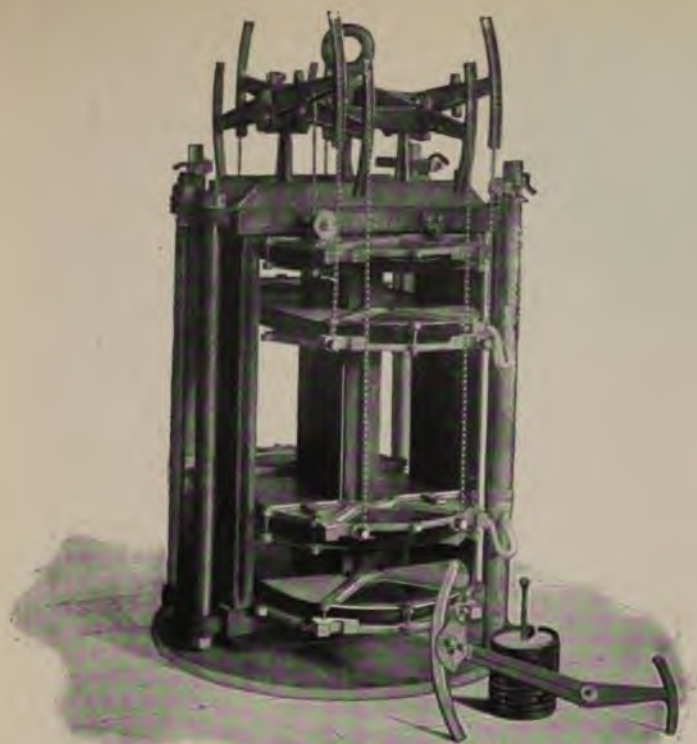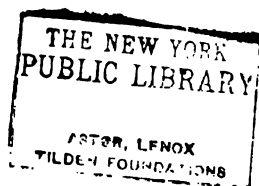

average sizes. From the nature of the case, however, the power factor of such apparatus is ~~not~~ as high as would be desirable, being about 80 per cent. at full load, and falling off in practically linear proportion as the load decreases. For this reason the apparatus, when put into action, throws a nasty inductive load upon the system, and it is good policy to cut it in with a water rheostat in the primary circuit so that the load may go on gradually. An ordinary barrel nearly filled with pure spring water, with a fixed electrode at the bottom and a movable one at the top, each a little smaller than the barrel head, makes a very efficient rheostat for an ordinary circuit of 2,000 volts or so.

Owing to the low power factor, such apparatus should not be used on circuits likely to be worked much at partial load.

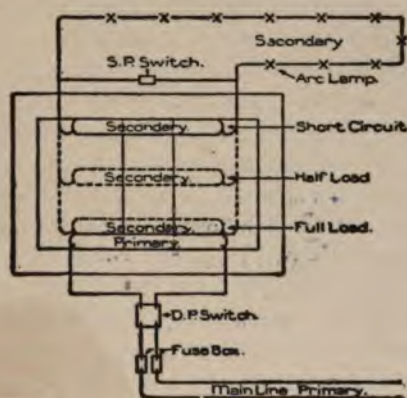


FIG. 235.

It is very well suited, however, to street lighting, and has come into very extensive use.

A similar device is used in the practice of the Westinghouse Company, differing, however, in that the transformer and regulator functions are not combined. The regulator is shown in Fig. 2, Pl. XVII, and in virtue of what has already been said the cut is self-explanatory. The balanced floating coil inserts automatically the reactance necessary to hold the current constant. Regulators are made for a range of action varying from 25 per cent. to 100 per cent. of the whole load, according to the requirements of the case, and,

of course, are of greater size and cost according to the range required. They hold the current closely at a uniform value, and have, probably, at full load a somewhat better power factor than the combined apparatus just described. They have the same rapid falling off of power factor at low loads, however, and must be used in connection with a separate static transformer to give the required voltage on the arc circuit. They could, of course, be installed directly on the distribution circuit, but at the risk of a ground on the arc circuit involving the whole system in trouble, so that practically they are regularly used with transformers. The efficiency of this system does not differ materially from that of the tub system already discussed, and the operative qualities of both are much the same.

The series alternating arc lights thus operated have come into very extensive use and are rapidly driving out the open continuous current arcs for street lighting. They are, of course, always enclosed, and give a very steady and evenly distributed light, free from shadows and bright zones, which has proved highly satisfactory for street lighting.

The ordinary series alternating arc takes about 6.5 amperes and 425 watts, and at this input is materially better as an illuminant, light for light, than the so-called 1,200 c. p. open arc or the enclosed continuous current arc taking 5 amperes or thereabouts. To compete on favorable terms with the 9.5 ampere open arcs, or the 6.5 ampere enclosed continuous current arcs, the current in the alternating system should be carried up to about 7.5 amperes, at which point it is fully the equal of the others in practical street lighting.

Used thus on the street, the slight noise of the alternating arc is not noticeable, and experience has shown the operation of the system to be eminently satisfactory. For commercial lights the series alternating arcs are not to be commended, since the power factor of the regulating devices is objectionably low at partial loads. The choice for such work lies between conversion to continuous current and the use of constant potential alternating arcs, with the advantage, at the present time, rather in favor of the former expedient.

The general principles of distribution laid down hold whatever alternating system is used. Polyphase and other modified

alternating systems require special treatment in the details of distribution, but not in the broad methods employed.

Motor service should generally be cultivated as a desirable source of profit and an excellent way of raising the plant

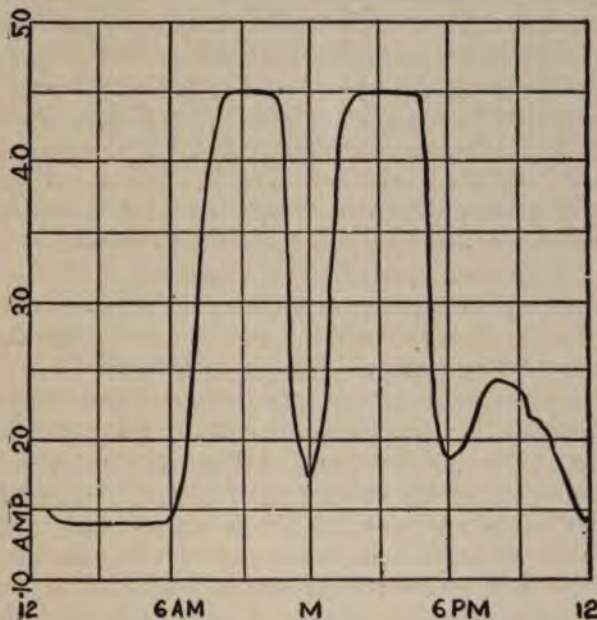


FIG. 236.

efficiency. A motor load, if of numerous units or a few steadily loaded ones, is remarkably uniform. Fig. 236 shows the load line of a three-phase power transmission plant. The motor load consisted of about fifty induction motors of various makes, aggregating nearly 350 rated HP. The curve shows the primary amperes in one leg of the circuit throughout the twenty-four hours. It was taken on a day in early August when the lamp load was very light and reached its maximum as late as 8 P. M. The motor load, save for the sharp decline during the noon hours, was very steady, although there were frequent variations through a range of a few amperes, too brief to appear on the diagram. In this case and at this season of the year there is no "lap load."

The distribution is, as far as possible, from secondary mains, and even in winter, when the lap load is prominent, although the motors still require the major part of the output, the regulation of the system is admirable.

Thus even a heavy motor load gives very little trouble with a properly designed system of distribution and judicious handling. The things to be feared are large motors running on very variable load, motors with bad power factors carried by overloaded transformers, and overloaded conductors during the period of lap load. Now and then a system is installed for motor service only or with special motor circuits. In this case it should be remembered that there is no need for any very close uniformity of voltage throughout the system, and that to attempt it means waste of time and money. The circuits can be laid out with reference to the desired efficiency alone, for in most cases even 10 per cent. variation in voltage between one motor and another is of little consequence.

The distribution of power from scattered sub-stations fed by a common line involves some of the most intricate and puzzling problems to be found in power transmission. Such distributions generally arise from an attempt to supply from a common power plant energy for divers purposes to several separate towns or regions, having different requirements. In the main such plants require special treatment in order to secure decent service. A great variety of cases may arise, almost every plant having peculiarities of its own, but in general they will fall into one of the three following categories:

1. Radial distribution from a centrally located station.
2. Radiating distribution from an eccentric station.
3. Linear distribution.

1. The first-mentioned class consists of those plants which supply from a single station power to different localities lying in different directions, and generally at different distances. Fig. 237 shows the character of the conditions thus met. *A* is a generating station, the position of which may be determined by various reasons—the existence of a valuable water power being the commonest; *B, C, D, E, F*, are the various points to be supplied with power. They may be at any distances, and of any sizes or natures. Usually the greatest distance involved will not be coupled with the greatest load, and the situation

is otherwise inconvenient. If all the loads were large, the simplest procedure would be to install one or more generators for each circuit and operate them independently. Or if by good luck two or more load points were of similar size, distance, and character, they would naturally be operated as if they were one.

To consider methods of operation more in detail, imagine a system consisting of the station *A*, a load at *B* consisting of 150 KW in lights and motors, largely the latter, distant 3 miles; and a load at *E*, 6 miles away, of 250 KW, mostly incandescent lamps. At both *B* and *E*, it would be desirable to distribute at the voltage of transmission without a general reducing station. In such a plant it might be possible to operate *B* and *E* from separate generators, compounding them or using the regulating methods already described. But if day lighting at *E* is to be attempted, it would be necessary either to run one dynamo all day at a trivial load or to throw this day work in on the other circuit and take the voltage as it chanced to come.

With the ordinary amount of loss in the line *A B*, the result would be decidedly bad regulation at *E*; with only

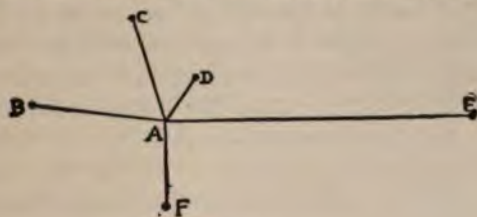


FIG. 237.

motors at *B* or *E* the case would be very simple; the station would be regulated with reference to the lighting load alone, but with lights at both places there must be good regulation at both. During the day at least it would be desirable to work both lines from the same generator. The first step in this direction would be to install at *A* a hand regulator to control the line *A E*. This might be such a device as that described on p. 467, or even a choking coil of variable reactance and sufficient range of action to prevent the generator, in compounding or otherwise regulating for *B*, from

causing undue variations at *E*. As already pointed out, a motor load is often fairly steady except at certain times, so that the regulator would require little attention save in the early morning and at noon. Before the motor load fell off in the afternoon it would probably be desirable to start a separate dynamo for *E*.

In operating both lines regularly from the same generators, hand regulation on at least one of them would become necessary; on which one is a matter of relative convenience. If the distances *A B*, *A E* were much smaller, not more than two or three miles, it might be feasible to install both lines for small and equal drop—not over 2 per cent.—so that, if the dynamo were compounded for an equal amount, the possible variations of voltage would be trifling. Such a plan cannot, however, give really good regulation over any save very short distances without inordinate expense for copper. This sort of regulation by general average has been tried too often already, with disastrous results, and is quite out of place in serious power transmission work.

If *A E* were 10 or 15 miles long the manner of operation would become a still more troublesome question. Raising and reducing transformers would generally be used, and the best plan would probably be to install a pressure regulator in connection with the raising bank of transformers, and let the shorter line be taken care of by the compounding of the generator or by a pressure regulator of its own. The latter procedure is somewhat preferable. For if the drop in the lines be 5 or 10 per cent. and the loads variable, the work of regulation will be lessened by compounding the generator, if at all, for constant potential at its own terminals. The range of the hand regulation is thus lessened since there is no attempt at over compounding; and two regulators requiring occasional adjustment are easier to handle than one which requires continual juggling to produce indifferent results.

In certain cases of heavy load there may be a regular sub-station at *B* or at *E*, the distribution at the other point being direct. Then the regulation question is better transferred to the sub-station, the generator being regulated for the loss in the other line which, as its load will usually be relatively small, should have a comparatively small drop.

The most troublesome case that can arise is when power is to be furnished to a street railway at *B* or *E*, in addition to a general lighting and motor service. A railway load is so violently variable that it cannot be operated in direct connection with an incandescent service unless this latter with the general motor load is so great as to quite dwarf the variations of railway load. Frequently, therefore, a separate generator should be devoted to the railway work. In case this cannot be done without great inconvenience, it may become necessary to install a sub-station at which the lighting circuits can be regulated either by hand or automatically.

Suppose now that the problem is complicated by the addition of loads at *C*, *D*, and *F*. These lines will be treated on the same general principles as the first two. To begin with, any line operating motors alone can be worked direct from the generator. Even if all the loads be mixed in character, two or more can often be found which through similarity of conditions can be worked together in parallel, either by a common regulator or by compounding the generator. The others should be treated as already indicated. At the worst it might be necessary to install a regulator for each line. This is not really so burdensome as might be supposed, since several of the regulators will usually require infrequent attention, so that one man can manipulate the whole set. This line of action is similar to that followed in most large

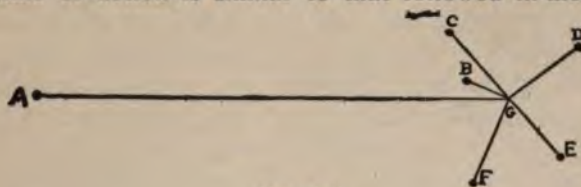


FIG. 238.

central stations, where feeder regulation, although rather a nuisance, is successfully accomplished without any particular difficulty. Feeder regulators for alternating circuits have, however, by no means received the attention that is their due.

Pressure wires from each load point are desirable, though, if the load is such that the inductive drop is small or quite steady, the regulator can be easily adjusted in accordance with the current on the line.

In the transmission and distribution of power from an eccentric station, the difficulties are many unless recourse be taken to a regular sub-station. Fig. 238 shows a typical situation. Here *A* is the generating station and *B, C, D, E, F*, are the load points. If the distance from *A* to the nearest load is great enough to require raising and reducing transformers, it is generally best to install a reducing sub-station worked like the central station *A*, Fig. 237. Sometimes, however, it is only half a dozen miles or so from *A* to the group of load points. The case is similar to that discussed in the first part of this chapter, save that the load is in several distinct localities instead of being generally distributed. From this difference the complication arises. A certain proportion of cases can be treated readily, however, by choosing a point *G* near the centre of load and then running the lines *GB, GC, GD, GE, GF* with 1 or 2 per cent. loss wherever lights are to be furnished. Then by holding the voltage constant at *G* or slightly over compounding at that point, sufficiently good service can often be given.

If the loads are very unequal in size, *G* may be chosen at or near the most important point and lines run to the others as before, with the regulation question confined practically to the first. If the load points are quite numerous and scattered, Fig. 239 may be a preferable plan. Here two lines

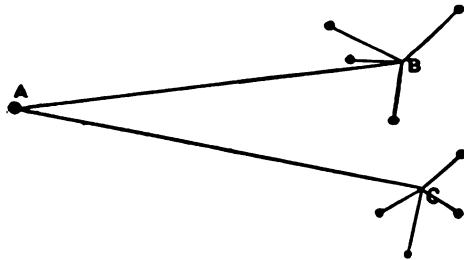


FIG. 239.

AB and *AC* are run and a group of load points is served from the terminal of each line. The groups shown are about equal, but sometimes it would be desirable to run a separate line for a single point where the load was peculiarly heavy or troublesome.

These scattered distributions are fortunately mostly for motor service, so that regulation, in practice, is often easier than the situation indicates. They sometimes run naturally into the linear distribution, which, unless of trivial size, is a thorn in the flesh of the engineer.

Fig. 240 is a type of this linear distribution, which is often met with in large transmission work and especially in long distance cases.

The power station *A* is mainly intended to supply lights and power at *B*, which may generally be supposed to be the largest town in the immediate region. Incidentally it is highly desirable to supply lights and power to *C, D, E, F, G*, towns or manufacturing points at which electric power is needed. The main line *AB* may be taken as 20 miles, which is enough to disclose most of the difficulties.

Of course the line must be operated at high voltage with raising and reducing transformers. In nearly every case the

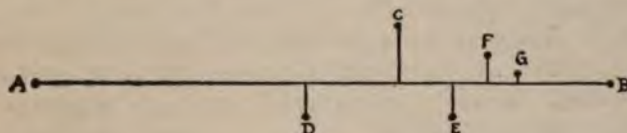


FIG. 240.

latter would be placed in a regular sub-station, with appropriate regulating apparatus for keeping uniform voltage throughout the primary and secondary networks in *B*. The loss of voltage in the line above may be assumed at 10 per cent. and the primary pressure at *B* as 15,000 volts. As *B* comprises by far the largest and most important part of the load, attention should be first directed to complete regulation at that point.

This can be best attained by first holding the primary pressure at *B* constant by compounding or other regulation at *A*, and second, by careful regulation of the primary and secondary feeders in the sub-station. In fact the whole transmission must first be treated with respect to results at *B*, while nevertheless it is necessary to scatter power along the line at the points indicated. There may be present all sorts of require-

ments. For example, at *C* there may be required 1,000 incandescent lamps and a few motors; at *D* 500 incandescents; at *E*, a 50 HP motor and 300 incandescents, at *F* 300 incandescents, and at *G* 200 HP in motors and 200 lamps.

Frequently the load at one or more points may consist of motors only. This case is not included above, since no special regulation is needed; the power has only to be transformed from the line voltage to that of the motors, neglecting the effect of varying loss in the line.

Each of the cases noted involves the question of regulation in a somewhat troublesome form; at *D*, for example, the conditions under which incandescent lamps must be supplied are most severe. To begin with, at the nearest point of the main line *AB*, the voltage may change by about 6 per cent., owing to varying loss in the line; the branch to *D* causes a trifle more variation, the drop in the transformers still more, and finally there must be added the loss in the secondaries up to the lamps. In all, these cumulative variations in voltage may be 10 per cent. or more. At best, this means 5 per cent. change of voltage above and below the normal. This is too great to allow what can be called good service, although worse is sometimes given. In fact such variation ought to be classified as outrageously bad. To better matters, two methods are available.

First, one may use a hand regulator in connection with the reducing transformers; for, in so large a system as that involved, the changes in voltage are relatively slow, and the conditions of load may be such that over compounding on the main line may partially compensate for the losses elsewhere. Or second, the lights may be operated by a dynamo driven by a synchronous motor. This procedure adds somewhat to the expense and trouble but completely eliminates the loss in the line, since the speed of the motor is independent of the applied voltage, and incidentally, of the load.

For small outputs a good induction motor serves the purpose well, for it is simpler to operate than the synchronous variety and can be made remarkably insensitive to changes of load and voltage. This motor generator device is an admirable resource when a very variable line

voltage must be dealt with. In making the installation for a point like *D* the actual variation of the pressure at the point of tapping the main line should be ascertained, and the effect of the subsequent losses up to the lamps should be computed. If the resultant changes are frequent and considerable, a motor generator gives the best result. For gradual and moderate changes an occasional touch at a regulator may be all that is needed, and now and then the resultant variation will prove to be not more than 2 per cent. above or below an assumed normal for the lamps, in which case the regulation often may take care of itself.

At *C* there is a distribution equivalent to that from a small central station. The line pressure will generally have to be twice reduced before feeding the lamps. The choice of methods is the same as in the case just discussed, except that, with the losses of a double transformation and rather scattered service, regulation cannot be left to chance. Generally in a station of this size some regulation due to the distribution itself will have to be provided for, and the simplest course is to establish a sub-station with one or more pressure regulators. This is operated just like the sub-station at *B*, being merely on a much smaller scale, seldom large enough to require the use of pressure wires. A careful study of local conditions, however, is needful to enable one to discriminate between the two methods mentioned.

At the station *E* the motor will take care of itself, but the lamps might give trouble owing to variations in motor load. If these are great and sudden, nothing save running from the motor a generator for the lights will answer, and even that will not be entirely satisfactory. If the load is steady and the lights regularly in use, as would be common in factory service, the loss in the branch line to *E* and the secondaries can be adjusted so that if the voltage at *B* is kept constant by regulation at *A*, that at *E* will be nearly so. This device is probably the one best suited to give good service at *F*. For *G* the same method holds, but with so large a proportion of motor load, separate transformers for the lights are almost necessary. In cases where there is no regulation at *A* for the loss in the line, pressure regulators or sometimes motor generators will have to be used at *E*, *F*, *G*.

The various cases of linear distribution just considered are of necessity treated little in detail, since they are so much modified in practice by special circumstances. Enough has been said, however, to indicate the methods to be followed and to show how tactfully this class of problems must be treated.

Finally comes that very important class of cases which involves the distribution of transmitted energy from large reducing stations. Such is the normal condition of affairs whenever power is transmitted to a city in large amounts for lighting and motor service. Passing over a few instances in which this power may be mainly utilized for driving by motors, or replacing by rotary transformers existing central stations, one is confronted by the problem of constituting a great distributing system for alternating currents; a system general enough to be available for every service, and perfect enough to compare favorably with the great networks now worked by continuous currents. Until very recently this problem would have been insoluble in any practicable way, but to-day, thanks to the modern alternating systems and to the intelligent use and arrangement of large transformer units, it is possible substantially to duplicate in convenience and efficiency the best direct current systems, while retaining the enormously valuable advantage of using high tension feeders. It must not be supposed, however, that the same procedure must suit both cases—the results but not necessarily the methods must be in full accord.

The basis of each system must be a carefully laid out network of working conductors, giving throughout the area of service a substantially uniform voltage as high as can conveniently be employed in the various consumption apparatus—lights, motors, and so forth. This voltage is practically determined by that of the incandescent lamps which are available. A few years ago 100 to 110 volts was the working limit of effective voltage between incandescent service wires (not of course the extreme voltage to be found between any two wires of the system). Of late the majority of important stations employ lamps of 115–120 volts. Now and then 120–130 volts is reached, and very recently there has been a strong movement toward boldly doubling the usual voltages and employing lamps made for 200–250 volts.

A considerable number of scattered small plants use such lamps, and in a few cases central stations have adopted them in connection with three-wire systems, using thus about 440 to 500 volts between the outside wires. There is a decided tendency in this direction, and occasional stations have undertaken to change to this double voltage, at least to the extent of trying 220 volt lamps extensively. At present these lamps are of somewhat uncertain quality and rather high price, but they have been rapidly improved, both here and abroad.

It is undoubtedly much harder to get an efficient and durable filament for 220 than for 110 volts at a given candle power. Such a filament is necessarily very slender and correspondingly fragile. If two 110 volt filaments mounted in series would answer, the task would be simple, but such a combination gives double the required candle power, which is generally undesirable. The net result of present experience is that while 220 volt lamps can be made to give excellent results in efficiency and life they are, as a rule, both poorer and costlier than the corresponding lamps of half the voltage. From the nature of lamp manufacture this condition is likely to remain, in perhaps lessened degree, even when the production of these high voltage lamps is extensive. The question between the two from a commercial standpoint will ultimately be a close one, although at present the advantage is altogether on the side of the lower voltage in most instances. The high voltage lamps are most satisfactory when of 20 to 32 candle power and worked at 3.5 to 4 watts per candle. Under such conditions the filaments, being somewhat thicker than in a 16. c. p. lamp of similar voltage, and being worked at a lower temperature than the high efficiency lamps, give a reasonably good life.

Until much experience has been accumulated with reference to the high voltage lamps, their use in any considerable undertaking cannot safely be recommended. It would be particularly unwise to attempt it in a large transmission plant, where any trouble with the lamps would inevitably be charged against the general system. It is better, then, to select for incandescent lighting a voltage only so high as has been thoroughly tried—say 115 to 120.

The resulting service voltage on the secondary network

depends on the system of distribution employed. There are actually employed for primary or secondary distribution with alternating currents about a round dozen of distinct methods, more or less convenient and inconvenient, and requiring very various amounts of copper for distributing the same amount of energy at the same loss and distance. Several of them are very convenient and valuable, others have as their only excuse for existence the desire to exploit a novelty or to evade somebody's patent.

The simplest of them all is the ordinary two-wire system worked with alternating currents. In this the maximum voltage of the lamps is the maximum voltage of the secondary system. To avoid this limitation and to secure the ability to run motors is the principal function of the various modifications, polyphase and other, which make up the remainder. As these various systems are often exploited it is worth the while to review them briefly, with special reference to economy of copper and convenience of installation on a large scale for the purpose we are considering. The two-wire system is shown diagrammatically in Fig. 241. Its main advantage is extreme



FIG. 241.

simplicity. It requires the same amount of copper as a two-wire direct current system at the same effective voltage, and is installed in the same general way, except that, owing to the peculiarities of alternating currents already explained, very large single wires are undesirable and armored conduits for underground service must be used with great caution.

As to motors for such a system the case is not altogether what one would desire. Alternating monophase motors are not yet so satisfactory for general service as those of some other types, more particularly as regards starting and severe service, and, until considerable improvement is made in them, the pure monophase system is severely handicapped. The two-wire arrangement is always at rather a disadvantage in the amount of copper required both for feeders and service mains.

The most obvious modification of this distribution is its evolution into a three-wire system such as is familiar in Edison stations. The extreme working voltage is at once doubled, and thus with the same voltage at the lamps, the cost of copper is greatly reduced. If the copper for a given two-wire system be taken as 100 that for the corresponding three-wire system is 31.25, assuming that the so-called neutral wire is of one-half the cross section of either of the others. Fig. 242 shows this familiar arrangement in diagram. Like every other system which saves copper, a three-wire distribution is subject to certain inconveniences. In the first place, it is necessary to carry three wires instead of two over substantially the whole working area. Secondly, the lamps must be nearly equally divided between the two sides of the system. This balancing of the load is not particularly troublesome in a well-managed plant, and general experience has shown that the gain in copper far outweighs this disadvantage.

This three-wire distribution has been largely used for alternating current work. It is sometimes very convenient when applied to single or grouped transformers for the lighting of




FIG. 242.

large buildings and regions in which balance of load is easily preserved. In such case the transformers are supplied from high voltage feeders, generally arranged on the two-wire system. As a rule, however, proper balancing is not easy in isolated districts and the best use of the three-wire system is for a general network of secondary mains, the voltage upon which can be controlled from a central station. In an ordinary direct current plant the feeders are of course at low voltage, and a great advantage is gained for the alternating arrangement by feeders at two or more thousand volts supplying the mains through transformers. As regards motors, the alternating current three-wire system is on substantially the same basis as the alternating two-wire system.

More complicated pure monophasic systems are seldom used,

although there is one instance at Portland, Ore., of a four-wire feeder system; derived, however, from polyphase generators. Fig. 243 shows the arrangement of the lines, which are

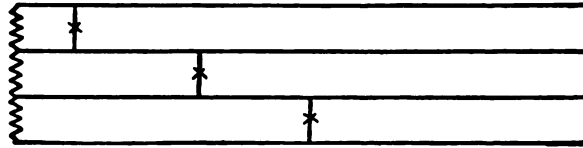


FIG. 243.

operated in general like a three wire-plant and require similar care in balancing, with the additional complication of running four wires and balancing three branches. The saving in copper is of course very great, the amount needed, allowing half the area of the outside wires for each neutral, being about 16.6 against 100 for the two-wire plant. The corresponding five-wire system may be passed over, as it is not used at all for alternating currents, nor extensively in any way.

Next in proper order comes the so-called monocyclic system, which is essentially a monophasic system, but heterophase with reference to the operation of motors. Its principal features have already been explained. So far as lights are concerned, it is simply the monophasic system already described in both the two-wire and three-wire forms. The "power wire," which supplies magnetizing current for the fields of the motors, is only used in so far as is necessary for its special purpose, and may or may not form part of the regular network. The two-wire monocyclic system shown in Fig. 244 describes itself.




FIG. 244.

The expense and trouble of installing the "power wire" is the price paid for the ability to run motors. The total amount of copper is, of course, governed by the size and extent of the power wire. The main wires must accommodate the full current of the generator, for motors and lights must often be operated together, and at all events the machine must be fully

utilized. The power wire, on the other hand, has to carry only a part of the current used in the motors. In a system heavily loaded with motors, the power wire might be one-half the cross section of each of the main wires. If then it extended over the entire system, it would add 25 per cent. to the copper required for the main circuit. Generally its size or extent would be less than that just noted. The total copper required for a monocyclic system is then variable. Its relative amount may vary from 100, when the system is operating lights alone, to 125 for rather extreme cases of motor load.

The same general properties hold good for the three-wire monocyclic system shown in Fig. 245. It is treated like any other three-wire system, except for the addition of the power wire wherever required. There is evidently a great saving of copper over the two-wire monocyclic, secured at the cost of running an extra wire as a neutral and balancing the load on the two branches. The relative weight of copper varies from 31.25 for lights only to say 40 when the motor system is extensive.

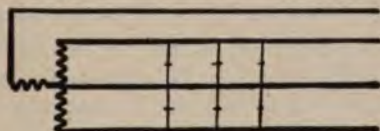


FIG. 245.

Either form of the system is singularly easy to install and operate in plants already having a considerable network of lines, since there need be no rearrangement or balancing of circuits, but only an additional line wire running to the motors installed and extended hand in hand with the motor service. The monocyclic system is very little used in practice, however, since it possesses no important advantages over ordinary polyphase systems and is decidedly less satisfactory for motor service.

Passing now to the polyphase systems, it is well to reiterate what has already been stated in explaining them, viz., that they all involve about the same principles and lead dynamically to about the same results. They do, however, differ considerably in their characteristics as applied to a general system of distribution, and in rather interesting ways.

The diphas system can be worked either with four wires,

i. e., a complete and independent circuit for each phase, or with three wires. The former arrangement is the one almost invariably used. The two circuits can be worked independently for lights, but must be united to allow the operation of diphas motors. For the former purpose the two windings of the generator may be treated, save in one important respect, like separate monophase alternators. For the latter purpose they must work conjointly. Fig. 246 shows the relations of the

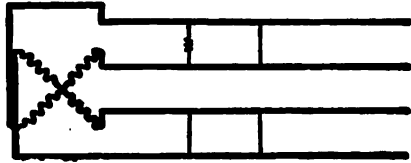


FIG. 246.

two circuits. In a general system it is the best plan to carry the two circuits throughout the territory to be covered. In this way motors can be run anywhere. Otherwise, if the main circuits covered different districts, connecting lines might have to be run at considerable expense for copper and labor, uniting the two systems. Further, when the two circuits are together, it is easier to divide the load evenly between them; which is desirable to prevent one circuit of the generator being overloaded before the other is fully used. Incidentally hand regulation must sometimes be used for one or both circuits, unless the loads are equal as regards drop in the lines. If the generator is to be compound wound, the two phases must be equally loaded in order that the compounding may be able to hold the voltage on both phases alike. It must not be understood that unequal loads affect the voltage as in a three-wire system—they merely produce different “drops,” in the two systems, which cannot be equalized by the generator.

As to the relative amount of copper required, it is, when both phases are run together, 100. If separated, this may be slightly increased by cross connections for motors.

A diphas system can be organized with each phase forming a three-wire system like Fig. 242. This doubles the working voltage and so saves copper, but at the cost of very serious complication. The full distribution requires six wires, three per phase, and these must be carried together or cross-con-

nected for motors, if separated. The first procedure—running two three-wire systems side by side over the same district—involves frightfully complicated wiring; and the second, if the motors are at all numerous, requires a troublesome system of subsidiary lines. In either case, not only would each three-wire system have to be balanced in itself, but the two must be mutually balanced unless hand regulation is resorted to for one or both. Altogether the diphas system with separated phases does not lend itself readily to distribution for lights and motors on a large scale, save in changing over existing monophas systems, for which it happens to be exceedingly well suited. Its worst features are the large amount of copper required for secondary mains, and the forbidding complication of any attempt to secure economy by using the three-wire distribution. Like the diphas inter-connected system about to be described, and certain forms of the three-phase system, it is most practicable in plants of moderate size not requiring a complete sub-station with a full system of secondary mains.

The interconnected diphas system, Fig. 247, employs a common return for the two phases. It has been often proposed but seldom used, for a good practical reason. The combined phases are unsymmetrical with respect to the inductance of the system, so that, even when the two sides of the system are equally loaded, the voltages between the common wire and the mains are unequal by an amount proportional to the induc-

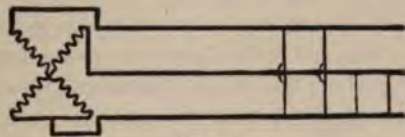


FIG. 247.

tive loss in the lines. Hence it is unsuited for long lines either primary or secondary, overhead or underground. The lamps on the two sides of the circuit are at nearly the same voltage, but the voltage between the mains is so compounded of the two phases as to give increased working pressure enough to reduce the relative amount of copper to 72.8 under the most favorable circumstances. The system need scarcely be considered further, since it is more curious

than valuable, and is unlikely to be employed in large substation work.

Three-phase circuits are variously arranged, as has been already indicated. The phases are very seldom separated, for a six-wire circuit is too complicated for general use, but are usually interconnected. The commonest and simplest connection is shown in Fig. 248. This consists of only three wires, each running from the terminal of a phase winding on the armature. Motors are connected to all three wires, and lamps between any two wires. The voltage is the same between each pair of wires, provided each pair be equally loaded. The relative amount of copper required is 75, as explained elsewhere. Here, as always, the uniting of circuits to save copper is accompanied by the need for balancing the loads. Not only does change of load on one branch change the drop in the other two, but interacts with them in the transformers and generator. The disturbance, however, is fortunately trivial in amount, except for very great inequali-

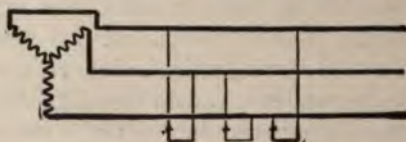


FIG. 248.

ties of load or for abnormally large line loss. With ordinary losses in the line it is absolutely negligible when the circuits at full load are balanced within 10 or 15 per cent., and at light loads far greater inequality will have no perceptible effect. With ordinary care in arranging the installation the question of balance never assumes any considerable importance, and need not do so even when very close regulation is desired. The main objection to the system of Fig. 248 is the considerable amount of copper required for a distribution by secondary mains as compared with the ordinary three-wire systems. Its salient advantage is its ability to handle motors and lights with equal facility on a system composed of only three wires, and with some saving of copper. The trouble of approximately balancing the three branches is regarded as insignificant by those who are operating such systems. This three-phase distribu-

tion is sometimes taken from the three common junctions of a mesh connection, but, while for motors the connection is a matter of indifference, the star is to be preferred in a mixed service.

A far better system for sub-station distribution is that shown in Fig. 249. It is a three-phase system with a neutral

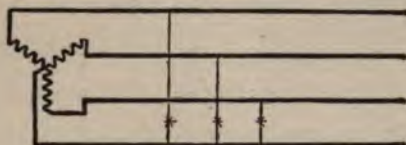


FIG. 249.

wire connected to the neutral point of the three-phase windings. The lamps are connected between this neutral wire and the several main lines. The result is that the working voltage of the lamps is the voltage from either line to the neutral point, while the working voltage of the system is 1.73 times greater, being the voltage between line and line. Hence there is a great reduction in the amount of copper required, the relative weight, as compared with the two-wire monophase system, being only 29.2 if the neutral wire is taken of cross section equal to one-half that of either of the other wires. This system must be balanced approximately, but requires less care in this respect than the ordinary three-phase connection just described. It is on the whole better adapted for large distributions of mixed lighting and power than any other of the modern alternating systems, since it combines a fairly simple arrangement of wiring with very great economy of copper. It lends itself readily even to underground service, giving a rather simple cable construction and facilitating testing. It is used with excellent results in the Folsom-Sacramento, the Fresno, and other important transmission plants, for the main work of distribution.

An interesting modification of the three-phase system is that used in the city of Dresden and shown in Fig. 250. Here the system is constituted in the ordinary way, but two of the leads, *a* and *b*, are arranged to carry all the lighting, while the third wire *c*, which may be of much less area, is used only in connection with the motors. It may even sometimes be

advantageous to increase the cross section of two of the armature windings at the expense of the third. A machine so constituted would have fully as great capacity as a monophasic machine of the same dimensions, and still would be amply able to carry any ordinary motor loads. Even with the ordinary three-phase winding this connection may be used without serious reduction of output as compared with a monophasic.

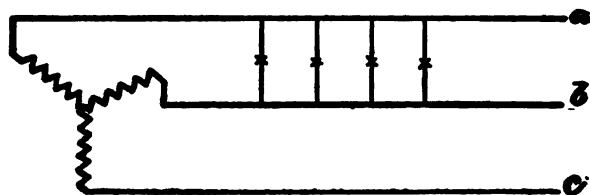


FIG. 250.

generator of the same cost. Obviously the relative copper required may vary from 100, when the load is of lights only, to 75 for the other extreme case. With half lights and half motors it would require 80-90 relative copper, according to the allowances made for drop, inductance, etc. In point of convenience it is very similar to the "monocyclic" system, and like the latter may be used with great ease in remodeling monophasic systems for motor work, without requiring special generators of a type which is tending to obsolescence.

A natural derivative of this mixed system is shown in Fig. 251. It is a combination of Figs. 249 and 250; *a* and *b* being the mains, *c* the motor wire and *d* the neutral wire. The relative copper required naturally varies with the proportion of motors and lights; 36 representing that necessary for an approximately equal division under ordinary conditions. Fig. 251 may be compared with Fig. 245, the monocyclic three-wire system. It is about the same in effect as the three-phase system with neutral, having but two branches instead of three to balance, and paying for this privilege with about 20 per cent. more copper.

There is thus a liberal choice of methods more or less available for the general distribution of power and light. Any one of them may prove to be the most useful in particular situations. Now and then it may be worth while to use more than

one of them in the same plant, as, for example, monophasic two-wire and monophasic three-wire or three-phase and three-phase with neutral.

It must be borne distinctly in mind that one cannot organize a large sub-station distribution successfully on any substantially two-wire system—the cost of copper is too great. If work akin to that of a large central station is to be done, methods must be used akin to those which have proved successful in

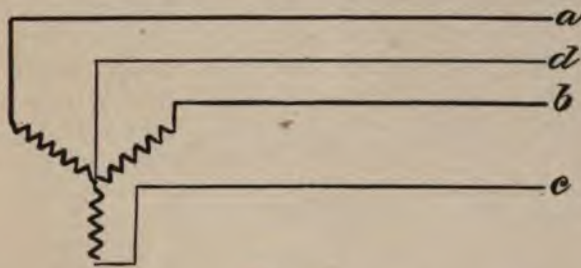


FIG. 251.

such work. The methods of distribution must be those which are capable of giving a secondary network of moderate cost, easy to install and maintain. The use of alternating current gives a great advantage in the use of high tension feeders and in efficient methods of regulation, and there is at present no difficulty in furnishing a reliable and efficient motor service; but to secure the full advantage of all this, one must cut loose from the traditions of alternating current service. A transformer must be looked upon not merely as a device for lowering the voltage to a point available for direct consumption, but as a generator of extreme simplicity and enormous efficiency that operates without attention, can be started and stopped from any convenient point, and may be regulated without material loss of energy. That it receives current from a transmission line instead of energy of rotation from a steam engine is clear gain in simplicity, not a marvel to be looked at askance. On the contrary, the transmission plant is usually quite as manageable and trustworthy as a steam plant.

Approaching the sub-station from this standpoint, the problem of effective distribution becomes tolerably straightforward. Given the transmitted energy, it must be distributed

over a known area cheaply and efficiently, with the smallest feasible loss of energy at all loads, and the best regulation attainable. It will not do to plead transformer losses when the lights burn dim, or the depravity of alternating motors when they flicker.

First, as to locating a sub-station. On general principles any station should be placed as nearly as may be at the centre of its load, and inasmuch as a transformer station requires little space and makes little noise, there are few limitations to its position save the ability to bring to it the transmission lines, which, being generally at very high voltage, will be eyed cautiously by the municipal authorities. The main district to be covered is generally quite definite, and the next thing to be done is to reach every part of it with a network of working conductors proportioned to the service. The nature of the wiring will vary, according to the system employed; but the generally accepted principles are, save for inductance, the influence of which has already been considered, the same that are familiar in continuous current work.

The problem is to supply a certain amount of energy at a given loss over a known area, and the formulæ already stated give the key to the solution. Working out the details, however, is a somewhat complicated matter, requiring great judgment and *finesse*, and to be accomplished properly only by an experienced engineer, working on the spot. The intricacies of the problem are too great to be treated in an elementary treatise like the present. The general situation, however, is something as follows: A city, Fig. 252, is to be supplied with light and power from a transmission plant. Let *A* be the centre of load at which the transmission lines terminate. At this point can most advantageously be located the reducing sub-station, lowering the voltage of transmission to perhaps 2,200 volts for feeders, or to a tenth of this for direct supply. The centre of load considered is not the geographical centre of the district to be supplied, but the centre of gravity of the load. This is determined just as if the electrical loads at various points were weights fastened on a rigid framework. For example, suppose there are given the loads of Fig. 253, five in number and in relative magnitude as shown by the figures. Connect any two of them, as 1 and 2. These would balance

as weights at the point a , which acts with respect to other points as if 1 and 2 were concentrated at it. Now connect a and 3. These weights are equal, hence the point of balance is the

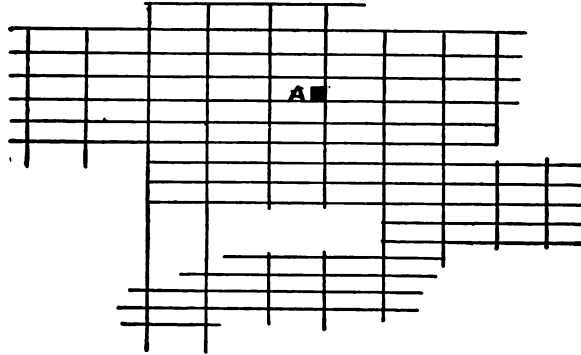


FIG. 252.

middle point of a 3, b , at which the weight is evidently 6; b 4 balances at c , where the weight is 10, and finally the whole system balances at d , which is the centre of gravity. The

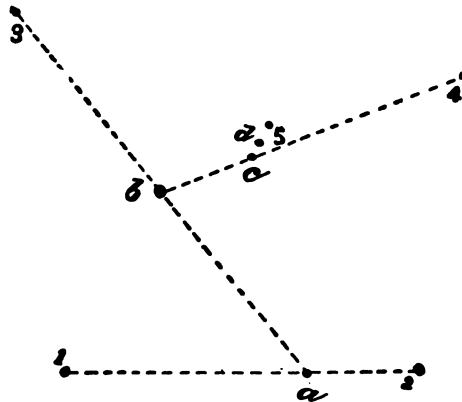


FIG. 253.

points may be taken in any order, but each line must be divided so that, for instance, the length a 1, multiplied by weight 1, shall equal the length a 2 multiplied by weight 2.

The centre of load thus found should be the centre of distribution to secure maximum economy in copper. The fact that distribution lines usually run in a rectangular street

system renders the solution thus obtained merely approximate, but it is nevertheless close enough for purposes of station location.

Recurring to Fig. 252, several methods of arranging the service are available. The simplest is, if the load is tolerably concentrated, to institute a secondary network about *A* so as to include a good part of the load and then to pick up the outlying load by transformers, placed where they can do the most good, fed from high tension feeders. Sometimes, however, there will be no heavy service near the centre of load, so that the whole work of the station will be done through high tension feeders, each supplying through its transformers a more or less extensive system of secondaries.

As has already been pointed out, there is every reason for using a secondary network, connected directly to the reducing transformers, at the sub-station if possible, thereby avoiding the expense of transformers for a second reduction in voltage and the loss of efficiency involved in such a reduction. The house-to-house transformer distribution should be shunned as one would shun the plague, if there is any expectation of securing an efficient station, capable of giving first-class service.

It must be remembered that to be successful a modern plant for distributing power and light throughout a city must be able to compete with the best that can be done, not with the precarious and shiftless service of a dozen years ago.

It is possible with a modern alternating plant to equal the best service given by a continuous current central station, but the feat can be accomplished only by the study of central station practice.

The sub-station at *A*, Fig. 252, should be treated, so far as distribution is concerned, as if the reducing transformers were ordinary generators. The transformer units should be of the size that would be convenient if they were generators, and the bank should be so managed as to keep the transformers in use as thoroughly loaded as possible. From the transformer bank should run feeders to the principal sub-centres of distribution in the network, with boosting transformers and pressure regulators in such of the feeders as require them. From these sub-centres pressure wires should run back to the station for the guidance of the operator in charge of the regulators.

Outside the effective radius of distribution of the principal secondary network will come the independent sub-centres referred to, with their high tension feeders and subsidiary networks. These latter should be, so far as possible, interlinked so that, at times of light load, only the transformers actually needed shall be in service. If secondary pressure wires are brought home from the subsidiary networks all the regulation can be done on the high tension feeders, thereby giving equally good service all over the plant. Most continuous current stations extend their lines far beyond the radius that is economical for low tension currents, and often have to depend on boosters with feeders worked at a heavy loss for service in the outlying districts. With an alternating system this difficulty is avoided, and the loss in transformers and regulators is far less than that incurred with boosters and long low tension feeders.

As for the motor service in such a system, it should be treated by common sense, as it would be in a central station distributing continuous current.

Alternating motors, polyphase or other, can be connected to the secondary mains up to the point at which their demands for current become burdensome. At that point the mains must be reinforced or special feeders run, just as would be the case with continuous current motors. The only difference is that produced by the so-called idle current in the alternating motors, which simply means that the point in question is reached a little sooner than with continuous current motors. In practice this difference need not be enough to be of serious moment in plants having the ordinary proportions of lights and motors. In case of large motor plants in which the service is severe, the use of special high tension feeders will relieve the trouble that might be experienced with the lights, but this expedient is one to which recourse would seldom have to be taken on a large scale.

The greatest difficulty in such sub-station distribution is, as has been already indicated, the arc lighting. At present the alternating arc lamp is hardly adequate to meet all conditions, although it is coming gradually into more and more extended and successful use.


In cases where power is to be supplied for railway purposes,

there are few difficulties in the way. Existing railway generators can readily be utilized by driving them from synchronous motors. This is the method employed in the long transmission to Sacramento, Cal., and elsewhere not infrequently. Where the utilization of the old machine is not important, or in new plants, the tendency is to use the rotary converter, which has been already fully discussed. Such apparatus was first put into extensive use in the Portland (Ore.) transmission plant, and is now largely and very successfully employed elsewhere. Continuous current for other purposes may be obtained with ease by the various methods described in Chapter VII. A very instructive example of recent practice in sub station distribution may be found in Salt Lake City, Utah. This city is supplied with electric power from three transmission plants, the general location of which is shown in Fig. 254. These plants were started independently, but later were consolidated with the local lighting interests and are operated together. The Big Cottonwood plant, started in 1896, contains four 450 KW. three-phase generators, and has a double 10,000 volt circuit fourteen miles long into Salt Lake City. The Ogden plant, started the succeeding year, has five 750 KW. three-phase generators, at 2300 volts, at which pressure energy is supplied in the city of Ogden. The rest of the output is raised to 16,000 volts and sent into Salt Lake City over a pair of circuits 36½ miles long.

The third plant, that of the Utah Power Co., is like the first, in the Big Cottonwood Cañon, but is two miles nearer the city, and contains two 750 KW two-phase generators, with a two-phase-three-phase raising bank of transformers to 16,000 volts, feeding duplicate three-phase circuits.

The Utah plant, with one generator and line of the Big Cottonwood plant, are put in parallel on the high tension side, and run two-phase rotaries in a sub-station near the centre of the city. This sub-station supplies power to the electric railway system, and is entirely separate from the lighting distribution.

The Ogden lines and the remaining Big Cottonwood line are put in parallel on the low tension 2300-volt side at a centrally located sub-station devoted to lighting and power. From this sub-station is carried out a system of three-phase primary

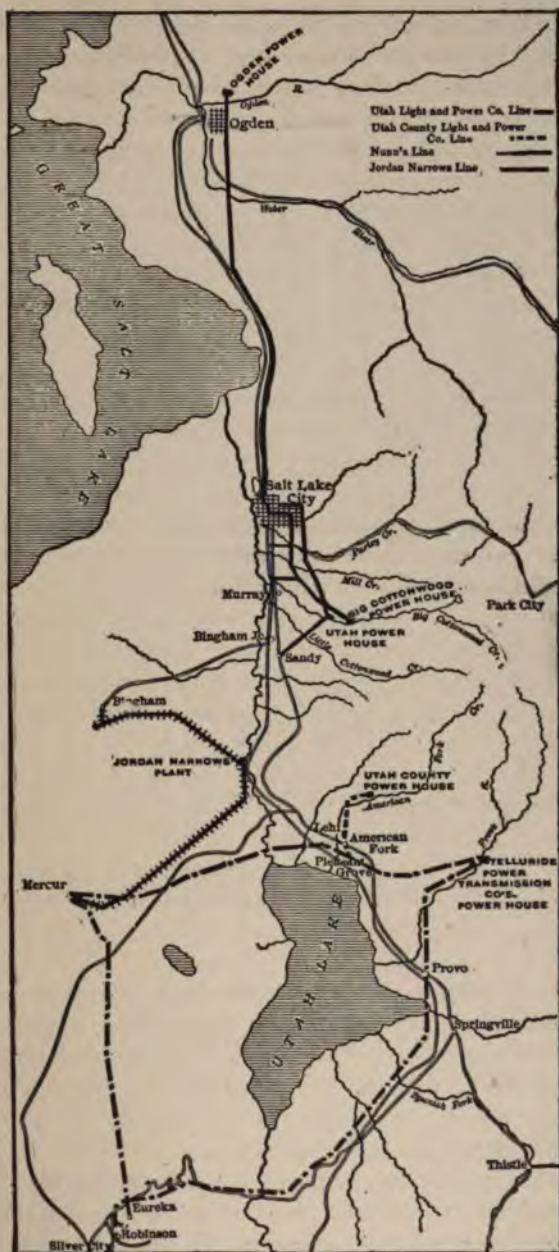

feeders and mains serving the entire city. This network is well shown in Fig. 255. The primaries are connected in mesh, but the secondaries have the star connection with neutral, forming a regular three-phase 4-wire distribution, with 115

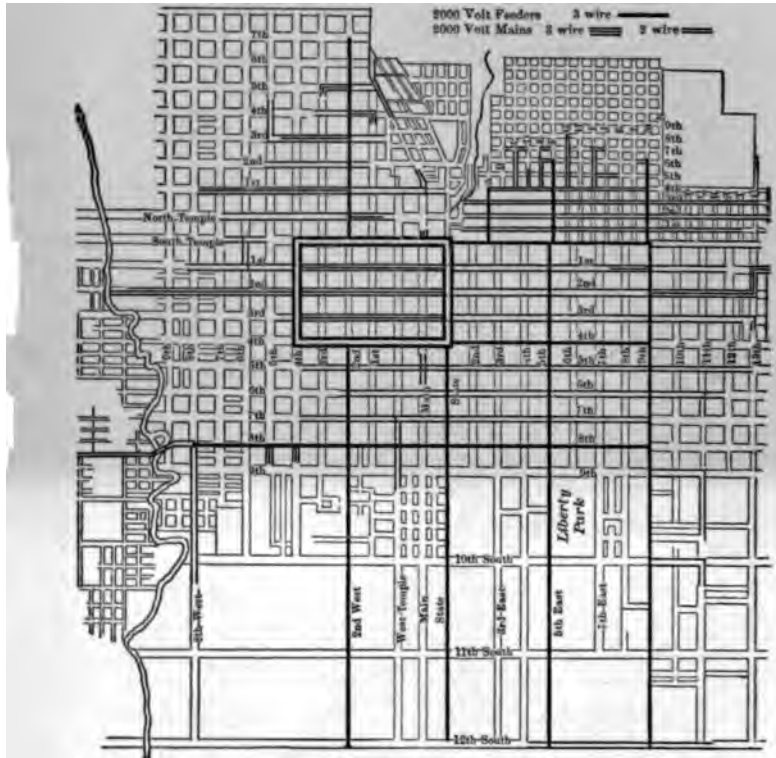


FIG. 255.

volts between the neutral and either phase-wire. Motors are connected to the three-phase wires, giving about 200 volts, and all motors over 10 HP are put on transformers of their own. As appears from the cut, Fig. 255, the primary network is quite symmetrically arranged with reference to the extension of service.

The secondary service is developed into a systematic network of mains, well shown in Fig. 256. Where the service is dense there is a regular 4-wire network. Each block is served

by two groups of three transformers at the opposite corners, from which secondary mains are carried around the block and tied by fuse boxes to the secondary mains of adjacent blocks.

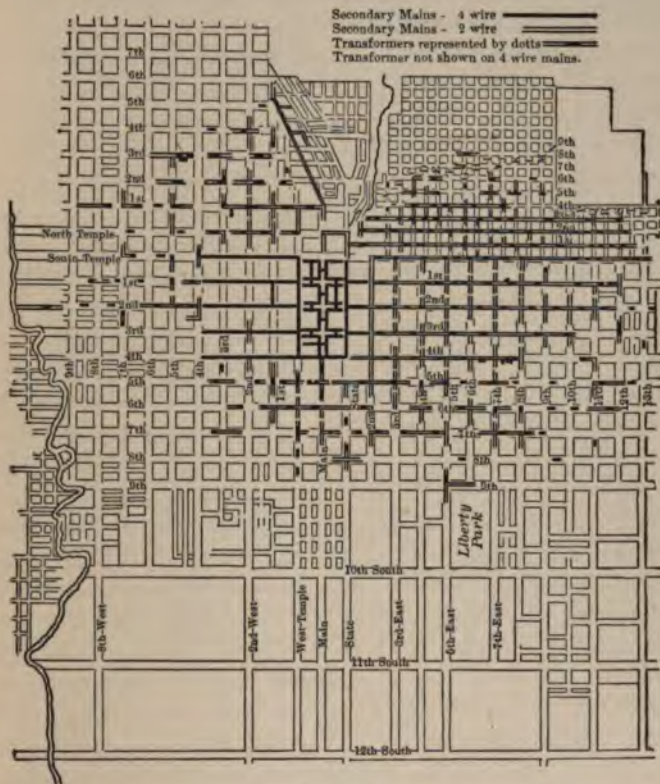


FIG. 256.

Where service is less dense, as in residence districts, the first step is to put in a 2-wire secondary main from the transformers, consisting of a neutral and one phase-wire, street being balanced against street in this light service. Then when business demands, the other phase wires are carried into the street, lights balanced upon them, and the completed 4-wire system is then tied to the network already completed.

Commercial arc lighting is by constant potential alternating arcs, of which some 500 are in use in Ogden and Salt Lake

City. Street lighting is at present supplied from continuous current series arc machines driven by synchronous motors. These motors are located in an old electric light station near the sub-station, and can be driven as generators in case of need, while the sub-station itself has a small reserve steam plant and generator equipment. The synchronous motors are useful in regulating the voltage at Salt Lake City, being capable of accomplishing a variation of 10 per cent. when the lines are heavily loaded.

This scheme of sub-station distribution is admirably conceived, and works out very simply and neatly. The transmission system itself is decidedly complex, owing to the various and diverse power houses, but it works well and has done excellent service. It is interesting to note that no trouble is experienced in running these distant and diverse plants in parallel. At light load there is some interchange of current, but at heavy loads everything settles down to business.

The three stations are connected by telephone, and by a little intercommunication the generators can be put in parallel in the ordinary manner either at a station or at the sub-station in Salt Lake City. The record of the system for continuity of service has been good, and it is worth noting that most instances of trouble on the lines have been due to malicious interference, such as shooting off insulators and throwing things across the lines. Altogether the system is a notable instance of the flexibility and convenience of modern power transmission methods, as well as a good example of a systematic and logical development of the distribution system. As the service grows various refinements will doubtless suggest themselves, but the system is correctly started and there will be little work to undo. It is in striking contrast with some transmission systems which could be named, in which the operators, less skilled in dealing with modern methods, have blundered around trying to give good service in an unsystematic and helter-skelter fashion, getting deeper into trouble at every jump, and then blaming the state of the art for the results of their own lack of discretion.

The most delicate and important work in connection with heavy sub-station service is that involved in the proper regulation of the voltage. The sub-station receives its supply of

energy often from a long transmission line in which there is considerable drop, to say nothing of that encountered in the generators and two banks of transformers.

It must distribute this energy throughout a complicated network, so that the variations in pressure at the lamps shall not exceed two or three volts at the outside. This is never an easy task—it tries the ingenuity even of the best central station engineers.

In connection with a transmission plant probably the best

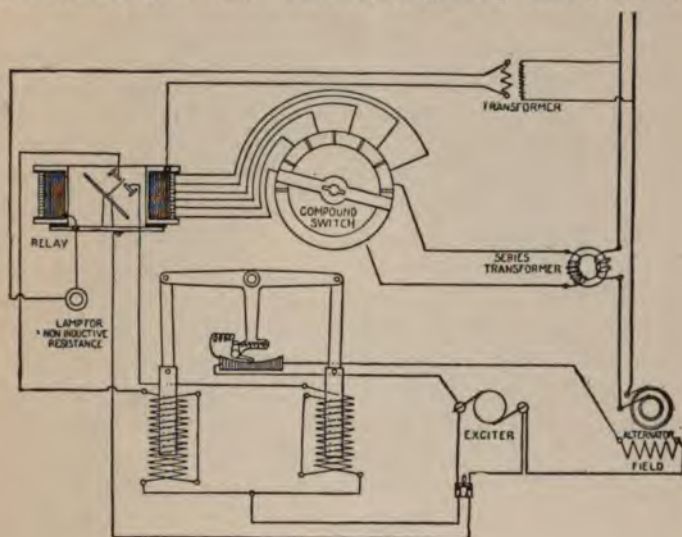


FIG. 257.

plan is to divide the regulation into two stages: first that concerned with the transmission proper, and second that concerned with the distribution. By compounding the generators, or by hand or automatic regulation of generators having good inherent regulation, it is certainly possible to hold the voltage closely constant up to the primary terminals of the reducing transformers. In large alternating generators compounding is seldom or never attempted, and in many cases the sole reliance is hand regulation, which is by no means to be despised in the absence of other means.

Within the last few years several automatic regulators capable of giving excellent service have been brought out, and

they are coming into somewhat extensive use. Fig. 257 shows in diagram the principles of operation of the latest form of the Chapman regulator, which is an excellent type of such apparatus.

The fundamental idea is exceedingly simple—a rheostat in the fields of the generator, with its contact arm actuated by a pair of powerful solenoids, of which one or the other is thrown into action by a voltmeter relay. In the actual working out

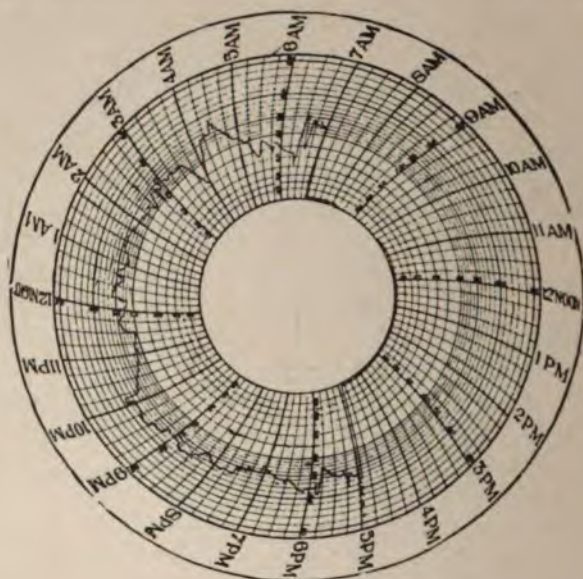


FIG. 258.

of the device there is room for great designing skill. In Fig. 257 the rheostat segments are arranged in the arc of a circle, with the contact arm capable of rotation in a vertical plane above them. This contact arm makes a smooth spring contact with the rheostat segments, and is actuated directly by the solenoids connected with the exciter circuit through the relay. The plunger in one solenoid is extended into the piston of an adjustable dashpot, so that the contact arm can be made to move quickly or slowly, as is desired.

The relay is supplied with current from a potential trans-

former across the main circuit, and in the form shown it also has a subdivided compound winding fed from a current transformer having its primary in the main leads. Such current transformers are commonly used with ordinary ammeters employed on circuits of 2500 volts and upward. The "compound switch" enables the relay to be adjusted so as to shift the

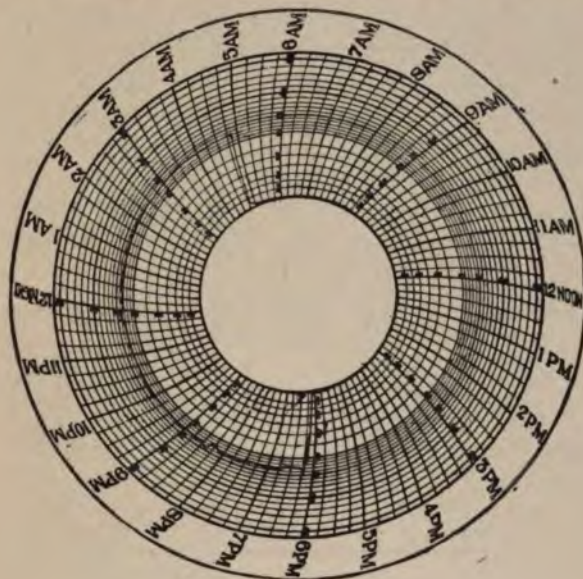


FIG. 259.

rheostat in such wise as to hold the voltage constant at the end of the transmission line instead of at the terminals of the machine.

The solenoids are provided with short-circuited windings in addition to the working windings, to prevent sparking at the relay contacts, which they do most effectively. The relay will operate on less than a volt variation on a 110-volt circuit, and the regulator working as it does directly on the generator fields can and does hold the voltage very close to normal under any ordinary variations of load. Figs. 258 and 259 give an excellent idea of the results actually attained. The former shows the variations in voltage recorded prior to the installation of the regulator. They are of course outrageously bad,

and could have been greatly bettered by a little care in hand regulation. But the diagram, Fig. 258, taken after the Chapman regulator was installed, shows the voltage held admirably steady throughout the run.

Several other automatic regulators are on the market and are capable of doing excellent service. An earlier but still very

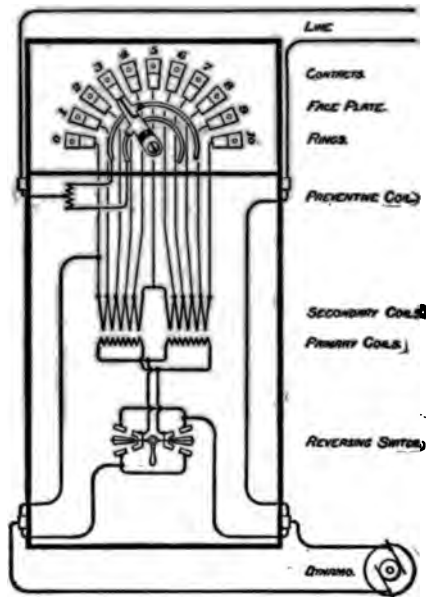


FIG. 260.

effective form of the Chapman regulator is made by the Belknap Motor Co., and for use with continuous current generators or with the exciters of alternators a still simpler device, the Tirrell regulator, has made an excellent record. None of these regulators are arranged automatically to take care of the line drop when the power factor varies considerably, but they are amply sufficient to provide for the general regulation up to the substation, at which point it may be taken up as a separate problem. This residual regulation ordinarily consists of the drop in the reducing transformers, which should be not over 2 percent.; the drop in the feeders and secondary mains; in high tension feeders and transformers when employed; and finally in the house wiring. These losses will aggregate generally less than

10 per cent., and are best cared for in the sub-station. As the variations in load, and hence in loss, are generally rather slow, this regulation should be accomplished without difficulty. In some cases it may be advantageously reduced in amount by carrying the primary regulation through to the secondary terminals of the reducing transformers.

However this may be, the regulation of the voltage on the secondary lines must be carried out with the utmost care. The apparatus employed for this purpose is both very simple and exceedingly efficient. It is in every case a transformer arranged to give a variable ratio of transformation and adding its E. M. F. to that of the working circuit.

The best known form of this device is probably the Stillwell regulator, which has for some years past been very successfully

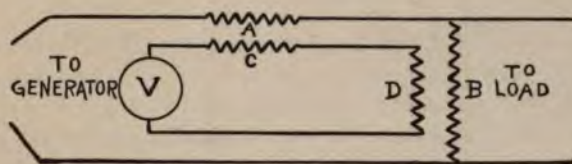


FIG. 261.

used by the Westinghouse company. It is, in effect, a transformer, from the secondary coil of which leads are brought out to terminals so arranged as to enable one to vary the number of secondary turns, and so to vary the E. M. F. added to the working circuit. Fig. 260 shows a diagram of the connections by which this result is effected. The diagram is self-explanatory, except that it should be noted that the "preventive coil" is intended to avert the necessity of breaking circuit or short circuiting a secondary coil in passing from one contact to the next, and that the reversing switch enables the regulator to diminish the voltage on the working circuit, which may now and then be convenient. In the ordinary practice of the Westinghouse company this regulator is installed in the generating station and used to vary the voltage on the primary line. In sub-station work it can be applied either to the primary or secondary side of the reducing transformers; practically the latter is the working connection. These regulators are made

to have a range of action of 10, 15 and 20 per cent. of the working voltage. They are generally employed with a very ingenious device known as the "compensator," the function of which is to indicate the pressure at the end of the line or feeder without the use of pressure wires. The principle of this is shown in Fig. 261. The voltmeter V is in circuit with the opposed E. M. F. of two secondaries C and D , of which the primaries A and B are respectively in series and in shunt with the load. The voltage of D is proportional to the main primary E. M. F., that of C to the primary current strength, so that the difference between C and D , which shows on the voltmeter, can be made proportional to the voltage as reduced by the drop due to the current in the line. The compensator is in addition provided with a series of contacts by which the E. M. F. of C is adjustable for any given percentage of loss in the line.

The practice of the General Electric Company is somewhat different. The generator is generally over compounded for a fixed loss in the line at full load, or hand regulation is effected by the field rheostat. For sub-station purposes a variable transformer is employed to vary the working voltage. The principle of this voltage regulator is the variation of the inductive relation of primary and secondary instead of varying the number of secondary turns. The apparatus itself is made in several forms, one of which, used in the Portland (Ore.) three-phase plant, is shown in Fig. 262. It is essentially a transformer with a movable secondary, and serves either to raise or lower the working voltage, as occasion requires. The gradation of voltage is not by definite steps, but by continuous variation. The apparatus is made for substantially the same range of action as the Stillwell regulator just described, and accomplishes the same result. The General Electric Co. also makes a voltage regulator with a variable number of secondary windings.

It should be stated that neither over-compounding nor any similar device can deal successfully with a load of variable inductance, such as is often found in motor service. They can be made to work well on either non-inductive or inductive load, but are not well adapted for a load of which the power factor varies much. For this condition nothing has yet

been devised so good as pressure wires combined with intelligent hand regulation.

Various attempts have been made to employ pressure wires in conjunction with automatic regulators, but none have yet met with very encouraging success. Automatic control of alternating current sub-station regulators is by no means so simple a matter as pressure regulation applied to the generator. Apparatus of the type of the Stillwell regulator has to deal with fairly large currents, and the contact arm, to prevent undue load on the "preventive coil," should be quickly moved from segment to segment. This involves various mechanical difficulties and the expenditure of some power. Apparatus like Fig. 262 works none too easily, on account of the magnetic forces involved. In fact, it is safe to say that the problem of working sub-station regulators automatically involves the use of powerful relay mechanism akin to that used for water-wheel governors, although on a very much smaller scale.

No such apparatus is just at present available, although if successful it would be in considerable demand. Still less progress has been made toward the development of an automatic balancing device for polyphase circuits. Given a good automatic sub-station regulator, and its application to preserving accurate balance in a two-phase or three-phase distributing system is an obvious extension of its general use. Balance is not difficult to secure with a little tact in arranging the load, but sometimes when there is a particularly heavy lap load there will be sensible unbalancing while this load is coming on and going off. This is taken care of sometimes by having certain loads that can be switched at will upon any leg of the circuit, and sometimes pressure regulators are installed for manual operation. A good automatic balancer and pressure regulator would often be of very considerable service, but it is not yet forthcoming. It must not be supposed that the lack of it is a very grave deficiency, since practically all ordinary central station regulation is manual save in so far as it can be accomplished by over-compounding the generators.

The devices just described are amply competent to furnish very exact regulation for sub-station purposes. Its complete-

ness depends in the last resort on the skill with which the distributing system is designed. If this is carefully done, the sub-station regulation should hold the voltage within very narrow limits clear up to the lamps.

As regards the best system of transmission to employ in connection with heavy sub-station work, there is naturally a wide diversity of opinion. In the author's judgment there is at present no distributing system for large sub-station work so generally advantageous as the three-phase distribution with

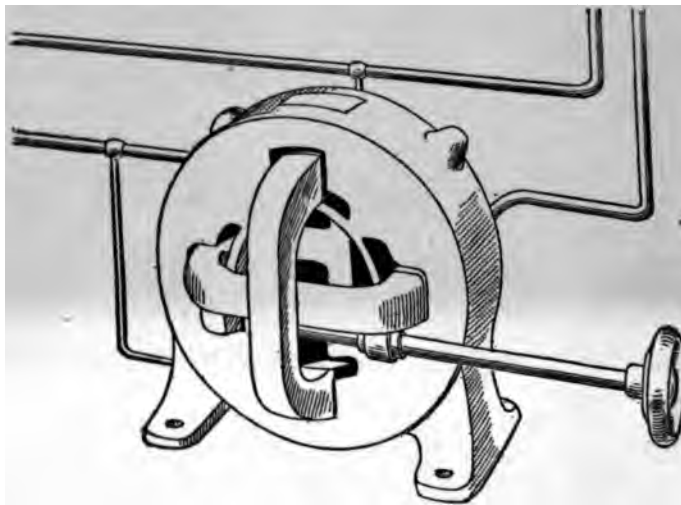


FIG. 262.

neutral wire shown in Fig. 249. It is remarkably free from trouble as regards balancing, and extraordinarily economical of copper. With further advance in the development of single-phase alternating motors, the single-phase three-wire system shown in Fig. 242 will do admirable work when the motor service is rather light. The diphase system has been installed in some central stations and the "monocyclic" in others, so data will eventually be available regarding each of these systems, but there is little reason to expect as good general results as could be obtained by the systems mentioned above. Diphase, monocyclic, and the Dresden three-phase systems

are, however, very much easier to adapt to the circuits of present stations than is the three-phase system with neutral wire.

When a large part of the output of a transmission plant is required for railway work and other motor service of extreme severity, and a lighting system is also to be operated, it is a wise precaution to work the two services normally over separate lines and from separate generators, as is done in the Salt Lake City system, just described. Otherwise the variations of load may be so great and so rapid that no care in regulation could prevent serious fluctuations in voltage. A small railway load and all ordinary motor service can be worked from the same circuits as lamps without much difficulty. These limitations are not peculiar to transmission plants—no Edison station, for instance, would dare to attempt working a low voltage conduit railway from its lighting mains. In these, as in many similar matters, a little common sense will prevent serious mistakes and show the necessity of working every system so as to obtain the best possible results and not to discover what it will endure without giving intolerably bad service. Of late storage battery auxiliaries have often been suggested, and sometimes have been employed, in connection with power transmission plants. Some reference has already been made to storage in Chapter II, but the matters here to be considered are of a different character. In transmission work a battery may be used for two entirely distinct purposes. In the first place it may be used, as it sometimes is in steam driven stations, for the purpose of storing energy at times of light load to be used in making up deficiency of power at times of heavy load.

In steam driven stations the installation of a battery effects a considerable economy by enabling the engines to be run at all times at the points of maximum economy, and an additional saving, in first cost, by reducing the capacity of the steam plant and generators required. The conditions of economy depend mainly upon local circumstances, but a material saving can be made in many instances by using the battery.

In hydraulic practice the case is different. In the average water power plant the main hydraulic works should generally

be installed for the full available capacity, save in the few instances when a partial fall can be economically utilized. As a rule the dam will be substantially the same for a partial development as for a complete one, and the latter can be carried out more cheaply at the start than when added as patchwork later. Consequently there is seldom or never any saving in installing a costly battery subject to heavy depreciation in order to avert the first cost of a larger plant. Further, the loss of energy in the battery is much greater than the loss ordinarily incurred in the line at full load, so that the total saleable power for a given first cost would in nearly every case be reduced by installing a battery. The one case in which a battery can advantageously be used in connection with power transmission for the purpose indicated, is that in which the total hydraulic power available is actually insufficient to carry the required maximum load. Storage may then be very advantageous, since it enables the unutilized power at light load to be applied to the peak. Especially will it be advisable when the peak is high and the load factor rather poor, under which conditions a battery may raise the possible maximum output by 30 to 50 per cent., sometimes even a little more.

The second use of a battery is as a reserve to tide over a brief breakdown. The question of reserve against accident in transmission work is always a troublesome one. In the author's opinion the need of such reserve located in the sub-station is greatly overestimated. Experience clearly indicates that of the interruptions of service occurring on the system of a transmission plant with sub-station distribution, only a very small minority occur on the transmission line proper. The distribution lines throughout an average city are peculiarly exposed to interruption from limbs of trees, which in residence streets can never be adequately trimmed; from the fall of foreign wires; from necessary cutting off in case of fire, and from other causes. A high voltage transmission is neither more nor less likely to encounter trouble on its distributing system than an ordinary central station. So far as these causes of trouble go, the transmission plant's sub-station is exactly on a par with any other central station in requiring special precautions. Now while central stations always should have

more or less reserve apparatus to use in case of breakdown, it is not required on account of possible trouble on the line except as such trouble may injure apparatus. A short circuit on the feeding system will not be removed by the presence of a spare engine and dynamo in the station. Hence the need of reserve in the sub-station of a power transmission system bears relation simply to the accidents which may affect continuity of service as regards the main transmission line, and particularly accidents producing more than momentary interruptions. Such accidents are very rare on properly designed and erected lines, and save on very long lines of which the cost is a considerable part of the total cost of the system, it is generally true that a fraction of the cost of a complete reserve plant at the sub-station would provide a duplicate line so guarded that reserve apparatus would be practically needless. With well-built duplicate pole lines and proper switching arrangements, serious trouble on the lines, save under conditions which would also paralyze the service on the distributing system, and thus cripple the plant in any event, becomes almost impossible.

Sometimes, however, a partial auxiliary plant is extremely useful, but it is rather for its convenience in case of repairs to apparatus at the generating station or sub-station than as a safeguard to the main line. In working a large sub-station a storage battery may be of considerable use in this way, particularly if the system is being pushed near to its capacity. It is decidedly not good policy, however, to use a battery unless the station is upon a scale large enough to warrant the employment of an especial man skilled in handling batteries and unburdened with other duties. Charged and discharged through motor-generators or rotaries, a storage battery can be put into service on a moment's notice, and is far less troublesome to keep up than any other auxiliary for temporary use.

In some localities a generator coupled to a gas or oil engine makes an admirable auxiliary. Such engines can now be obtained of large output and very high economy, and form a reserve almost as convenient as a battery. Steam reserves are not large in first cost, unless high economy in operation is attempted, but cannot be put quickly into action unless the fires are kept banked, which is a very considerable expense.

However, by keeping a banked fire under threatening climatic conditions the reserve can be ready when it is likely to be needed, and if apparatus needs repair there is generally notice enough given to get steam up. Power of quick firing is of great importance in boilers for an auxiliary plant, and with tactful treatment a steam reserve is probably the most satisfactory for plants of moderate size.

CHAPTER XV.

THE COMMERCIAL PROBLEM.

POWER transmission is of little avail if it does not pay, and the chances of commercial success form the first subject of investigation in the development of any power transmission enterprise. Reduced to its lowest terms, the question presents itself thus: Can I profitably furnish power at a price which will enable me to undersell the current cost of power production? Evidently this question cannot be answered *a priori*, but must be thoroughly investigated in each particular case.

The first thing to be determined is the existence of a sufficient market, the second thing is the price current in this market. It is not difficult to find out the gross amount of power used in a given region, but it is exceedingly hard to discover the real cost of production. Even if all men were strictly veracious it is a fact that very few users of power have any clear idea of what they pay for it. Coal bills and wages are tangible and men realize them, but interest, depreciation, repairs, miscellaneous supplies, water, taxes, insurance and incidentals, are seldom rigorously charged up to the power account, and these are large items when power is used irregularly.

Further, the cost per HP is often computed from the nominal HP of the engine, without exact knowledge of the real average yearly load. Hence people often think that they are producing power at \$15 or \$20 per HP per year when the real cost is \$30 to \$50.

The most exhaustive researches as yet made on this subject are those of Dr. C. E. Emery. The accompanying table gives a summary of his results, based on 500 net HP delivered for 10 hours per day, 308 days in the year. The power is supposed to be derived from a single engine worked continuously at its normal capacity. These figures represent results

much better than are generally reached in practice, since most engines are not worked continuously at full load. In a large

KIND OF ENGINE.	COAL \$ ₁₀ PER T.	COAL \$ ₂₀ PER T.	COAL \$ ₃₀ PER T.	COAL \$ ₄₀ PER T.
Simple high speed.....	\$29.81	\$36.17	\$42.54	\$48.90
Simple low speed.....	28.46	34.80	39.94	45.67
Simple low speed, condensing..	22.82	26.77	30.73	34.69
Compound condensing, low speed.....	21.97	25.53	29.09	32.65
Triple expansion condensing, low speed.....	22.35	25.32	28.28	31.25

majority of cases the real cost exceeds that given in the table by something like 50 per cent., even for engines of similar size. For the rank and file of small engines used for miscellaneous manufacturing purposes, cheaply built and generally under loaded, the tabular figures should be just about doubled. In regions where coal is unusually dear the cost in units of 50 HP and upward may range from \$100 to \$150 per HP year for a 10 hour day.

In units under 50 HP one is very unlikely to find the HP year, reckoned on the above basis of 10 hours per day, costing less than \$50, even with coal as low as \$2 per long ton. These are the facts in the case; the fancies will be duly appreciated if one canvasses for electric power. Not more than one man in six knows and will admit that his power is costing him as much as the table would indicate. The process of reasoning (so called) is often about as follows: "I paid for my engine and boiler house when I built the factory, and I do not propose to charge my engine rent. It has been running ten years and is just as good now as it ever was; has not depreciated for my purpose a cent. If any repairs are needed, the engineer and one of my men have made them and they haven't cost me anything but my material. My fireman I have to have anyhow, for I heat by steam, and my taxes and insurance I have to pay anyhow: that is a 200 HP engine; my coal cost me \$2,450 last year and oil and stuff \$70. I pay my engineer \$60 a month; that's \$16.20 per horse-power per year; if you can furnish electric power for \$15 per year perhaps we can trade." This

theme, with variations, is familiar to anyone who has had practical experience in power transmission work, and although the more intelligent and able class of manufacturers are quite too keen not to see the facts when properly presented, a certain amount of this ignorant short-sightedness is always met in investigating the power market.

With a working year as above of 3,080 hours the cost of steam power is actually very seldom as low as 1 cent per HP hour, and in units below 100 HP is not very often below 2 cents. In units of less than 20 HP it is quite certain to be 5 cents or more. These figures are based on continuous working. If the use of power is intermittent, the cost per HP hour is greatly increased, by an uncertain but always large amount, depending on the nature of the service. For highly intermittent service gas engines are undoubtedly cheaper than steam, and in ordinary units the cost of operating these is seldom less than 10 cents per HP hour of use. Used continuously at full load or thereabouts the gas or petroleum engine is the most formidable competitor of electric motors, since the actual cost of fuel is low—from 2 to 5 cents per HP hour—and the attendance required is trifling. Such engines, however, are high in first cost and are very inefficient at low loads, besides being subject to relatively large depreciation.

These peculiarities are well shown in a recent test of a 6 HP gas engine in which the following facts appeared: The cost of operation, including maintenance, was at full load 41 cents per hour, and at no load 20 cents per hour; the cost of gas being \$1.70 per M feet.

We may easily find from this the cost of power under given circumstances of use; \$10 per HP per year may fairly be charged up to interest and depreciation. Suppose now, power is used for 10 hours per day 308 days in the year, the engine being fully loaded all the time. The cost can be made up as follows for 6 HP:

3,080 hours @ 41 cents,	.	.	.	=	\$1,262.80
Interest and depreciation,	.	.	.	=	60.00
Total cost,	.	.	.	=	\$1,322.80

Cost per HP hour = 7.15 cents, of which the interest and depreciation amounts to but 0.31 cents per HP hour.

Second, suppose the engine is in full use 3 hours per day, and running idle the rest of the time, or is in equivalent partial use for 10 hours. We then have

924 hours @ 41 cents,	= \$378.81
2,156 " " 20	= 431.20
Interest and depreciation,	= 60.00
		<u>\$870.01</u>

This is 12.08 cents per HP hour actually used, and is a fair type of present practice as gas engines are generally used. It will hold for the average engine used for small power purposes. In regular running such engines consume from 25 to 35 cubic feet of average illuminating gas per brake HP and, when running light, take about half as much gas as at full load. In careful experimental running these results can be bettered 10 to 20 per cent., but in regular work and with only ordinary care, the gas consumption given is correct.

Petroleum engines give rather less fuel expense, but lose in extra care and repairs nearly or quite all the gain in fuel.

These figures must not be understood as applying to large gas engines of 100 HP and upward, worked on cheap "producer" or fuel gas. It is reasonably certain that such engines give results better than any save the most economical steam engines, if worked at or near full load. In the small sizes above considered the gas engine is a considerably cheaper source of power than steam engines, probably by not less than 30 per cent.

In a general way we may summarize these facts regarding cost of power as follows, coal being taken at \$3 per ton:

KIND OF ENGINE.	COST PER HPH, IN- HOUR DAY, FULLY LOADED.	COST PER HPH, IN- INTERMITTENT USE, PARTIAL LOAD.
Large compound condenser	0.80 to 1.0.	1.0. to 1.50.
Simple, 100 HP and less	1.5 " 2.5	3. " 5.
Gas, 20-50 HP	2.0 " 4.0	4. " 7.
Gas, small	5. " 8.0	10. " 15.
Steam, small	7. " 12.	12. " 20.

By small engines are meant those not over 15 to 20 HP, such as are used in large numbers for light manufacturing work. These figures are of course only approximate, and must be modified by the cost of fuel and labor in any particular locality.

They take no account of the efficiency lost between the engine and its work, which has been already discussed in Chapter II., and which gives motor service some of its greatest commercial advantages.

They show plainly, however, that electrical energy delivered to the consumer at 4 to 5 cents per kilowatt hour has the commercial advantage in small work of all kinds, and in competition even with fairly large engines used at light load or intermittently. In addition there is, in favor of electricity, the generally considerable saving in waste power, and the greater cleanliness and convenience of the motor. At equal prices electric power will pretty effectively keep steam out of all new work, but the cost of changing from one motive power to the other demands some concessions on the part of electricity.

This cost of change is rather uncertain, for not only do electric motors vary very widely in price, owing to differences in size, speed, and construction, but the net value of engines and boilers replaced may vary from two-thirds to three-quarters of their cost down to little more than scrap.

In both engines and motors the cost of the smaller sizes is disproportionately large, owing to the relatively large percentage of labor in their construction. Gas engines are even more expensive than a steam boiler and engine in ordinary sizes. In replacing engines by motors, the selling value of the former, including boilers, if steam is used, may be anything, say from \$10 to \$25 per HP, and the market is rather uncertain at best. A little time will generally effect a sale on tolerable terms.

The following table gives the approximate cost of electric motors installed and ready to run, based on motors of ordinary speeds and voltages, with the usual accessories and with the simplest sort of wiring. No useful figures can be given on the cost of special installations with complex wiring.

From this it appears that while large motors, 50 HP and upward, can generally be counted on at not over \$25 per HP, the smaller sizes are much more costly. Below twenty HP the net cost of changing from steam or gas engines to motors is pretty certain to be \$20 to \$30 per HP. Taking interest and depreciation at 10 per cent., the annual charge amounts to \$2 or \$3 per HP, which must be increased to \$5 or \$6 to cover maintenance and miscellaneous expenses.

Hence, for steady use 24 hours per day, there should be charged to general cost about 0.2 cent per HP hour, which is equivalent to perhaps 0.5 cent for intermittent use.

HP.	Cost.
1	\$ 200 to \$ 225
3	75 - 250
5	225 - 275
10	375 - 425
25	525 - 575
50	675 - 725
75	825 - 875
100	975 - 1,025
200	1,400 - 1,450
300	1,700 - 1,750
400	1,900 - 1,950

In changing motive power, then, electric service must generally be cheaper than what it replaces by about the amounts mentioned.

As to the cost of furnishing electric power figures are a little deceptive, since from place to place the conditions vary. It is safe to allow about one KW at the station for one HP actually delivered and paid for.

Now with steam for a motive power the data already given for mechanical power can readily be reduced to kilowatt hours, assuming the dynamos to have as usual 92 to 95 per cent. efficiency at full load. But a steam station for power transmission has the advantage of nearly or quite continuous running, thereby reducing general expenses, and besides, on a large scale, the load can be kept at an efficient point most of the time. In fact in large railway power stations—the only steam-driven stations for power transmission on a large scale—the machines can be worked very efficiently most of the time, and power can be, and is, very cheaply produced.

Fig. 263 shows graphically the approximate variation of cost with output in well-designed power stations, the figures given being based on \$3 per ton for coal and power delivered at the station bus bars. Anything under one cent per KW hour is good practice, even for a very large station. Steam is not likely to be often used as a motive power for power transmission work, except in working a very cheap coal supply.

Dr. Emery has worked out at considerable length the problem of the cost of steam power on a very large scale and with the most economical modern machinery. He assumed a 20,000 HP plant, worked 24 hours per day, on a variable load averaging 12,760 HP, 63.8 per cent. of the maximum. This

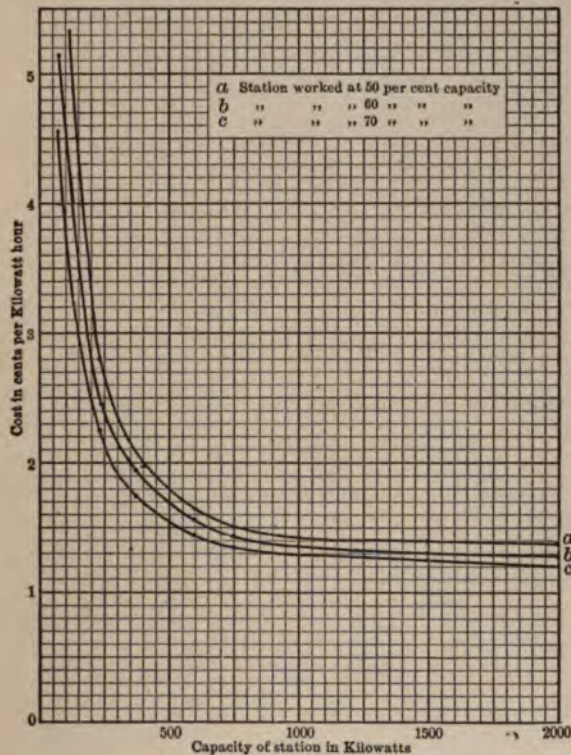


FIG. 263.

load factor is judiciously estimated and could certainly be realized in a plant of such size, employed in the general distribution of power. Taking coal at one mill per pound, \$2.24 per long ton, and entering every item of expense, he found the total cost per HP per year to be \$33.14. If the plant were established at the mouth of the coal mine, fuel should be obtained at not over one-third the above cost. This advantage would bring the cost per HP per year down to \$24.89.

Taking now 15,000 KW in dynamo capacity in large direct coupled units, say eight in number, the electrical plant would cost, installed with all needful accessories and ready to run, \$375,000. Taking interest, taxes and depreciation together at 10 per cent., which is enough, since a 3 per cent. sinking fund would amply allow for depreciation; allowing \$15,000 per year for additional labor and superintendence and \$10,000 more for maintenance and miscellaneous expenses, brings the total annual charge for the electrical machinery to \$62,500. Adding this to the steam power item and reducing the whole to cost per KW hour, assuming 94 per cent. average dynamo efficiency, the total cost per KW hour delivered at the station switchboard becomes 0.482 cent. Working, then, on an immense scale from cheap coal, it is safe to say that half a cent per KW hour will deliver the energy to the bus bars.

The next step is the cost of delivering it to the customer. This varies so greatly, according to circumstances, that an average is very hard to strike. A plant such as we are considering will usually be installed only when the radius of distribution is fairly long. Taking the transmission proper as 20 miles, the line and right of way, using 10,000 volts, may be taken as about \$25 per KW; the raising and reducing transformers with sub-station and equipment would cost another \$25 per KW, and the distributing circuits, with a good proportion of large units, about \$5 per KW additional. The distributing system for 15,000 KW would then cost about \$975,000. Figuring interest and depreciation roundly at 10 per cent. the annual charge is \$97,500. Add now \$15,000 for labor in sub-station and distributing system, \$10,000 for general administrative expense, and 5 per cent. for maintenance and miscellaneous expenses, and we reach a total annual charge for distribution of \$171,250. The average output being almost exactly 9,000 KW, the cost of distribution per KW hour is 0.218 cent. The actual cost of generating and distributing the power then becomes 0.700 cent per KW hour.

This is probably a minimum for distribution of power from coal mines. It supposes a very large plant installed for cash and operated for profit. It makes no allowance for the floating of bonds at 60 to 80 cents on the dollar, the operations of a construction company, the purchase of coal from the direct-

Ors, the payment of big salaries to the promoters, or any of the allied devices well-known in financial circles.

Under favorable circumstances at least an equivalent result can be reached with hydraulic power.

These figures mean that power could be sold at an average of 1 cent per KW hour at a good profit, aggregating for the plant in question nearly a quarter of a million dollars per year.

Only the largest plants, skillfully handled, can approach such figures for cost of power as have just been given.

It should be possible, however, to bring the cost of distribution per KW hour in a well-designed transmission plant of 1000 HP or more down to less than 0.5 cent per KW hour. Less than this may indeed be found in practice, while figures approaching 0.25 cent may be found in good central station working.

The cost of producing power in steam-driven plants of various sizes has already been given; that in water power plants is far less definite, but on the whole lower. In some hydraulic plants where development has been costly, the cost of water power rises to \$20 or \$25 per net HP year, while on the other hand water power has been leased at the canal for as little as \$5 per year per hydraulic HP in the canal, equivalent to about \$6.50 per available HP at the wheel shaft. The investment per effective HP at the wheels ranges from nearly \$150 to as low as \$30 or \$40. This includes both the hydraulic rights and work, and the wheels themselves.

A typical estimate for a water power plant under fairly favorable conditions, derived from actual practice, runs about as follows, for a 1000 HP plant:

Hydraulic works,	\$40,000
Wheels and fittings,	12,500
Power station,	2,500
Pole line, 8 miles,	4,000
Transmission circuit,	15,000
Dynamos and equipment, 700 KW,	20,000
Transformers, 750 KW,	10,000
Distributing lines,	15,000
Miscellaneous,	5,000
Total,	\$124,000

Operating expense:

Interest and depreciation, 10 per cent.,	\$12,400
Attendance at plant,	4,000
Linemen and team,	2,000
Office expense,	3,500
Rent, taxes, and incidentals,	1,000
Maintenance and supplies,	4,000
Total,	\$26,900

The full capacity of the plant is about 700 KW. Supposing the plant to be worked somewhere near its capacity at maximum load, and to be in operation on a mixed load 24 hours per day, we may estimate the daily output about as follows:

	KW	KWH
9 hours @ 500		4,500
5 " " 250		1,250
3 " " 100		300
6 " " 50		300
Total,		6,350

This should be taken for 300 days in the year. The other 65 days, Sundays, holidays and occasional periods of unusually small motor loads, it is not safe to count on more than 1,000 KW hours per day. Taking account of stock we have for the year

1,970,000 KWH,

and the net cost per kilowatt hour becomes 1.36 cent. It is worth noting that the distribution of power for the day is taken from a transmission plant in actual operation.

Of the above total cost 0.47 cent is chargeable to distribution expenses and 0.89 to power production. Doubling the cost of the hydraulic works would raise the generating cost to 1.10 cent and the total cost to 1.57.

It is evident in this case that power could be sold at 2 cents net per HPH with a good profit, assuming the smaller total cost, and at 2.5 cents, even with the greater hydraulic cost. Even if the total investment were as great as \$250,000, the plant would pay fairly well at 3 cents per HPH.

The fact is, hydraulic transmission plants generally will pay well if a good load can be obtained. The above example does not show a specially cheap plant nor a remarkable load factor.

In really favorable cases the cost of power distributed will not exceed 1 cent per HP hour, and in comparatively few plants will it rise to 2 cents, unless the market for power is grossly overestimated.

This is one of the commonest troubles with plants that do not pay well. A costly hydraulic development is undertaken, resulting in rendering available several times as much power as can be utilized; a portion of this is then transmitted and sold, but the plant is burdened with heavy initial expense, and struggles along as best it can. It is not safe to count on the stimulation of industrial growth by cheap power unless the cost of producing power is so small that the plant will pay tolerably well on the existing market.

A careful canvass for power is a necessary part of the preliminary work for a power transmission, and the more complete it can be made the better. Reference to the table of p. 560 shows that, at a selling rate of 2 to 3 cents per HP hour, the cost of power can be reduced for all small consumers and a good many rather large ones. If the cost of coal is high, \$5 per ton or more, nearly all consumers will save by using electric power, while with favorable hydraulic conditions money can be saved by transmission even when replacing very cheap steam power.

Take, for example, a large manufacturing plant requiring 1,000 HP steadily, 12 hours a day. At a distance of, say 8 miles, is a hydraulic power that can give, say 1,200 HP, and can be purchased and developed for \$100,000. The cost of generating and transmitting power will be about as follows:

Hydraulic work,	\$100,000
Wheels and fittings,	15,000
Power house,	3,000
Pole line,	4,000
Dynamos, 1,000 KW,	25,000
Transmission circuit,	15,000
Motors and equipment,	25,000
Miscellaneous,	10,000
Total,	<hr/> \$197,000

and the operating expenses would be about as follows:

Interest and depreciation,	\$19,700
Attendance at plant,	2,500
" " motors,	1,800
Other labor,	1,000
Maintenance, supplies, etc.,	5,000
<hr/>	
Total,	\$30,000

This would furnish, taking the working year as 308 days, 3,696,000 HP hours at a cost of 0.81 cent per HP hour. With a low cost of hydraulic development and a short line, say not over three miles, the above figures for cost could be brought down to about \$130,000. Now, allowing 5 per cent. for interest and setting aside 3 per cent. for sinking fund, which allows for complete replacement in less than 20 years, we may figure the annual cost of power again thus:

Interest and sinking fund,	\$10,400
Attendance at plant,	2,500
" " motors,	1,800
Maintenance and incidentals,	5,000
<hr/>	
Total,	\$19,700

This is \$19.70 per HP year, or 0.53 cent per HP hour. This is certainly cheaper than power can be generated by steam, even with coal at \$1.50 or so per ton, provided proper account be taken of interest, depreciation and repairs. As a matter of fact, the cost just given has been reached, in practice, in transmission work at moderate distances. On a larger scale slightly better results can be attained. These figures take no account of the saving in actual power obtained by distributed motors, always an important matter in organizing a transmission for manufacturing purposes. This can generally be counted on to make it possible to replace 1,000 HP in a steam engine by not over 750 HP in electric motors, with a corresponding reduction in the aggregate yearly cost of power.

Speaking of costs in a general way, dynamos and their equipment may safely be taken at \$25 per kilowatt, raising and reducing transformers at from \$8 to \$12 per KW, line erected at from \$10 to \$30 per KW, water wheels at \$10 to

\$20 per HP, and steam plant, when used, at from \$50 to \$60 per net HP.

The line is always a rather uncertain item, on account of its variations in cost at different distances, and in meeting local conditions of distribution. The pole line itself will cost from \$250 to \$500 per mile, according to circumstances, but the copper must be figured separately, as already explained.

No account is here taken of freaks in design—dynamos of special design for peculiar speeds or voltages, extraordinary line voltages, unusual frequencies, or eccentric methods of distribution like the wholesale use of rotary converters and storage batteries. The figures are intended to represent ordinary good practice as it exists to-day.

One of the nicest points in operating a transmission plant is the proper adjustment of the price of power to the existing market. It is no easy matter to strike the point between the cost of other power and the cost of generating and distributing electric power, which will give the maximum net profit. In general it is best to work entirely on a meter basis, for the customer then pays simply for what he uses, and the station manager knows the exact distribution of his output.

The generating station or the sub-station should be equipped with a recording wattmeter that will show the actual output, and from this measurement much valuable information can be obtained.

Knowing the investment and the approximate operating expense it is easy to figure, as we have just done, the total cost of delivering energy per KW power at various outputs. This is the basis of operations. The next thing is to estimate as closely as possible the average local cost of power in units of various sizes. These two quantities form the possible limits on selling price. One must keep far enough above the first to insure a good profit, and enough below the second to capture the business. It is convenient to plot these data as in Fig. 264, which is based on the table of p. 560, and the plant discussed on p. 566. Curve 1 shows the effect of change in the annual output on the net cost per KWH. Curve 2 shows the approximate existing cost of steam or other power, the points from which the curve was drawn being shown by crosses. Curve 3 shows the same for intermittent loads, the

points being indicated by circles. It is evident that for yearly outputs less than 1,000,000 KW hours the plant would be in bad shape to get business. At 2,000,000 KWH good profits are in sight, while at 3,000,000 the electric plant can meet all cases at a profit.

At the given output of 1,970,000 KWH it would be possible to charge 2 cents per KWH as a minimum without

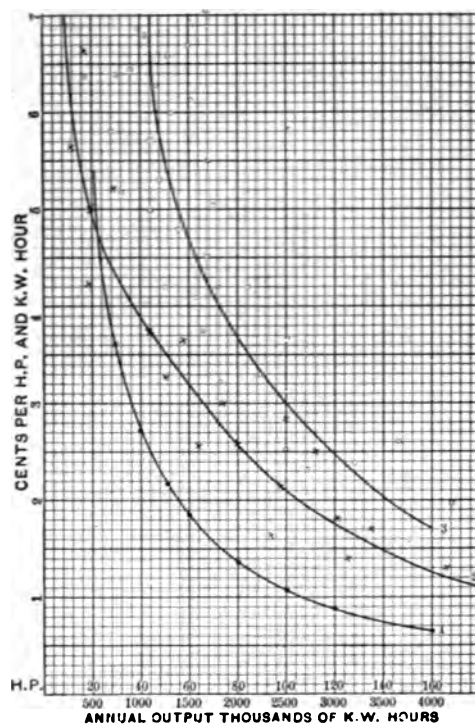


FIG. 264.

losing much business, while all the smaller customers could gain by changing to electric power at 3, 4 or 5 cents per KW hour.

When a few consumers are generating power at an unusually low figure there is always the temptation to obtain them at a special cut rate. As a rule this is bad policy unless they

are desirable for some particular reason aside from increase of output, for the moral effect of special low-price contracts is always bad, and in the long run it is best to make standard rates and to adhere to them.

The best prices can always of course be obtained from small consumers, and these are also specially desirable in that they tend to keep a uniform load on the system. Not only do 50 or 10 HP motors yield several times as much revenue as one 500 HP motor, but they will call for power very steadily all day long and keep the regulation excellent, while the large motor may be off and on in the most exasperating way and cause great annoyance at the time of the "lap load," when lights and motors are all in use. Large motors running intermittently are disadvantageous, for they do not greatly increase the aggregate station output and pay relatively little.

In general the best schedule of prices can be made up by starting with a rate arranged to get all the powers below, say 4 or 5 HP, and then for larger powers arranging a set of discounts from this initial rate. These discounts, however, should be based not directly upon the size of the motors, but on the monthly KW hours recorded against them. In one respect charging by wattmeter alone is at rather a disadvantage. A large motor running at variable load, and much of the time at light load, is far less desirable as a station load than a small and steadily running motor using the same number of KW hours monthly. The former demands far greater station capacity for the same earning power, and also inflicts a bad power factor upon the system at times of light load if the distribution is by alternating current. It is not easy to avoid this difficulty, although various devices to that end have been introduced. In one large plant recording ammeters are installed for each motor, and the largest demand for current lasting two minutes or more during a given month is made a factor in determining the price paid for that month's supply of power, so that large demands for station capacity must in part be paid for by the consumer.

Another device for the same purpose is a combination of the flat-rate and meter methods of charging. A fixed monthly charge per horse power of the motor connected is made, and in addition the consumer pays for his energy by wattmeter, of

course at a somewhat lower rate than in using the meter alone. A rough illustration of the effect is as follows. Suppose a flat charge of \$1 per month per HP of the motor installed and a meter rate of 3 cents per KWH. One customer has a 10 HP motor worked steadily at full load 10 hours per day for 30 days. Another has a 50 HP motor which runs at full load for 2 hours per day. Each may, for example, use 3000 KWH per month, and pay by meter \$90 therefor; but the former pays a flat charge of \$10, the latter one of \$50, so that the monthly bill is in the former case \$100, in the latter \$140. The extra \$40 may be regarded as the payment of rent for station capacity and capacity of lines and transformers, to be held subject to the customer's call at any time. It is, in fact, a real expense to the station, and may be considered a proper subject for a charge to the customer.

Charging by a recording ammeter instead of a wattmeter will reach the user of motors that injure the power factor of the system, and, combined with the flat rate just mentioned, would probably give a really fairer system of payment for the customer's demand upon the station than either of the schemes just described.

Methods of selling and charging, however, must be modified to suit local conditions and customs. Each community has peculiarities of its own that must be studied and reached. Sometimes a flat rate, objectionable as it often is, will secure a more remunerative business than any system of metering, while elsewhere a meter system, however intricate, may work better than a flat rate. As a rule, however, metering is the best method of charging for all parties.

A water power transmission plant has the peculiarity, when, as usual, the water is owned outright, of showing a nearly constant operating expense, irrespective of output. Hence after the receipts exceed this expense all additional load, at any price, means profit. But it means profit precisely in proportion to its price, so that taking on large consumers at a very low price is usually bad policy, it being better to encourage small consumers by giving what is to them a very reasonable figure.

In the case in hand, it would probably be worth while to start as low as 5 cents per KW hour on a monthly consump-

tion up to 1000 KW hours. This corresponds nearly to 4 HP used continuously 9 hours per day. For 100 HP so used it should be possible to get 2 cents per KW-hour, so for a consumption of 25,000 KW-hours per month the discount fixes itself at 60 per cent. For intermediate points the proper discounts are fixed in a similar manner. A uniform discount of say 10 per cent. from bills for payment before a fixed date is generally good policy. The rates of discount should be set bearing in mind the distribution of business with respect to the size of units, the intent being to get all the consumers of moderate power. Above a fixed amount the special contract, generally undesirable, may sometimes become useful.

After the maximum output comes near to the capacity of the plant, the total yearly output for the given plant is difficult to increase. Hence it is desirable persistently to cultivate the use of power at such times as will not increase the maximum load. This can best be done by offering liberal discounts for power used only between say 8 P. M. and 8 A. M. There is at best rather a small amount of this, and it is all worth getting even at a low rate.

In stations using rented water power at a fixed price per HP, or employing steam, the operating expense is of course variable, and this variation will influence greatly the adjustment of prices, although the general principles are unchanged.

Experience has now shown that electric power transmission may generally be made a profitable enterprise.

If a transmission is planned and executed on sound business principles and with ordinary forethought, it is well-nigh certain to be a permanent and profitable investment.

Failure is generally chargeable to attempts to work with altogether insufficient capital, leading to ruinous actual rates of interest; the purchase of material at extortionate prices due to various forms of credit; and huge commissions to promoters.

Organized in such wise almost any enterprise becomes merely speculative, and its failure should produce neither surprise nor sympathy, for such a course is the broad highway that leads straight into the ever ready clutches of a receiver. Honesty is the best policy in power transmission, as elsewhere.

CHAPTER XVI.

THE MEASUREMENT OF ELECTRICAL ENERGY.

THE basic fact regarding the measurement of electrical power is the stress between a magnetic field and a coil carrying a current. Obviously such a coil produces of itself a magnetic field, but it is the proportionality of this field to the current rather than its mere existence that gives it importance in measuring instruments.

The fundamental measurements which have to be made in ordinary practical engineering are three—current, electromotive force, and electrical energy, which is their co-directed product. In continuous current work, while mere readings of the first two give the energy as their numerical product, it is generally desirable to have instruments which measure energy directly and which integrate a varying output continuously, so that one may at all times keep track of the output of the station, a single circuit, or the energy supplied to a single customer. In alternating current work a wattmeter is doubly necessary, first because the product of volts and amperes does not give the real energy, but the apparent energy, as has already been explained; and, second, because the true energy divided by the apparent energy equals the power factor, which should be looked after very carefully in an alternating station.

Any effect of electric current which is proportional to or simply related to that current may obviously be used for its measurement, and in laboratory measurements instruments based on almost every imaginable property of electric current have been used with more or less success. But for everyday, practical purposes instruments must possess qualities not so needful in the laboratory, so that the possible types of measuring instrument have simmered down to a very few, with respect to the principles concerned.

So far as continuous currents are involved, nearly all practical instruments are electro-magnetic, as has already

been indicated—almost the sole exception being the Edison chemical meter, which need not here be described, since it is passing rapidly out of use.

The simplest electrical measuring instrument is the *ammeter*, designed for the practical measurement of current strength. In its commonest forms, as used for continuous current, it consists of a fixed coil of wire carrying the current to be measured and a pivoted magnetic core, to which is attached a pointer sweeping over a fixed scale. The force on this core varies with the current, and is resisted by some opposing force that brings the pointer into a new point of equilibrium for each value of the current. Sometimes this opposing force is the magnetic field of the earth, as in the ordinary laboratory galvanometer, but in practical instruments it is generally gravity, a spring, or a relatively powerful permanent magnet.

Most of the numerous varieties of ammeter have been produced in the effort to secure a permanent and constant controlling force, and uniformity of scale; that is, such an arrangement of parts as will make the angular deflection of the pointer directly proportional to the amperes flowing through the coil. The result has been all sorts of curious arrangements of the coils and the moving armature with respect to each other, and the upshot of the matter generally is that the scale has to be hand calibrated for each instrument, the divisions of the scale being fairly uniform through the parts of the scale most often used, but varying somewhat near its ends. Gravity is far and away the most reliable controlling force, but it is also highly inconvenient in instruments intended for portable use or for a wide range of action while still preserving small inertia in the moving parts, so that springs or permanent magnetic fields form the main reliance in practice. In some admirable instruments the well-known principle of the D'Arsonval galvanometer is employed. In this instrument, of which one type is shown in Fig. 265, a light movable coil is suspended between the poles of a very powerful permanent magnet, shown in the cut as built up in circular form. Current traversing the coil through the suspension wires sets up a field, which, reacting with the magnet, produces a powerful deflecting force on the coil, controlled by the torsion suspension. In commercial instruments the suspension is replaced by jeweled

bearings, and the current is led in through the controlling hair springs or by very flexible leads. The resulting instrument is very sensitive and accurate for the measurement of small currents or known fractions shunted from larger ones. The



FIG. 265.

famous Weston instruments, together with others less well known, are constructed along this general line.

The sources of error even in the best commercial ammeters are many. Permanent magnets and springs do not always hold their strength precisely, jeweled bearings wear, and break if the instruments are roughly handled, pointers get bent, dust sometimes gets in, and on these accidental errors are superposed those due to errors in scale and calibration.

Nevertheless the best station and portable ammeters possess and maintain a very commendable degree of accuracy. When carefully handled and used well within their working range they can be trusted to within about one or two per cent. If of the highest grade and frequently verified they can be relied on in the best part of the scale down to, say, half the above amount, and under circumstances exceptionally favorable will do even a little better. In laboratory work, where they are merely used as working instruments and often checked, it is possible to nurse them into still higher accuracy, but one cannot depend upon it for long at a time under commercial conditions. For relative measurements only, made within a short time, high grade ammeters are very accurate, but the hints already given should make it clear that when in regular use one must not expect to use them for absolute measurements with a great degree of precision. The cheaper class of instruments is likely to show double the errors just noted.

For the measurement of alternating currents only a few of the types of ammeter used for continuous current are applicable. Hysteresis in the iron parts and reactance in the coils are likely to incapacitate them, but some of the forms can readily be modified to give good results, and certain others are specially suited to alternating currents. In this work a new class, having a fixed field coil reacting on a closed circuited armature coil capable of rotation, and spring controlled, has been made useful; and on account of their extremely small reactance hot wire instruments have retained some measure of their one-time popularity. In this class of instruments the current is passed through a fine suspended wire of rather large resistance, which is thereby heated and expands, carrying with it the pointer to which it is attached, usually by means of multiplying gear. Such instruments require correction for the temperature of the air, but are capable of very good accuracy if carefully handled. They are "dead beat," *i. e.*, the pointer comes to rest without oscillation, a very useful property, which is secured to a certain extent in most instruments by various damping devices. Instruments having a powerful permanent magnet often are supplied with a copper damping vane, which checks oscillations by virtue of the eddy currents stirred up in it by the magnet,

and sometimes air vanes in a close-fitting recess or light mechanical stops, which can be brought up against the moving parts, are used for this purpose.

Voltmeters for measuring the electromotive force are in all general points constructed precisely like ammeters, save that the working coil, whether fixed or movable, is wound with very fine wire in many turns, so as to be adapted to work with very small currents, and usually has in series with it a resistance of several thousand ohms. Voltmeters are in fact *ammeters* having so much resistance permanently in circuit that the current which flows through them is substantially proportional to the voltage across the points to which the instrument is connected, irrespective of other resistances which may casually be in circuit. They are somewhat more difficult to construct than ordinary ammeters, owing to the fine wire windings and the high resistance, and are generally rather more expensive.

They are capable of just about the same degree of precision as ammeters, being subject to about the same sources of error. When used for alternating current the large auxiliary resistance is wound non-inductively, and the working coil is proportioned for as low reactance as may be possible with the required sensitiveness. For measuring very high alternating voltages a "potential transformer," wound with an accurately known ratio of transformation, receives the high pressure current and delivers it to the voltmeter at a more reasonable voltage. In dealing with continuous currents the problem is more difficult. Sometimes a very sensitive voltmeter is provided with a separate high resistance box, reducing the scale readings to one-tenth of their real value, so that the instrument is used with a constant multiplier of 10, to transform its readings to the corresponding voltage. This is a useful device for obtaining the voltage of arc circuits and the like.

In default of high voltage instruments a rack of incandescent lamps may be wired in series and voltmeter readings taken across a known fraction of the total resistance thus inserted; 250-volt lamps in sufficient number not to be brought up to full candle-power are convenient for this purpose, and the voltmeter should be of so high resistance that its presence as a shunt around part of the lamps will not introduce material error.

A generating station should be liberally equipped with ammeters and voltmeters. Besides the ordinary switch-board instruments, usually an ammeter for each machine and each feeder, it is desirable to have several spare instruments which can be temporarily put in for testing purposes. Station instruments should have large, clearly divided scales and conspicuous pointers, so that the readings can be seen at a distance from the switch-board. The large illuminated dial instruments are excellent for the principal circuits, and the main station voltmeters may well be of similar type.

Voltmeters are ordinarily not numerous in a station, and are usually arranged with changeable connections, so that they may be plugged in on any circuit. There should, however, always be at least one conspicuous voltmeter permanently connected to show the working pressure on the main circuits. In polyphase work this should be capable of being plugged in on each phase, although it is preferable to have a voltmeter permanently on each phase in large transmission work. At least two other voltmeters should be available for connection to such circuits as may be desirable, in testing circuits, parallelizing machines, and the like. These ought to be small switch-board instruments of the highest grade, mounted side by side to enable comparative readings to be readily made. As potential transformers for high voltage are decidedly costly, a simple and safe arrangement for plugging in the primary side of such a transformer on any high voltage connection is much to be desired. A duplicate or spare potential transformer should always be kept in stock, since it is most inconvenient to have a voltmeter thrown out of action. In stations having high voltage generators it is sometimes practicable to connect the voltmeters around a single fixed armature coil in each generator, which much simplifies the transforming arrangements.

Indicating wattmeters reading the output directly are not in by any means as general use as ammeters and voltmeters, but are highly desirable in portable form for motor and lamp testing, and should be seen upon the switch-board far oftener than they are. These instruments follow the same general line of design as ammeters and voltmeters, but are provided with two working coils or sets of coils. One takes the current

of the line on which the output is to be measured and the other is a voltmeter coil suspended so as to turn in the field due to the current coil. The torque produced obviously depends on the product of the two fields due to the coils respectively, which is proportional to the energy delivered. If the two fields are in the same phase, as in continuous current practice, or at times of unity power factor in alternating circuits, the numerical product of the two field strengths is proportional to the total energy; but if there is difference of phase, then the co-directed components of the two fields are proportional to the energy. The controlling and damping forces are like those in ammeters and voltmeters, and the wattmeters differ little from them in general arrangement save for having two sets of terminals, one for current and the other for potential, and in the graduation of the scale.

A well-equipped station should have two or three such instruments in portable form, one for the testing of incandescent lamps and such small outputs, and others capable of taking the output delivered to the ordinary sizes of motors and recording wattmeters. It should also have a set of portable ammeters capable of reading the ordinary range of customers' currents without getting off the good working portions of their respective scales. For instance, if one ammeter will read with good accuracy from 1 to 10 amperes, the next might go effectively from 5 to 25 amperes, and the next from 20 to 60.

Of portable voltmeters there should be enough to measure accurately the voltages used for the distribution, and a portable potential transformer to enable primary voltages to be dealt with in an alternating system. It is desirable to have a pair of exactly similar voltmeters to use in simultaneous readings for drop and to check each other and the station instruments.

Another form of voltmeter regarded by the author as a necessity in every power transmission plant is a recording instrument keeping a continuous permanent record of the voltage and its variations. Such records are shown reduced in Figs. 258 and 259. The Bristol voltmeter is the form of instrument generally used. It is merely a strongly made voltmeter with a long pointer carrying a pen, and swinging from center to circumference of a paper disc driven by a

clock and ruled in circles for the volts and radially for time. A variable resistance permits it to be accurately adjusted to agree with a standard voltmeter, and when carefully managed it is quite reliable. As a check on the operation of the station and for reference in case of dispute it is invaluable, since it shows every variation of voltage, and the time at which it occurred. In using it the pen should be kept clean and smooth running, bearing just heavily enough to leave a sharp, thin line, and the clock should be very carefully adjusted to keep correct time. The chart should be changed at the same time each day and put on so as to record the correct time.

Recording ammeters and steam gauges are made upon the same principle, but for power transmission plants the voltmeter is the important instrument. Installed in the generating station it keeps accurate record of the regulation, and in the sub-station it serves a similar purpose.

An instrument sometimes used of late is a frequency meter, showing on its dial the periodicity at any time just as an ammeter shows the current. Its principle is very simple. Any voltmeter having some considerable reactance will change its reading with change of frequency. If furnished with a scale empirically graduated for different frequencies it becomes a frequency meter, and if installed where the voltage is fairly constant and designed so as to be hypersensitive to changes of frequency it may serve a useful purpose in telling whether the machines are at the exact speed intended. In fact it could in any given situation be graduated for speed as well as for frequency.

Occasionally recording wattmeters, similar to the recording voltmeters already described, are used; but it is difficult to get accurate readings over a wide enough range to be of much use, and the more usual instrument is the integrating wattmeter, sometimes referred to as recording, which registers the output in watt hours continuously. Instruments of this class are used both to register the energy supplied to customers and to take account of the energy generated. Daily readings of the switch-board instruments give by difference the daily output in KW hours, and in steam driven stations are most important in keeping record of the station efficiency and its variations.

Even in hydraulic stations they give a useful check on station operation and on the energy sold.

Integrating wattmeters are essentially motors whose speed is proportional to the output. Like indicating wattmeters

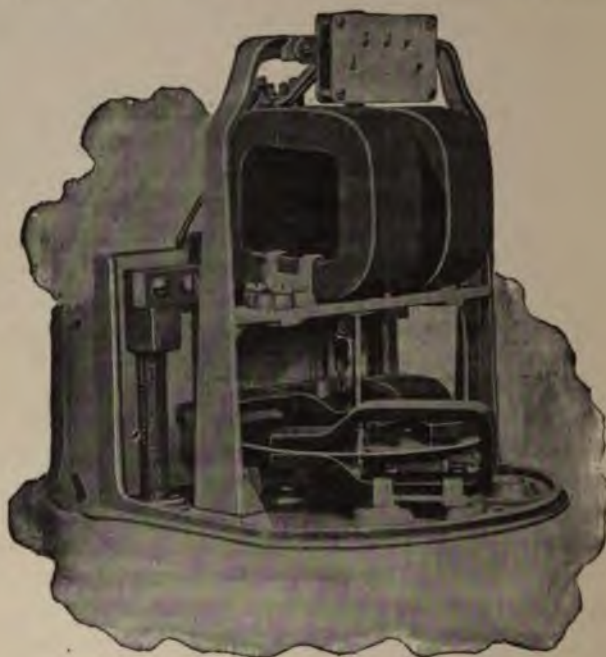


FIG. 266.

they produce a torque due to the co-action of current and potential coils, and the armatures revolving under this stress are furnished with an automatic drag due to a disc revolving between magnet poles or to air vanes, so that the speed shall be proportional to the output on the circuit in watts. Probably in principle the simplest of these instruments is the widely known Thomson recording wattmeter. Fig. 266 shows the general appearance of this meter with the cover removed, and Fig. 267 gives its connections in the ordinary two-wire form. Essentially it consists of the following parts: a pair of field coils of thick wire, in series with the load; an armature, drum wound of very fine wire, in series with a large resistance and

placed across the mains; and a copper disc on the armature shaft revolving between the poles of three drag magnets. The fields and armature are entirely without iron, the armature shaft rests on a sapphire jewel bearing, and its upper end carries a worm to drive the recording gear.

The commutator is of silver, and current is taken to it by slender copper brushes resting tangentially upon it. The

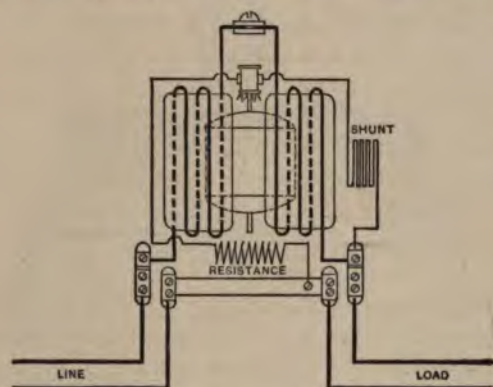


FIG. 267.

drag magnets are artificially aged, so that they remain very permanent and are adjustable to regulate the meter, if necessary. The resistance of the potential circuit is several thousand ohms, and the loss of energy in the meter at full load does not often exceed 5 to 10 watts. As the static friction of the armature is considerably greater than the running friction, the "shunt" in the potential circuit is made part of the field, so as to help the meter in starting. Doubling the current evidently doubles the torque in such a motor meter, but since the work done in eddy currents in the drag increases as the square of the speed, the armature will run at a speed directly proportional to the current, which is the speed desired.

In point of fact, such meters are capable of giving very great accuracy—within two per cent. under ordinary good commercial conditions, and very uniform results under different conditions of load.

Such meters are suited for use on both continuous and alternating circuits, and are remarkably reliable in their indi-

cations under all sorts of conditions. Another and very beautiful group of meters is designed especially for use on alternating circuits only, and follows the principle of the induction motor, just as the Thomson meter is a commutating motor. The pioneer of this class was the famous Shallenberger meter, an ampere-hour meter, which has been very widely used

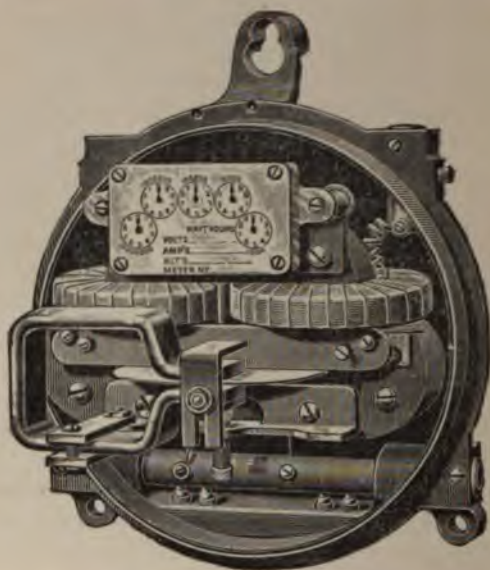


FIG. 268.

and is extremely useful where amperes rather than watts are to be measured.

A fair type of the induction wattmeter is shown in Fig. 268, the Schaefer meter, one of the earliest of the class, although here shown in a recent form. It consists of a finely-laminated field magnet energized by a current coil and a potential coil, an aluminium disc armature, and the magnetic drag which has come to be generally used in meters. *A priori* one would suppose that so simple a structure could hardly be made to give an armature speed proportional to the energy in the circuit; and in fact it takes great *finesse* to design it so as to accomplish this result, but it can be successfully done, and

meters of this class turned out by various manufacturers are capable of doing very accurate work.

As a class they develop very small torque, but in part make up for this failing by the very small weight of armature and shaft. The speed is seldom accurately proportional to the energy over a wide range of load, but day in and day out the small errors generally tend to balance each other, so that the total reading at the end of a month varies but little from the facts. The induction meters are liable to material errors in case of change of voltage, power factor, or frequency, but within the range of these factors in ordinary service they do sufficiently accurate work for most purposes.

All types of meters are made suitable for switch-board work in measuring large outputs, and in alternating stations can be fitted for use on primary circuits, although this is seldom necessary, and should not be attempted at any but moderate voltages without the use of transforming apparatus for the meter. Most switch-board meters for such work as power transmission are of special designs, modified for the particular work in hand.

Monophase alternating circuits and continuous current circuits are measured in the most direct way possible, the ammeters being put in the mains, the voltmeters across them, through a potential transformer if need be, as it is somewhat troublesome to wind voltmeters for use directly upon circuits of 3,000 volts or more. Generally this potential transformer is used on all circuits above 2,000 to 2,500 volts. It is likewise common to use current transformers, the primary coil of which is in one of the mains, for connecting the ammeters in circuits of higher voltage than just noted.

Such current transformers when calibrated with their respective ammeters can be depended upon to give correct indications at the frequency at which they are designed to be used, but they are not interchangeable, although very convenient for use at voltages for which it is difficult to insulate the instruments.

Wattmeters are connected to such circuits in a similar straightforward way, shown for continuous or secondary alternating current in Fig. 267 and for primary alternating circuits in Fig. 269. In these and other cuts of wattmeter connections

the circuits of the Thomson meter are shown, but they must be regarded as merely typical, since in using other meters the arrangement of circuits follows the same principle, the field or current coil being put in the mains and the armature or potential circuit across them. The former is wound with coarse

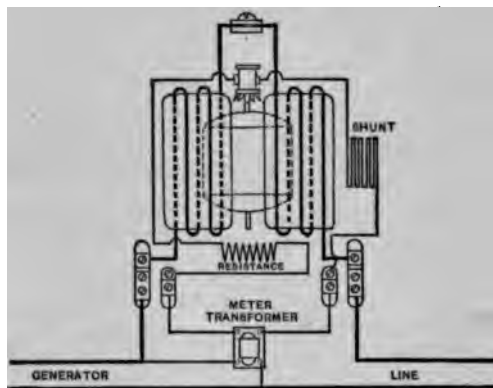


FIG. 269.

wire or copper strips, the latter with very fine wire, so that they can very easily be told apart even at a casual inspection.

Ordinary two-phase circuits are measured in a precisely similar fashion, each pair of phase wires being treated as a separate circuit and supplied with its own instruments. The metering likewise, whether of primary or secondary circuits, is accomplished by the use of two wattmeters, each connected to its own pair of mains. In case of motors in which the two phases may be regarded as substantially balanced and equal, it is only necessary to put the instruments in one of the phases and to multiply the readings of energy by 2 to get the total input. If the two-phase circuits are unbalanced two sets of instruments are absolutely necessary for a simultaneous reading on both phases.

With three-phase circuits the case is rather more complicated. The simplest to manage is a star-connected three-phase balanced circuit, as found in some motors. Here the ammeter or current coil of the wattmeter goes directly into one lead, and the voltmeter or potential coil of the wattmeter is connected between *that lead* and the *neutral point of the star*.

The instruments then give correctly one-third of the energy in case of the wattmeter and one-third the current in case of the ammeter. Therefore the wattmeter reading multiplied by 3 gives the energy on the circuit. On some of the early three-phase motors of which the primaries were star-wound, an extra lead was brought from the neutral point to the connection board to facilitate measurements.

If the circuit is balanced it is not necessary that a star connection at the generator or transformers should either be easily accessible or exist in order to use the method of measurement just described. For if the circuit is balanced the ammeter or current coil of the wattmeter may be put in a lead, and the voltmeter or potential coil of the wattmeter be connected between the same lead and the neutral point formed by three equal high resistances connected to the three leads respectively, and with their three free ends brought to a common junction. Such an artificial neutral is very commonly used in connecting wattmeters on the secondary circuits for motors, and may be applied to primary circuits as well. The writer has sometimes constructed such a neutral by connecting three strings of incandescent lamps to the three leads and to a common junction. Then connecting the potential coil of a wattmeter around one lamp and its current coil in the lead to which the string containing this lamp ran, it became possible to make a closely approximate measurement of the primary energy with only an ordinary 110 volt meter and such appliances as can be picked up around any station. This device of an artificial neutral as applied to secondary circuits is well shown in Fig. 270.

The measurement of energy on an unbalanced three-phase circuit is a very different proposition. Of course three wattmeters with their three potential coils respectively in the three branches of a star-connected resistance, such as just been shown, would do the work, but at a very undesirable cost and complication.

If, however, two wattmeters are used with their current coils in two phase wires respectively, and their potential coils respectively between their own phase wires and the remaining wire of the three, the sum of the readings of these two meters records correctly the total energy of the circuit. Such an

arrangement of meters is shown in Fig. 271, as commonly applied to three-phase secondary circuits. A precisely similar arrangement with the addition of potential transformers is used for primary circuits.

In a similar connection two indicating wattmeters will give the energy of the circuit at any moment. An indicating

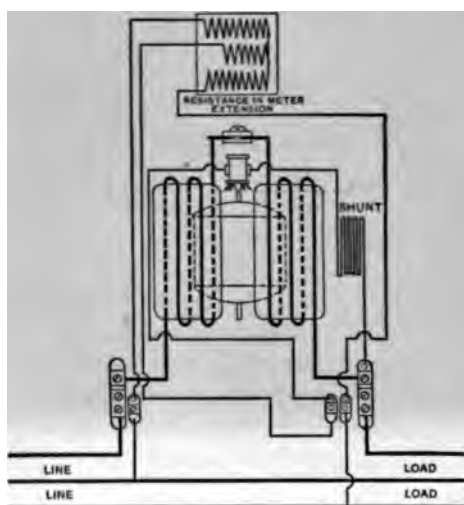


FIG. 270.

wattmeter with its current coil in one phase wire of a three-phase system will give three diverse readings according as its potential coil is connected between its own wire and each of the other phase wires, or finally across the two other phase wires. The latter reading is dependent on the angle of lag, being zero for unity power factor, and a watt meter so connected can be used as a phase meter, while the two other readings will be respectively increased and diminished to an amount dependent on the lag.

Many attempts have been made to combine the two wattmeters necessary to measure correctly the energy on an unbalanced three-phase circuit into a single instrument, and with a fair degree of success, but they have generally been rather cumbersome and are not commercially used to any considerable extent in this country. If the three-phase circuit to be measured be a balanced one, such a composite watt-

meter need merely have a current coil connected in either lead and a pair of potential coils connected from this to the adjacent leads respectively. In testing motors one can readily get the same result if the load be uniform, by using an indicating wattmeter with one lead connected through its current coil and then switching the potential connection successively to the adjacent leads, and adding the two readings. Instru-

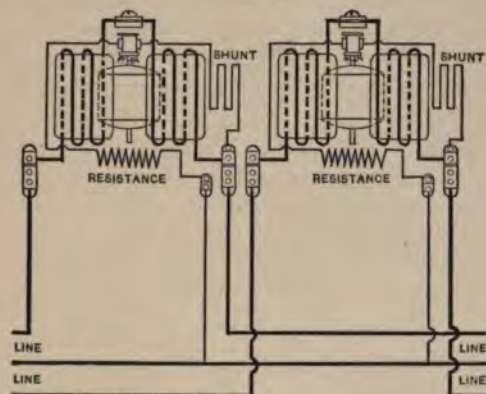


FIG. 271.

ments for unbalanced circuits should have two current and two potential coils, as already indicated.

It should be noted that in balanced mesh-connected circuits one can measure the energy correctly by putting the current coil of the wattmeter into one side of the mesh inside the joint connection to the lead, and the potential coil across the same side of the mesh. This gives a reading of one-third the total energy. Ammeter and voltmeter similarly connected give readings showing one-third the apparent watts.

In ordinary three-phase distributing systems the actual metering is much simpler than would appear at first sight. Motors are provided with a single meter, usually connected as shown in Fig. 270. Much of the lighting is from a pair of phase wires or from one phase wire and the neutral, in which case the secondary service is a simple two-wire distribution measured like any other monophasic system. In cases where all three wires are taken into the same service the energy can be measured by two meters, as shown in Fig. 271.

The induction type of meter is sometimes liable to considerable errors on motor circuits where the power factor is subject to large variations, and should therefore be used with caution. Before purchasing meters it is advisable to ascertain by actual tests how they will perform on circuits of varying power factor.

Meters should be installed where they will be free from vibration, extreme heat and dampness, chemical fumes, and dust. To a less extent the same rules apply to other instruments, but meters with their constantly moving parts and very light torque should be looked after with particular care. They should be inspected every few months, and at less frequent intervals should be tested *in situ*, which can very readily be done by the aid of an indicating wattmeter connected to the same load. The following formula serves for this test:

$$\frac{3600 \times \text{Constant of meter (if any)}}{\text{Watts in use}} =$$

seconds per revolution of armature.

Nearly all meters use the magnetic drag, and a light mark near the periphery of the meter disc timed for a few revolutions with a stop watch gives the right hand side of the equation, while the watts input is checked by the indicating wattmeter. The constant of the meter by which its reading must be multiplied to give the true energy recorded is nearly always plainly marked as an integral number upon the meter. If a meter shows material error it can be brought to the correct rate by slightly shifting the position of a drag magnet or adjusting the dragging device, whatever it is. This adjustment up to a reasonable amount is provided for in meters of all types, and if the error is more than can be thus compensated the meter should be thoroughly overhauled, particularly as to the armature bearings.

With proper care meters in commercial service can be kept correct within two or three per cent. year in and year out. They are more apt to run slow than fast, so that the consumer seldom has just ground for complaint. For the best work meters should be installed with the idea of keeping them generally working near their rated loads. The greatest inaccuracies are at light loads, and part of the inspector's duty

should be to make certain that the consumer's meter will start promptly on, say, a single 8 c. p. incandescent lamp. Otherwise the consumer can, and usually finds out that he can, get a certain amount of light without paying for it. Electric meters nearly always are read on their dials in exactly the manner that gas meters are read. With unskilled or careless men reading the meters there is some chance for mistake. To avert this some companies furnish their meter readers with record books having facsimiles of the meter dials plainly printed on the pages. The reader then merely marks on these

Customer.....		Meter No.	
Meter Capacity.....		Rate.....	Constant.....
Jan.		Hours.	
Feb.		Hours.	
Mar.		Hours.	

FIG. 272.

with a sharp-pointed pencil the position of the hand on each dial of the consumer's meter, and the record thus made is translated deliberately at the office. Part of a page from such a record book is shown in Fig. 272.

A direct-reading meter, arranged somewhat after the manner of a cyclometer, showing the total reading in plain figures, is a highly desirable instrument, but although several such meters have been brought out they have not as yet come into a secure place in the art. The difficulty is mainly a mechanical one. The meter can easily work one number disc, but, as it runs on, an evil time comes when it has simultaneously to move two, three, four, or five discs, and at one of these points it is likely to balk. Such a meter would be particularly hard to adapt to the induction type now widely used, and, desirable as it would be, the time of its coming is not yet.

ELECTRIC TRANSMISSION OF POWER.

For special purposes a considerable variety of meters are used, all, however, being made and applied on substantially the lines already described. In some cities prepayment meters with an attachment for switching on the current worked like a slot machine are finding a foothold, particularly in the poorer quarters. Elsewhere two-rate meters with a clock-work attachment to cut down the rate of running between certain hours of relatively light station load, and some other automatic discount meters, have been employed. But all these are peculiar in their special attachments rather than in any fundamentals.

Whatever meters and instruments are used, it is of primary importance that they be kept always in the best working order.

CHAPTER XVII.

THE PRESENT STATE OF HIGH-VOLTAGE TRANSMISSION.

SINCE the appearance of the first edition of this work in 1897 there has been very rapid progress in the art of dealing with very high voltages. Much that was then dubious is now certain, and at the present time engineers use ten or fifteen thousand volts as freely as they used half that pressure three years ago.

Moreover, the experiments then just initiated with far higher pressures have led to a successful conclusion, and when the distance of transmission demands extreme measures there is now little hesitancy in employing voltages of 20,000 to 40,000 if the climatic conditions are at all favorable. Up to two years ago little experience regarding the behavior of insulators at very high pressures had been accumulated, and this was really the critical factor in dealing with the subject. It has turned out that with well-designed glass or porcelain insulators of the quality now obtainable there is little danger of puncture or serious leakage up, certainly, to 20,000 volts. With the best commercial insulators, carefully tested previous to installation, even this very high voltage may be doubled without likelihood of serious trouble, provided climatic conditions are good. At such pressures some curious phenomena develop and radically new conditions are encountered, but everything points to their being successfully met. There are at present running in the United States, Canada, and Mexico nearly seventy transmission plants working regularly at voltages of 10,000 or more; and of these, a score are operating at or above 20,000 volts. These last bear the same relation to future progress in high voltage work that the little group of 10,000-volt plants bore five years since.

Much of our knowledge of the subject is due to the exhaustive tests made by Mr. Ralph D. Mershon at Telluride, Col., briefly referred to in Chap. XII. These are fully described in a paper by

Mr. C. F. Scott before the American Institute of Electrical Engineers. Briefly the essential points established are as follows:

With first-class glass or porcelain insulators there is little to fear in the way of leakage in good weather up to say 50,000 volts, unless the insulators break from mechanical causes. Rain and snow seldom cause trouble, although of course they may do so. Dry air, snow, and clean water are tolerable insulators, although dirt of any kind on the insulators is to be feared. Cross-arms and pins should be filled to prevent infiltration of moisture. There is good reason to believe that oil insulators are quite needless, and they certainly are apt to accumulate dirt without giving any compensating advantage.

Loss of energy through leakage over the surface of the insulator is very trifling—perhaps not more than two or three watts per insulator, even at 50,000 volts between lines. In bad weather this is likely to increase; but the leakage itself tends to dry the surface of the insulators, and while if high voltage is suddenly thrown on a line leakage may cause immediate trouble, gradually raising the pressure to the full working-point tends to correct this difficulty, and there is no trouble experienced. Rain is the only thing likely to cause difficulties, unless we except a heavy snowstorm, and neither is much to be feared at 40,000 to 50,000 volts, although above this point troubles increase rapidly. A heavy sea-fog, with salt-laden atmosphere, is serious, however, as has been shown on lines of far lower voltage than the above, and sometimes has caused the burning of pins, cross-arms, and even poles. Sappy cross-arms and poles have been a not uncommon source of damage.

The most interesting fact brought out in the Telluride experiments was the leakage at very high voltage between wire and wire through the air—a true brush discharge akin to that seen about the wires proceeding from a big induction coil. At about 20,000 volts the line wires begin to show at night traces of luminosity, which rapidly increases with the pressure, until at 50,000 volts and upward the wires are plainly visible for a long distance, and the hissing sound characteristic of fierce brush discharges is audible at the distance of a hundred feet or more. This discharge involves a real and quite considerable loss of energy, increasing with appalling rapidity at still higher voltages. This loss increases with rise of voltage, with

diminution of the distance between wires, and with diminution of the diameter of wire. Anything on or about the wire which increases the electric density at any point shows as a noticeable brush discharge. Fig. 273 shows the loss on the Telluride cir-

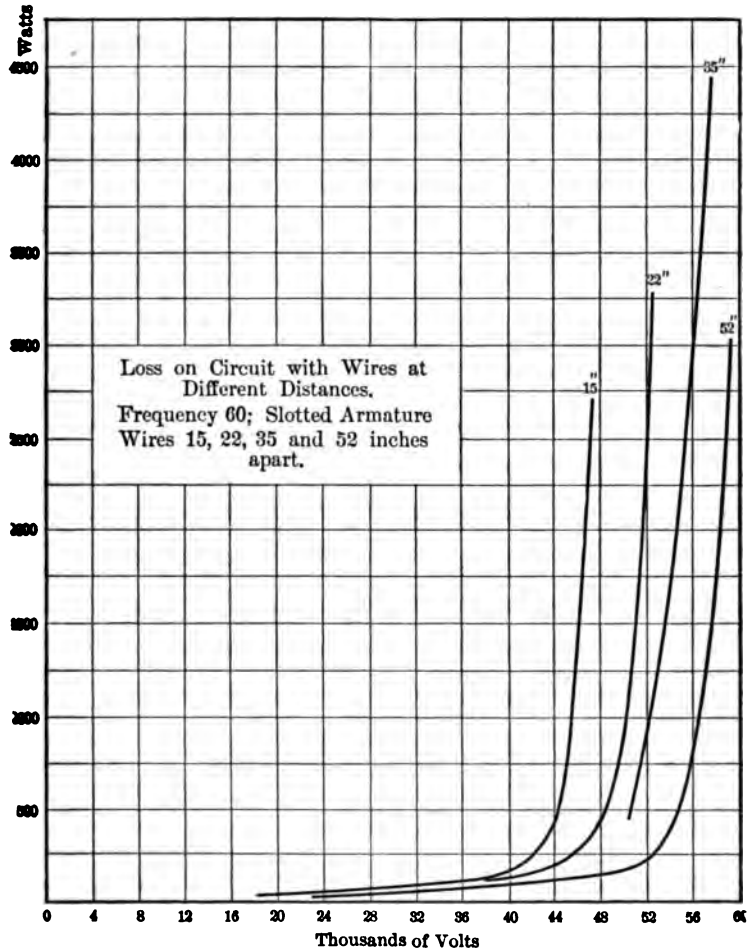


FIG. 273.

cuit, $2\frac{1}{4}$ miles in total length, with line wires at different distances apart on the poles. The curves begin to turn upward at between 40,000 and 50,000 volts, and, once the elbow of the curve is passed, rise very fast.

It is clear that this phenomenon sets a real physical limit on high-voltage transmission, of a sort not hitherto realized. A loss of say 2 KW per mile of wire is a pretty serious matter on a long line, even when the total energy transmitted is very considerable, and obviously in any practical case of transmission the voltage must be kept well below the elbow of

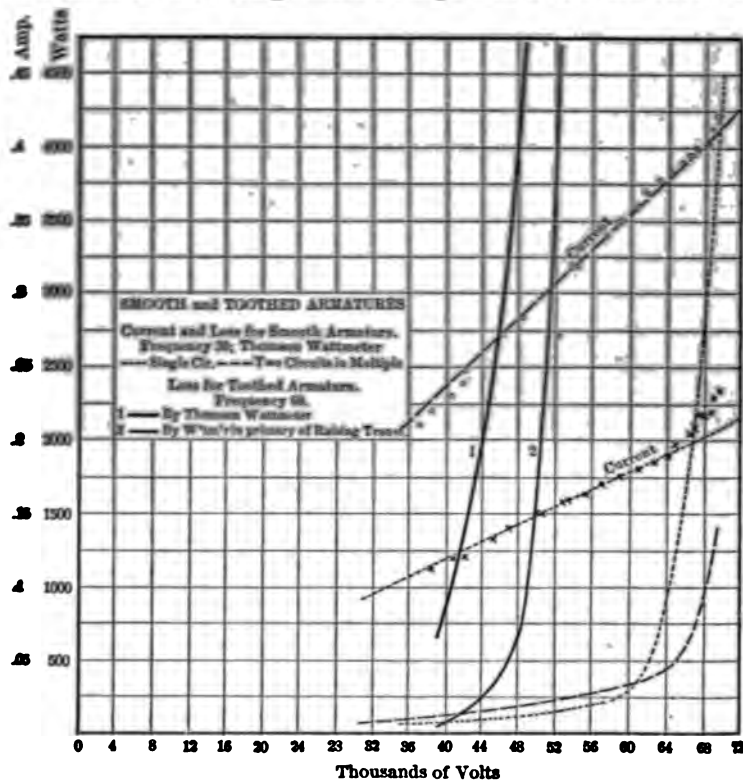


FIG. 274.

the leakage curve. Hence the wires should be kept well apart. As might have been expected, the shape of the E. M. F. wave given to the line is a very important matter under these circumstances. Fig. 274 illustrates this fact in a sufficiently startling manner. By changing from a non-sinusoidal wave of the peaked type to a wave nearly sinusoidal the elbow of the curve was pushed up from 40,000 volts to 60,000 volts under conditions otherwise the same. For

such work there is every possible reason for using the sine wave on account of this leakage effect as well as for other practical reasons already set forth. But even with favoring conditions leakage must be reckoned with, and present data indicate that in nearing 50,000 volts one is on dangerous ground quite aside from any questions of insulators or apparatus. We cannot expect to improve the dielectric strength of the air, and although the conditions may be improved by using good-sized wires when conditions permit, or perhaps by heavily insulating the wires, thus both increasing their diameter and somewhat improving the general insulation, it is quite probable that a limitation of voltage from this cause is an unpleasant reality.

With proper precautions, however, there seems to be no very grave difficulty in working at 40,000 to 50,000 volts. Besides the Telluride experiment, in which the short line mentioned was worked steadily for a month at 50,000 volts without serious interruptions, there has now been in operation for more than two years a commercial transmission over 55 miles at a working pressure of 40,000 volts. This is the plant of the Telluride Power Transmission Co. at Provo, Utah. The power is utilized for driving the Mercur mills and other work in connection with a large mining property. The generating plant consists of a pair of 750 KW three-phase generators directly connected to turbines. They run at 300 r. p. m., giving 60~, 800 volts. The raising transformers of 250 KW each are set up in the star connection with the neutral points of both primary and secondary grounded. The line involves a rather tough bit of mountain construction, reaching an extreme altitude of over 10,000 feet.

Both glass and porcelain insulators are in practical use on very high voltage lines. The former of course show defect by inspection, while the latter *must* be tested previous to installation to avert serious trouble. In fact, few actually do break down under test, but if these few are on the line the results may be unpleasant. On the Provo system glass insulators are used, the form adopted being that shown in Fig. 275. It is of triple petticoat design, 7" in diameter over all and 5½" high. The lower edge of the outer petticoat is toothed to prevent the accumulation of

water. The water gathers on the points and quickly drops off. These insulators have done well upon the whole, although there is always enough leakage to prevent the successful working of a telephone line on the same poles. This may not be wholly chargeable to the material of the insulators, as the climatic conditions are extremely trying.



FIG. 275.

The western end of the line lies near the old basin of the Great Salt Lake, where the dust is of strongly saline character, and occasionally so-called "salt-storms" occur, which would severely try the insulation of any imaginable line. The saline matter gets distributed over not only the insulators, but the cross-arms, pins, and poles, and is sufficient not only to ensure leakage, but to cause actual arcs to break out between wire and wire, producing a momentary short circuit. Such arcs quickly dissipate themselves, but while they last the phenomenon is little short of terrific. Sometimes, though rarely, in conditions of unusual severity these tremendous discharges come for a short time in rapid succession.

Under such circumstances the photograph reproduced in Plate XVIII was taken, and when one realizes that all three wires



PLATE XVIII.



THE NEW YORK
PUBLIC LIBRARY
ASTOR, LENOX
TILDEN FOUNDATIONS



were involved, and that the pole is nearly forty feet high, some idea of the imposing character of the result may be obtained. The distance from wire to wire is a trifle over six feet, so that the flaming arc is upward of ten feet in extent. Fortunately such salt storms are infrequent, and comparatively little damage is done to the line, but considering the peculiar conditions it is not remarkable that leakage is perceptible. Saline matter, whether as dust or from a heavy sea fog, is the worst enemy of insulation.

On the 33,000-volt Redlands-Los Angeles line porcelain insulators on iron pins are used, and leakage has been very little felt, there being not enough to disturb the telephone service to any material degree. The insulators are of about the same size as the Provo type, and were very thoroughly tested prior to installation. They have proved remarkably good, and actual puncture is practically unknown both here and at Provo. How much of the lessened trouble on the Redlands-Los Angeles system is due to the lower voltage than at Provo, how much to the use of porcelain, and how much to the better climatic conditions it is quite impossible to tell.

The use of iron pins the writer considers bad practice on very high voltage lines, in spite of their strength and convenience. It gives altogether too good a path to the cross-arm in case of leakage or puncture, and has no large compensating advantages. On lines of 10,000 to 20,000 volts under ordinary conditions the insulator just described in connection with the Provo plant is needlessly large, and a smaller type of the same design shown in Fig. 276 has come into considerable use. It is $5\frac{1}{2}$ " in diameter and $4\frac{3}{4}$ " high.

In one particular both these insulators are open to criticism. The wire is of necessity tied to the side of the insulator top instead of resting in a top groove, as in the insulator shown in Fig. 277. This lateral tie lessens the leakage distance to the pin very materially, and in the worst possible place—that is, where the insulator is smallest in diameter, and hence offers the least surface. For high voltage work the top groove is decidedly preferable.

On the two great California high-voltage lines, those of the Standard Electric Co. and the Bay Counties Power Co., both designed for an ultimate working pressure of 60,000 volts, the

immense striking distance of this extreme pressure forced the design of special insulators. The form settled upon is shown in Fig. 277. This is of composite construction. The upper part is a spreading porcelain umbrella with a pair of diametrically opposite lips and a strong upper head, with top groove and groove for the tie wire. This porcelain umbrella is 12'

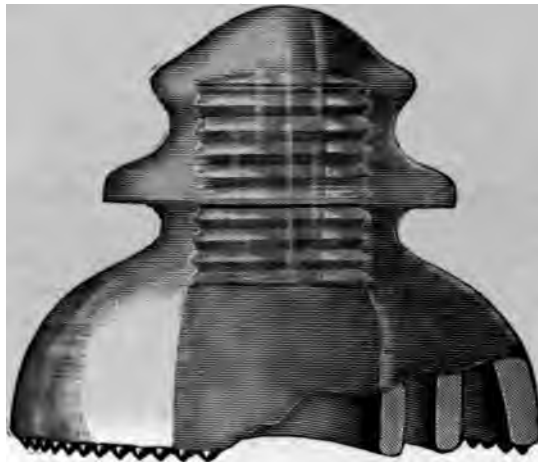


FIG. 276.

in diameter, and is cemented with sulphur upon the glass base, which has a single petticoat of small diameter, 12" deep. The whole is fitted for an extra thick and long pin.

These insulators are tested with 120,000 volts between the tie wire and the centre of the pin. This pressure, with a normal striking distance of about 12" in air between points, fails to puncture the insulators, but may discharge over the surface. The pins are oil treated, as is usual with pins intended for high-tension work.

As the lines to which these insulators belong are not yet regularly worked at the full voltage, but at 40,000 volts, data as to the real practical properties of the insulators are wanting. They seem, however, to be admirably adapted to their work, although the very large surface of the umbrella would appear to give a resistance to leakage much smaller than would result from a bell-shaped design. The composite structure is much easier to manufacture than if the whole mass were solid,

and it is comparatively easy to make a high grade of porcelain in the shape chosen.

All the information now accumulated with reference to insulating very high voltages indicates that the task is



FIG. 277.

easier than has commonly been supposed. The main thing seems to be to allow ample space between the wire and its supports and between wire and wire. A point must ultimately be reached at which the cost of proper insulation will balance the saving in line wire made by adopting that particular

voltage. This point is apparently above 40,000 volts, but how much above it is impossible at present to say.

The Provo plant has done good steady work ever since it was started. It has not been exempt from troubles, of course, but there have been no serious breakdowns.

In ordinarily dry weather the line has uniformly worked well—as well as lines at a much lower voltage. In rainy weather there has been some trouble from leakage—sometimes enough to blow the fuses. In almost every instance of line troubles the cause has been found to be a broken insulator, cracked from strain or smashed by a bullet. The first time the author crossed the continent on power-transmission business he received a vivid idea of the bullet as a factor in the situation, for nearly every switch tower between Kansas City and Los Angeles had from one to a dozen bullet holes in it.

The Provo plant has been in operation since February, 1898, and in spite of the terrific voltage and occasional difficulties on the line, it has done, and is doing, exceedingly good service. Such pressure, however, must be regarded as still somewhat experimental, and it should be borne in mind that the kind of work on which it is employed is such that trivial disturbances are not noticed much, and brief interruptions at infrequent intervals are not serious—simply annoying. What a similar plant would do in the way of furnishing a general service of light and power is still somewhat problematical.

It is needless to say that at extremely high voltages, not only the insulators, but the line itself, requires some special construction. Not only must the line wires be kept well apart, but care must be taken with the cross-arms and poles. The line must be kept most scrupulously clear, for a tree branch even swinging close to the line is liable to start an arc to ground.

If an insulator is broken a discharge is quite certain to burn the pin and ultimately the cross-arm itself, particularly in damp weather or in case of rather porous wood in pins or cross-arms. Filling the cross-arms with oil, as pins are filled, has a salutary effect in checking this tendency to leakage along the grain. The insulators should be carried with their edges at least a full diameter of the insulator above the cross-arm.

A good type of high-voltage line construction is shown in the pole head of Fig. 278. This is from the recently constructed line of the Missouri River Power Co., into Butte, Mont. It is a 70-mile transmission at 50,000 volts. The particular features of this construction are the general use of

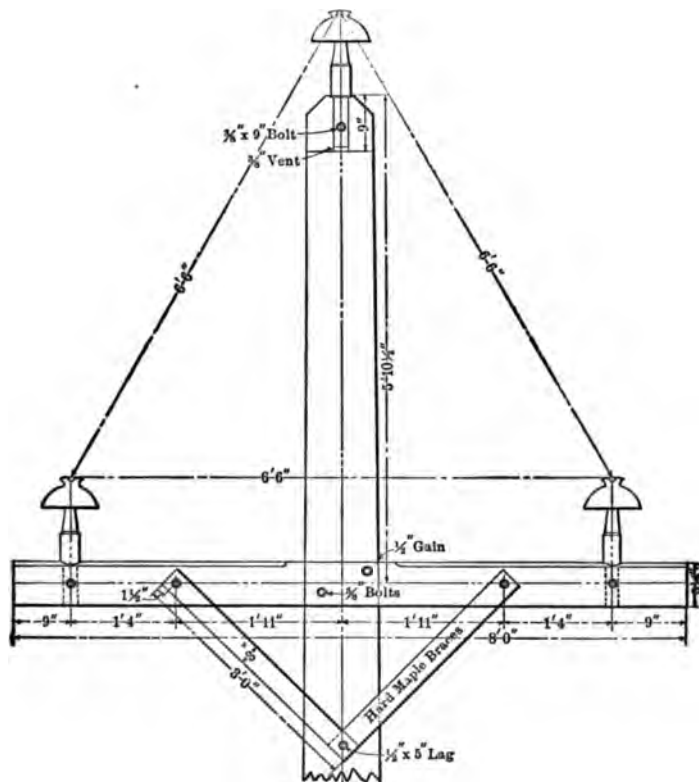


FIG. 278.

bolts instead of lag screws, and the substitution of hard wood for iron cross-arm braces. This latter precaution considerably increases the insulation resistance at the pole head. The thing which really determines leakage is not so much the distance from wire to wire through air, as the distance via cross-arm and pole. For example, in Fig. 278 the horizontal distance in air between the two lower wires is 66". But the

distance via the cross-arm is only something like 2' in air and along insulator surface, *plus* about 5' along possibly very wet wood. This insulation would break down at much less voltage than would be required to jump from wire to wire. If the braces were iron the discharge would have to cross barely 3' of wood in its path from wire to wire.

On long and important transmissions duplicate pole lines are coming into general use. This of course practically doubles the total cost when the voltage is high enough to keep the cost of the conductor low, but it certainly gives in many instances greatly increased security against interruption, especially where trees are to be feared.

Up to 10,000 or 15,000 volts a well-built pole line with duplicate circuits, kept rigorously on opposite sides of the pole, answers very well in clear country.

There is little difficulty in freely executing repairs on one line while the other is in use, by the exercise of ordinary discretion. Sometimes a wire is wound a few times around the cross-arm and then grounded, to head off leakage, and no line-man should be allowed anywhere on a pole carrying such circuits without his wearing rubber gloves; but on the whole repairs, even under such circumstances, are not troublesome. In case of need a 10,000 or 15,000-volt circuit can be repaired while still alive, in dry weather, without great difficulty.

No plant, however, should be so planned as to require such a proceeding under any ordinary circumstances.

As the voltage mounts to 20,000 or more, operations upon a pole line carrying live wires become difficult and somewhat hazardous, and should never be attempted save as a last resort in case of unusual accidents.

Allusion has already been made to a remarkable engineering feat on the lines of the Bay Counties Power Co., in the spanning of Carquinez Straits by steel cables. It is sufficiently noteworthy to call for more than a passing word.

The problem was to cross a deep, swift, navigable waterway, 3200 feet wide at the narrowest point. Submarine cables were out of the question, and the United States Engineers required 200 feet above high water mark for the lowest dip of any suspended structure.

On the north shore on a point 160 feet above high water


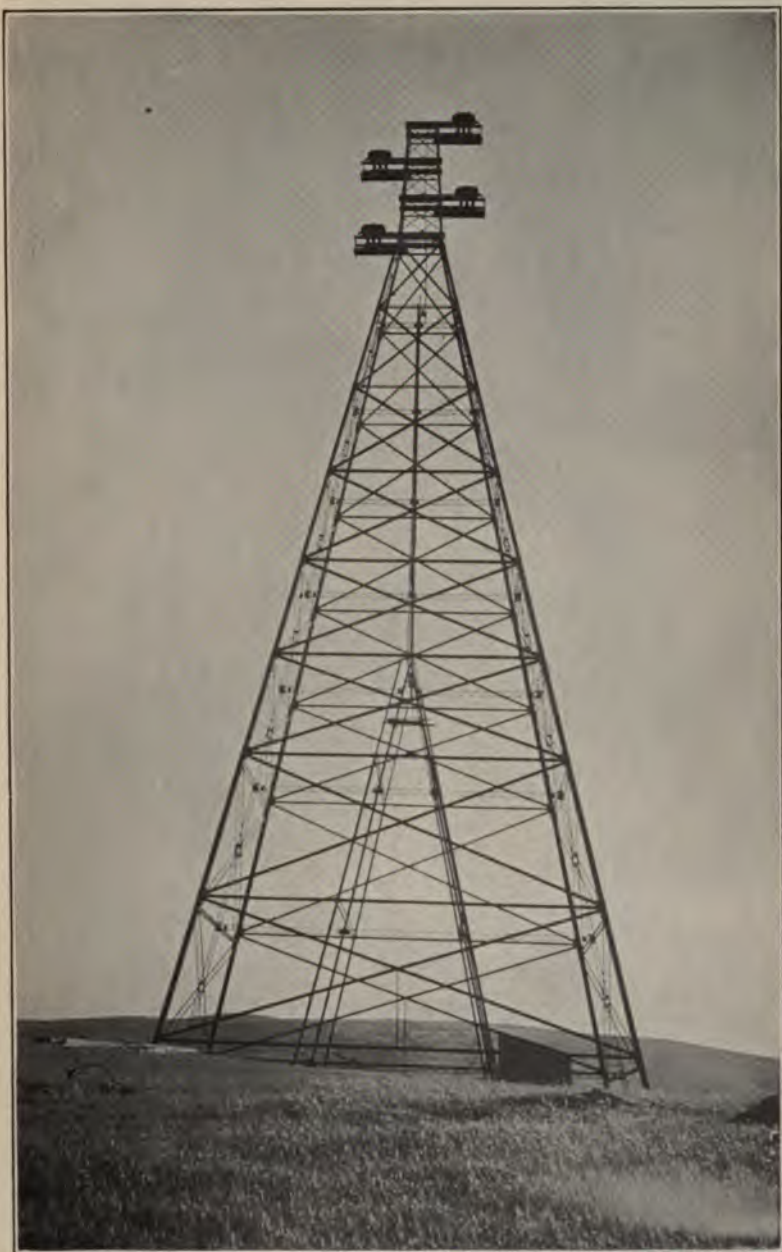


PLATE XIX.

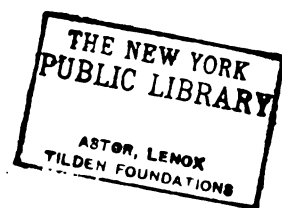

was erected the skeleton steel tower shown in Plate XIX. On the south shore there was higher land, and a similar tower 65 feet high sufficed. The construction adopted was that generally used for steel tower work, and each tower bore near its top four massive wooden out-riggers surmounted by the insulated saddles that carried the weight of the cable spans.

As in suspension bridge work the cables rest upon rollers upon the saddles, and then extend far shoreward to the anchorages, where the strain is taken. From anchorage to anchorage the span is 6,200 feet. Each cable consists of nine-

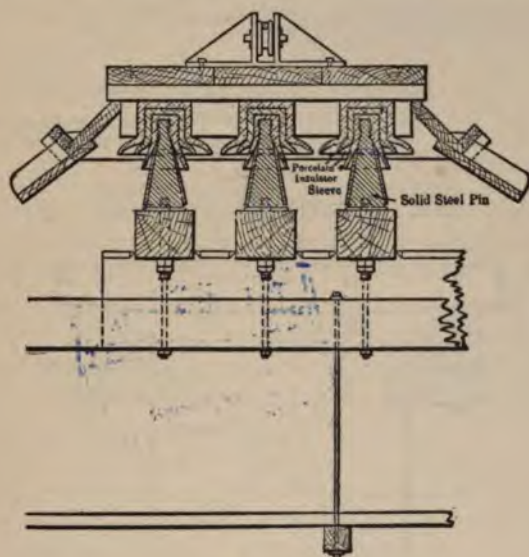


FIG. 279.

teen strands of steel, galvanized, is seven-eighths of an inch in diameter over all, and has the electrical conductivity of No. 2 copper. The breaking strain of the cable is 98,000 pounds, each span weighs 7,080 pounds, and, as suspended with 100 feet dip, has a factor of safety of 4.

Two difficult problems of insulation were presented. First, the great weight of the cable must be supported at the saddle with insulation adequate for 60,000 volts. Second, the pull must be taken at the anchorage with equally high insulation.

The pull of the cable being 12 tons, the task at the anchorage was by far the more difficult of the two.

At the saddle the weight is taken upon huge triple petticoat porcelain insulators, each built up of four great nested porcelain cups, the inner being filled with sulphur securing a large steel pin. Six such insulators, each 17' in diameter over the outer petticoat, co-operate to sustain the pressure at each saddle. Fig. 279 shows a cross section through insulators, supports, frame, and saddle. The heads of the insulators are built into a timber platform which serves at once as a rain shed and a base for the cast iron saddle proper. This carries in line five steel grooved sheaves over which the cable passes.

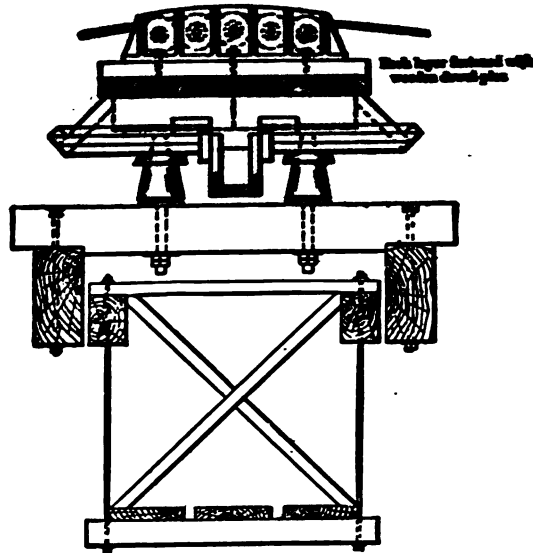


FIG. 280.

Fig. 280 shows the structure in longitudinal section, together with the suspended platform beneath it, for ease of access.

The strain insulators for the anchorage are of highly ingenious construction. Micanite seemed to be the only insulating substance possessing the necessary mechanical strength, and to prevent surface leakage across it the surface exposed to leakage was enclosed in an oil tank. Fig. 281 shows the struc-

ture of the completed insulator more plainly than description. Two of these insulators are put in series and enclosed in a shelter shed to keep off water, for each cable, the pair being secured to a long tie rod anchored in a massive bed of concrete.

Great care was taken in all the details of the structure to secure all the insulation practicable, even the timber out-

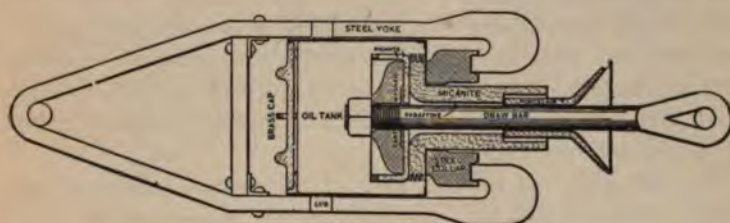


FIG. 281.

riggers carrying the saddle insulators being filled and varnished and the foundation timbers proper being boiled in paraffin. The use of four cables gives one reserve conductor in case of accident. The total length of the span from tower to tower is 4,427 feet, $2\frac{3}{4}$ times the span of the Brooklyn Bridge. It is one of the most striking engineering feats in the records of electrical power transmission, and while not yet long in service it has withstood successfully very severe tests.

For nearly two years past the large plant of the Southern California Power Co. has been in operation, delivering power from a point near Redlands to Los Angeles, a distance of 80 miles. This plant contains four 750 KW generators directly connected to impulse wheels. The generators run at 300 r. p. m., giving 750 volts at 50~. The transmission is by far the longest yet operated for any considerable time for commercial purposes, and the results so far have been highly satisfactory. The working voltage is 33,000, and in the favorable climate of this part of California there is little reason to apprehend any trouble in permanent successful operation. This great transmission forms a part of what is perhaps the most remarkable development of electrical power distribution yet accomplished. Southern California is, in spite of the abundance of fuel oil locally, a region of dear fuel, and consequently high cost of

power. It is, moreover, favored with mountain streams along the Sierras, decidedly variable in amount, but capable of rather cheap development for very high heads. The climate is favorable for power transmission projects, being very dry for a large part of the year, comparatively free from severe thunderstorms, and during the season of rains characterized by heavy showers rather than the prolonged drizzles that are so trying to insulation.

So it has come about that beginning with 1892 this region has been the seat of highly interesting and successful power enterprises, so that there is scarcely a town of appreciable size in an area of 2,000 square miles in which electric power is not available at a reasonable price.

Fig. 28a gives an outline map of the region involved, and shows the remarkable ramification of transmission lines throughout it. *A* is the pioneer station, that of the San Antonio Electric Light and Power Co., in San Antonio Cañon. It was started in 1892, a single phase plant at 60~, with one 120 KW generator, and voltage stepped up to 10,000 for a 16-mile transmission to Pomona and a 28-mile line to San Bernardino. This plant may fairly be said to have demonstrated the commercial feasibility of long 10,000-volt lines. A second similar generator was installed later, and the plant has been working steadily away for nine years with singularly little trouble, in spite of the early lack of experience in insulation.

When it was started, plant *C*, the second of the group, was the pioneer three-phase transmission on this side of the Atlantic, and was installed by the writer as an 8-mile transmission at 2,500 volts. It contains three 250 KW, 2500 volt generators, two of which were in the original installation in 1893, and raising transformers for 2,500 to 10,000 volts to the amount of about 600 KW. These were added later for the line to Riverside, about 18 miles long. A second station, marked *B* on the map, was built later 3 miles further up Mill Creek Cañon, in which are installed two revolving field 250 KW, 11,500 volt three-phase generators. The two stations are worked together, and supply Redlands, Riverside, and Colton, besides smaller places. At Redlands is a sub-station, *H*, with 750 KW in transformers. At Riverside is another sub-station, *E*, with

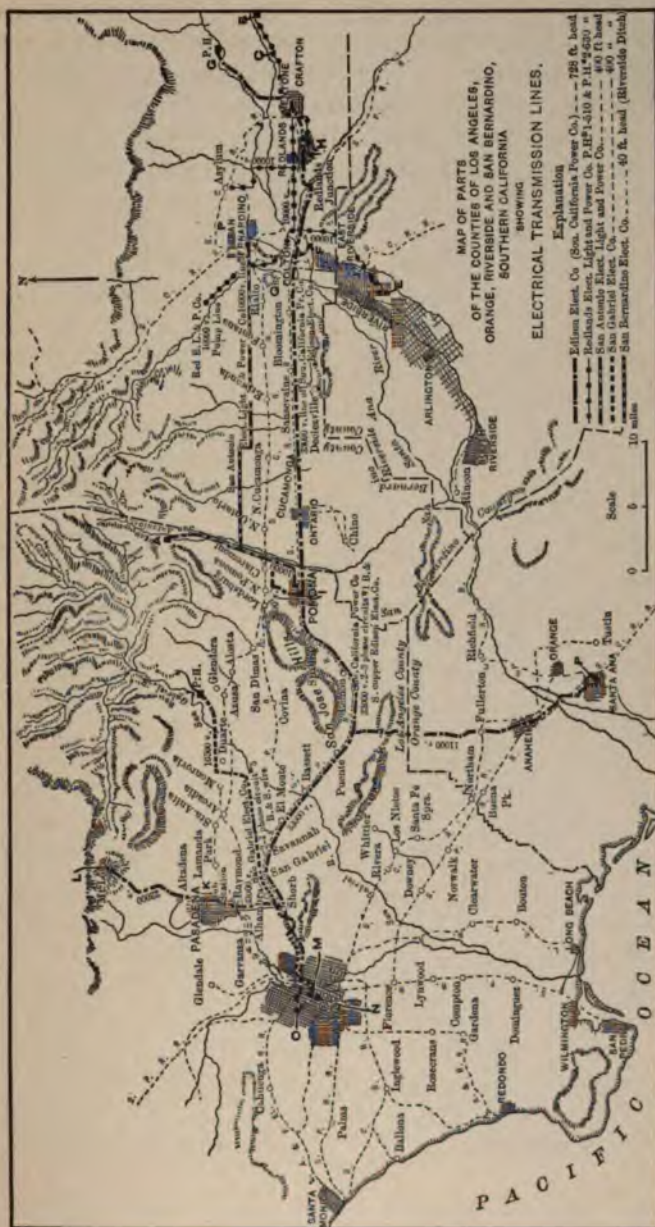


FIG. 282.

375 KW in transformers and a 100 KW rotary converter; at Colton a small bank of 120 KW in transformers marked *Q*. San Bernardino, at *D*, has a small sub-station of the San Antonio plant, and is also supplied from the station *F* of the San Bernardino Electric Co., located on the Riverside ditch, where a fall of forty feet is available, and containing one 120 KW generator. This plant is a 60 cycle one, like *A*, the frequency of the remaining lines shown being 50~, like the original Redlands plant.

At *G*, in the Santa Ana Cañon, was established the great plant of the Southern California Electric Co. already mentioned, which was started in 1899. This power station is operated under 728 feet head, and contains four 750 KW revolving field, 750 volt generators directly coupled to Pelton wheels at 300 r. p. m. The station, of which the interior is shown in Plate XX, is somewhat out of the ordinary in that the wheels and generators are in a single line, the wheels being in water-tight steel cases and the tail races extending across and under the building, an arrangement due to local requirements. The transformer equipment consists of twelve 250 KW air blast units raising the line voltage to 33,000.

The main line extends 80 miles to Los Angeles. It runs down into and through Redlands, and then parallels the Southern Pacific Railway into Los Angeles. On the way at Pomona is the sub-station *I*, with three 150 KW oil transformers and a 50-light constant current transformer for arcs. About 15 miles further on near Puente is a little sub-station with three 150 KW oil transformers reducing the voltage to 11,000 for a side line to Anaheim and Santa Ana, at which latter place is a little sub-station *P*, with 225 KW in transformers. In Los Angeles the line reaches two sub-stations, *N* and *O*. The latter is the main reducing station, where six 750 KW air blast transformers reduce the voltage to 2,200 for the city lines, and for transmutation to continuous current. This is accomplished both for railway and power purposes by motor generator sets. These were chosen in lieu of rotary converters on account of the greater independence of the continuous current service of any disturbances on the alternating current side. The motor generators are combinations of synchronous motor with generator, or with two generators. In *O*, the lighting sub-

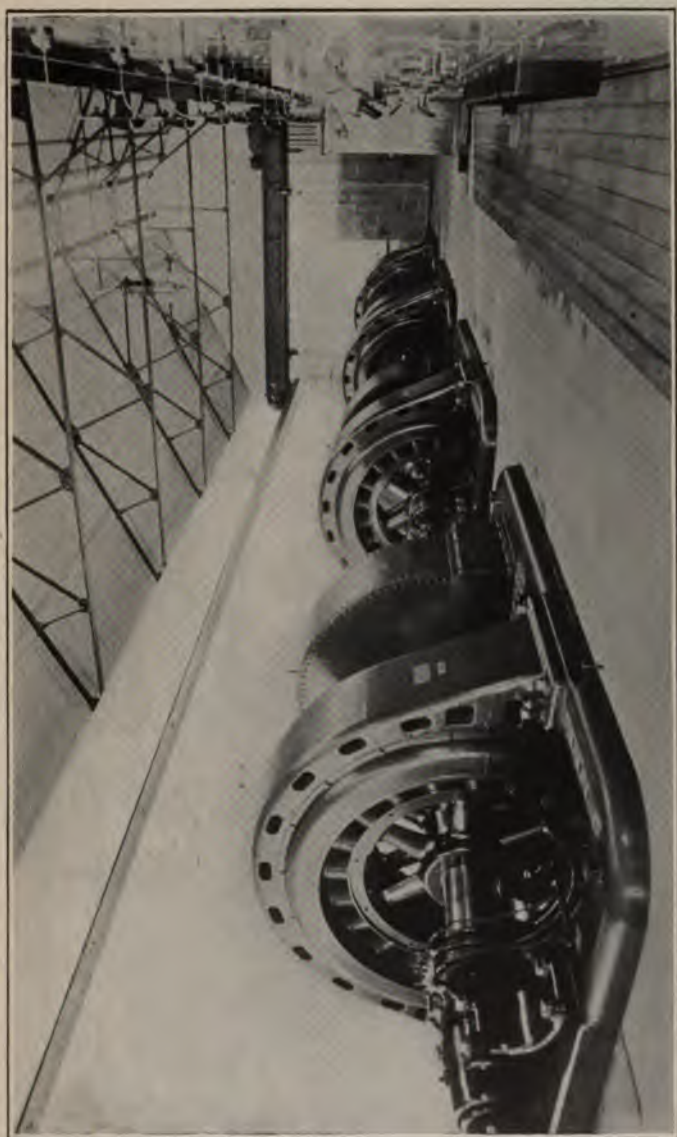


PLATE XX.



station, are 500 KW units; in *N*, the railway sub-station, 300 KW units. In the former is also a 240 KW synchronous motor for driving other generators. This whole system is for the work of the Los Angeles Edison Electric Co. Still another section of the 33,000 volt lines branches from the main lines five miles south of Pasadena and reaches the sub-station *K* in that city, where four 150 KW oil transformers reduce the pressure to 2,200 volts for general distribution and for transmission to *L*, the power station for the Mt. Lowe Electric Railway, where a 150 HP induction motor drives the railway generators.

Besides the extensive system just described, Los Angeles is reached by the 16,500 volt line of the San Gabriel Electric Co. *J*, the power station, is located at the mouth of the San Gabriel Cañon, where a fall of 400 feet is available. The generators are four 300 KW two-phase machines at 50~, the line being worked three-phase, as is the usual custom. The sub-station *M* in Los Angeles contains a full set of reducing transformers, in units of 125 KW and above, and most of the output is delivered to rotary converters and used for railway purposes.

All these systems are in full operation and well loaded. Save in the case of the San Antonio line, they are of uniform periodicity, 50~, and in general operate their distributing circuits at 2,200 to 2,400 volts. It is interesting to note the successful use of rotary converters at this periodicity in units as large as 400 KW.

Altogether the high-tension systems aggregated in this region form one of the most remarkable developments of electrical power transmission yet accomplished.

It is only surpassed by the group of transmissions in the neighborhood of Sacramento and San Francisco, which is of somewhat later growth, and not even now in full operation—that system of which the Standard Electric Co. and the Bay Counties Power Co. are the most sensational factors.

Before passing from this region mention should be made of the remarkable steam-driven transmission system of the United Electric, Gas, and Power Co. of Santa Monica, which supplies current to that famous resort, and also transmits power at 22,000 volts to Redondo, San Pedro, Terminal Island, and Long Beach. This is one of the very few long distance power transmissions in the world from steam plants. The only

other American instance of any importance is a 600 KW transmission from Blount, K. M., for the Cochiti Gold Mining Co. This has a 31-mile line at 12,500 volts.

The Santa Monica plant has a 400 KW and a 200 KW three-phase revolving field generator at 60~, 2,500 volts. The fuel used is a thick asphaltic crude oil obtained near by. The distribution, being almost entirely for lighting, is essentially single phase, in three circuits at 2,500 volts in Santa Monica, while three 100 KW oil transformers raise the pressure to 22,000 for the three-phase transmission. Each sub-station has three 50 KW oil transformers reducing the voltage to 2,500 again, and the distributions are practically single phase, as at the main plant. The greatest distance of transmission is 35 miles.

It may be said of all these Californian plants that they have uniformly worked admirably, have encountered few unforeseen difficulties, and have as a rule met with commercial success.

Plants working at 10,000 and 15,000 volts are now quite common, and are uniformly successful, even in the worst climate the United States can furnish. There are several 10,000 volt plants which have been working admirably for several years in New England, where the conditions in winter are notoriously of the very worst—and others in situations nearly as unfavorable.

Speaking generally, line troubles have been neither frequent nor annoying. Insulators have seldom failed from electrical causes, and accidents to apparatus have been conspicuously rare. It is not too much to say that the experience of the past few years has shown conclusively that such voltages as 10,000 to 15,000 are entirely satisfactory for power transmission, even in the most trying climates and in cases where complete reliability is of the first importance.

An innovation which has found some favor is the use of generators wound to deliver directly 10,000 to 13,000 volts. Such machines are always built with stationary armatures and revolving fields. Prior to the introduction of this construction, generators for such pressures were out of the question, but there are now in use a considerable number of these high-voltage machines, nearly all above 500 KW capacity, which are uniformly doing good service. The ultimate economy of this practice is not

yet clear. One set of transformers is saved, reducing the loss about 2.5 per cent., while on the other hand the very large insulation space required tends considerably to reduce the capacity of generators of given dimensions. Exact figures cannot be had, since the intrinsic merits of the matter are mixed up with commercial considerations involving the competitive and advertising value of novelty, the question of adaptation of standard sizes and speeds, and other matters which are of temporary rather than permanent importance. It is the author's impression, however, that when these matters are eliminated there will prove to be no very great difference in cost, including depreciation and efficiency, between the high-voltage machine and a low-voltage one plus the raising transformers. At present, inasmuch as the high-voltage generators are excellent and reliable machines, their use is advantageous so long as a good bargain can be driven as to price as compared with the low-voltage machine and its raising transformers. Although none of these high-voltage generators have been long enough in use to get a final idea of their rate of depreciation, there is not much to be feared in view of our present knowledge of insulation.

The phenomena of line capacity and inductance, resonance, unbalancing of three-phase transmission circuits, and divers other unpleasant things which are theoretically present on long-distance or high-voltage lines, have been shown by experience to be of no sensible account in a well designed and constructed plant. Line inductance and the rest are, of course, always with us, but from an operative standpoint they are not at all serious at any pressure or distances now in use. They must be considered and taken into account just like ohmic resistance and line insulation, but are not material obstacles at any voltage or distance yet tried. On pages 622, 623, and 624 is a pretty complete list of all the American plants using regularly pressures of 10,000 volts or more.

It is a rather formidable list, and the number of plants now operating at or even above 20,000 volts is somewhat startling. Everything now indicates that pressures of such magnitude are likely to be regularly used in the future, in cases where extreme measures may seem to be necessary.

This list is rapidly extending under the encouragement of

experience and the goad of the present very high price of copper. So soon as the cost of copper for the highest voltage convenient for general distribution, say 2,500 volts, gets at all burdensome the tendency is to pass at once to 10,000 volts or more for the transmission. Voltages of 5,000 or 6,000, counted high a few years since, now hardly come in for serious consideration. The main points of high-voltage work seem now well settled, but there is still much room for experiment and improvement in the details of the system. With rare exceptions the transmission lines are worked three-phase, either from three-phase generators, or from two-phase generators the change to three-phase being accomplished in the transformers as described on p. 182.

As regards the generation and distribution, the work in this country is about equally divided between the two-phase and three-phase systems, the latter being rather in the majority. As might be anticipated, there is found very little difference in the general properties of the two systems, the tendency being to use two-phase in many cases where an existing alternating lighting system is to be supplied, and three-phase for heavy motor work or when the whole system is installed *de novo*, although neither this nor any other plan is consistently adhered to in practice.

The generating and transforming units have been steadily increasing in voltage and capacity. Some 2,000 KW transformers have recently been installed at the Niagara plant, while those of several hundred kilowatts are common enough. Barring the general objection to putting too many eggs in one basket, this tendency is a good one, giving units at once cheaper and more efficient than the smaller sizes.

As regards the line itself, apart from the use of special insulators and widely spaced lines as already noted, there is little of a striking character to chronicle. The tendency is steadily toward the use of extra strong poles, 35' to 40' long, and not less than 8" in diameter at the top. With our present command of high voltages it is seldom that the line wire is larger than No. 1, duplicate circuits being used if the amount of energy transmitted is greater than could properly be sent over No. 1 wire.

The use of aluminium wire to some extent has created a

tendency to use longer spans in the line than are given by the usual 50 poles per mile. Some lines have been tried with as low as 25 to 30 poles per mile, but in view of the mechanical properties of aluminium wire, this seems to the writer a step in the wrong direction. It certainly would not do for lines exposed to sleet or heavy winds, for under these circumstances the greater bulk of the aluminium conductor is a menace.

Cross-arms are not infrequently treated with insulating compounds in the manner already suggested. The material used is generally some asphaltum compound applied hot, or linseed oil well boiled in.

Lines are usually transposed at intervals of from half a mile to a mile, in cyclic order. In some instances this is done in a span of half the usual length to lessen the strain.

It is curious to note that aside from things falling or thrown across the line, large birds like hawks, eagles, and owls are the commonest cause of short circuits. Most of the long lines have suffered from this cause, some of them rather frequently. Wide spacing of the lines is about the only remedy for this particular annoyance. A line spaced as shown in Fig. 278, for instance, could hardly be crossed unless by the largest eagles, and is unlikely to be more than momentarily crossed by anything lodged upon it by accident or design. The usual arrangement of the wires in triangle, with the vertex up, is commendable as averting easy lodgment of anything across the line, if for no better reason. Accessory apparatus has hardly kept pace with the general progress of the art. Switch-board appliances for high-voltage work notably are undeveloped into standard forms. They have particularly suffered from the too common straining after compactness. A liberal factor of safety is always a good thing, and nowhere is it more necessary than in dealing with voltages such as are used in electrical power transmission.

There is at present a strong tendency to let the high tension lines alone, so far as is possible, arranging switches, fuses, cut-outs, and the like on the low voltage side of the transformers. In many instances the transmission line proper is entirely without such devices. To tell the truth there is little need of them in simple transmissions, although in more

complex cases, with several line circuits, they may often have to be used.

When high tension switches have to be used, enough experience has now accumulated to indicate that it is always wise to use an oil-break switch. Not only is the danger of arcing very greatly reduced, but there is far less chance of producing unpleasant resonance effects on the line than if an air-break switch is used. In the latter case it is possible not only to draw an arc of prodigious length, but to throw a resonant voltage upon the line sufficient to break down insulation at vital points. In some recent experiments at 40,000 volts it was possible to draw an arc nearly thirty feet in total length from a quick-break, long-armed air switch, and breaking the circuit in this manner gave surging electromotive forces in the line two or three times the high normal voltage of the system. With an oil-break switch, having its contacts in separate oil receptacles, currents at 40,000 volts, representing more than 1000 KW, could be opened instantly and certainly, without a flash or any surging rise of potential.

On account of the danger of such surging, it seems advisable to use oil-break switches for all very high voltage work, and all work of considerable magnitude at ordinary primary voltages.

In controlling very large amounts of energy, several thousand KW and upward, it is a difficult matter to install manually operated switches in any position at once safe and accessible. The consequences of a heavy arc at high voltage, as in opening a short circuit, are so terrific that switches liable to such service are now very often arranged to be worked by pneumatic cylinders or by electric motors controlled from a distance. By this device the switches can be far removed from danger to persons or property, and may be given ample space for safety, without making a switchboard too large for convenient operation. Perhaps the most complete development of this idea is in the new Niagara plant, in which the controlling switches are placed on a sort of dummy switchboard on a small scale, on which each control switch puts into action the corresponding real switch wherever it may be in the station.

Fig. 283 shows a recent electrically operated oil-break

switch for a 12,000 volt, three-phase circuit carrying several hundred amperes per branch. The essential features are obvious. A U-shaped plunger breaking contact under oil at each end serves to break each phase at two points, the ends

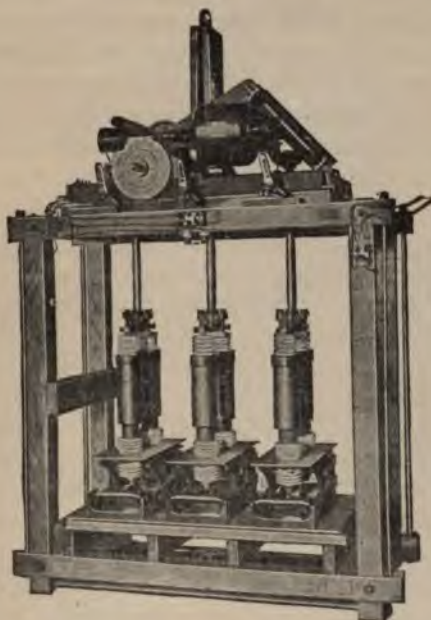


FIG. 283.

being in separate oil tanks. The three plungers are worked from a common cross-head actuated by the motor. Switch-board appliances for heavy transmission work form a branch of engineering of no mean importance. Experience on the subject is rapidly accumulating, but almost every large plant so far has been treated by special designs. The controlling elements in design should be accessibility and simplicity. Switches, cut-outs, and the like should be planned to do the necessary work of the system well, and no more than is really necessary.

It may not be out of place here to refer to the Nernst lamp, which has just been brought out in this country, being already somewhat used abroad. The principle of this lamp, as is well

known, is the raising to incandescence of a pencil of refractory material by the passage of electric current. The pencil or "glower" is of a material similar to that used in Welsbach mantels, and is a non-conductor when cold, but a fairly good conductor at high temperatures, say 900° to 1000° C. The conduction is then accompanied by electrolytic action, so that the glower is rather short-lived when used with continuous current. As the glower alone is hypersensitive to changes of voltage when hot, it is used in series with a "ballast" resistance of iron wire sealed in an oxygen-free



FIG. 284.

tube to preserve it. The high temperature coefficient of the iron steadies the glower.

The initial temperature necessary for conduction in the glower is obtained by a "heater" consisting of platinum wire enameled upon a porcelain core and located just above the glower. This heater is in shunt to glower and ballast, and is automatically cut out by a little magnetic break when the glower is at work. The heater will bring the glower into action in about half a minute.

The heaters and glowers are enclosed in a globe to keep in the heat and keep out draughts, and the works other than these are in a small cap above the globe. Fig. 284 shows the glowers and heaters of the six-, three-, and one-glower lamp assembled on their base with the projecting pins ready to make automatic connections when shoved into place in the

lamp; and Fig. 285 shows the six-glower lamp as fitted for outdoor use. Each glower is about 0.04" in diameter and 1' long, and is good for approximately 50 c. p. normal to its axis;



FIG. 285.

a little more in the multiple glower lamps where the temperature is carried well up.

The globes require cleaning about every 100 hours from a deposit off the glowers, while the average life of a glower is stated to be nearly 800 hours. The efficiency of the Nernst lamp as developed in this country is somewhat better than that of a high efficiency incandescent lamp, and about the same as that of an enclosed arc. Its light is beautifully white and

steady and admirably suited for commercial use. Reports from tests indicate a considerable field for usefulness for the Nernst lamp in power transmission plants, especially in replacing the constant potential alternating arcs, which are always somewhat troublesome in the matter of noise. As a competitor of the incandescent lamp it has the advantage of better color and efficiency, but requires care like an arc lamp.

It is too early yet to properly evaluate the place of the Nernst lamp in the art, but it is certainly promising.

The question of frequency is gradually settling itself. Except in plants intended mainly or entirely for use with rotary converters, a frequency of about 60~ is the general rule, and this is the figure adopted in the great majority of transmission plants. In those intended for general distribution of power and light, the lighting sets a lower limit to the frequency that must be respected. In the neighborhood of 30~ incandescent lighting becomes decidedly troublesome, and if alternating arcs are to be used the frequency must be kept above 40~. On the other hand, induction motors give the best results at moderate frequency, say not over 50-60~ at the most. All these facts point to the advisability of keeping within moderate limits, and the usual 60~ is for ordinary distances and ordinary distributions very satisfactory. In the writer's judgment it is rather high for heavy long-distance work—45 or 50~ would be rather better, but there is no occasion whatever for going as low as 30~, except when rotary converters are the principal load and no lighting whatever is to be done from the transmission lines.

In this connection it is well again to call attention to the fact that alternating arc lamps, particularly of the inclosed type, are now in a fairly satisfactory state, and that the series arc is being very largely replaced by constant-potential arcs, often inclosed, working off the ordinary lighting system. It therefore appears probable that special devices for arc lighting will form a less troublesome feature of transmission work than hitherto.

The induction motor has come into wider and wider use as transmission plants have increased in number, and particularly the larger sizes have been well developed. A good example of this tendency is shown in Plate XXI, Fig. 2, a 500 HP


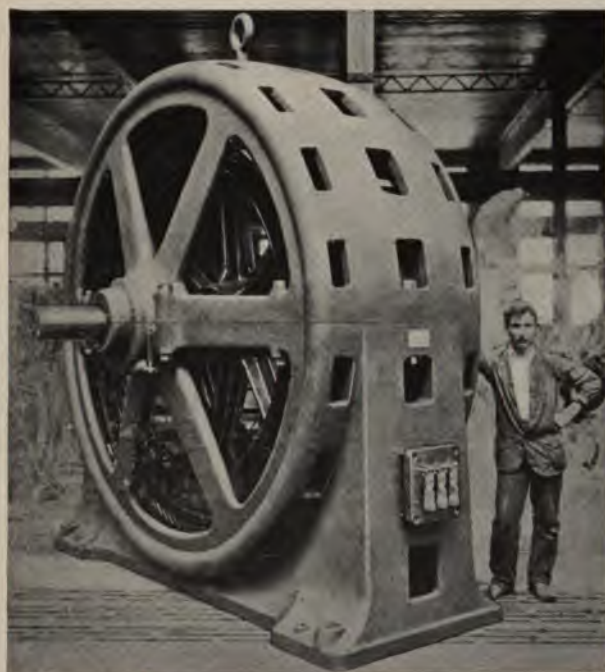


PLATE XXI.

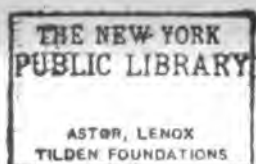

Westinghouse induction motor recently installed. These very large induction motors are particularly valuable for hard service and starting with considerable loads, although in view of the value of synchronous motors in improving the power factor of transmission plants, these latter machines are not likely to be entirely superseded.

It is to be hoped that in the future manufacturers will pay closer attention to the design of induction motors, especially in the direction of getting uniformly good power factors. While the best of the induction motors leave little to be desired in this respect, there are many motors in service having undeniably bad power factors. This is due partly to efforts to cheapen construction and partly to a demand for motors of special sizes and unusual speeds. This is a thing which should be taken under careful consideration by those operating transmission plants, who are the chief sufferers. While it may not be advisable to sell power for induction motors by current meter rather than by watt meter, the demand for current should certainly be taken into account. If the user of a motor realizes that to keep down the cost of power it is best to get the best motor attainable and deny himself the free scope of his fancy for engineering freaks, the present trouble will soon be suppressed. Small motors for very low speeds and motors without proper starting appliances are responsible for most of the difficulties now encountered.

In general, the results of the recent experience in transmission work have been to confirm the hopes of a few years ago and to give a bright outlook for the future. The high-voltage question has been definitely settled in the affirmative, and with it the possibility of commercial transmission of power over longer distances than have heretofore been judged practicable. Many details remain yet to be perfected, but if experience counts for anything these will be attended to in due season.

As a class the plants using 10,000 volts or more have given singularly little trouble, and have been remarkably free from accidents of all sorts.

In Plate XXI. are shown the two typically modern pieces of power transmission machinery—one the 500 HP induction motor of Westinghouse make just referred to, the other a 12,000 volt Stanley two-phase generator with stationary ar-

PLANTS OPERATING AT 10,000 VOLTS OR MORE.

NAME OF COMPANY.	LOCATION OF PLANT.	CAPACITY, KW.	LENGTH OF LINE.	LINE VOLTAGE.	REMARKS. * Indicates Generator Voltage.
Pomona Elec. Lt. Co.	San Antonio Cañon, Cal.	240	28 & 14	10,000	Single Phase, lighting
Redlands Elec. Lt. & Power Co.	Redlands, Cal.	1000	21	10,000	3 Ph. 50~
Sacramento Elec. Co. & Rwy Co.	Folsom, Cal.	3000	22.5	11,000	3 Ph. 60~
Niagara Falls Power Co.	Niagara Falls, N. Y.	37,500	27	11,000	2 Ph. 15~
San Joaquin Elec. Co.	Fresno, Cal.	1050	55 & 35	19,000	3 Ph. 60~
Big Cottonwood Power Co.	Big Cottonwood Cañon, Utah	2000	14	10,000	3 Ph. 60~
George H. Gow.	Griffith Mines, Cal.	250	10,000	2 Ph. 30~
Lowell Water, Lt. & Power Co.	Lowell, Mich.	200	12	10,000	2 Ph. 60~
Tuolumne Co. Elec. Pr. & Lt. Co.	Sonora, Cal.	150	18	10,000	3 Ph. 60~
Big Creek Power Co.	Santa Cruz, Cal.	500	21 & 18	11,000	2 Ph. 60~
San Miguel Cons. Gold Mining Co.	Telluride, Col.	1200	25	11,500	2 Ph. 60~
Central California Elec. Co.	New Castle, Cal.	1300	35 & 28	15,800	2 Ph. 60~
Pioneer Elec. Power Co.	Ogden, Utah	3750	40	15,000	3 Ph. 60~
Hartford Elec. Lt. Co.	Hartford, Conn.	3000	11	96,000	2 Ph. 60~
Anderson Water, Lt. & Power Co.	Anderson, S. C.	2800	10	11,200	2 Ph. 60~
Power Development Co.	Bakersfield, Cal.	900	16	10,000	3 Ph. 60~
Blue Lakes Water Co.	Big Bar Bridge, Cal.	1350	40 & 20	10,000	2 Ph. 60~
Utah Power Co.	Salt Lake City, Utah	1500	13	15,650	2 Ph. 60~
St. Anthony's Falls Water Power Co.	Minneapolis, Minn.	5600	10	12,000	3 Ph. 35~
Helena Water & Elec. Power Co.	Helena, Mont.	3000	11 & 8	11,000	2 Ph. 60~
Herriman Elec. Lt., Heat & Power Co.	Hooksett, N. H.	600	10	10,000	3 Ph. 60
Telluride Power Transmission Co.	Provo, Utah	1500	55	40,000	3 Ph. 60~
Yuba Power Co.	Marysville, Cal.	900	19	16,000	2 Ph. 66~
Colorado Elec. Power Co.	Colorado Springs, Col.	1400	25	20,000	3 Ph. 30~
Hudson River Power Trans. Co.	Mechanicville, N. Y.	3750	18 & 14	12,000	3 Ph. 38~
Montana Power Co.	Butte City, Mont.	3000	21	15,000	3 Ph. 60~
Bed Rock Dredging Co.	Centerville, Idaho	400	10,000	2 Ph. 30
Mt. Whitney Power Co.	Tulare Co., Cal.	1350	30,000	2 Ph. 60~
Snoqualmie Falls Power Co.	Snoqualmie Falls, Wash.	6000	45 & 31	21,000	2 Ph. 60~
Juniper Gold Syndicate	Cal.	100	15,000	1 Ph. 60~
Dolgeville Elec. Lt. Power Co.	Dolgeville, N. Y.	900	10,000	2 Ph. 60~
Salt Lake City Water & Elec. Power Co.	St. Johnsville, N. Y.	180	28	15,000	2 Ph. 60~
Wetmore Elec. Co.	Big Cottonwood Cañon, Utah	1900	16,000	2 Ph. 60~
	Lowville, N. Y.	250	60,000	2 Ph. 60~

PLANTS OPERATING AT 10,000 VOLTS OR MORE—Continued.

NAME OF COMPANY.	LOCATION OF PLANT.	CAPACITY, KW.	LENGTH OF LINE.	LINE VOLT.-GR.	REMARKS. * Indicates Generator Voltage.
Lewiston Light Co.	Lewiston, Idaho	500	15	10,000	3 Ph. 60~
Fries Manufacturing & Power Co.	Salem, N. C.	750	15	12,000	3 Ph. 66~
Dexter Mining Co.	Tuscarora, Nev.	340	10	11,000	3 Ph. 60
Catawba Construction Co.	Tunawanda, N. Y.	680	12 & 6	10,500	3 Ph. 60~
J. S. Viles	Middlesex, Vt.	300	14	10,500	3 Ph. 60~
Cumberland Illuminating Co.	North Gosham, Me.	500	20 & 10	10,500	3 Ph. 60~
Lewiston, Brunswick & Bath Rwy Co.	Lewiston, Me.	750	80	10,500	3 Ph. 50~
Southern California Power Co.	Kedland, Cal.	3,000	23	15,000	2 Ph. 50~
San Gabriel Elec. Co.	Grass, Cal.	900	9	10,500	2 Ph. 60~
Sanford Power Co.	Sanford, Me.	1,500	10	10,000	3 Ph. 60~
United Gas & Electric Co.	South Berwick, Me.	250	46	40,000	3 Ph. 60~
Kalamazoo Valley Electric Co.	Kalamazoo, Mich.	1,500	18	12,000	3 Ph. 25~
Albany & Hudson Railway & Power Co.	Kinderhook, N. Y.	2,250	5	10,000	3 Ph. 60~
Malikoni Power Co.	Westbrook, Me.	548	31	17,300	3 Ph. 60~
Cochiti Gold Mining Co.	Bland, N. M.	600	28	30,000	3 Ph. 60~
St. Croix Power Co.	St. Paul, Minn.	3,000	45	13,000	2 Ph. 60~
Tacoma Railway & Power Co.	Tacoma, Wash.	1,000	10	12,000	3 Ph. 30~
Pike's Peak Power Co.	Utica, N. Y.	1,500	12	22,000	3 Ph. 60~
Utica Electric Light & Power Co.	Utica, N. Y.	3,000	17	12,000	3 Ph. 60~
Empire State Power Co.	Amsterdam, N. Y.	1,800	145	60,000	3 Ph. 60~
Lehigh Power Co.	Easton, Pa.	1,125	3 1/4	16,000	3 Ph. 66~
Standard Electric Co. of Cal.	Electra, Cal.	4,000	15	16,700	2 Ph. 133~
Janestown Light & Power Co.	Janestown, Cal.	1,125	10	16,000	3 Ph. 60~
Nevada County Electric Power Co.	Marysville, Cal.	720	140	30,000	3 Ph. 60~
Bay Counties Power Co.	Marysville, Cal.	4,700	30	10,000	2 Ph. 60~
Montgomery Water Power Co.	Talladega, Ala.	2,025	7	12,000	2 Ph. 60~
Merced Falls Gas & Electric Co.	Merced, Cal.	135	10	15,000	2 Ph. 66~
Quincy Electric Light & Power Co.	Quincy, Colo.	900	70	50,000	3 Ph. 29~
Tululume County Water Co.	Sonora, Cal.	1,125	12	10,000	2 Ph. 60~
Utica Gold Mining Co.	Angels Camp, Cal.	150	35	22,000	3 Ph. 60~
Missouri River Power Co.	Cañon Ferry, Mont.	3,600	70	16,500	2 Ph. 60~
Rapid Railway Co.	Detroit, Mich.	3,500	12	10,000	2 Ph. 60~
Dyea Klondike Transportation Co.	Dyea, Alaska.	45	33	22,000	3 Ph. 60~
Truckee River Power Co.	Truckee River, Cal.	1,500	6	10,000	1 Ph. 60~
Manchester Traction, Light & Power Co.	Goffstown, N. H.	1,700	35	22,000	3 Ph. 60~
United Electric, Gas, & Power Co.	Santa Monica, Cal.	600			

PLANTS OPERATING AT 10

CANADA.


NAME OF COMPANY.	LOCATION OF PLANT.	CAPACITY, K.W.	LENGTH OF LINE.	LINE VOLTAGE.	REMARKS: * Indicates Gener- Voltage.
Cataract Power Co. of Hamilton.....	Hamilton, Ont.....	9000	33	22,500	3 Ph. 66~
Trenton Elec. Co.....	Trenton.....	300	12	11,000	3 Ph. 66~
North Shore Power Co.....	Three Rivers, Que.....	450	17	12,000	3 Ph. 133~
West Kootenay Elec. Power Co.....	West Kootenay, B. C.....	1450	30	20,000	3 Ph. 66~
Chamblay Man'g Co.....	Chamblay, Que.....	8000	17	*12,000	3 Ph. 66~
Imperial Lumber Co.....	550	15	13,000	3 Ph. 66~
International Hydraulic Co.....	1500	20,000	3 Ph. 66~
British Columbia Elec. Co.....	Victoria Goldstream, B. C.....	770	12 & 6	10,000	3 Ph. 66~
Light, Heat, & Power Co.....	Lindsay, Ont.....	400	17	11,000	3 Ph. 66~
Quebec, Montmorency, & Charlevoix R'way.....	Montmorency, P. Q.....	600	15	11,000	3 Ph. 66~
Jacques Cartier Power Co.....	Quebec, P. Q.....	1500	18	20,000	3 Ph. 66~
St. Johns Street Railway.....	St. Johns, N. F.....	1200	9	15,000	3 Ph. 66~

MEXICO.

Electric Power Trans. Co.....	Pachuca.....	1500	19	10,000	3 Ph. 66~
Puebla Lighting Co.....	Puebla.....	360	0	10,000	3 Ph. 66~
G. & O. Braniff & Co.....	Tlalnequil.....	4500	22,000	3 Ph. 66~
Cia Electrica & Irrigadora	Rincon Grande.....	1725	30	17,000	3 Ph. 50~
.....	San Raphael.....	1700	10,000	3 Ph. 25~
.....	Santa Teresa.....	1125	10,000	3 Ph. 66~
Portezuelo Light & Power Co.....	Puebla, ..	150	10,000	3 Ph. 66~
.....	1500	11	*10,000	3 Ph. 66~

mature, photographed while in operation. Aside from high-voltage generators and very large induction motors there is as yet little that is novel in the way of heavy power transmission machinery.

Altogether, the past few years have been wonderfully productive of results, if not of methods, in the electrical transmission of power, and the methods employed are so far past the experimental stage that the engineer need not be staggered at any problem likely to be met for some time to come.

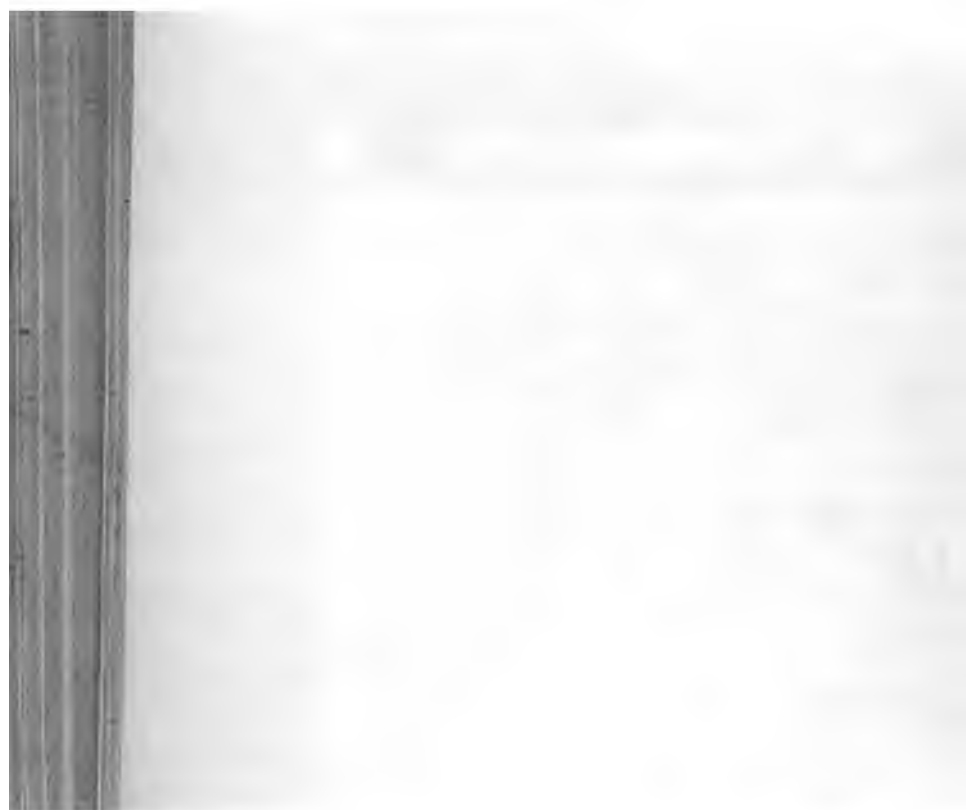

INDEX.

- Accumulators, hydraulic, 44
- Air, compressed, friction of, 51
- Air, compressors, 48, 49, 50
 - compressors, efficiency of, 50
 - hydraulic, 53, 54, 55, 56
- Alternating arc lamps, 510
- Alternating arcs, constant current transformers for, 511, 512, 513
 - , constant current regulators for, 513, 514
- Alternators, armature reactions in, 161
 - , compounding of, 170, 171
 - , design of, 155, 156
 - , inductance of, 160, 161
 - , inductor, 186, 187
 - , polyphase, 172
 - , practical arrangement of, 185, 186, 187
 - , regulation of, 168, 169, 170, 188
 - , windings of, 157, 158, 159, 160
 - with revolving field magnets, 187, 188
- Aluminum, for overhead lines, 432, 433
- Ammeters, 575, 576, 577
- Ampere, 20
- Anchor ice, 381
- Armature reaction, 450
 - windings, drum, 76, 77
 - windings, gramme, 78, 79, 80
- Auxiliary plants, 554, 555, 556
- Batteries, storage, 28, 553, 554
- Biberest, power transmission at, 114, 115
- Boilers, classification of, 305, 306
 - , efficiency of, 307, 308
 - , efficiency of, tests of, 308, 309
 - , forcing output of, 307
 - , practical efficiency of, 310
- Capacity and inductance in parallel, 147
 - and inductance in series, 146
 - and inductance, relations between, 142, 143
 - , electrostatic, 139
 - , electrostatic, equivalent in current, 141
 - , electrostatic, of practical apparatus, 146, 455,
 - , electrostatic, unit of, 140, 141
 - impedance, 141
 - of lines, 455
- Catenary curve, properties of, 471
- Circuits, inductive energy in, 133
- Commutator, principle of, 17
- Commutators, rectifying, 267, 268
 - , rectifying, advantages and disadvantages of, 273, 274
 - , rectifying difficulties met in, 268, 269
- Condensance, 141
- Condenser, electrostatic, 140
- Counter electromotive force, 85
 - E. M. F., relation of, to output and efficiency, 86
- Cross arms, 478, 479
- Currents, alternating, classification of, 154
 - , alternating, generation of, 123, 124
 - , continuous, advantages of, 118, 119
- Current, continuous, armature windings for, 76, 77, 78
 - , continuous production of, 75
 - , electrical, propagation of, 7
 - , induction of, in moving conductors, 14
 - , leading, 144
 - , relation of, to electrical charge, 10
 - reorganizers, classes of, 266
 - , unit of, 20

- Dams, 374**
 —, masonry, 374, 375
 —, timber crib, 376, 377
Distribution by secondary mains,
 506, 507, 508
 —, conditions of, 500, 501
 —, diaphase two wire, 529,
 530
 — from eccentric stations, 519,
 520
 —, house to house, efficiency
 of, 503, 504, 505, 506
 —, kinds of, 499
 —, linear, 521, 522, 523
 —, monocyclic, 528, 529
 —, monophase three-wire,
 527, 528, 453
 — monophase two-wire, 526
 — of power, electric, 65, 66
 —, radial, 516, 517, 518, 519
 —, sub-station, 524, 525
 —, sub-station, example of,
 540, 541, 542, 543
 —, sub-station, secondary volt-
 ages for, 525, 526
 —, three-phase, 532, 533
 —, three-phase four-wire, 533
 —, three-phase, modifications
 of, 534, 535
Draft tubes, 326, 333
Dynamo, continuous-current, 18
 —, principles of, 16
Dynamotors, 279, 280, 281
 —, advantages and disadvan-
 tages of, 280, 281
Dyne, 20
- Electricity, nature of, 1**
Electrification, 8
 —, nature of, 9
Electromotive forces, composition
 of, 130
 — force, effective, 128
 — force, impressed, 127, 128
 —, force, inductive, 127
 —, forces, periodic, 124
 —, force, periodic, current
 produced by, 126
 — force, unit, derivation of,
 20
Energy, available sources of, 23
 —, C. G. S. unit of, 20
 —, kinds of, 4
 —, nature of, 2
 —, potential and kinetic, 2
 —, radiant, 5
 —, real and apparent, 132, 133
 —, tidal, utilization of, 26
 —, transformations of, 3
- Energy, transmission of, as fuel,**
 28
Engines, gas, cost of power from,
 559, 560
 —, hydraulic, 43
 —, pneumatic, 51
 —, solar, 26
 —, steam, classification of,
 292, 293
 —, steam, coal consumption
 of, 311, 312
 —, steam, cost of power from,
 558, 559
 —, steam, economy of various
 types of, 299, 300
 —, steam, efficiency of, 290,
 291
 —, steam, for direct coupling,
 303, 304
 —, steam, principles of econ-
 omy in, 291, 292
 —, steam, steam consumption
 of, 297, 298
 —, steam, table of steam con-
 sumption of, 299
 —, steam, valve gear of, 293,
 294
**Engines, steam, variation of econ-
 omy of with load, 301, 302**
Exciters, arrangement of, 400
- Farad, 141**
**Ferranti constant-current recti-
 fier, 271, 272**
Field, magnetic, 11
 —, magnetic, strengthening
 of, by iron, 15
 —, magnetic, transference of
 energy by, 12
 — windings, compound, 83, 84
 — winding, differential, 96,
 97
 — windings, series, 82
 — windings, shunt, 82
Floriston, Cal., transmission plant
 at, 405, 406, 407
Folsom, Cal., transmission plant
 at, 400, 401, 402
Force, electromotive, 7
Frequencies, commercial, 264
Frequency meter, 581
Fresno, Cal., transmission plant
 at, 403, 404, 405
**Fuel, cost of, in a large modern
 plant, 322, 323**
 —, supply of, 23
 — oil, use of, 312, 313
**Fuels, comparative evaporative
 power of, 308, 309**

- Generators, diphas, of Niagara plant, 175, 176
 —, polyphase, armature reactions in, 174
 —, polyphase winding, 173, 174
 —, triphase, 177
 Genoa, power transmission, by constant current at, 102, 103, 104
 Governors, hydraulic, differential, 348, 358, 359
 —, hydraulic, actual performance of, 352, 353, 357
 —, hydraulic, classification of, 346, 347, 348
 —, hydraulic, types of, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359
 Governing, hydraulic, conditions affecting, 359, 360
 —, hydraulic, difficulties in, 345, 346
 Guy ropes, 480
 Harmonics in alternating current waves, 165, 166
 — and resonance, 167
 Henry, 135
 Heterophase systems, 183, 184, 185
 High voltage circuits, danger from, 443, 444
 — voltage, experience with, 438, 439
 — voltage, experiments with, 440, 594, 595, 596
 — voltage generators, installation of, 408
 — voltage line construction, 602, 603, 604, 605, 606, 607, 614, 615
 — voltage generators *vs.* transformation, 457, 458
 — voltage, limitations of, 440, 441
 — voltage lines underground, 445
 "Hunting" of synchronous machines, 224, 225, 226
 —, remedies for, 227
 Hydraulic pipe lines, 378
 — pipe lines, anchoring of, 379
 — pipe lines, construction of, 378
 — pipe, table of dimensions of, 380
 Impedance, 131
 —, determination of, 134, 135, 136
 Impedance factor, application of, 449, 450
 — factors, table of, 448
 Impedances in parallel, 138
 — in series, 138, 139
 Impulse wheels, 337
 Incandescent lamps, high voltage, 524, 525
 Inductance, 128
 —, determination of, 134, 135
 — of circuits, 447
 — of lines, 455
 — of lines, practical effect of, 448
 —, practical examples of, 136, 137
 —, production of lag by, 128
 —, regulation by, 153
 —, unit of, 135
 Induction, electromagnetic, 13
 — motors, armature speed in, 232, 234
 — motors, fundamental principles of, 229, 230, 231
 — motors, general construction of, 237, 238, 239
 — motors, heterophase and monophase, 247, 248, 249, 250, 251, 252
 — motors, power factors of, 253, 256, 257
 — motors, practical properties of, 252, 253, 254, 255, 256, 257, 258
 — motors, primary windings of, 238, 239
 — motors, relation of, to motors in general, 228, 229
 — motors, rotary field theory of, 235, 236
 — motors, secondary windings of, 237, 242
 — motors, speed regulation of, 261, 262, 263
 — motors, starting torque of, 257, 258, 259, 260
 — motors, tests of commercial, 255, 256, 257, 258
 — motors, typical construction of, 229
 — motors, weak points of, 252, 253
 — motors, with condensers, 254, 256
 Inductive circuits, electromotive forces in, 128
 Insulating materials, 441, 442, 443
 Insulators, design of, 435
 —, materials for, 436, 437

- Insulators, oil, 437
 Insulator pins, 482, 483
 Insulators, special high voltage, 597, 598, 599, 600, 601
 Insulation, testing of, at high voltage, 485

 Kelvin's law of economy, 423
 — law, modifications of, 424, 425

 La Chaux-de-Fonds, constant current transmission at, 106, 107
 Lag, angle of, 128, 129
 —, relation of, to energy, 132, 133
 Lead, angle of, 143
 Lightning, 486, 487
 — arresters, 487, 488, 489, 490, 491, 492, 493
 — arresters, installation of, 493, 494, 495
 — arresters, with inductance coils, 487, 488
 — guard lines, 494, 495
 Line, losses in the, 418
 Line, relation of, to voltage of transmission, 421, 422
 Lines, conditions governing design of, 422, 423, 424, 425, 426
 —, insulation of, 434
 —, material for, 431, 432, 433, 434
 —, overhead and underground, 428, 429, 430
 List of American plants at or above 10,000 volts, 622, 623, 624

 Mesh connection of three-phase circuit, 180
 Meters, induction, 584
 Microfarad, 141
 Miner's inch, 365, 366
 Monocyclic system, 183, 184
 Motor, generator, 107
 — generators, 274, 275, 276, 277, 278
 — generators, advantages and disadvantages of, 276
 — generators, double-wound, 279, 280, 281
 —, principles of electric, 17
 Motors, distribution of power by, 65, 66
 —, electric, cost of, 562
 —, electric, efficiencies of different sizes of, 61
 —, electric, torque in, 84
 —, hydraulics, 43

 Motors on lighting circuits, 515, 516
 —, series, at interdependent current and voltage, 92, 93
 —, series, constant current, 87, 88
 —, series, constant current, disadvantages of, 89
 —, series, constant current, speed regulation of, 88
 —, series, constant potential, properties of, 90, 91, 92
 —, series, constant potential, regulation of, 90, 91
 —, shunt, properties of, 94
 —, shunt, speed regulation of, 95, 96
 —, special methods of regulating, 97, 98
 —, wave, 29


 Niagara station, plan of, 392
 Nernst lamp, 617, 618, 619


 Ohm, 20
 Ohm's law, 418, 419
 Oregon City, transmission plant at, 388, 389, 390


 Parallel running of alternators, 409, 410, 411
 Pelton wheel, 327, 328, 337
 Pipes, hydraulic, loss of head in, 46
 —, pneumatic, loss of head in, 51
 Pole line, Niagara-Buffalo, 483, 484
 —, magnetic, unit, 20
 Poles, proper setting of, 477, 479
 —, stresses upon, 479, 480
 —, table of dimensions of, 477
 —, wind pressure upon, 480, 481
 Pollak rectifying commutator, 270, 271
 Polyphase circuits, various connections of, 200, 201, 202, 203
 Power, determination of selling price of, 569, 570, 571, 572, 573
 —, electric, cost of, on very large scale, 562, 563, 564
 —, factor, 136
 —, general cost of, 560, 561
 —, stations, arrangement of, 392, 393, 398, 399
 —, stations, direct coupling in, 394, 395, 397
 —, stations, foundation for, 392

- Power station, selection of site for, 388**
 — stations, size of transformer units in, 411, 412
 — stations, size of units in, 338, 395, 396, 399
 — transmission at constant current, 99, 100, 101, 102
 — transmission at constant voltage, 109, 110, 111
 — transmission by gas, 57
 — transmission by interdependent dynamos and motors, 112, 113
 — transmission by ropes, 33
 — transmission by ropes, cost of, 68
 — transmission by ropes, efficiency of, 37
 — transmission by ropes, examples of, 38
 — transmission by ropes, ropes and pulleys for, 41
 — transmission, comparison of methods of, 68, 69, 70
 — transmission, electric, 57
 — transmission, electric, cost of, 69
 — transmission, electric, efficiency of, 59, 60, 61, 62
 — transmission, electric, nature of losses in, 58
 — transmission from coal mines, 30
 — transmission, general conditions of, 22
 — transmission, hydraulic, 42
 — transmission, hydraulic efficiency of, 43, 44, 46
 — transmission, hydraulic, examples of, 42, 45
 — transmission, methods of, 31
 — transmission, pneumatic, 47
 — transmission, pneumatic, cost of, 68, 69
 — transmission, pneumatic, efficiency of, 52
 — transmission, pneumatic reheated, cost of, 69, 70
 — transmission, pneumatic, with re-heating, 52
 — transmission systems, relative efficiency of, 72
 — variation of cost of, with out-put, 569, 570
Pressure wires, use of, 502
Radiation, electromagnetic, 6
 —, solar, 26
Reactance, 137
Rectifier, electrolytic, 288, 289
Resistance of wires to alternating current, 456, 457
 —, unit of, 20
Resonance, 150, 151, 152, 451
 —, apparatus for showing, 151
 —, calculation of, 451, 452, 453, 454, 455
Rotary converter, 282
 — converter, examples of, 283, 284
 — converter, principles of, 283
 — converter, ratio of transformation in, 286
 — transformers, advantages and disadvantages of, 286, 287
Secondary mains, voltage of, 507, 508
Shafting, losses in, 64
Sine wave, 124
 — wave, variations from, 125, 126
Southern California transmission lines, 607, 608, 609, 610, 611, 612
Span, permissible lengths of, 475, 476
Sparking distance of various voltages, 494
Star connection of three-phase circuits, 180
Strains, electrostatic and electromagnetic, 10
Sub-stations, arc lighting in, 510, 511, 512, 513, 514
 —, arrangement of, 538, 539
 —, location of, 536, 537, 538
 —, motor service from, 539
Switch boards, 414, 415
Switches, high voltage, 616, 617
Synchronous induction motor, 232, 233
 — motors, 209, 210
 — motors, current variation in, 213, 214
 — motors, effect of excitation on power factor of, 215, 216
 — motors, lag of current in, 213
 — motors, methods of starting, 221, 222
 — motor, monophasic self-starting, 222, 223
 — motors, organization of currents in, 209, 210
 — motors, polyphase, 222, 224

- Synchronous motors, power factors of, in practice, 218, 219
 ——— motors, starting, 211, 212
- Three phase circuits, 178
 ——— circuits, connections of, 180, 181
 ——— circuits, saving of copper in, 182
- Three-wire system, 110, 111
- Tides, utilization of, 26
- Transformers, construction of, 191, 192
 ———, cooling of, 195, 196
 ———, efficiency of, 194, 197
 ———, losses in, 192, 193
 ———, polyphase, 198, 199, 200
 ———, principle of, 191
 ———, small, efficiency curve of, 435
 ———, small *v.s.* large, 436
 ———, sub-station, installation of, 353, 354
- Transmission lines, location of, 467, 468, 469
 ——— lines, practical calculation of, 460, 461, 462, 463, 464, 465, 466
- Transformer as booster, 205
- Turbine, steam, De Laval, 314, 315
 ———, steam efficiency of, 315, 319
 ———, steam, Parsons, 316, 317, 318, 319, 320
 ———, steam, principles of, 314
- Turbines, efficiency of, 338, 339, 340, 341
 ———, impulse, 327, 328
 ———, pressure, 326, 327, 335, 336
 ———, principles of, 325, 326
 ———, regulation of, 339, 345
 ———, regulation of, under varying heads, 342, 343, 344
 ———, types of American, 328, 329, 330, 331, 332
- Two-phase-three-phase transformation, 203, 204
- Units, C. G. S., 19
 ———, electrical, 19
- Valve gear, dependent, 295
 ———, independent, 294
- Volt, 20
- Voltage regulation, automatic, 545, 546, 547, 548
- Voltage regulators, sub-station, 548, 549, 550, 551, 552
- Voltmeters, 578, 579
 ———, recording, 580, 581
- Water power, classification of, 361, 362
 ——— power, commercial development of, 383, 384
 ——— power, distribution of, 24
 ——— power, estimate for a cheap plant, 567, 568
 ——— power, estimate for a typical plant, 565, 566
 ——— power, measurement by miner's inches, 365, 366
 ——— power measurement by soundings, 366, 367
 ——— power, measurement of flow in, 363
 ——— power, methods of developing, 372, 373, 374, 375, 376, 377, 378, 379, 380
 ——— power, relation between flow and HP in, 569
 ——— power, relation between rainfall and flow in, 368, 369
 ——— power, storage of, 370, 371, 382
 ——— power, treatment of variable supply, 382, 383
 ——— power, weir measurement of, 363, 364, 365
 ——— power with supplementary steam power, 383, 384
 ——— wheels, 324
- Watt, 21
 ———, relation of, to electrical energy, 21
- Wattmeters, connections of, 583, 585, 586, 587, 588, 589
 ———, indicating, 579, 580
 ———, integrating, 582, 583
 ———, inspecting and testing, 590, 591
- Wave shape, practical aspects of, 264, 265
- Wind, utilization of, 25
- Windings, armature, polyodontal, 174
- Wire for lines, mechanical strains upon, 471, 472
 ——— for lines, properties of, 470
 ——— formulæ and tables, 420
 ———, stresses due to load upon, 473, 481
 ———, stresses upon, due to wind, 474
 ———, stresses upon, from temperature, 472, 473
 ———, stresses upon suspended, 472
- Wires, insulated, 443

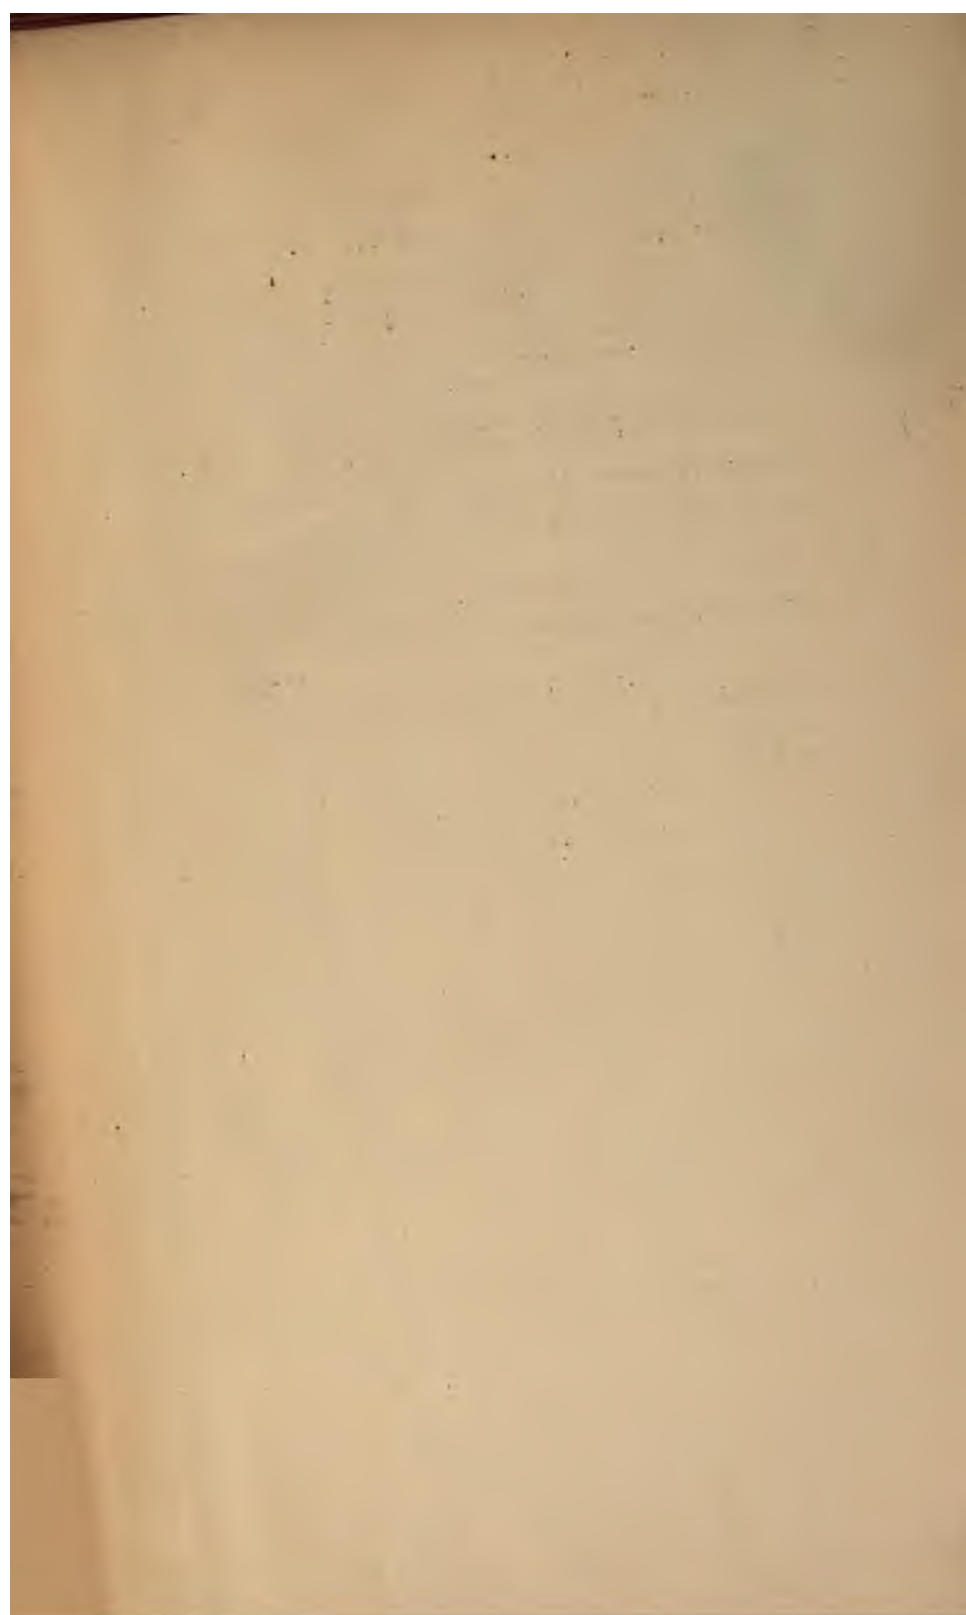

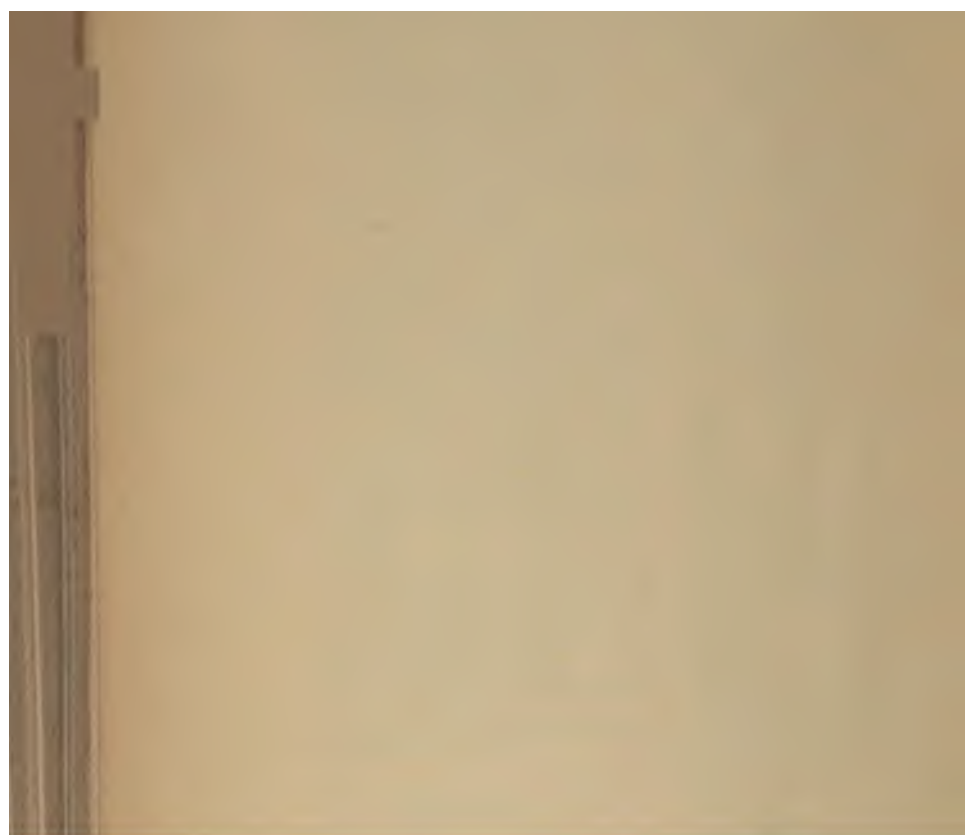

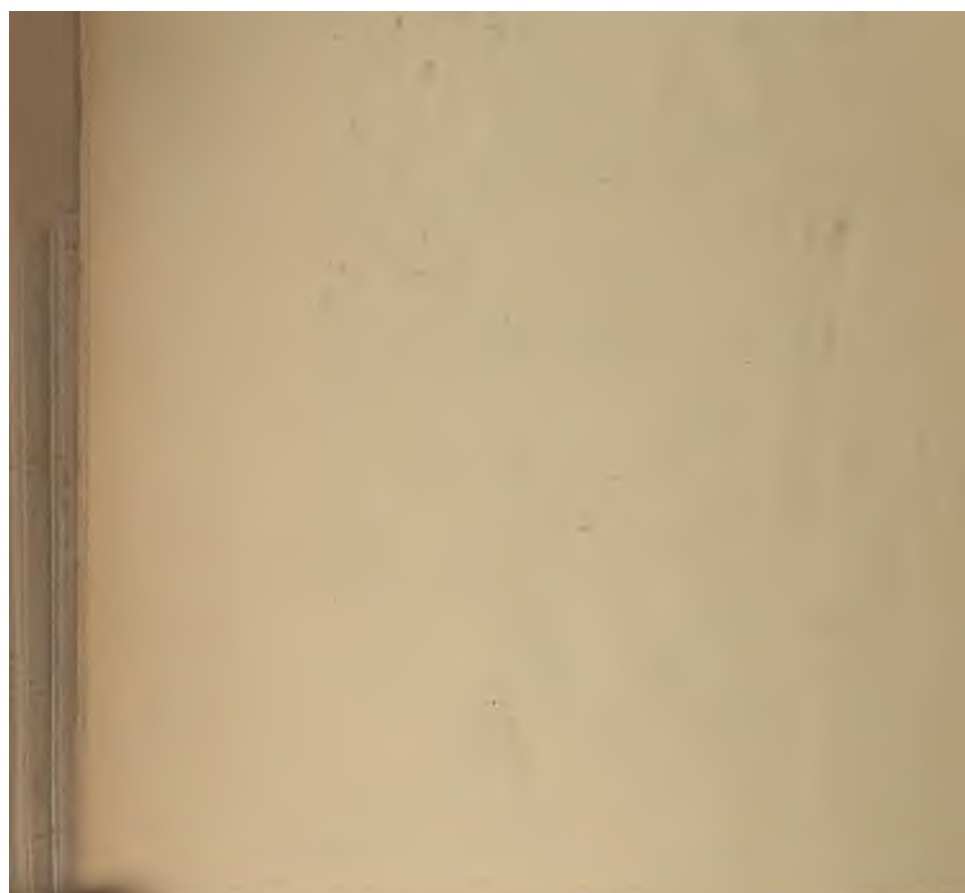

Feb 17 1939



